

# Eurotherm<sup>®</sup>

---

**by Schneider** Electric

## 6100/6180 XIO User Guide

6100/6180XIO Distributed graphic recorder  
Versions 5.7 and later

HA029324/14  
Nov 2016

This certificate relates to the product models mentioned above. The data shown here is related to the following version of the China RoHS 2.0: Administrative Measures for the Restriction of Hazardous Substances in Electric Appliances and Electronic Products" released January 21st 2016.

部件名称 Part Name	有害物质 - Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件 Metal parts	0	0	0	0	0	0
塑料部件 Plastic parts	0	0	0	0	0	0
电子件 Electronic	X	0	0	0	0	0
触点 Contacts	0	0	X	0	0	0
线缆和线缆附件 Cables & cabling accessories	0	0	0	0	0	0

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Signed (Kevin Shaw, R&D Director):



Date:

24th June 2016

# PAPERLESS GRAPHIC RECORDER

## USER GUIDE

### LIST OF SECTIONS

Section	Page
1 INTRODUCTION.....	2
2 INSTALLATION.....	2
3 PROCESS VARIABLE DISPLAY .....	8
4 SETTING UP THE RECORDER.....	45
5 FILE .....	227
6 BRIDGE.....	231
7 SCREEN BUILDER.....	240
8 MODBUS TCP SLAVE COMMS.....	267
9 ASCII PRINTER OUTPUT OPTION.....	319
ANNEX A: SPECIFICATION.....	331
ANNEX B: REFERENCE.....	335
ANNEX C: WEB SERVER DETAILS.....	364
INDEX.....	369

### EFFECTIVITY

This manual refers to recorders fitted with software version 5.7. To determine the software version fitted to the recorder, the 'About' screen in the System menu may be accessed as described in [section 4.6.9](#).

# PAPERLESS GRAPHICS RECORDER USER GUIDE

## LIST OF CONTENTS

Section	Page
SAFETY NOTES .....	1
SYMBOLS USED ON THE EQUIPMENT LABELLING .....	1
<b>1 INTRODUCTION</b> .....	<b>2</b>
1.1 UNPACKING THE RECORDER .....	2
<b>2 INSTALLATION</b> .....	<b>2</b>
2.1 MECHANICAL INSTALLATION .....	2
2.2 ELECTRICAL INSTALLATION .....	5
2.2.1 Supply voltage wiring .....	5
POWER REQUIREMENTS .....	5
2.2.2 EIA485 connections .....	6
LED INDICATORS .....	6
2.3 USB CONNECTOR .....	7
2.4 CARD SLOT .....	7
<b>3 PROCESS VARIABLE DISPLAY</b> .....	<b>8</b>
TRUNCATION OF NUMERIC VALUES .....	8
CURRENT TRACE ALARM ICONS .....	9
3.1 STATUS BAR .....	9
3.1.1 Current access level .....	9
3.1.2 Page name .....	9
3.1.3 Alarm indication .....	10
INSTRUMENT ALARM .....	10
CHANNEL ALARM .....	11
CHANGE BATTERY .....	11
DISK ICON .....	11
FTP ICON .....	12
CONFIGURATION LOCKED INDICATOR .....	12
TRIAL MODE INDICATOR .....	12
3.1.4 Summary menu .....	13
INSTRUMENT ALARM SUMMARY .....	13
ACK ALL ALARMS .....	13
ALARM SUMMARY PAGE .....	14
ALARM ACKNOWLEDGEMENT .....	15
BATCH SUMMARY .....	16
MESSAGE LOG .....	18
REMOVE MEDIA .....	21
3.2 NAVIGATION KEYS .....	22
3.2.1 Key functions .....	22
ROOT MENU KEYS .....	22
ALARM SUMMARY .....	24
MESSAGE LOG .....	24
3.3 FIRST SWITCH-ON .....	25
3.3.1 Access to Configuration .....	26
TROUBLE SHOOTING .....	27
TEXT STRING ENTRY .....	27
3.4 DISPLAY MODES .....	29
TREND HISTORY .....	29
TIME CHANGE RECORDS .....	30
3.4.1 Vertical Trend display .....	30
3.4.2 Horizontal Trend display .....	32
3.4.3 Circular Trend .....	34
TREND MODES .....	34
NORMAL VIEW .....	35
NORMAL VIEW FEATURES .....	36
FULL SCREEN DISPLAY .....	36
FULL SCREEN FEATURES .....	36
TIMESTAMPS .....	37
OTHER NOTES .....	37
3.4.4 Vertical bargraph display mode .....	38
FACEPLATES ABOVE THE BARS .....	38
FACEPLATES AT RIGHT-HAND EDGE .....	38
3.4.5 Horizontal bargraph display mode .....	40
3.4.6 Numeric display mode .....	42

## LIST OF CONTENTS (CONT.)

Section	Page
3.5 OPERATOR NOTES .....	44
<b>4 SETTING UP THE RECORDER .....</b>	<b>45</b>
4.1 ARCHIVE.....	46
4.1.1 Local Archive .....	46
BRING ARCHIVE UP TO DATE.....	47
ARCHIVE ALL .....	47
4.1.2 Remote archiving (FTP transfer).....	48
4.2 SAVE / RESTORE.....	49
4.2.1 Save .....	50
SAVE AS .....	50
4.2.2 Restore .....	50
4.2.3 New .....	50
4.2.4 Text .....	50
4.2.5 Import screen .....	50
4.2.6 Export screen .....	51
4.2.7 Import User Linearisation .....	51
4.2.8 Export User Linearisation .....	51
4.2.9 Import printer driver.....	51
4.3 CONFIG KEY .....	52
4.3.1 Instrument configuration.....	57
INSTRUMENT NAME.....	57
NORMAL/SAVER DISPLAY .....	57
SAVE AFTER .....	57
MODBUS ADDRESS .....	57
MODBUS SECURITY DISABLED .....	57
COMMS CHANNEL TIMEOUT.....	57
PRESET HOUR .....	58
PRESET MINUTE .....	58
DISABLE WARNING DIALOGS .....	58
SHOW OPERATOR NOTES LIST .....	58
4.3.2 Group configuration.....	59
GROUP NUMBER.....	60
TREND UNITS.....	60
DESCRIPTOR .....	60
TREND TYPE.....	60
A/B SWITCHING .....	61
TREND SPEED/TREND INTERVAL .....	61
CIRCULAR SETTINGS .....	61
CIRCULAR SPEED .....	61
CIRCULAR CHART FULL .....	61
START AT .....	61
CIRCULAR EXTENDED BACKFILL .....	62
GRID TYPE .....	62
RECORDING ENABLE.....	63
RECORDING SPEED/RECORDING INTERVAL .....	63
TREND HISTORY DURATION .....	63
ARCHIVE TO MEDIA ENABLE/ARCHIVE VIA FTP ENABLE .....	63
ALARM MESSAGE .....	64
ACK MESSAGE.....	64
POINT TYPE/SELECTION.....	64
4.3.3 Channel/Alarm configuration.....	65
CHANNEL NUMBER .....	66
VALUE .....	66
INPUT TYPE.....	66
SCALED .....	66
OFFSET .....	66
SCALE TYPE .....	66
DESCRIPTOR .....	69
A/B SWITCHING .....	69
SPANNED .....	69
ZONE .....	69
PV FORMAT .....	69
MAXIMUM DECIMAL DIGITS .....	69
COLOUR .....	69

## LIST OF CONTENTS (CONT.)

Section	Page
4.3.3 Channel/Alarm configuration (cont.)	
ALARM NUMBER .....	69
ENABLE .....	70
TYPE .....	70
SETPOINT SOURCE .....	70
PARAMETERS .....	71
HYSTERESIS EXAMPLE .....	71
RATE-OF CHANGE ALARM EXAMPLE .....	71
JOB NUMBER .....	73
CATEGORY .....	73
WHILE/ON .....	73
ALARM MESSAGES .....	73
4.3.4 Views Configuration .....	74
HOME TIMEOUT .....	74
HOME GROUP .....	74
SCOPE .....	74
GROUP .....	75
DISPLAY ENABLE .....	75
HOME PAGE .....	75
DISPLAY MODE ENABLING .....	75
USER SCREENS 1 to N .....	76
4.3.5 Archive configuration .....	77
COMPRESSION .....	78
FLASH SIZE .....	78
SHORTEST TREND HISTORY / DURATION .....	78
CSV CHECK BOXES, DATE/TIME FORMAT .....	78
SHOW .....	78
MEDIA .....	78
ARCHIVE TO MEDIA .....	78
MEDIA FILE FORMAT/FTP FILE FORMAT .....	79
ON MEDIA FULL .....	79
MEDIA SIZE .....	79
REMOVABLE MEDIA CAPACITY .....	79
MEDIA FULL EVENT LIMIT .....	79
ARCHIVE TO REMOTE .....	79
REMOTE PATH .....	79
PRIMARY REMOTE HOST .....	80
PRIMARY LOGIN NAME/PASSWORD .....	80
SECONDARY REMOTE HOST/LOGIN/PASSWORD .....	80
CSV FILES .....	80
4.3.6 Event configuration .....	82
EVENT NUMBER .....	82
SOURCE TYPES .....	82
EVENT SOURCES (Cont.) .....	83
SOURCE 1 SENSE .....	83
OPERATOR .....	84
SOURCE 2 SENSE .....	84
DESCRIPTOR .....	84
JOB NUMBER .....	84
CATEGORY .....	84
WHILE/ON .....	84
EVENT EXAMPLE .....	84
4.3.7 Event Buttons .....	85
4.3.8 Messages .....	86
MESSAGE ENTRY .....	86
CONFIGURABLE PARAMETERS .....	86
EXAMPLE .....	88
4.3.9 User Linearisation Tables .....	89
CONFIGURATION PARAMETERS .....	89
4.3.10 Batch recording option .....	91
AUDITOR MESSAGES .....	91
BATCH SUMMARY .....	91
CONFIGURATION .....	92
OPERATOR INITIATION .....	94
NON OPERATOR INITIATION .....	97

## LIST OF CONTENTS (CONT.)

Section	Page
EVENT SOURCES.....	97
4.3.11 Maths.....	98
CONFIGURATION.....	98
MODBUS ADDRESSING.....	125
4.3.12 Totalisers.....	128
INTRODUCTION.....	128
CONFIGURATION.....	128
4.3.13 Counters.....	133
INTRODUCTION.....	133
CONFIGURATION.....	133
COUNTER MODBUS ADDRESSING.....	134
4.3.14 Timers.....	137
INTRODUCTION.....	137
CONFIGURATION.....	137
SELF-START EXAMPLE.....	138
4.3.15 Connections.....	139
INTRODUCTION.....	139
TERMINATION AND BIASING.....	139
CONFIGURATION.....	140
CONFIGURATION PARAMETERS.....	141
MESSAGING INFORMATION.....	142
MODBUS ADDRESS.....	143
4.3.16 Master comms.....	144
INTRODUCTION.....	144
MASTER COMMS CONFIGURATION MENU.....	145
DETECT THIS SLAVE.....	146
DETECT ALL SLAVES.....	147
SHARE SOCKET.....	149
MASTER COMMS CHANNEL CONFIGURATION.....	150
STATUS BITS.....	156
MASTER COMMS CHANNEL CONFIGURATION EXAMPLE.....	158
MASTER CHANNEL 1 SETUP.....	159
MASTER CHANNEL 2 SETUP.....	160
MASTER OUTPUT 1 SETUP.....	161
SLAVE INPUT CHANNEL 1 SETUP.....	161
MASTER COMMS DIAGNOSTICS.....	162
4.3.17 Output channels.....	163
4.3.18 Demand Writes.....	164
DEMAND WRITE CONFIGURATION.....	164
WRITING TO A SPECIFIC REGISTER.....	166
4.3.19 E-mails.....	168
E-MAIL CONFIGURATION.....	168
CONFIGURABLE PARAMETERS.....	169
E-MAIL DETAILS.....	170
OPERATION.....	171
4.3.20 Reports configuration.....	172
REPORT.....	172
DESCRIPTOR.....	172
NUMBER OF FIELDS.....	172
FIELD N TYPE.....	172
STYLE.....	173
POINT.....	173
LINE FEED.....	173
4.3.21 Ethernet/IP™ Option.....	174
MESSAGING.....	174
CONFIGURATION.....	175
TABLE ENTRY.....	176
CONFIGURING A PLC.....	178
4.3.22 Options.....	184
TRIAL MODE.....	184
VIRTUAL CHANNELS.....	185

## LIST OF CONTENTS (CONT.)

Section	Page
SIMULATION OPTION .....	185
4.4 SECURITY .....	186
4.4.1 Access levels .....	187
SETTING PERMISSIONS .....	187
ACCESS WHEN: .....	188
DOMAIN NAME .....	188
NEW PASSWORD/RETYPE PASSWORD .....	188
CONNECT FROM REMOTE .....	188
REMOTE USER NAME/REMOTE PASSWORD .....	188
LOGIN DISABLED .....	189
EDIT OWN PASSWORD .....	189
CHANGE ALARM SETPOINTS .....	189
ACKNOWLEDGE ALARMS .....	189
EDIT MATHS CONSTANT .....	189
RESET MATHS .....	189
PRESET TOTALISERS .....	189
PRESET COUNTERS .....	189
START/RESET TIMERS .....	189
SET CLOCK .....	189
ARCHIVING CONTROL .....	189
SAVE/RESTORE .....	190
PASTE/DELETE FILES .....	190
FULL CONFIGURATION .....	190
FULL SECURITY .....	190
BATCH CONTROL .....	190
CAN SIGN .....	190
CAN AUTHORIZE .....	190
PERFORM UPGRADES .....	190
EVENT PERMISSION 1 .....	190
EVENT PERMISSION 2 TO 5 .....	190
EDIT OUTPUT CHANNEL DEFAULT .....	190
ACTION DEMAND WRITES .....	191
FORCE CHANGE OF PASSWORD .....	191
ENTER BATCH DATA .....	191
ALLOW WEB SERVER .....	191
4.4.2 Management (option) .....	192
CHANGES NOT RECORDED .....	192
CONFIGURABLE PARAMETERS .....	192
4.4.3 Add user .....	197
NEW USER ID .....	197
NEW FULL USER NAME .....	197
NEW DOMAIN NAME .....	197
NEW PASSWORD/RETYPE PASSWORD .....	197
BASED ON .....	197
4.4.4 Remove user .....	198
4.4.5 Change Password .....	198
TROUBLE SHOOTING .....	198
4.4.6 Clear Password Cache .....	199
USER PASSWORD AUTHENTICATION .....	199
PASSWORD CACHE .....	199
CLEAR PASSWORD CACHE .....	199
4.4.7 Active Directory server setup .....	199
4.5 NETWORK KEY .....	202
4.5.1 Address .....	202
INSTRUMENT NUMBER/MAC ADDRESS .....	202
IP ADDRESS LOOKUP .....	202
BOOTP TIMEOUT .....	202
IP ADDRESS .....	203
SUBNET MASK .....	203
DEFAULT GATEWAY .....	203
SNTP SERVER ENABLE .....	203
SNTP CLIENT ENABLE .....	203
SNTP SERVER .....	203
SNTP TIMEOUT .....	204
EUOPRP SERVER ENABLE .....	204
ACTIVE DIRECTORY SERVER .....	204

## LIST OF CONTENTS (CONT.)

Section	Page
ACTIVE DIRECTORY SECURITY .....	204
PASSWORD CACHE EXPIRY .....	204
4.5.2 Name .....	205
LOCAL HOST .....	205
DOMAIN .....	205
DOMAIN NAME SERVICE (DNS) .....	205
PRIMARY/SECONDARY DNS SERVER .....	205
4.6 SYSTEM .....	206
4.6.1 Clock .....	208
4.6.2 Locale .....	208
LONG DATE FORMAT .....	208
4.6.3 Upgrade .....	209
4.6.4 Master Comms Diagnostics .....	210
4.6.5 Ethernet Diagnostics .....	210
4.6.6 Copy .....	211
CONFIGURABLE PARAMETERS .....	212
COPY RULES .....	212
4.6.7 Job search .....	213
SEARCH RESULTS .....	213
4.6.8 Customise .....	214
FONT SIZE EXAMPLES .....	215
4.6.9 About .....	216
INSTRUMENT VARIANT .....	216
CONFIG REVISION .....	216
LAST UPDATED .....	216
AT VERSION .....	216
CREATED ON .....	216
SECURITY REVISION .....	217
SUPPORT FILE .....	217
4.7 JOBS .....	218
4.7.1 No Action .....	218
4.7.2 Totaliser category .....	218
4.7.3 Message category .....	219
4.7.4 Maths category .....	219
4.7.5 Clock category .....	220
4.7.6 Counter category .....	220
4.7.7 Timer category .....	221
4.7.8 Batch category .....	221
4.7.9 Recording category .....	222
4.7.10 Trend category .....	223
4.7.11 Output category .....	224
4.7.12 Demand Writes category .....	224
4.7.13 Alarm category .....	225
4.7.14 Archive category .....	225
4.7.15 Email category .....	226
4.7.16 Report category .....	226
SEND REPORT TO .....	226
GROUP .....	226
REPORT .....	226
<b>5 FILE .....</b>	<b>227</b>
5.1 FILER OPTION MENU KEYS .....	227
5.2 THE HIDE KEY .....	227
5.3 FILE STRUCTURE .....	229
<b>6 BRIDGE (REMOTE VIEWER) .....</b>	<b>231</b>
6.1 INTRODUCTION .....	231
6.1.1 Minimum PC requirements .....	232
SUPPORTED PDA CONFIGURATION .....	232
6.2 CONNECTION DETAILS .....	233
6.2.1 Direct PC connection .....	233
6.2.2 PC To remote recorder .....	233

## LIST OF CONTENTS (CONT.)

Section	Page
6.2.3 Networked systems .....	233
6.3 SOFTWARE INSTALLATION .....	234
6.4 RECORDER CONFIGURATION .....	234
6.4.1 Network .....	234
6.4.2 Options .....	234
6.4.3 Access .....	235
6.5 RUNNING THE PROGRAM .....	236
CHANNEL ALARM SOUND .....	237
6.6 OPERATION .....	238
6.6.1 Display Modes .....	238
6.6.2 Alarm acknowledgement .....	238
6.6.3 Status line .....	238
6.6.4 Error messages .....	239
NETWORK CONNECTION HAS TIMED OUT .....	239
UNABLE TO CONNECT TO HOST .....	239
UNABLE TO RESOLVE HOSTNAME .....	239
FAILED TO AUTHENTICATE THE USER NAME .....	239
MAXIMUM NUMBER OF BRIDGE SESSIONS ALREADY RUNNING ON .....	239
THERE APPEARS TO BE NO FREE DISK SPACE ON .....	239
YOU ARE ALREADY RUNNING A FULL BRIDGE SESSION .....	239
YOU ARE AUTHENTICATING FULL BRIDGE .....	239
<b>7 SCREEN BUILDER .....</b>	<b>240</b>
7.1 INTRODUCTION .....	240
7.1.1 Display Access .....	241
7.1.2 Importing/Exporting screens .....	241
IMPORTING SCREENS .....	242
EXPORTING SCREENS .....	242
7.2 DISPLAY CREATION .....	242
7.2.1 Before starting .....	242
7.2.2 Screen components .....	243
7.2.3 The properties page .....	244
KEY DESCRIPTIONS (UPPER KEYS) .....	244
KEY DESCRIPTIONS (LOWER KEYS) .....	245
OPTIONS PAGE ITEMS .....	246
7.2.4 Screen creation example .....	247
PROCEDURE .....	247
7.3 PARAMETER DEFINITIONS .....	250
7.3.1 Basic parameters .....	250
7.3.2 Advanced parameters .....	252
7.4 COMPONENT DEFINITIONS .....	258
7.4.1 Group Vertical/Horizontal Trend .....	258
7.4.2 Group vertical bargraph .....	258
7.4.3 Group horizontal bargraph .....	258
7.4.4 Group numeric display .....	259
7.4.5 Channel vertical/horizontal bargraph .....	259
7.4.6 Channel Numeric .....	259
7.4.7 Channel data .....	259
7.4.8 Dialogue Action .....	259
7.4.9 Navigation Action .....	259
7.4.10 Operator button .....	260
7.4.11 Event Button .....	260
7.4.12 Image .....	260
7.4.13 Text .....	261
7.4.14 Round rectangle .....	261
7.4.15 Rectangle .....	261
7.4.16 Polyline - series of points .....	262
7.4.17 Polygon- closed area .....	263
7.4.18 Oval .....	264
7.4.19 Line .....	264
EXAMPLE .....	264

## LIST OF CONTENTS (CONT.)

Section	Page
7.4.20 Arc .....	265
EXAMPLE .....	265
7.5 MEASURING UNIT COMPARISONS .....	266
7.5.1 XGA screen .....	266
7.5.2 QVGA screen .....	266
7.6 ERROR CODES .....	266
<b>8 MODBUS TCP SLAVE COMMS .....</b>	<b>267</b>
8.1 INSTALLATION .....	267
8.2 INTRODUCTION .....	267
8.2.1 Function Codes .....	267
DIAGNOSTIC CODES .....	267
EXCEPTION CODES .....	268
8.2.2 Data types .....	268
DATA ENCODING .....	268
8.2.3 Invalid multiple register writes .....	268
8.2.4 Security .....	268
TO SEND A LOGIN REQUEST .....	271
8.2.5 Text messages .....	273
LONG MESSAGES .....	273
8.3 ADDRESS MAP .....	275
8.4 ADDRESS ALLOCATION .....	277
8.4.1 Instrument data .....	277
8.4.2 Channel configuration data .....	278
CHANNEL 1 .....	278
CHANNEL 2 .....	279
CHANNEL 3 .....	280
CHANNEL 4 .....	281
CHANNEL 5 .....	282
CHANNEL 6 .....	283
CHANNEL 7 .....	284
CHANNEL 8 .....	285
CHANNEL 9 .....	286
CHANNEL 10 .....	287
CHANNEL 11 .....	288
CHANNEL 12 .....	289
8.4.3 Channel Run-Time data .....	290
CHANNEL 1 .....	290
CHANNEL 2 .....	290
CHANNEL 3 .....	291
CHANNEL 4 .....	291
CHANNEL 5 .....	292
CHANNEL 6 .....	292
CHANNEL 7 .....	293
CHANNEL 8 .....	293
CHANNEL 9 .....	294
CHANNEL 10 .....	294
CHANNEL 11 .....	295
CHANNEL 12 .....	295
8.4.4 Group data .....	296
GROUP 1 .....	296
GROUP 2 .....	297
GROUP 3 .....	298
GROUP 4 .....	299
GROUP 5 .....	300
GROUP 6 .....	301

## LIST OF CONTENTS (CONT.)

Section	Page
8.4.5 Feature identification table (FIT) .....	302
8.4.6 Indirection tables .....	302
8.4.7 IEEE 32-bit channel configuration data .....	305
CHANNEL 1 .....	305
CHANNEL 2 .....	305
CHANNEL 3 .....	305
CHANNEL 4 .....	306
CHANNEL 5 .....	306
CHANNEL 6 .....	306
CHANNEL 7 .....	307
CHANNEL 8 .....	307
CHANNEL 9 .....	307
CHANNEL 10 .....	308
CHANNEL 11 .....	308
CHANNEL 12 .....	308
8.4.8 IEEE Area Channel run-time data .....	309
CHANNEL 1 .....	309
CHANNEL 2 .....	309
CHANNEL 3 .....	310
CHANNEL 4 .....	310
CHANNEL 5 .....	311
CHANNEL 6 .....	311
CHANNEL 7 .....	312
CHANNEL 8 .....	312
CHANNEL 9 .....	313
CHANNEL 10 .....	313
CHANNEL 11 .....	314
CHANNEL 12 .....	314
8.4.9 Permanent ID table .....	315
8.5 DATA TRANSMISSION .....	315
FUNCTION CODES AND EXCEPTION CODES .....	315
TEXT STRINGS .....	315
8.5.1 Function code 03 .....	316
REQUEST .....	316
RESPONSE .....	316
EXCEPTION RESPONSES .....	316
8.5.2 Function code 04 .....	317
8.5.3 Function code 06 .....	317
REQUEST .....	317
RESPONSE .....	317
EXCEPTION RESPONSES .....	317
8.5.4 Function code 08 .....	317
8.5.5 Function code 16 (Hex 10) .....	318
REQUEST .....	318
RESPONSE .....	318
EXCEPTION RESPONSES .....	318
<b>9 ASCII PRINTER OUTPUT OPTION .....</b>	<b>319</b>
9.1 INTRODUCTION .....	319
9.2 WIRING .....	319
9.2.1 Serial communications ports .....	319
9.2.2 DC connection .....	319
9.3 CONFIGURATION .....	320
9.3.1 Connections .....	320
PORT .....	320
LINK ERROR COUNT .....	320
PROTOCOL .....	321
BAUD RATE .....	321
STOP BITS .....	321
PARITY .....	321
PRINTER TYPE .....	321
PRINTER NAME .....	321
PRINTER STATUS .....	321
PRINTER TEST .....	321

## LIST OF CONTENTS (CONT.)

Section	Page
PRINT MESSAGES FROM .....	321
MESSAGES TO PRINT .....	321
9.3.2 Reports configuration .....	322
REPORT .....	322
DESCRIPTOR .....	322
NUMBER OF FIELDS. ....	322
FIELD N TYPE .....	322
STYLE .....	323
POINT .....	323
LINE FEED .....	323
9.3.3 ASCII Input Filtering .....	323
Text Filters .....	323
Configuration .....	323
9.4 IMPORTING PRINTER DRIVERS .....	326
9.5 REPORT EXAMPLE .....	327
9.5.1 Group Configuration .....	327
GROUP NUMBER 1 .....	327
9.5.2 Channel configuration .....	327
CHANNEL 1 .....	327
CHANNEL 2 .....	327
CHANNEL 3 .....	327
CHANNEL 4 .....	327
9.5.3 Event Configuration .....	328
EVENT NUMBER 1 .....	328
9.5.4 Report Configuration .....	328
9.5.5 Serial Communications Configuration .....	329
9.6 TSP600 SWITCH SETTINGS .....	330
<b>Annex A: SPECIFICATION</b> .....	<b>331</b>
INSTALLATION CATEGORY AND POLLUTION DEGREE .....	331
Installation category II .....	331
Pollution degree 2 .....	331
A1 TECHNICAL SPECIFICATION (Recorder) .....	332
<b>Annex B: REFERENCE</b> .....	<b>335</b>
B1 DIAGNOSTICS DISPLAY .....	335
B1.1 Main diagnostic display .....	335
B1.2 SPECIAL MODES .....	336
B1.3 DISPLAY TEST .....	336
B1.4 TOUCH CALIBRATION .....	336
B1.4.1 Touch screen calibrate .....	337
B1.4.2 Touch screen verify .....	337
B1.4.3 Main menu .....	337
B1.5 SYSTEM SUMMARY .....	338
B1.6 DIAG SUMMARY .....	338
B1.6.1 MAC Address .....	338
B1.6.2 Software version number .....	338
B1.6.3 Serial 1/Serial 2 .....	339
B1.6.4 Battery .....	339
B1.6.5 Lockable .....	339
B1.6.6 Option boards .....	339
B1.6.7 Input boards .....	339
B1.6.8 Main menu .....	339
B1.7 QUIT .....	339
B2 PREVENTIVE MAINTENANCE .....	340
B2.1 TOUCH SCREEN CLEANING .....	340
B2.2 MAINTENANCE SCHEDULE .....	340
B2.2.1 Battery replacement procedure .....	341
B3 OPTION ENABLING .....	342
B4 COLOUR SELECTION .....	342
B5 TCP PORT NUMBERS .....	345
B6 ASCII CHARACTERS FOR SERIAL COMMS .....	346
B7 TIME ZONE INFORMATION .....	347

## LIST OF CONTENTS (CONT.)

Section	Page
B8 HISTORY MAINTENANCE OPTION .....	348
B8.1 KEYCODE EXTRACTION .....	348
B8.2 ERASING HISTORY .....	349
B9 MENU STRUCTURE .....	350
<b>Annex C: WEB SERVER DETAILS .....</b>	<b>364</b>
C1 INTRODUCTION .....	364
C2 INTERNET LINKS .....	364
C3 ACCESS TABS .....	364
C3.1 INSTRUMENT .....	364
C3.1.1 Instrument alarms .....	364
C3.1.2 Global channel alarm .....	364
C3.2 TRENDS .....	365
C3.2.1 Horizontal trend .....	365
C3.2.2 Vertical trends .....	366
C3.2.3 Numeric display .....	366
C3.3 MESSAGE LOGS .....	366
C3.4 HISTORY .....	367
C3.5 ABOUT .....	367
<b>Index .....</b>	<b>369</b>

## SAFETY NOTES

### WARNING!

This unit is intended for use with low voltage dc supplies. Connection of mains (line) supply voltages will not only damage the unit, but may also cause an electrical shock hazard to be present at operator accessible surfaces.

### WARNING!

The supply voltage connector has two 0V pins, commoned together by the circuit board backplane, and two 24V (nom) pins which are also shorted together internally. This allows easy 'daisy-chaining' of multiple units. Two separate power supply units may not be connected as to do so may result in damage to the unit, and/or a potential fire or explosion hazard.

### CAUTION

Local lightning protection must be fitted if the dc power supply unit is located more than 30 metres from the visual supervisor(s) it is supplying.

Note: in order to comply with the requirements of safety standard BS EN61010, the recorder shall have one of the following as a disconnecting device, fitted within easy reach of the operator, and labelled as the disconnecting device.

- a. A switch or circuit breaker which complies with the requirements of IEC947-1 and IEC947-3
- b. A separable coupler which can be disconnected without the use of a tool
- c. A separable plug, without a locking device, to mate with a socket outlet in the building.

1. If a hazard could arise from an operator's reliance on a value displayed by the equipment, the display must give an unambiguous indication (e.g. a flashing alarm) whenever the value is over range or under range.
2. Where conductive pollution (e.g. condensation, carbon dust) is likely, adequate air conditioning/filtering/sealing etc. must be installed in the equipment enclosure.
3. The equipment is designed for process monitoring and supervision in an indoor environment. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment might be impaired.
4. The battery within the unit must not be short circuited. When exhausted, the battery must be disposed of in accordance with local regulations for poly-carbonmonofluoride/lithium cells.
5. When connecting a USB device, it must be plugged directly into the instrument. The use of extension USB leads may compromise the unit's ESD compliance.
6. There are no specific insulation requirements for external circuitry.
7. In order to comply with CE requirements, the Protective-conductor terminal must be connected to a protective conductor.

## SYMBOLS USED ON THE EQUIPMENT LABELLING

One or more of the symbols below may appear as a part of the unit's labelling.

	Refer to the manual for instructions		Ethernet connector
	Protective-conductor terminal		USB connector
	This instrument for dc supply only		Serial communications connector
	Precautions against static electrical discharge should be taken when handling this unit.		

### CAUTION

When accessing the battery, or setting DIP switches etc. the operator must be at the same electrical potential as the casing of the instrument.

When fitting USB devices, both the operator and the device must be at the same electrical potential as the casing of the instrument.



## 1 INTRODUCTION

This document describes the installation, operation and configuration of a distributed graphic recorder. The recorder comes in two versions which differ only in their physical size and connector layout (i.e. the operation and configuration procedures are the same for both).

The unit is supplied with RJ45 connectors for Ethernet and Serial communications links. These allow the recorder to read from and write to remote IO devices, and to connect to a 'remote' host PC. The standard recorder comes equipped for FTP transfer and is also fitted with 'Bridge' (Remote viewing) software. For data archiving, both a Compact Flash card driver and a USB port are fitted to allow local archiving, whilst the FTP function allows for remote archiving. The USB port also supports peripherals such as a floppy disk, computer mouse, keyboard, bar-code reader etc.

### 1.1 UNPACKING THE RECORDER

The recorder is despatched in a special pack, designed to give adequate protection during transit. Should the outer box show signs of damage, it should be opened immediately, and the recorder examined. If there is evidence of damage, the instrument should not be operated and the local representative contacted for instructions. After the recorder has been removed from its packing, the packing should be examined to ensure that all accessories and documentation have been removed. The packing should then be stored against future transport requirements.


## 2 INSTALLATION

### 2.1 MECHANICAL INSTALLATION

Figures [2.1a](#) and [2.1b](#) give installation details for the small and large frame cases respectively.

The unit is inserted through the panel aperture from the front of the panel and a panel clamp inserted into each of the mounting slots (one each on the left- and right-hand sides). Whilst ensuring that the sealing gasket is flat against the front of the panel, tighten the screws of the clamps sufficiently to hold the unit firmly in position. **IMPORTANT:** Do not use excessive force to tighten the screws. It could distort the case and render the instrument inoperative.

2 INSTALLATION (Cont.)

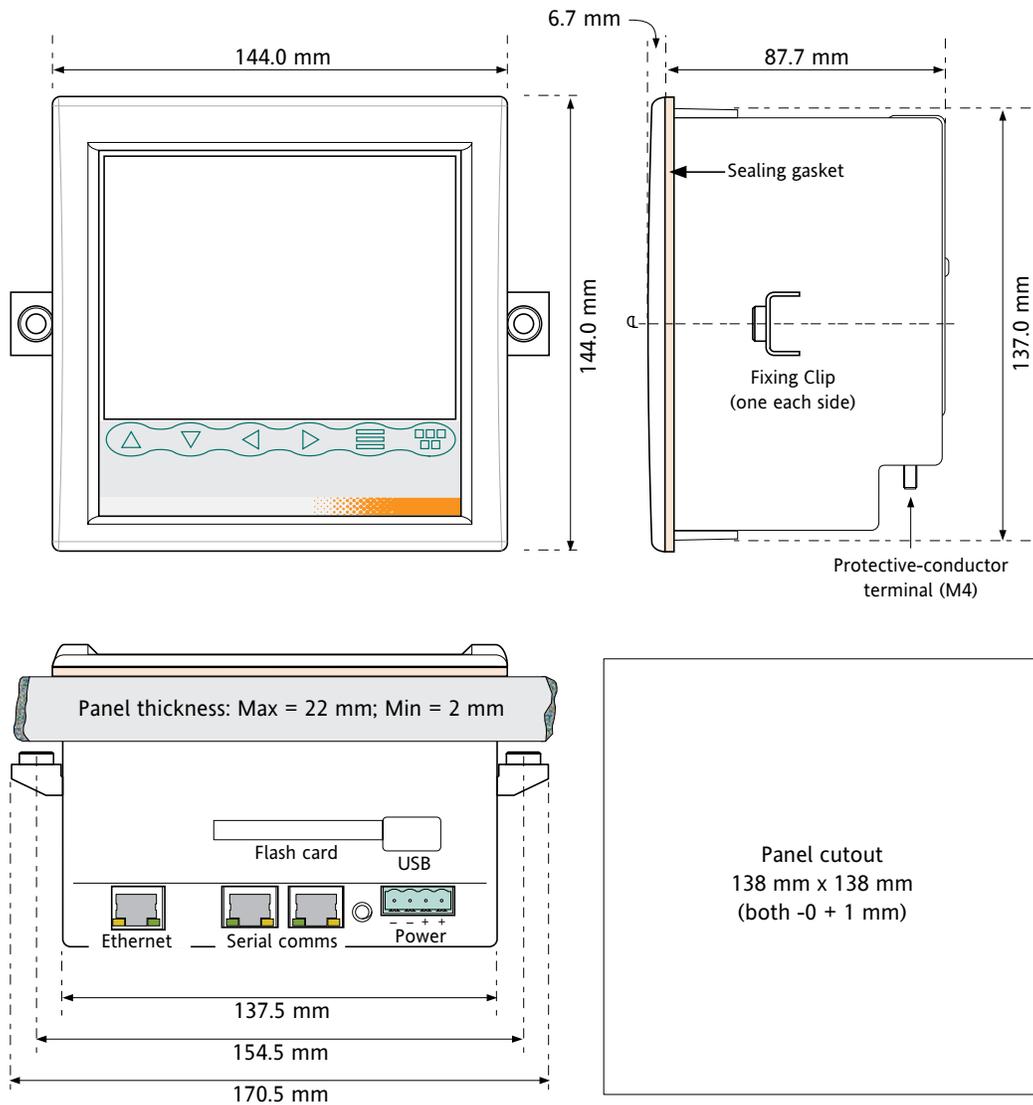

**PANEL MOUNTING DETAILS**

Installed panel angle: Vertical panels only  
Minimum inter-unit spacing: 50 mm. vertical or horizontal.

Note: where multiple units are mounted in close proximity with one another, steps must be taken to ensure that the resulting ambient temperature does not exceed the specified maximum operating temperature of 50 degrees Celsius

Figure 2.1a Mechanical installation details - small frame unit

2 INSTALLATION (Cont.)

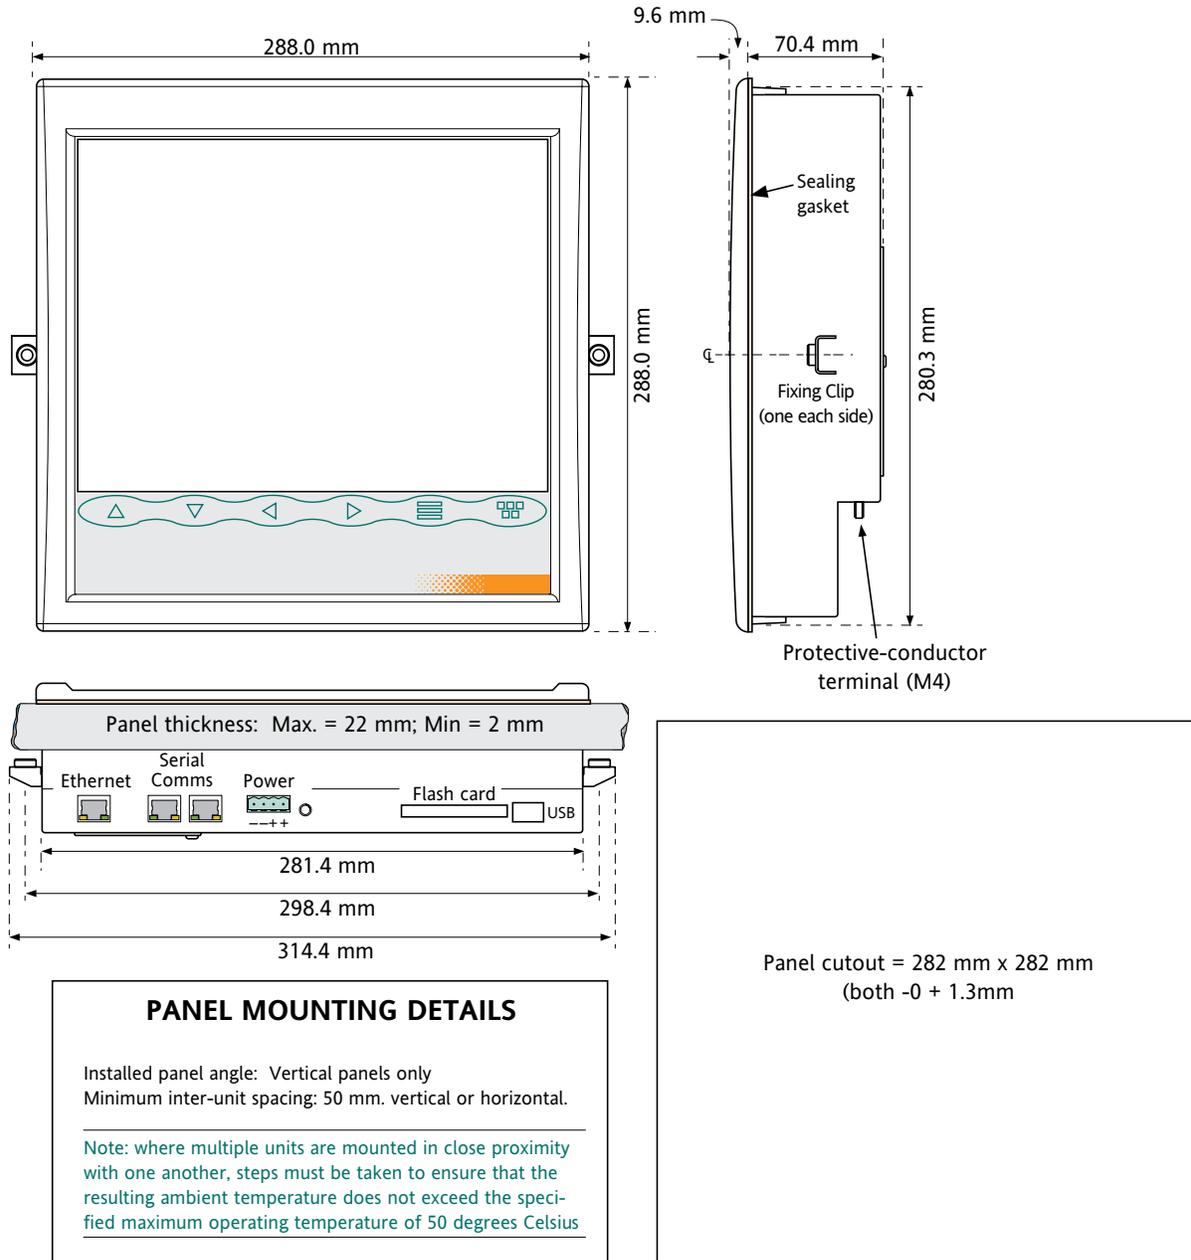


Figure 2.1b Mechanical installation details -large frame unit

## 2.2 ELECTRICAL INSTALLATION

Note: Before carrying out any wiring, please read the Safety Notes and warnings preceding this chapter.

### 2.2.1 Supply voltage wiring

The 24V dc supply voltage wiring is terminated at a four-way connector located on the underside of the unit, as shown in figure 2.1a or 2.1b. The supply wiring should be terminated as shown in figures 2.2.1a, and 2.2.1b, below.

#### WARNING!

Pins 1 and 2 are internally connected together, as are pins 3 and 4.

### POWER REQUIREMENTS

Voltage range: 19.2 to 28.8 V dc (24V dc  $\pm$  20%)

Permissible ripple: 1 V max.

Maximum power requirements (at 24 V): Small frame = 20 Watts; Large frame = 24 Watts

Inrush current: 10A

Internal fusing: Not user replaceable

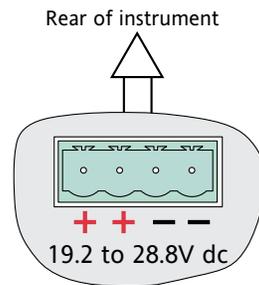


Figure 2.2.1 a Supply voltage wiring (view on underside of instrument)


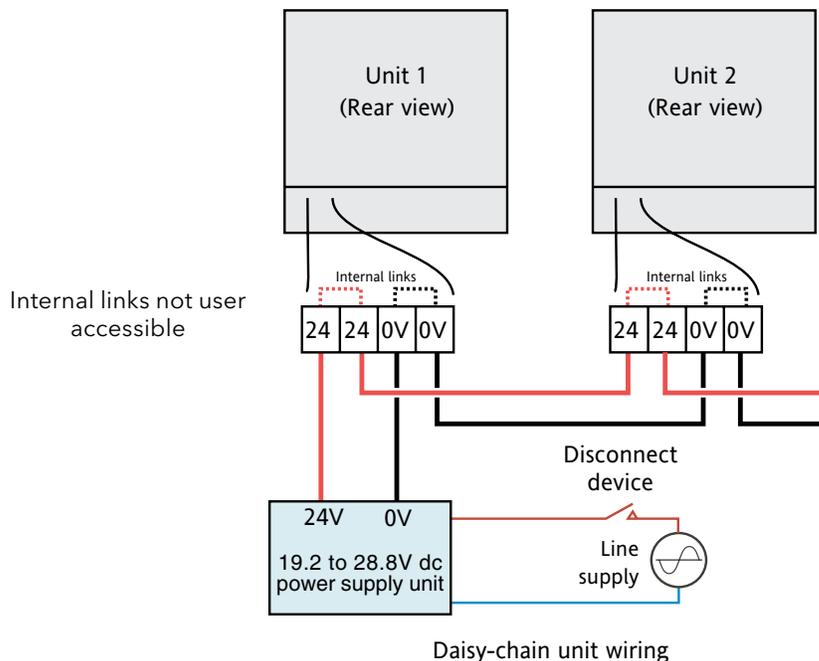


Figure 2.2.1b Supply voltage connection example

### 2.2.2 EIA485 connections

This pair of adjacent RJ45 connectors, are located on the underside of the instrument, as shown in figures 2.1a and 2.1b. These connectors can be configured, by means of a 4-gang DIP switch each, as Master or Slave. Further sections of the switches allow 120Ω terminating resistors to be switched in and out of circuit. The DIP switches are accessible by removing the access cover at the rear of the unit.

Table 2.2.2a shows the pinout for master and slave connections. Figure 2.2.2 and table 2.2.2b show the switch details for the small frame unit (large frame unit similar).

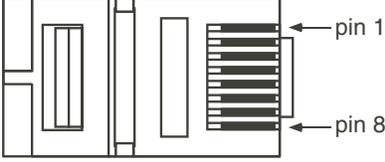

RJ 45 plug: View on underside

Pin	5 wire Master	5 wire Slave	3-Wire Master/Slave
1	RxB	TxB	B
2	RxA	TxA	A
3	Common	Common	Common
4	NC	NC	NC
5	NC	NC	NC
6	Common	Common	Common
7	TxB	RxB	NC
8	TxA	RxA	NC

Table 2.2.2a Serial communication port pinout.

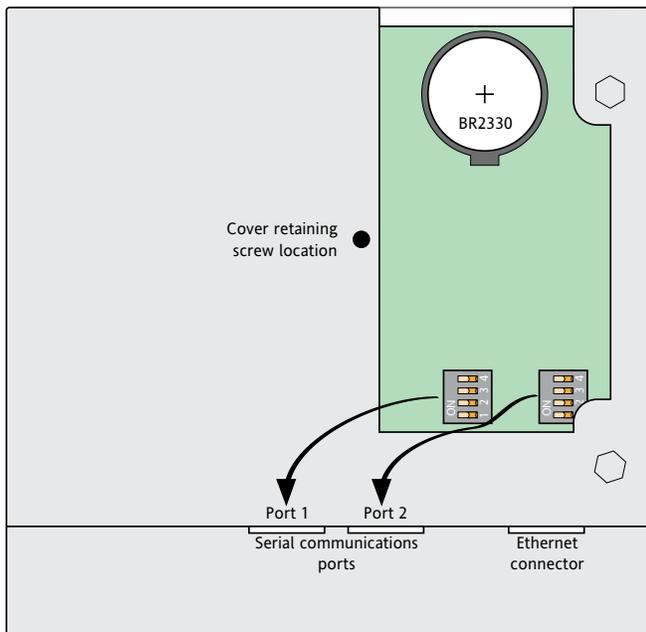


Figure 2.2.2b  
Serial communications hardware configuration  
(Small frame shown - large frame similar)



**CAUTION**

The user must be at the same electrical potential as the instrument housing when accessing internal items such as batteries and switches.

Segment	ON (left)	OFF (right)
4	Slave	Master
3	5-wire	3-wire
2	120 Ohm terminating resistor fitted across pins 7 and 8	No terminating resistor across pins 7 and 8
1	120 Ohm terminating resistor fitted across pins 1 and 2	No terminating resistor across pins 1 and 2

Table 2.2.2b Communications DIP switch settings

### LED INDICATORS

There are two LED indicators associated with the Serial Communications RJ45 connectors:

The yellow LED indicates when the unit is transmitting.

The green LED illuminates when 5-wire (full duplex) communications is selected (software selection).

## 2.3 USB CONNECTOR

A Type-A USB socket is fitted adjacent to the Compact flash card slot (as shown in [figure 2.1a](#) and [figure 2.1b](#), above). This port may be used to connect a 'memory stick', computer mouse, keyboard, floppy disk drive or bar-code scanner.

Maximum source current = 500 mA.

---

**Note:** Compliance with EMC directives cannot be guaranteed if the USB peripheral is connected using an extension cable.

---

## 2.4 CARD SLOT

The slot for the Compact Flash card is located on the underside of the unit as shown in [figure 2.1a](#) or [figure 2.1b](#). The card is removed by a double operation of the eject button. See details in [figure 2.4](#), below.

---

**Caution**

Removal of the memory device whilst archiving is in progress causes irreparable damage to the filing structure on the device, rendering it unusable. For this reason, archiving should be suspended ([section 4.1](#)) (wait for the green area of the disk icon ([section 3.1.3](#)) to go 'white') before the device is removed. It is strongly recommended that the 'Remove Media' facility described in [section 3.1.4](#) (Summary menu) be used to ensure that it is safe to remove the memory device.

---

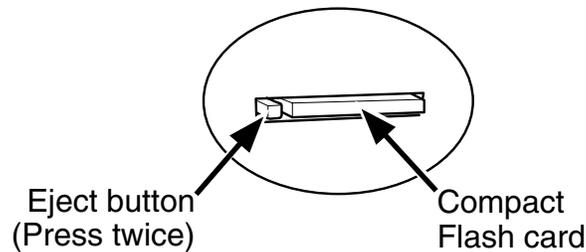


Figure 2.4 Compact flash card details



**CAUTION**

Both the user and the peripheral (e.g. USB device) must be at the same electrical potential as the instrument housing before the peripheral is connected.

---

### 3 PROCESS VARIABLE DISPLAY

The operator interface consists of a touch-sensitive screen, showing either process variable values in one of a number of formats, or, showing configuration or operational details for use in setting up the recorder. This section (3) describes the process variable displays. [Section 4](#) describes the Configuration displays.

Figure 3, below, depicts a typical trend display for a large-frame unit and gives details of the various areas of the display page. The small-frame unit display is similar.

#### Notes:

1. Dialogue boxes, message boxes etc. cause Process Variable displays to 'freeze' for as long as the box is on display. Root and Option menus (amongst others) time-out (i.e. are removed from the display) after approximately one minute. Messages, however, are displayed until the operator takes action to remove them. It should be noted, especially, that several message boxes may be active at one time, but only the oldest one is visible, until it is removed to reveal the 'next oldest' message, and so on.
2. Many of the screen components can be customised as to colour/size etc. as described in [section 4.6.8](#) (Customise).

#### TRUNCATION OF NUMERIC VALUES

If the amount of space on the display page is insufficient to display the full width of the process variable or scale value, then the displayed value is rounded down and the number of decimal places reduced. If the width is still too restricted, the value is displayed in 'scientific' format, or if this is still too wide, the final visible character of the integer part of the value is replaced by a '?' (as depicted in figure 3.4.4b)

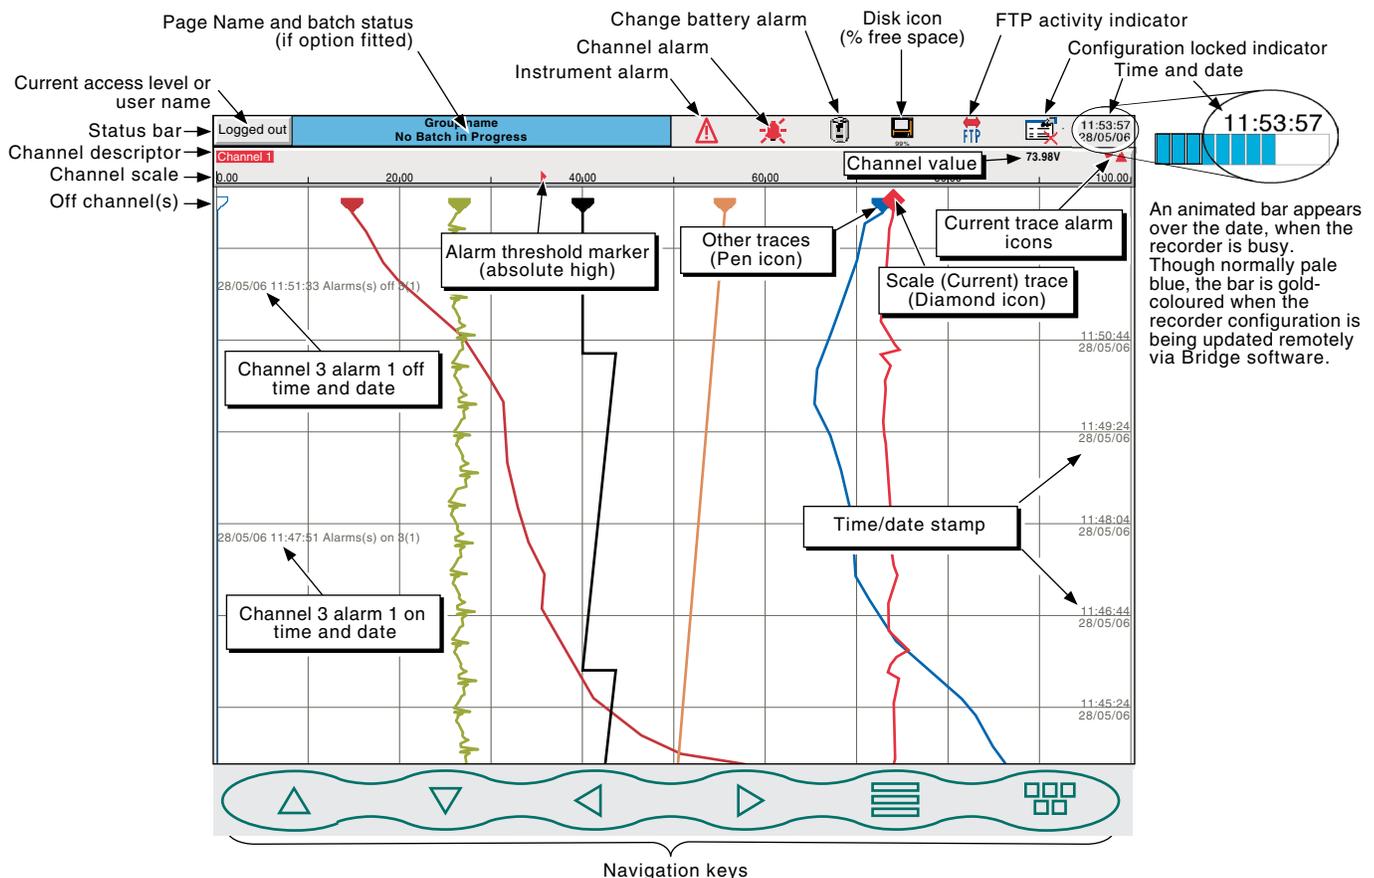


Figure 3 Trend display definitions (large frame unit)

### 3 PROCESS VARIABLE DISPLAY (Cont.)

#### CURRENT TRACE ALARM ICONS

In each of the different types of PV display, each channel's faceplate gives the status of the channel's alarms. The status of each alarm is shown by one of the icons depicted in table 3, either flashing (if it is active and unacknowledged) or on continuously (if it is active and acknowledged). (See [section 3.1.4](#), below, for a description of how to acknowledge alarms.) Absolute alarm threshold icons and deviation alarm bars appear in any display which includes a scale (except circular charts). For deviation alarms the bar stretches from (Reference - Deviation) to (Reference + Deviation).

Note: 'Trigger' alarms do not display threshold marks or bars, or faceplate symbols.

	Absolute High
	Absolute Low
	Deviation in
	Deviation out
	Rate-of-change Rising
	Rate-of-change Falling

Faceplate symbols

	Absolute low	Absolute high	Deviation In / Out	Rate of change
Horizontal scales				No indication
Vertical scales				No indication

For Deviation alarms, R = Reference; d = deviation

Scale symbols

Table 3 Alarm icons

### 3.1 STATUS BAR

This appears across the top of the display, and contains the items described below.

#### 3.1.1 Current access level

There are four access levels available (Logged out, Operator, Engineer and Service), and the current level is displayed in this key at the top left hand corner of the display. Touching this key calls the login page as described in section 3.3.1 ([Access to configuration](#)) below. If a user has been added (using the 'Add User' part of the Security setup - section 4.4.3, below), then the 'Full User Name' is displayed instead of the access level.

#### 3.1.2 Page name

Initially this shows the current group's descriptor. The name changes according to context for example 'Operator' or 'Config-Archive'. If the Batch option is fitted, this area contains batch information as well as the page name. Touching the area calls the Batch Status page. See [section 4.3.10](#) for further Batch details.

### 3.1.3 Alarm indication

This area of the display can contain a number of status icons: Instrument alarm, [Channel alarm](#), [Battery change](#), [Disk status](#), [FTP in progress](#), [Configuration locked](#), and so on. Pressing this area of the screen calls the 'Summary menu' - ([section 3.1.4](#)) allowing the user to view active instrument alarms, to acknowledge all channel alarms, to display the Alarm Summary or Message Log page. Media removal strategy is also controlled from this pop-up.

For channel alarm symbols refer to '[Current Trace Alarm Icons](#)', above.

#### INSTRUMENT ALARM

This indicator appears, flashing, if any of the following errors are active. The instrument alarm summary page, described in [Section 3.1.4](#), allows the user to view such instrument alarms as are active.

Active Directory Server error	The active directory server ( <a href="#">section 4.5.1</a> ) cannot be accessed.
Archive failed -(message)	Message explains archive failure.
Battery-backed RAM cleared	This message appears if the battery has failed, and the unit has been switched off.
Clock failure	Internal clock was corrupt at power up, or the time has never been set. Can be caused by battery failure, in which case the battery icon will also be visible. The error is cleared by setting the time and date. Server time forced to 00:00 1/1/1900.
DHCP Server failure	For instruments with IP address lookup set to 'Get from DHCP Server', this alarm occurs if the recorder cannot obtain an IP address from the server. See <a href="#">section 4.5</a> for details.
FTP Archiving file lost	Archive failed. A file which has not been archived, has been detected.
FTP Archiving too slow	Remote archive is too infrequent. The recorder effectively switches to 'Automatic' ( <a href="#">section 4.3.5</a> ) to ensure that data is not lost.
FTP Primary Server Failure	This error is set if the recorder fails, after two attempts, to establish communications with the primary server as defined in Archive Configuration ( <a href="#">section 4.3.5</a> ). After the second attempt has failed, the Secondary server is tried.
FTP Secondary Server Failure	This error is set if the recorder fails, after two attempts, to establish communications with the secondary server as defined in Archive Configuration ( <a href="#">section 4.3.5</a> ). See also 'FTP Primary Server Failure, above.
Insufficient non-volatile memory...	There is insufficient memory available for the configuration. Can be caused by use of Rolling Average maths functions.
Internal flash: \application\required repair	Error found in the internal file system at power-up, and corrected.
Internal flash: \history\ required repair	Error found in the internal file system at power-up, and corrected.
Internal flash: \screens\ required repair	Error found in the internal file system at power-up, and corrected.
Internal flash: \user\ required repair	Error found in the internal file system at power-up, and corrected.
Internal flash: \user\ is full	Appears if the User partition is full. To clear, either user screens must be simplified or files must be deleted from \User\, or both.
Maths Channel failure	Appears if, for example, the divisor of a divide function is zero.
Media Archiving file lost	Archive failed. A file which has not been archived, has been detected.
Media Archiving too slow	Archive is too infrequent. The recorder effectively switches to 'Automatic' ( <a href="#">section 4.3.5</a> ) to ensure that data is not lost.
Network boot failure	The recorder is unable to establish connection with the BootP or DHCP server. This might be caused by, for example, cable failure, network hardware failure, etc.
Recording failure - (message)	Message explains recording failure - due to file error, internal overflow etc.
Removable media failure	This error is set if the archive storage device is corrupt, wrongly formatted etc. Becomes active only when an Archive is attempted.
Removable media full	Archive storage device full. Becomes active only when an Archive is in progress.

### 3.1.3 ALARM INDICATION (Cont.)

#### INSTRUMENT ALARMS (Cont.)

SNTP server failure	This error is set if:- a) the year received from the server is < 2001 or > 2035 or b) the configured SNTP server cannot be accessed.
Time synchronisation failure	Set if 5 or more 'Time change events' are caused by the SNTP server within 24 hrs. A 'Time change event' occurs whenever the recorder time is found to be more than 2 seconds different from the server time. The alarm does not appear until 24 hours have elapsed since the first of the five or more Time Change events occurred.
USB over current	USB power fault - too much current being drawn by a USB device (max 500 mA).
USB unsupported	Unsupported USB device inserted.

#### CHANNEL ALARM

This red 'bell' indicator appears if any channel is in alarm. The symbol is illuminated continuously if all alarms are acknowledged or flashes if any active alarm is unacknowledged. Refer to '[ALARM ACKNOWLEDGEMENT](#)' below, for details of how to acknowledge alarms.

#### CHANGE BATTERY

This flashing indicator first appears when the battery voltage (checked every 15 minutes) indicates that the battery is approaching the end of its useful life. The indicator continues to flash until the battery is replaced ([B2.2 in Annex B](#)). The indicator does not appear if the battery is not fitted.

#### DISK ICON

This shows the free space available on whatever mass storage medium is fitted (if any), and selected for Archive destination (note 1). The disk icon appears soon after the device is inserted (but see note 2). During archiving, the colour of the central area of the disk changes to green (see note 3). No other disk activity (e.g. save/restore configuration) is indicated.



Figure 3.1.3 Archive activity indication

#### Notes

1. The icon appears only when a memory device is present, AND when that memory device has been selected in the 'Archive to media' selection in archive configuration ([section 4.3.5](#)). For example: if a memory stick is inserted in 'usbfront', but Archive to Media is set to 'mediacard', then the disk icon appears only if a suitable card is present in the 'mediacard' slot.
2. When a disk is inserted into a USB floppy disk drive which is connected to the recorder, the disk icon appears only after the disk has been accessed, (either by reading from it or writing to it), or after the file system has been opened by touching the 'file' key. (This note does not apply for disks which have been inserted before the disk drive is plugged in.)
3. The central area goes green whenever local archiving is taking place - not only when archiving is taking place to the memory device selected in Archive configuration.

### 3.1.3 ALARM INDICATION (Cont.)

#### FTP ICON

The FTP icon appears to the right of the disc icon position whenever transfer activity is taking place.

#### CONFIGURATION LOCKED INDICATOR

This symbol appears only when Bridge software is being used, in the following situations:

1. Whilst units are 'synchronising' configuration changes
2. Whilst configuration is taking place. If the reconfiguration is taking place at the host pc (Bridge 'Full' only), then the symbol appears at the target instrument, and *vice-versa*.

#### TRIAL MODE INDICATOR

This symbol is displayed whilst the recorder Trial Mode ([section 4.3.22](#)) is enabled.

### 3.1.4 Summary menu

This pop-up display appears if the Alarm Indication area at the top of the display is touched. Figure 3.1.4 shows the display.

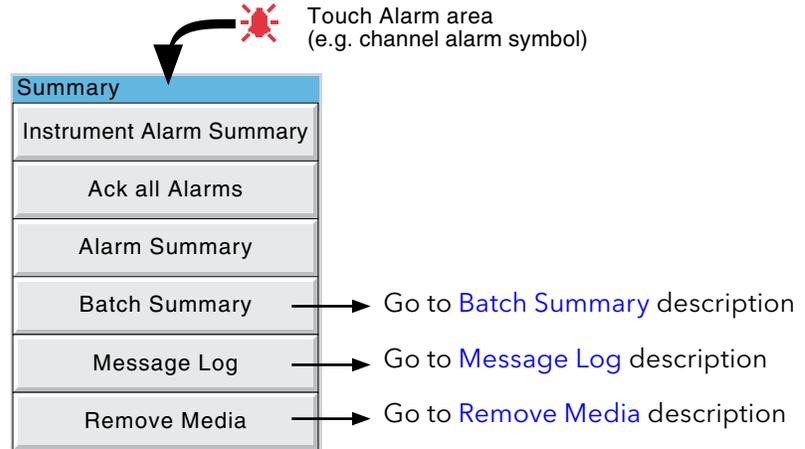


Figure 3.1.4a Summary pop-up menu

### INSTRUMENT ALARM SUMMARY



Figure 3.1.4b Typical Instrument alarm summary display

This contains a list of the currently active instrument alarms. For a list of possible alarms and their definitions, see [section 3.1.3](#), above.

### ACK ALL ALARMS



Figure 3.1.4c Ack all Alarms display

'Yes' confirms all active, unconfirmed alarms.

This page can also be displayed by touching an alarm in the alarm summary page, described below.

### 3.1.4 SUMMARY MENU (Cont.)

#### ALARM SUMMARY PAGE

As shown in figure 3.1.4d, below, the alarm summary page contains the following information for the current group:

1. Alarm identifier. This appears as a point ID, followed by the relevant alarm number in parentheses. For example, Alarm 1 on maths channel 6 would appear as: D6 (1). Maths (derived) channels are prefixed by 'D'. Totalisers are prefixed by 'T' and Counters are prefixed by 'C'. Input channels are not prefixed.
2. Alarm threshold for absolute alarms only
3. The current process value for the point
4. An alarm symbol (see Table 3). Alarm symbols flash until acknowledged.

**Notes:**

1. Alarms are always listed in Point/Alarm order with input channels first, followed by derived channels, totalisers and counters, if these options are fitted.
2. When the alarm source returns to its non-alarm state: Unlatched alarms are removed from the list whether or not they have been acknowledged; latched alarms remain displayed until acknowledged. See section 4.3.3 for a description of alarm types and actions.
3. There are no time or history components associated with the Alarm Summary. If Alarm messages have been enabled in the relevant group's configuration (section 4.3.2), then alarm initiation/acknowledgement times and dates can be found from the trend and trend history displays, described in section 3.4 or in Message log described later in this section.
4. If an alarm is active on a channel which is not included in any group, then although the channel alarm symbol will flash, the alarm will not appear in any of the alarm summary pages.

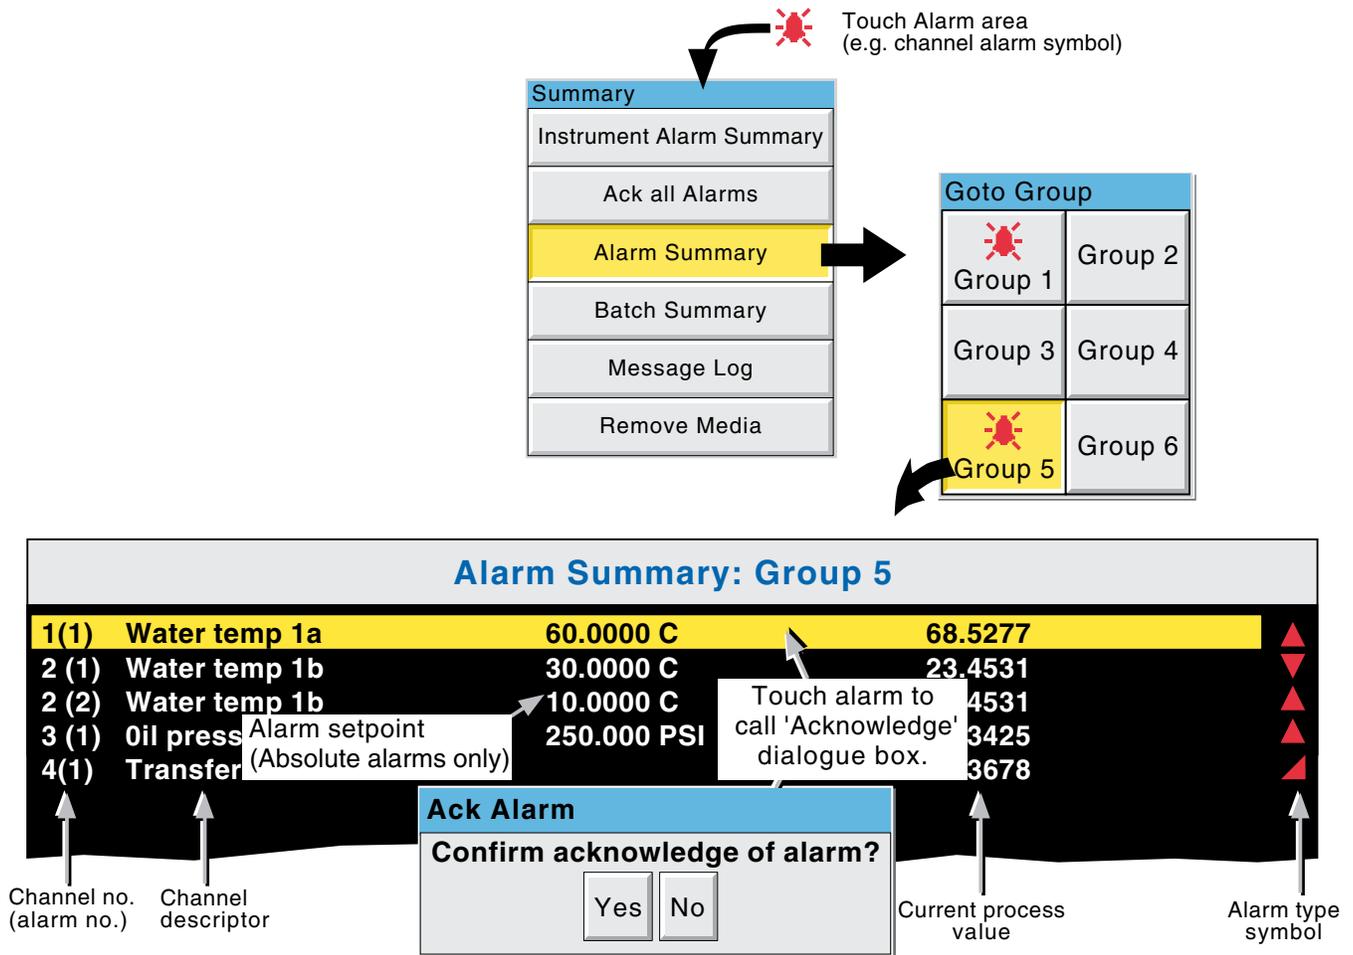


Figure 3.1.4d Alarm Summary display

### 3.1.4 SUMMARY MENU (Cont.)

#### ALARM ACKNOWLEDGEMENT

Alarms can be acknowledged individually, on a group basis, or globally (all alarms).

#### INDIVIDUAL ALARMS

Individual alarms are acknowledged from the alarm summary page by touching the relevant item (highlights yellow), then touching 'Yes' in the resulting pop-up confirmation box. Figure 3.1.3a, above, attempts to show this process.

#### GROUP ALARMS

Alarms can be acknowledged on a group basis by calling the alarm summary page for the relevant group, then pressing the Options key (section 3.2), the 'Ack Group Alarms' key and finally, 'Yes' in the resulting pop-up confirmation box. Figure 3.1.4e below, attempts to show this process.

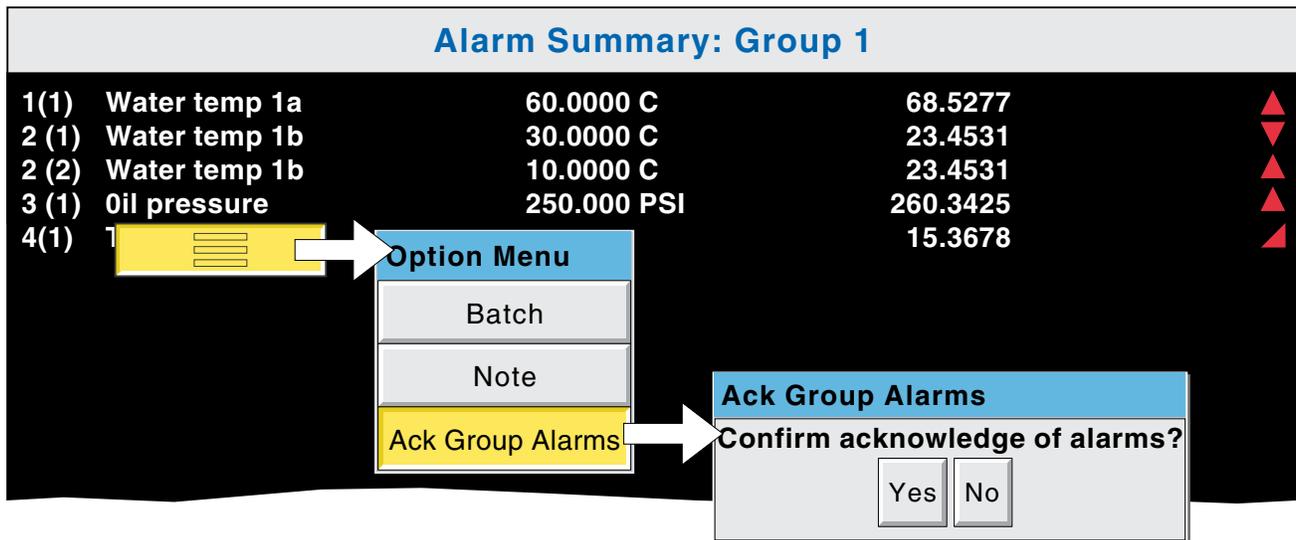


Figure 3.1.4e Group Alarm acknowledgement

#### ALL ALARMS

To acknowledge all active alarms, touch (e.g.) the channel alarm icon at the top of the screen. From the resulting 'Summary' menu, select 'Ack all Alarms', then finally, touch 'Yes' in the resulting pop-up confirmation box.

**Note:** The options menu is context sensitive, and may, therefore, not appear as illustrated above.

### 3.1.4 SUMMARY MENU (Cont.)

#### BATCH SUMMARY

If the Batch option is fitted (section 4.3.10) a 'Batch Summary' key appears in the Summary menu.

*Note: The following description shows the situation where batch 'Scope' is configured as 'Group'. The description is similar when 'Scope' = 'Instrument' except that there is only one line (Instrument), instead of one line per group.*

As shown in figure 3.1.4f, below, the Batch Summary page contains the following batch information:

1. Group names in group number order (if Scope = Group) or Instrument Name if scope = 'Instrument'
2. Batch active indicator (green spot)
3. Initiation time and date
4. Elapsed time for the batch
4. Batch Field 1 and its 'value'.

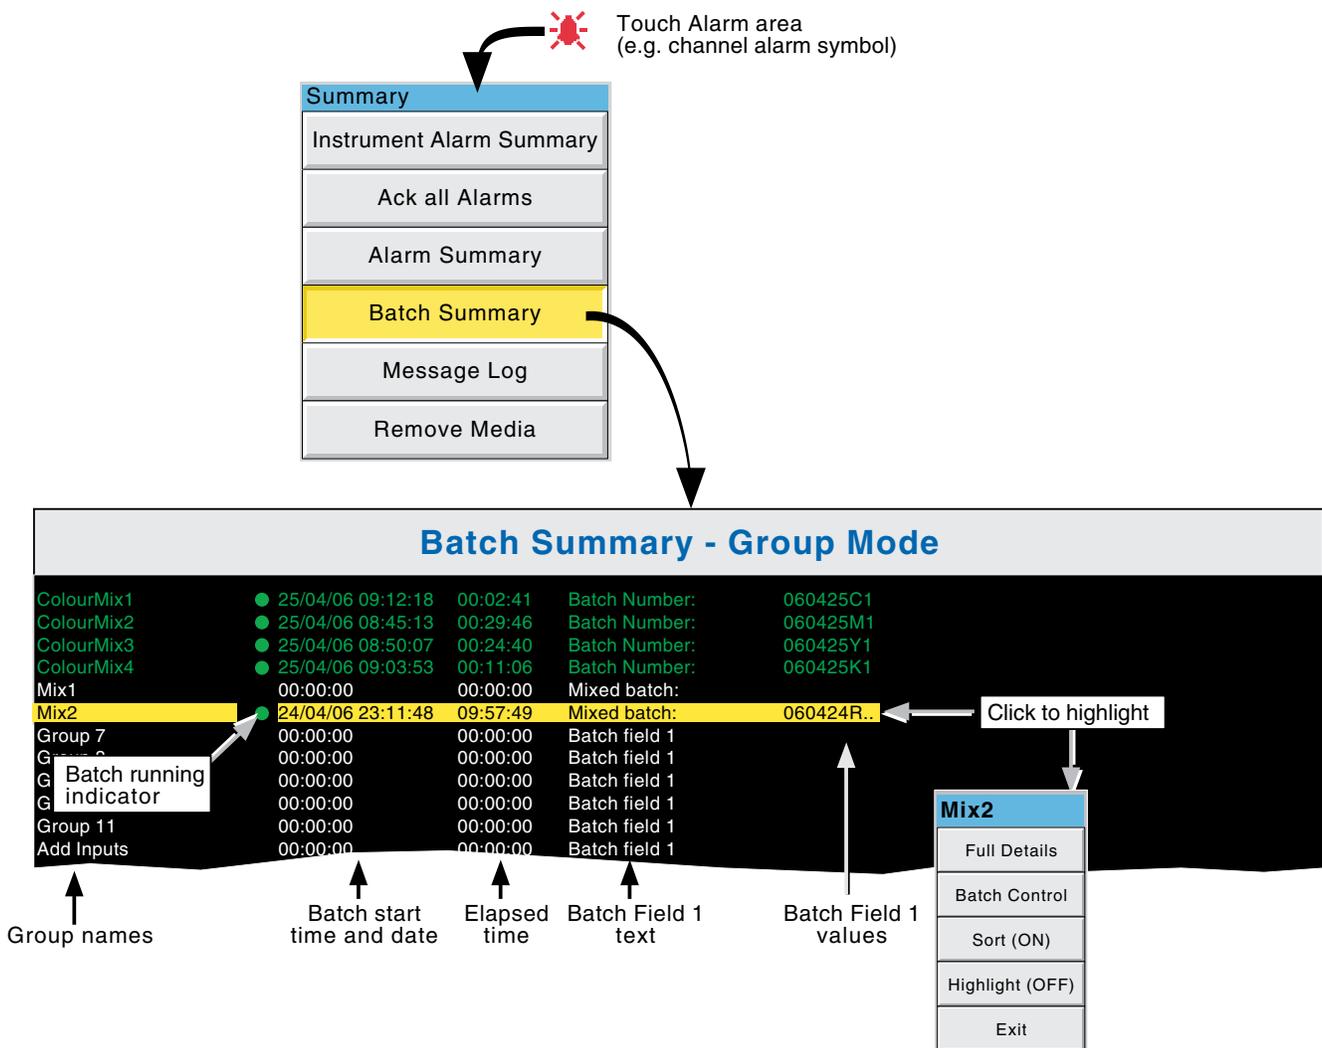


Figure 3.1.4f Batch Summary page (Group mode - sort OFF; highlighting ON))

Touching anywhere on a group row calls a pop-up menu as shown above. The functions of this menu are as follows:

### 3.1.4 SUMMARY MENU (Cont.)

#### BATCH SUMMARY (Cont.)

##### FULL DETAILS

Touching this key calls the Batch Details page showing the group name, batch status and batch field details.

##### BATCH CONTROL

This calls a page similar to the Full Details page, but including a 'NEW' key to allow the operator to start a new batch. If the batch is configured as 'Start/Stop' a 'Stop' key is also included allowing the user to stop the batch.

##### SORT

If Sort is Off (default), the groups appear in Group number order with Group 1 at the top and group 12 at the bottom. The key legend is 'Sort (ON)'.

If Sort is On, those groups with batches running appear (in group number order) at the top of the list, followed by any remaining groups (also in group number order). The key legend is 'Sort (OFF)'.

##### HIGHLIGHT

If Highlight is Off (default), then all groups' text appears in white. The key legend is 'Highlight (ON)'.

If Highlight is On then the text associated with groups which have batches running appears in green. Remaining groups' text is in white. The key legend is 'Highlight (OFF)'.

##### EXIT

Closes the pop-up menu. (It closes itself after approximately 50 seconds.)

### 3.1.4 SUMMARY MENU (Cont.)

#### MESSAGE LOG

Note: Message log can also be selected using the Root menu/Goto View/Message log key. This goes immediately to the first Message Log page for the current group to the screen (i.e. the 'Goto Group' menu does not appear).

If there are more messages than can be displayed in the height of the screen, a scroll bar appears to allow 'hidden' messages to be displayed.

Messages are retrieved from the history files in batches of 100 messages. If there are more than 100 messages, 'Earlier messages..' appears after the hundredth message. Touching 'Earlier messages..' calls the option menu, and touching 'Earlier messages..' in this menu, calls the next batch of 100, and so on. If applicable, operating 'Later messages..' / 'Later messages..' calls the previously displayed 100 messages.

As can be seen from figure 3.1.4g the list of messages can be 'filtered' both by type and by time. For example, setting the message type to 'Alarm' and the period filter to 'Last Day' excludes all messages except alarm messages which have occurred within the previous 24 hours. (For clarity, the figure shows both filters open. In fact, only one can be open at a time)

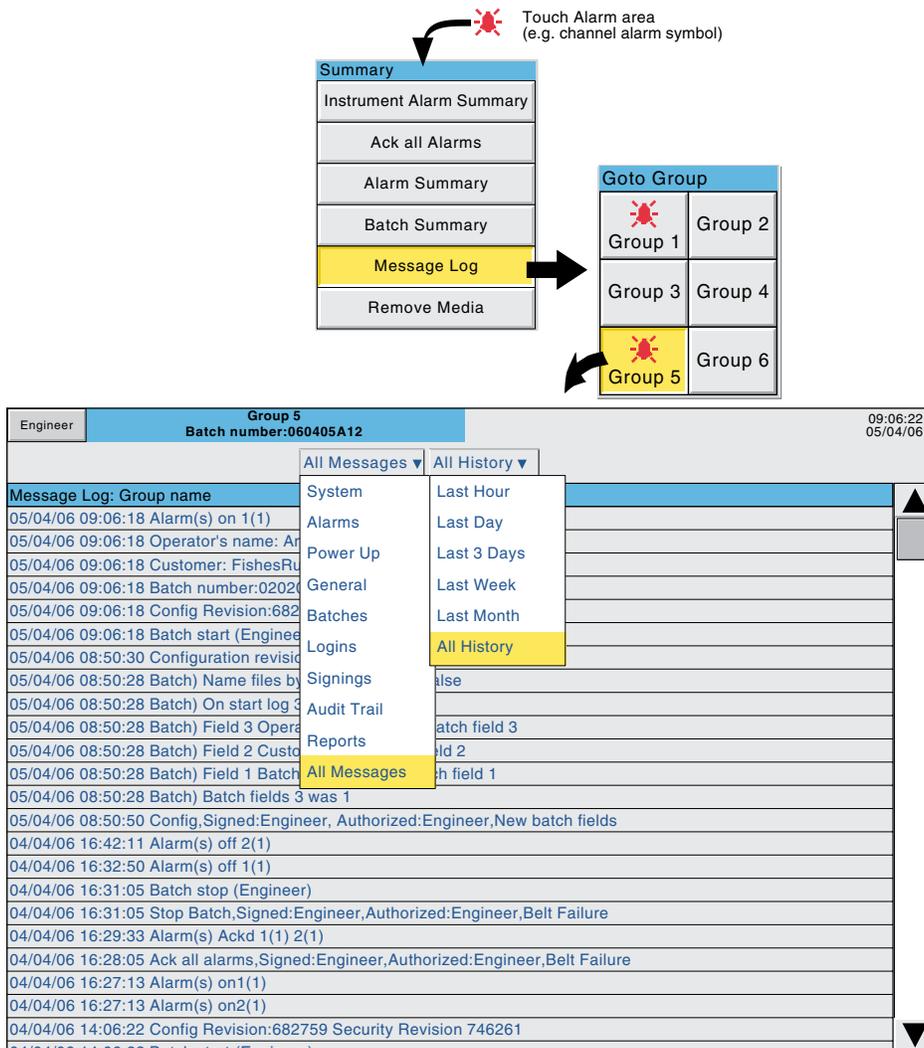


Figure 3.1.4g Message log page showing message-type picklist

### 3.1.4 SUMMARY MENU (Cont.)

#### MESSAGE LOG (Cont.)

##### MESSAGE TYPE FILTER

All Messages All messages are displayed

System Only System messages and instrument alarms are listed

Alarms Only alarm on/off and acknowledgement messages appear.

Power Up Displays power up messages only including Config Revision and Security revision. See 'About' ([section 4.6.9](#)) for more details.

General Displays e-mails, messages sent via Modbus, operator notes/custom messages etc. if they do not have to be 'signed' (Auditor option 21CFR11 only - see [section 4.4](#) for more details). If the notes etc. are signed, they appear in the 'Signings' message type list.

Batches Displays only batch messages (including Config and Security Revisions if either Auditor option is enabled).

Logins Lists only changes in login.

Signings This list contains only notes, messages etc. that have been signed (and authorized). This category is used only when 'Require Signing' (and 'Require Authorization') is (are) enabled in the Security/Management menu- see [section 4.4](#) for more details.

Audit trail This list contains Configuration change messages only. This category is used only when 'Audit Trail' is enabled - see [section 4.4](#) for more details.

Reports For each report, this contains all the Report's fields (set up in 'Reports' configuration) on separate lines. Line Feed fields are ignored (i.e. they do not appear).

##### PERIOD FILTER

This picklist allows the user to select one of the following to define the period of time that the message list is to encompass:

All History, Last Month (28 days), Last Week, Last 3 Days, Last Day or Last Hour.

### 3.1.4 SUMMARY MENU (Cont.)

#### MESSAGE LOG (Cont.)

##### OPTION MENU

Touching a message (highlights yellow) calls the Option Menu\* as shown in figure 3.1.4h, below.

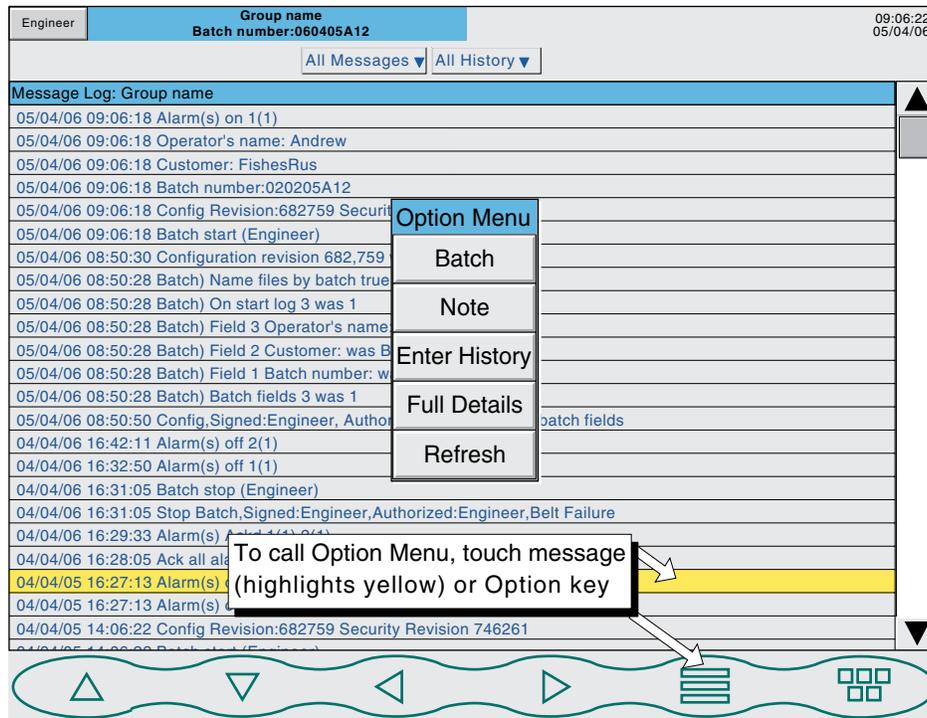


Figure 3.1.4h Message Log options menu

Batch	See <a href="#">section 4.3.10</a> .
Note	See <a href="#">section 3.5</a> .
Enter history	Operating the Enter History key causes the recorder to display that page of history which includes the highlighted message. See <a href="#">section 3.4</a> for details of trend history. When in Trend history mode, operating the Message Log key calls that message log page which contains those messages which are nearest the trend history cursor time.
Full details	If the highlighted message is wider than the display, the whole message can be displayed by operating the 'Full Details' key.
Refresh/Earlier messages../Later messages..	'Refresh' places (at the top of the screen), any messages, which have occurred since the Message Log page was last entered, or since the last 'Refresh'. If earlier or later messages have been selected, then 'Refresh' is replaced by 'Earlier messages..' or 'Later messages..' as appropriate, and operating the key calls the next or previously displayed group of 100 messages to the display respectively.

\* The option menu can also be called by touching the option key. In this case:

- Enter History calls the current Trend History display, as described in [section 3.4](#), and
- Because no message is highlighted, the 'Full Details' key is not enabled,

##### Notes:

- Selecting 'Enter History' whilst either 'Earlier Messages' or 'Later Messages' is highlighted calls the current History page.
- If the Option Menu has 'timed out' leaving a message highlighted, and the option key is operated, then this is equivalent to reselecting the message.

### 3.1.4 SUMMARY MENU (Cont.)

#### REMOVE MEDIA

This key is provided to help ensure that any local memory storage device is removed only when it is 'safe' to do so.

Touching the key results in either an 'OK to remove archive media', or a 'DO NOT REMOVE Archive Media!' message, as appropriate. See figure 3.1.4i

---

#### Caution

Removal of memory devices whilst archiving is taking place can lead to permanent, irreparable damage to the device, rendering it unusable.

---

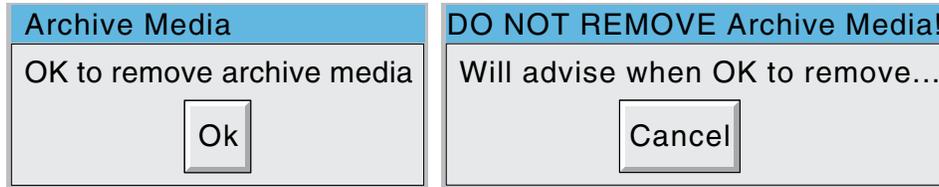


Figure 3.1.4i Remove archive media messages

## 3.2 NAVIGATION KEYS

Below the display area is a removable membrane with six printed keys (as shown below) which allow the user to perform various context-related tasks such as to change the display mode ([section 3.4](#)), to access the [recorder configuration](#), to [archive data](#), to select groups etc. In addition to this, left and right arrow keys or open/close folder keys appear when relevant.

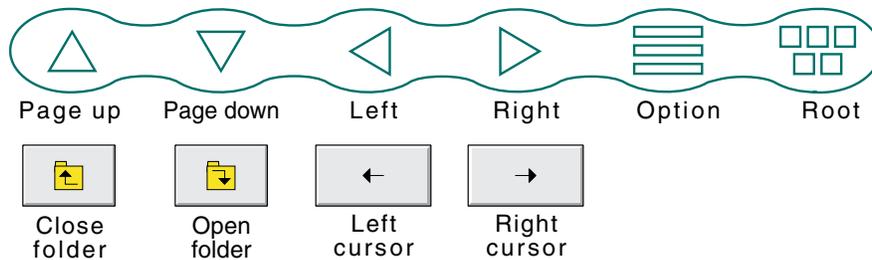


Figure 3.2 Navigation keys

### 3.2.1 Key functions

Page up	Used, as appropriate, to recall the previous (higher level) display page, to call the previous display mode and to scroll through previous text entries. Where relevant, the function of this key is mimicked by the 'Close folder' key.
Page down	Used, where appropriate, to call a further (lower level) display page, to call the next display mode and to scroll through previous text entries. Where relevant, the function of this key is mimicked by the 'Open folder' key.
Left arrow	Used a) to select the previous group, b) to navigate backwards through a text string when editing or c) to select the previous channel whilst in configuration. Where relevant, the function of this key is mimicked by the 'Left cursor' key.
Right arrow	Used a) to select the next group, b) to navigate forwards through a text string when editing or c) to select the next channel whilst in configuration. Where relevant, the function of this key is mimicked by the 'Right cursor' key.
Option	Calls a pop-up Options menu allowing the user to carry out functions such as entering/quitting history, turning channel cycling on and off etc. according to context.
Root	Calls the 'Root Menu' as described below. To quit the Root menu, touch the root key again.

### ROOT MENU KEYS

Home	Causes a return to the 'Home' page from any page in the recorder. As delivered, the 'Home' page is the Group 1, vertical trend display as depicted in figure 3, but this can be edited (in <a href="#">Config/Views</a> ) to be any of the other available groups' display modes - Horizontal trend, Vertical bargraph etc.
Operator	Causes the top level Operator page to appear. The appearance of this display is dictated by the security level that the recorder is set to, and by the access level of the user. As despatched from the factory, the recorder is in 'logged out' mode and the Operator page contains only 'Archive', 'Security' and 'System' keys. Further details appear in ' <a href="#">Access to configuration</a> ' below.
File	Allows the file system in that area of Flash memory that is accessible to the user, and the file system on any bulk storage device fitted, to be viewed. See <a href="#">section 5</a> for details.
Remove Media	This key is provided to help ensure that any local memory storage device is removed only when it is 'safe' to do so. Touching the key results in either an 'OK to remove archive media', or a 'DO NOT REMOVE Archive Media!' message, as appropriate. For more details see <a href="#">section 3.1.4</a> .
Go to View	Allows the user to select the display mode for the current group, as shown in figure 3.2.1a. Display modes not enabled for this group in <a href="#">Config/Views</a> configuration page ( <a href="#">section 4.3.4</a> ) do not appear. As an alternative, display modes can be scrolled through using the up and down arrow navigation keys. Goto View also offers an alternative means of entry to the <a href="#">Alarm Summary page</a> described in <a href="#">section 3.1.4</a> , and also allows entry to the current group's Message Log pages, described below.

### 3.2.1 KEY FUNCTIONS (Cont.)

#### ROOT MENU KEYS (Cont.)

**Goto Group** Allows a group to be selected for display. Groups which are not 'display enabled' in the Config/Views page (section 4.3.4) are greyed. An alarm icon appears (as shown for groups 1 and 4, in figure 3.2.1b, below) for any group containing one or more points in alarm. The icon flashes if any of the group's alarms have not been acknowledged.

#### Notes:

1. If there is insufficient space on the display screen for all the enabled groups or views, 'More...' keys appear, as necessary, to allow further items to be displayed for selection.
2. In normal operating (e.g. trend) displays, the right arrow key can be used to scroll through groups in ascending group number order. The left arrow key can be used to scroll through groups in descending group number order.

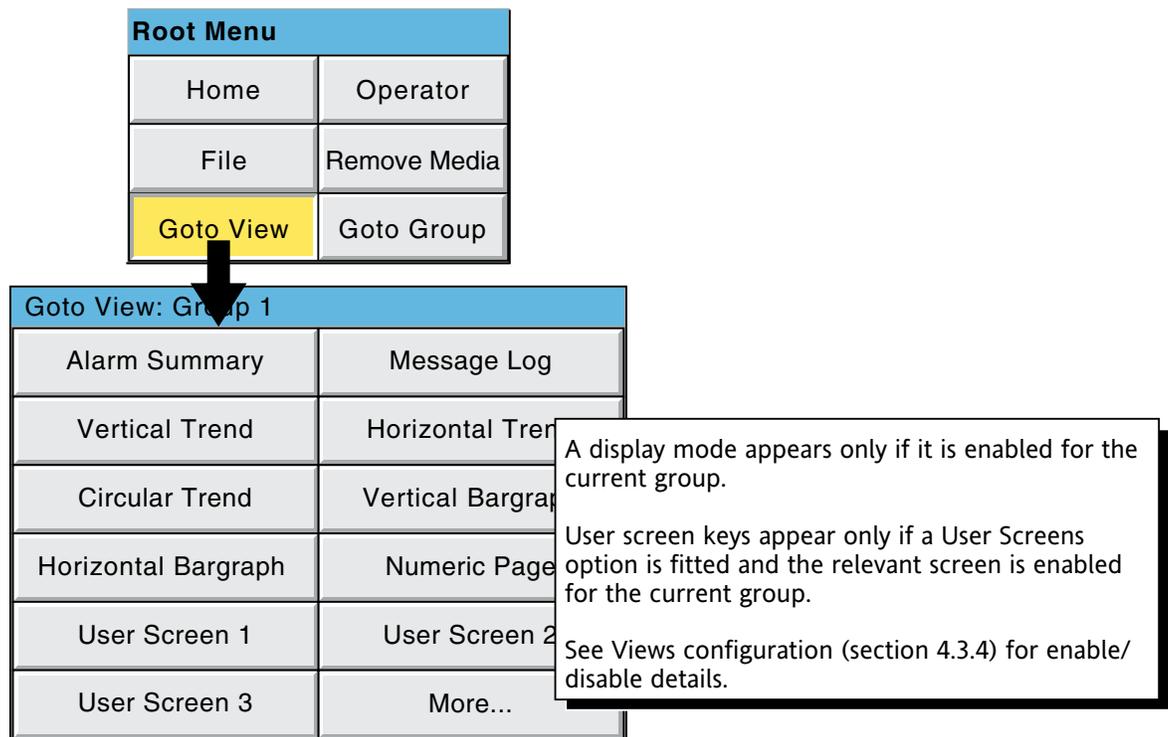


Figure 3.2.1a Root menu with Goto View sub menu

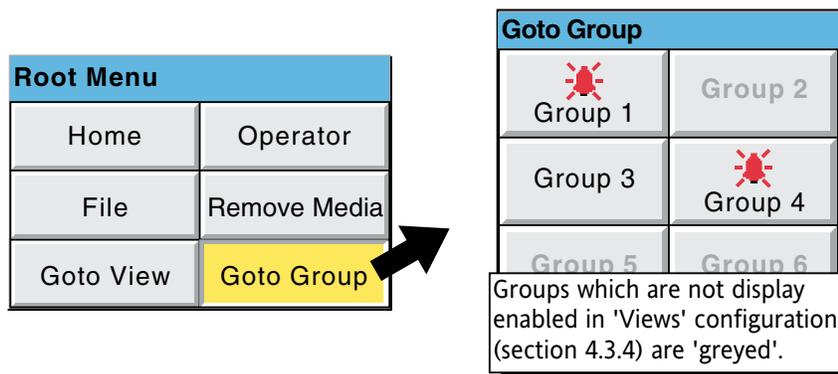


Figure 3.2.1b Root menu with Goto Group sub menu

### 3.2.1 KEY FUNCTIONS (Cont.)

#### ALARM SUMMARY

The Root menu/Goto View/Alarm summary key calls the Alarm summary page for the current group to the screen. Alternatively, Alarm summary can be selected from the Alarm, Message and Media menu, but in this case, the user must select an alarm summary group from a pop-up (Goto Group) menu. See [section 3.1.4](#) for more details of the alarm summary page.

#### MESSAGE LOG

The Root menu/Goto View/Message log key calls the Message Log page for the current group to the screen. Alternatively, Message Log can be selected from the Alarm, Message and Media menu, but in this case, the user must select a 'Group' for the Message Log display from a pop-up (Goto Group) menu.

See [section 3.1.4](#) for full details of the message log.

### 3.3 FIRST SWITCH-ON

When power is applied the recorder initialises, and once this process is complete, the home page is displayed. It is unlikely that this will contain any useful information because the input channels will not, as yet, have been configured to suit the type of input signals being applied to them, as described in [section 4](#).

---

Notes:

- 1 There is no on/off switch associated with the recorder.
  - 2 Date, time and the message 'Power Up' are printed on the chart each time power is applied to the recorder, followed by a similar message giving 'Config Revision' and 'Security Revision'.
  - 3 A red line is drawn across the width of the chart at power up
- 

The recorder has four security levels as follows:

- Logged out Initially, no access to recorder configuration is possible. Only Archive, Login/security and the System 'About' functions can be accessed - via the root menu. Limited or full access can be permitted from 'Engineer' level.
- Operator\* No access to recorder configuration is possible until access permissions have been set up. [Section 4.4.1](#) describes how limited or full access can be permitted by an operator with 'Engineer' level access.
- Engineer\* Accessed initially, by entering '100' as the password ([section 3.3.1, below](#)). Full access to all recorder functions is available. [Section 4.4.1](#) describes how the Engineer level password can be edited and an Operator password can be entered if required. The section also describes how access permission to some or all of the recorder functions can be granted, or not, to individual user names and default security levels (except 'Service').
- Service Full access to all recorder functions and to areas of recorder memory for diagnostic purposes. For use only by Service Engineers.

---

\*Note: For units with the Auditor 21CFR11 Option enabled, the default Engineer and Operator passwords are both '100'.

---

### 3.3.1 Access to Configuration

- 1 As shown in figure 3.3.1a, once the recorder has initialised, touch the current access level key
- 2 Touch the 'Logged out' field and then touch 'Engineer' from the resulting picklist.
- 3 Touch the blank Password area to call the keyboard display (see figure 3.3.1b).
- 4 Touch <Numeric><1><0><0><0><OK> to enter the password '100'. The screen reverts to the 'Home' page.
- 5 Operation of the **Root** key followed by a touch on the Operator key calls the top level page allowing access to the **Archive**, **Save/Restore**, **Config**, **Security**, **Network** and **System** areas described in [section 4](#) below.

①

Touch Current access level key

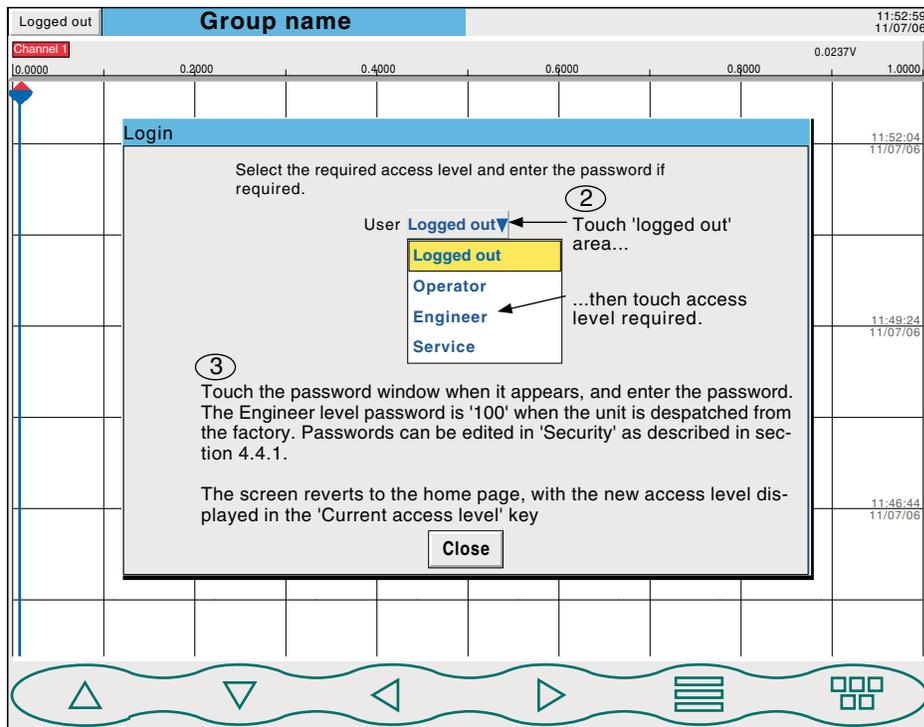


Figure 3.3.1a Access to configuration

#### Notes:


1. For units which have the Auditor 21CFR11 Option enabled, the default Operator password is '100'. Otherwise no password is required for default Operator level access. In either case the Operator access level password can be edited in 'Security' configuration. ([Section 4.4.1](#))
2. The login screen, above, can also be called by operating the Root menu, then 'Operator' then 'Security', then 'Login'. In such a case, the screen reverts to the 'Operator' page rather than returning to the home page once login has been achieved.
3. Figure 3.3.1a shows 'Login by user list' which is the default method. If either Auditor option and/or the Security management option is enabled, an alternative procedure is possible where each user has to enter a name and associated password - i.e. there is no list of users/access levels to choose from. See [section 4.4.2](#) (Management) for details.
4. For active Directory users, a password expiry warning message (below) appears at log in, stating how many days remain before the password expires (configured at the Active Directory server).





3.3.1 ACCESS TO CONFIGURATION (Cont.)

TEXT STRING ENTRY (Cont.)

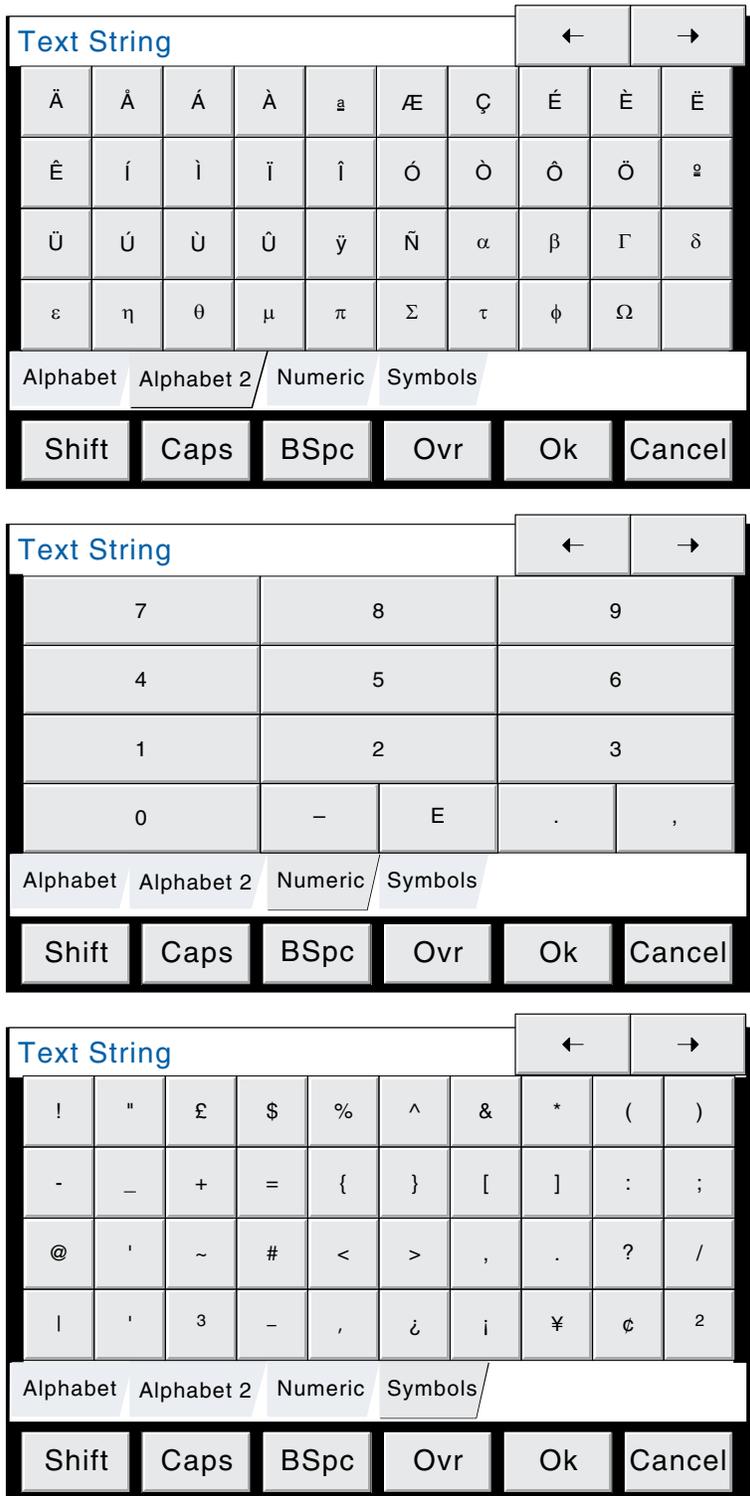

The 'E' key is used to enter exponents

Figure 3.3.1c Alternative keyboards

### 3.4 DISPLAY MODES

The display modes described below allow the currently displayed group's process values (channels, totalisers etc.- known collectively as points) to be displayed as vertical, horizontal or circular 'chart' traces, as vertical or horizontal bargraphs or as numeric values. The various display modes are cycled-through using the up/down arrow keys, or a specific mode (or view) can be selected from the Root Menu 'Goto View' key. Groups can be scrolled through using the left/right arrow keys. The Home key returns the user to the Home page (defined in [Configuration/Views - section 4.3.4](#)) from anywhere in the Operator or Configuration pages in the recorder. When dispatched, the Home page is Group 1, vertical trend display. See also the Screen builder (User screens)description in [section 7](#).

#### TREND HISTORY

Trend history, allows the user to view the history of the display group. The maximum amount that can be reviewed depends on a number of factors, including how many points are configured, how rapidly the traces are changing and so on. At a recording rate of 20 mm/hour (see [group configuration - section 4.3.2](#)), with all channels configured, a minimum of 30 day's worth of traces is available for viewing, provided that the group contents are not re-configured during this period (in which case, the history starts at the end of the re-configuration). The amount of trace visible on the screen depends on the recording rate, the higher the rate, the less trace is visible at any one time.

---

##### Notes:

1. Trend history mode is available only for groups with 'Recording Enable' enabled ([Group configuration - section 4.3.2](#)) and only for vertical, horizontal and circular trend display modes.
  2. Trend history mode is vertical for vertical and circular trend modes and horizontal for horizontal trend mode.
  3. Channel cycling is inhibited in trend history mode. To increment the current channel, touch the faceplate.
  4. Group faceplates are not displayed in trend history mode.
  5. Operation of the Root/Goto View/Message Log key ([section 3.2.1](#)), when in history mode, displays a message log page containing messages which occurred at or near the selected cursor time.
  6. With A/B switching selected, traces are displayed with the 'A' or 'B' span/zone, colour settings etc. obtaining at the cursor time. See sections [4.3.2](#), [4.3.3](#) and [4.7](#), for more details of A/B switching.
- 

To enter trend history mode, the option key can be used (as shown for vertical trend mode in [figure 3.4.1b](#)), or the trace area of the screen can be continuously touched until the screen blanks prior to re-drawing. A 'Preparing History, please wait' message appears whilst the re-drawing calculation is taking place. Although tracing stops whilst trace history mode is active, no data is lost. Process Variable values are saved in the recorder memory. Alarms are still scanned-for and any associated action taken.

The trend history display is similar to the real-time trend display, but with a dark background and with the addition of a slider control and arrow keys for selecting that part of trend history which is to be displayed. The controls are used as follows:

- 1 Touching an arrow key causes the trace history to move an incremental amount.
- 2 Holding an arrow key continuously, causes continuous movement.
- 3 Touching and dragging the slider, whilst observing the time/date display, allows the user to select the section of history exactly. Touching the slide bar either side of the slider causes a page shift in the relevant direction. The Page up and Page down keys also provide this function

On first entry to trend history mode, the channel value and the time and date shown in the faceplate are those at the top edge of the chart. Touching the screen causes a cursor to appear at point of screen contact. This cursor can be touched and dragged to provide a reference point on the current trace. The displayed value date and time refer to the cursor intersection with the current channel. To return to real-time trending, the Option key is operated, followed by 'Exit History'.

## TIME CHANGE RECORDS

For vertical and horizontal trend modes, a line is drawn across the chart whenever a time discontinuity in the record occurs. These lines disappear if a configuration change which causes group history to be lost is made (such as adding a new channel to a group).

**Red line** A red line is drawn on the trend history chart at power up.

**Blue line** A blue line indicates that recording has been disabled/enabled in Group Configuration ([section 4.3.2](#)), or by a recording job ([section 4.7.9](#)). Blue lines are not drawn when the [Simulation Option](#) is active.

**Green line** A green line appears if there has been a time change as a result of a clock job ([section 4.7.5](#)), an SNTP synchronisation or by the operator physically changing the recorder time.

**Note:** Changes from standard time to daylight saving time and back again are not 'green lined' in this way

### 3.4.1 Vertical Trend display

This display ([figure 3.4.1b](#)) shows each point in the display group as though it were being traced on a white chart. It is possible to change the appearance of the chart in the System key 'Customise' area of configuration ([section 4.6.8](#)). It is recommended that some thought be given to ensuring good contrast between trace colours and background colour.

One of the channels is said to be the 'current' or 'scale' channel. This channel is identified by its diamond shaped pen icon and by its descriptor, digital value and scale being displayed on a 'faceplate' across the full width of the screen, above the chart. If a channel is included in the display group but its status is 'not good' for some reason, then its pen icon is hollow.

Faceplates for all the group channels can be displayed, by using the Faceplates On/Off key in the option menu. If selected On, faceplates (showing colour, descriptor, digital value and units) for all the group's channels appear either above the current channel's faceplate or, if there are too many to fit across the screen, at the right hand edge of the screen. When necessary, a slider bar appears to allow further (hidden) faceplates to be viewed.

Each channel in the display group becomes the 'current' channel, in turn, for approximately 10 seconds - i.e. the channels are cycled-through, starting with the lowest numbered channel. Once the final channel in the group has been displayed for 10 seconds, the lowest numbered channel is returned to and the sequence repeats. This scrolling process can be enabled or disabled using the Channel Cycling On (Off) key in the Option menu.

To select a particular channel to be the current channel, the relevant pen icon can be touched. To cycle through the channels manually, the faceplate area is touched repeatedly until the required channel is reached.

The Horizontal Trend display can be called using the down arrow key. Alternatively, any one of the enabled display modes ([section 4.3.4](#)) can be selected using the [Root Menu](#), 'Goto View' key.

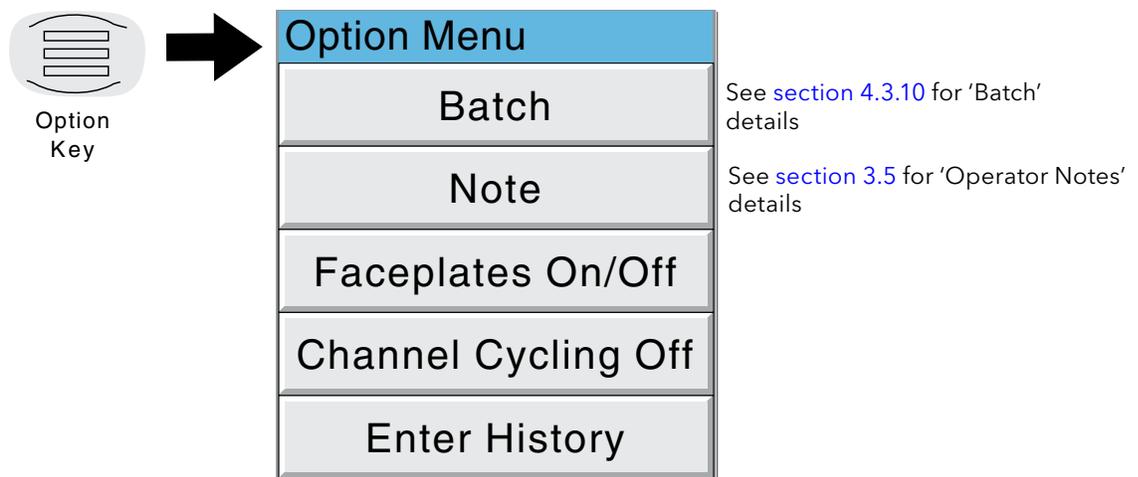


Figure 3.4.1a Option Menu (Typical)

3.4.1 VERTICAL TREND DISPLAY (Cont.)

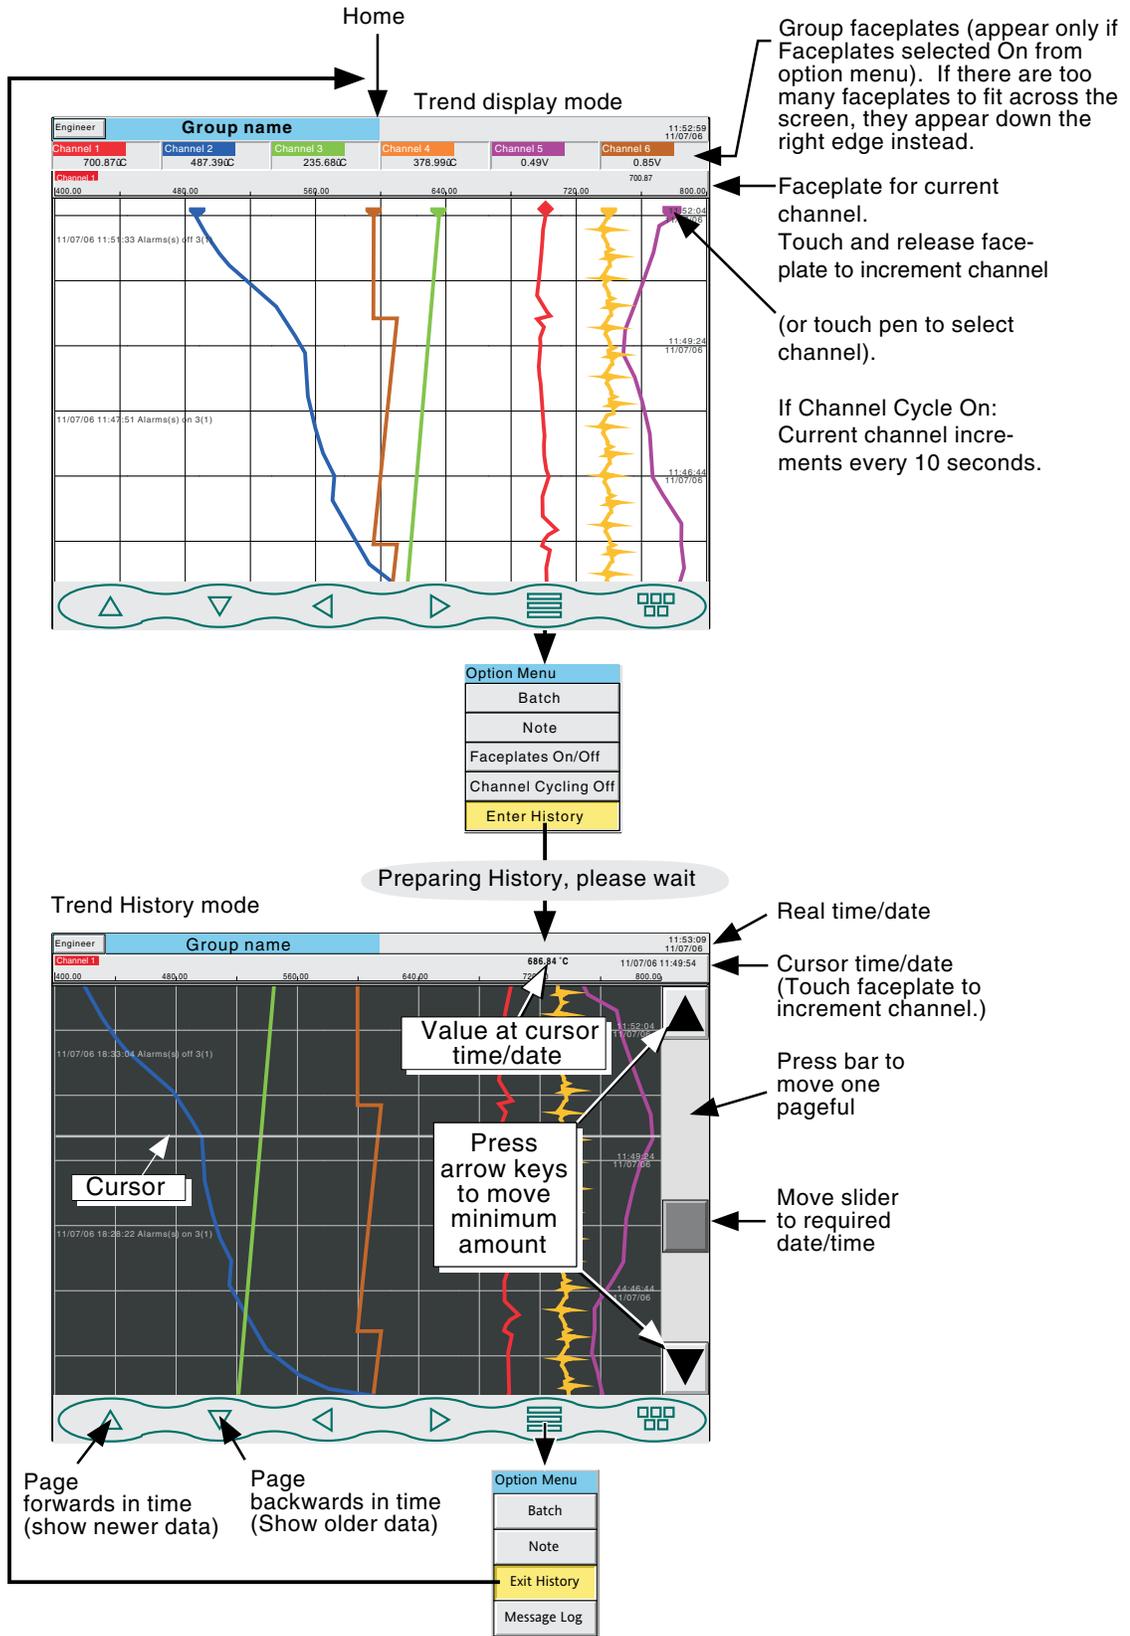


Figure 3.4.1b Trend display mode and trend history mode

### 3.4.2 Horizontal Trend display

Entered from the Vertical Trend display by means of the down arrow key, or selected via the [Root Menu](#) 'Goto View' key, this display mode (figure 3.4.2a) is similar to the Vertical Trend display described in section 3.4.1 above, except that the traces are produced horizontally rather than vertically.

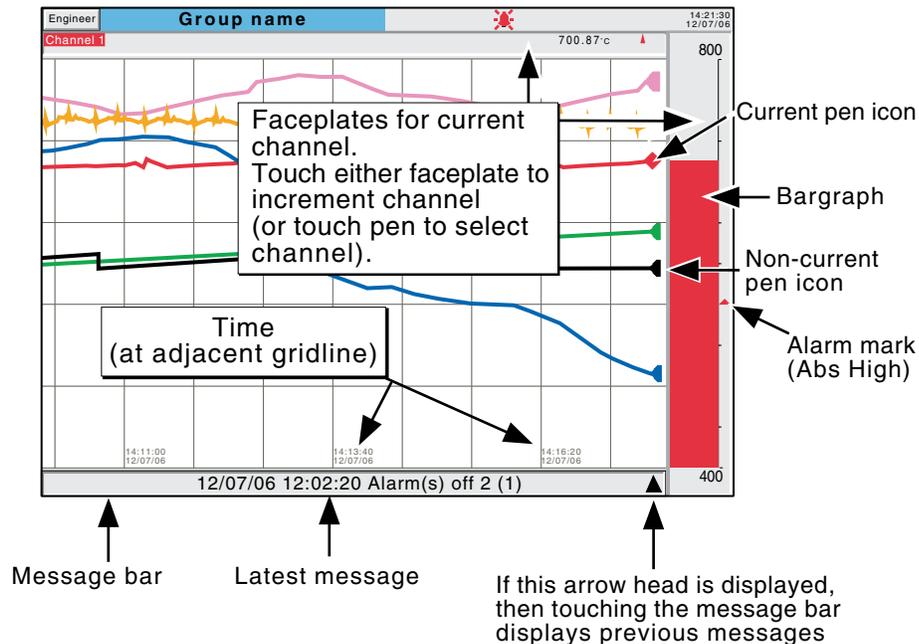


Figure 3.4.2a Horizontal Trend Display

One of the channels is defined as being the 'current' or 'scale' channel and this is identified on the chart by its pen icon being diamond shaped rather than triangular as for non-current channels. If a channel is included in the display group, but its status is 'not good' for some reason, then its pen icon is hollow. Each channel in the display group becomes the 'current' channel, in turn, for approximately 10 seconds - i.e. the channels are cycled-through, starting with the lowest numbered channel. Once the final channel in the group has been displayed for 10 seconds, the lowest numbered channel is returned to and the sequence repeats. This scrolling process can be stopped using the Channel Cycling key in the Option menu.

There are two faceplates associated with this display mode, one above the 'chart', showing the current channel's descriptor and its digital value; the other - to the right of the 'chart' - showing a bargraph representation of the current channel's value, together with a scale showing the low and high range values for the channel. Touching either of these faceplates causes the current channel number to increment. To select a particular channel to be the current channel, the relevant pen icon can be touched. In either case, the bargraph and the background colour of the channel descriptor take the colour of the new current channel.

Time and date are printed on the 'chart' immediately to the right of grid lines, and it is to these grid lines that the printed time and date relate.

Touching the trace for a few seconds, or using the Option key then 'Enter History' calls the trend history page. See [section 3.4](#), above for more details.

### 3.4.2 HORIZONTAL TREND MODE (Cont.)

Below the 'chart' is a message bar, containing the latest message. If there is more than one message, an arrow head icon appears near the right-hand end of the message bar. If this arrow head appears, then touching the message bar calls a pop-up box (figure 3.4.2b) which displays the latest messages. If there are more messages than can be displayed in the box, a slider control appears, which can be used to access previous messages, up to a total of 60 messages. Further messages, cause the oldest messages to be discarded to keep the total to 60.

**Note:** At power-up, only those messages which occurred within the 'time width' of the page are displayed

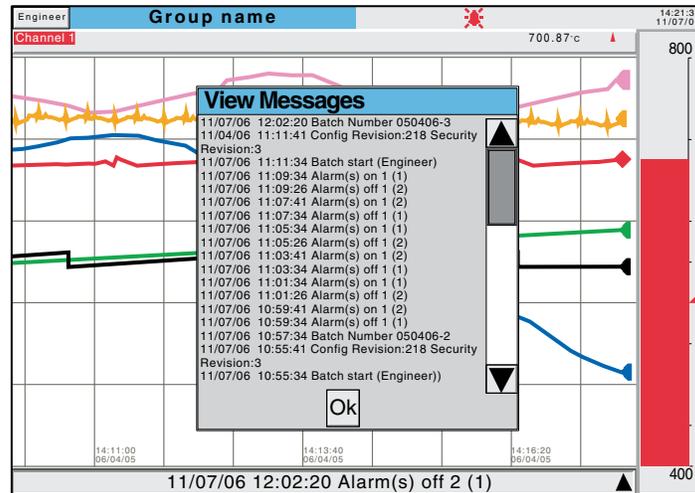


Figure 3.4.2b Horizontal Trend mode message dialogue box

The [circular trend](#) mode can be called by using the down arrow key. Alternatively, any one of the enabled display modes ([section 4.3.4](#)) can be selected using the [Root Menu](#), 'Goto View' key.

### 3.4.3 Circular Trend

This allows up to 12 points to be traced as though on a circular chart. More than 12 points can be included in the group, but only the first 12 traces and their associated faceplates are included in the real-time display. Entering Trend History mode (by using the Options button or by continuously touching the screen for a few seconds), allows all the points to be reviewed, but only in vertical trend history mode, described in [section 3.4](#), above.

For large frame recorders, two alternative views called 'Full Screen' and 'Normal View' are available and are toggled between by means of a push-button key near the top left corner of the screen. In each case, faceplates can be displayed, or not, as required, using the Option key 'Faceplates On/Off' selection. The diameter of the chart is independent of faceplate on/off selection. When quitting History, Normal view is always returned to. Small frame recorders use only 'full screen' view, (except when viewed *via* Bridge software when the small frame recorder behaves in the same way as the large frame recorder).

---

**Note:** Alarm icons ([section 3](#)) do not appear on circular trend scales.

---

#### TREND MODES

The way in which traces are laid down on the chart depends on the action to be taken when the chart is 'full', as set up in group configuration - [section 4.3.2](#). The user can select 'Rotate' or 'New Chart'.

#### ROTATE

In the following description, the word 'segment' is used interchangeably with 'Major chart division'. The number of Major chart divisions is a function of the selected chart speed, as described in Group Configuration ([section 4.3.2](#)).

With 'Rotate' selected, the traces start one major chart division anti-clockwise from the top of the chart and trace clockwise until they reach the top of the chart ('12 o'clock'). At this point, the chart, complete with time stamps and traces, rotates one major chart division anticlockwise, and the tracing process continues. When the chart is 'full', the oldest segment-full of tracing is removed, leaving an empty segment to be traced-on when the chart rotates.

Figures 3.4.3b and 3.4.3c, below show Circular trending in 'Rotate' mode.

#### NEW CHART

With 'New Chart' selected, tracing starts at top of the chart (12 o'clock) and continue to trace clockwise round the chart, back up to the vertical. When the chart is full, it is cleared, new timestamps are displayed, and tracing restarts from the top of the chart.

The start time of the tracing can be set as a part ('Start at') of group configuration, the choices available depending on the time per revolution setting. The start time is placed at top centre of the chart, and 'backfilled', clockwise, round to the current time.

Figure 3.4.3a, below, shows New Chart mode.

---

**Note:** The use of '12 o'clock' above is intended to be illustrative and only to explain angles in terms of a normal analogue clock face. It does not mean that this position must actually be noon or midnight in real time.

---

3.4.3 CIRCULAR TREND (Cont.)

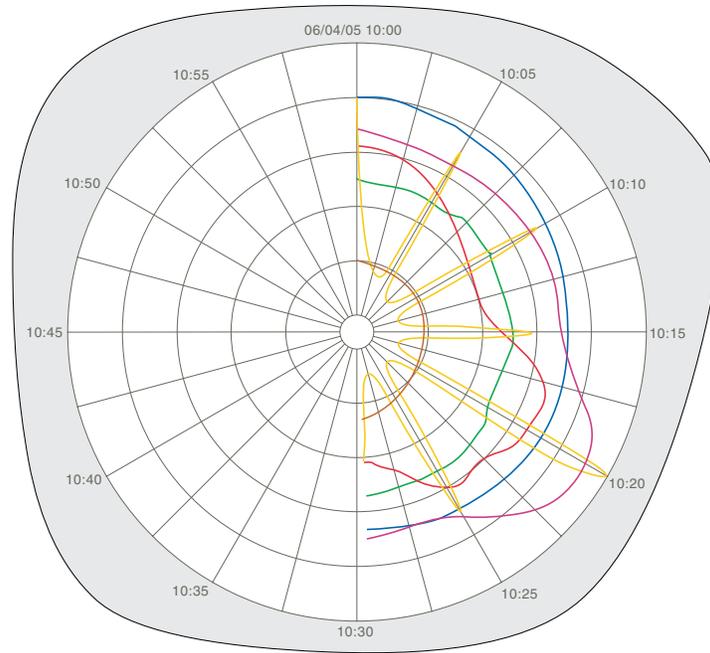


Figure 3.4.3a Circular trend - New chart mode

NORMAL VIEW

Normal view is available only for large frame recorders (also small frame recorders when viewed via Bridge software). As shown in figure 3.4.3b, below, this provides a view of the chart, together with scale, chart speed, message bar and navigation keys. The figure shows a view with faceplates selected on.

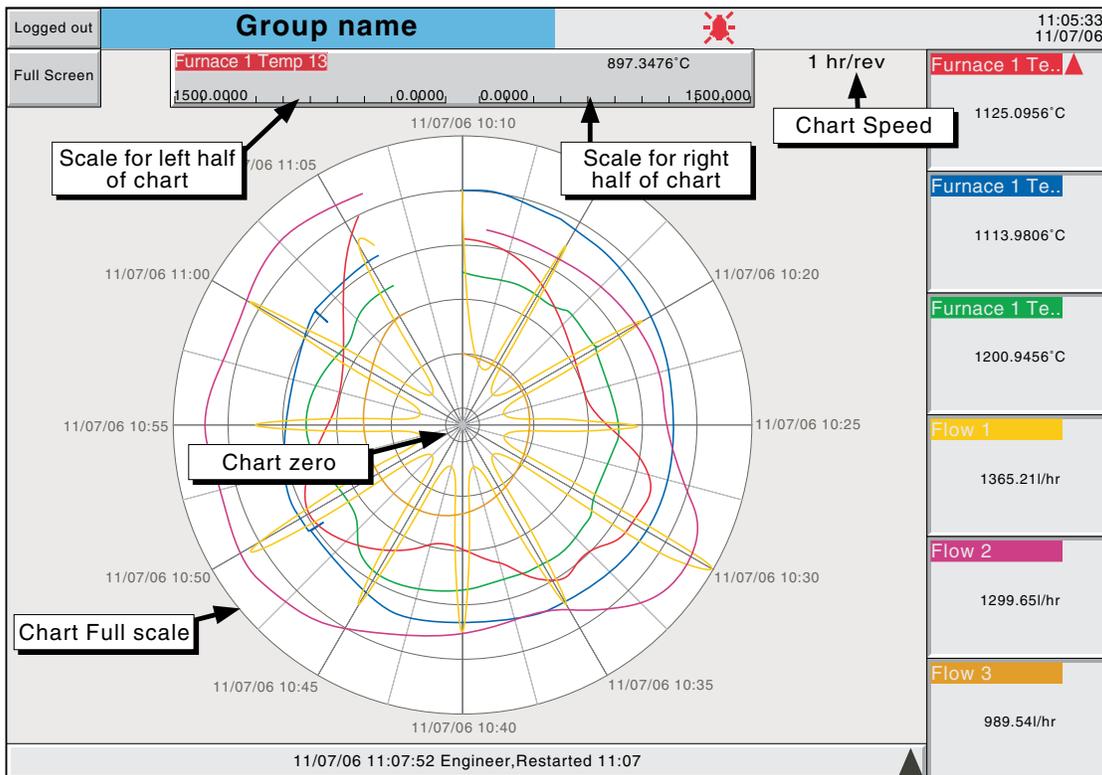


Figure 3.4.3b Circular Trend normal view (with faceplates)

### 3.4.3 CIRCULAR TREND (Cont.)

#### NORMAL VIEW FEATURES

Scales	Two scales are provided, one for the left hand side of the chart, the other for the right hand side. Channel scaling is a part of channel configuration, as described in <a href="#">section 4.3.3</a> , below. The scales apply only to values along the horizontal line through the centre of the chart. Values for other angles (times) can be most easily found from the <a href="#">trend history</a> , selected from the Option key, or by touching anywhere in the chart or in the green background area for a few seconds.
Chart speed	This displays the currently selected speed of revolution of the chart. This speed is set up as a part of Group configuration ( <a href="#">section 4.3.2</a> )
Faceplates	Up to 12 faceplates can be displayed, giving point values and alarm indication.
Message Bar	The message bar at the bottom of the screen displays the latest message. If an up arrow appears at the right hand end of the bar, there is more than one message. Touching the message bar calls a 'View Messages' window, detailing previous messages. See the description in <a href="#">section 3.4.2</a> for more details.

#### FULL SCREEN DISPLAY

As shown in figure 3.4.3c, below, this maximizes the chart diameter, leaving only the chart, chart speed and faceplates (if selected on) on display. The figure shows a view with faceplates selected off. For the large frame recorder, faceplate on/off selection can be made only from one of the other display modes, as the navigation keys are not visible in this display mode.

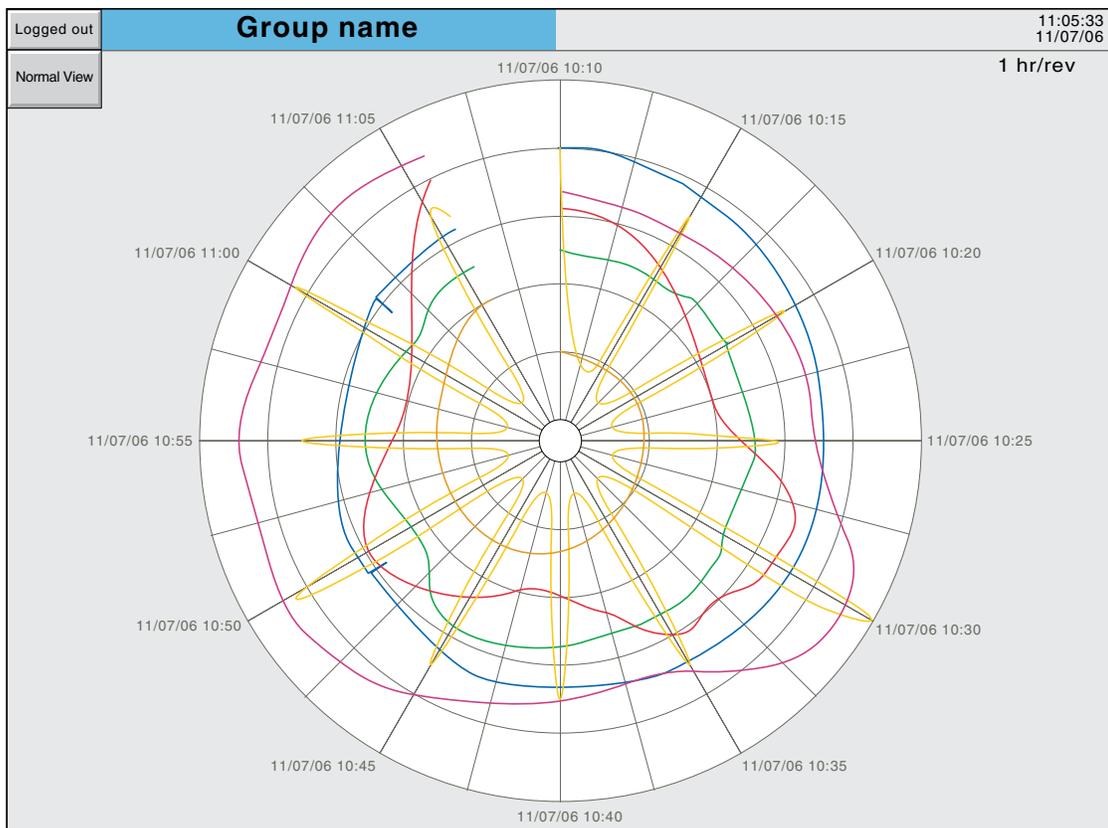


Figure 3.4.3c Circular Trend full screen view (with faceplates selected off)

#### FULL SCREEN FEATURES

Faceplates	As described above for Normal View features
------------	---

### 3.4.3 CIRCULAR TREND (Cont.)

#### TIMESTAMPS

Time and/or date are displayed at every major chart division. The following rules apply:

1. For chart durations of a week or more, only the date is displayed
2. For chart durations of less than a week, both time and date appear, with the following exception: In 'New Chart' mode (unless the chart 'bridges' midnight), the date appears only at top centre of the chart. All other chart divisions are identified by time only.

#### OTHER NOTES

1. Adaptive recording results in two traces per trend, as in other trend display modes.
2. For successful circular trend display, 'Circular Settings' must be enabled for the relevant group ([section 4.3.2](#)), and 'Circular Trend' must be enabled for the group, in Views configuration ([section 4.3.4](#)). If Circular Trend is enabled, but Circular Settings is disabled, then, although the circular chart will appear, it is unlikely that it will contain any trends.
3. The circular chart speed is unaffected by A/B switching of Trend Speed/Interval ([section 4.3.2](#)).
4. Circular trends backfill only to the previous power up. Unless the parameter 'Circular Extended Backfill' has been enabled for the group in Group configuration ([section 4.3.2](#)), then circular trends will backfill multiple power cycles.

### 3.4.4 Vertical bargraph display mode

Entered from [Circular Trend mode](#) by means of the down arrow key, or selected from the Root Menu 'Goto View' key, this display mode shows the Process Variable (PV) values as vertical bars with faceplates containing digital values and alarm data. There are two versions, one with faceplates above the bars (1 to 6 channels - figure 3.4.4a); the other (with faceplates at the right hand edge of the display - figure 3.4.4b) is used where there are more than six channels.

---

**Note:** The description above refers to the 180 mm version of the recorder. For the 100 mm version, the faceplates appear above the bars for one or two points, but to the right of the bars for three or more points.

---

Operation of the option key calls the Option menu display for this display page, allowing faceplates to be selected on or off. This feature is available for vertical trend, circular trend and vertical bargraph displays only.

To call the [horizontal bargraph](#) display mode, use the down arrow key. Alternatively, any one of the enabled display modes ([section 4.3.4](#)) can be selected using the Root Menu, 'Goto View' key.

Trend history mode is not available from this display mode.

#### FACEPLATES ABOVE THE BARS

See figure 3.4.4a.

As the number of channels in the display group increases, the bars and their faceplates get narrower,

#### FACEPLATES AT RIGHT-HAND EDGE

See figure 3.4.4b.

As the number of PVs increases, the bars get narrower. As the bars get narrower, so the scale values become truncated as shown in figure 3.4.4b. The bars have a set minimum width, and if the total number of points in the group cannot be displayed within the width of the screen, a horizontal scroll bar appears, allowing 'hidden' bars to be viewed. Similarly, the faceplates reduce in height to a minimum readable height. If there are more point faceplates than can be accommodated within the height of the screen, a vertical scroll bar appears, allowing hidden faceplates to be displayed as required.

3.4.4 VERTICAL BARGRAPH (Cont.)

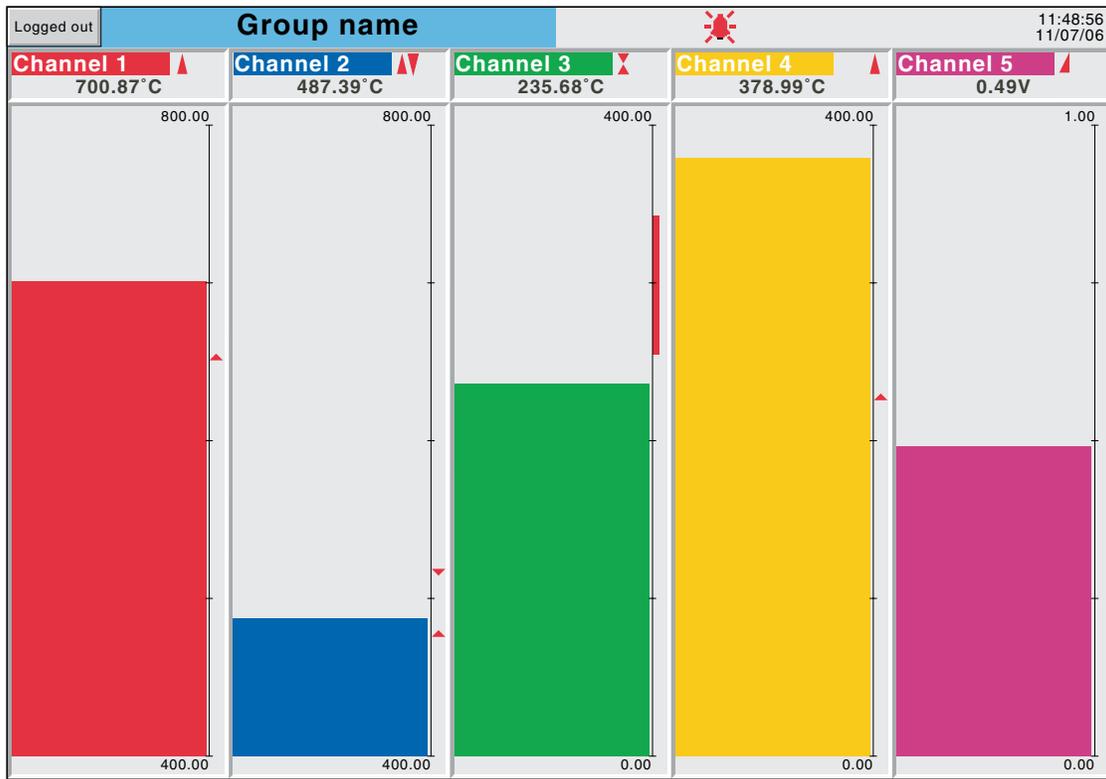


Figure 3.4.4a Vertical bargraph display (1 to 6 channels)

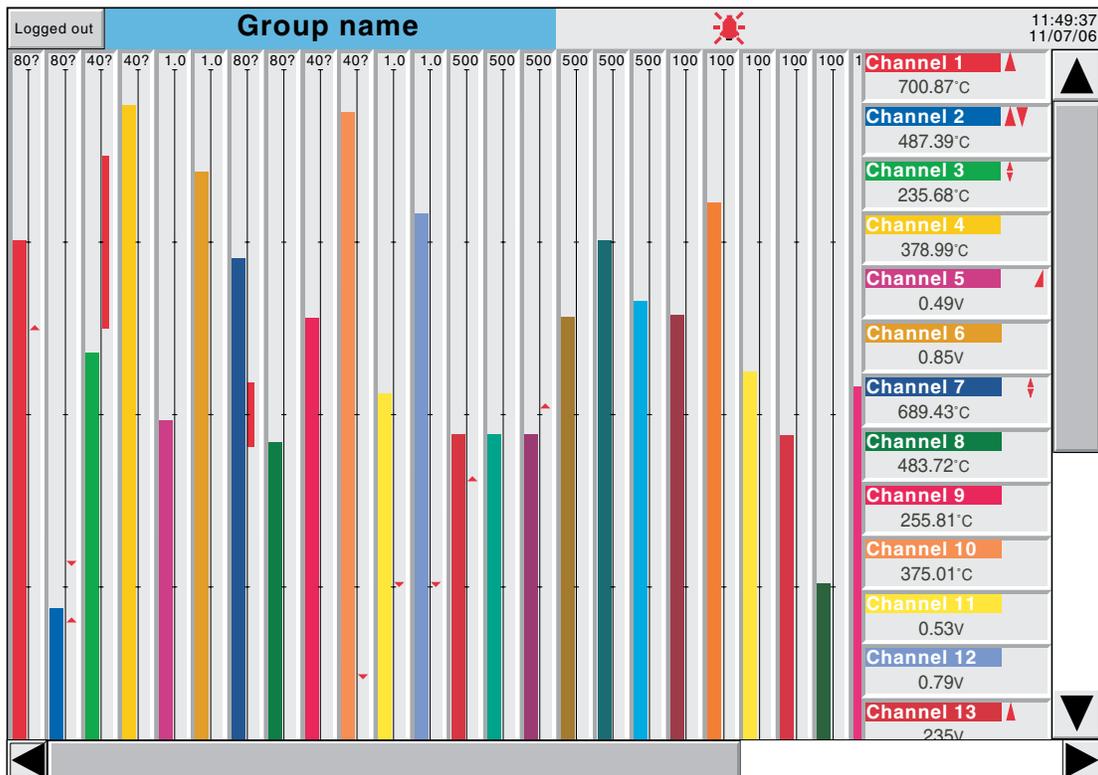


Figure 3.4.4b Vertical bargraph display (more than 6 channels)

### 3.4.5 Horizontal bargraph display mode

Entered from [Vertical bargraph](#) by means of the down arrow key, or selected using the Root Menu '[Goto View](#)' key, this display mode shows the Process Variable (PV) values as horizontal bars with digital values and alarm data displayed, as shown in figures 3.4.5a and 3.4.5b.

---

Notes:

1. For large frame recorders, single column format is used when there are up to 12 channels in the display group; double column for more than 12 channels. For small frame recorders, only the single column mode is employed, with a scroll bar when necessary.
  2. For large frame recorders, up to 26 points can be displayed simultaneously; for small frame recorders the maximum is 5 points. In either case, if more points are enabled than can be displayed within the height of the screen, a vertical scroll bar appears allowing currently hidden channels to be accessed.
- 

Trend history mode is not available from this display mode.

To call [numeric display](#) mode, use the down arrow key. Alternatively, any one of the enabled display modes ([section 4.3.4](#)) can be selected using the Root Menu, '[Goto View](#)' key.

3.4.5 HORIZONTAL BARGRAPH (Cont.)

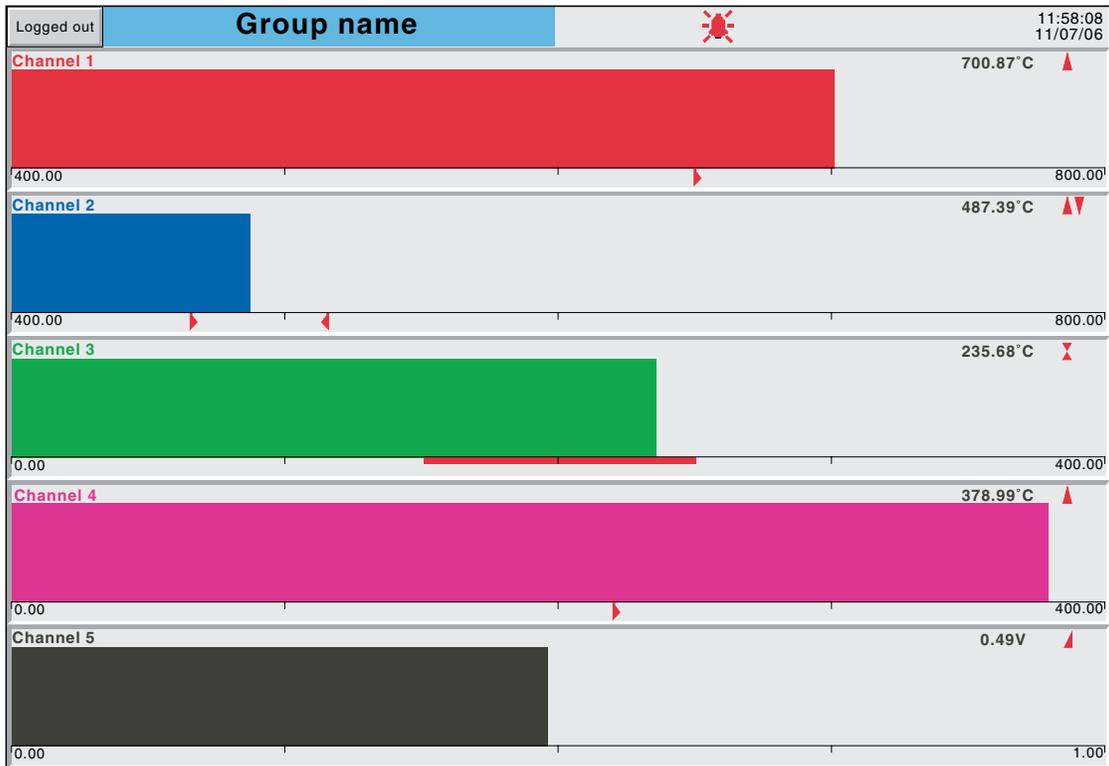


Figure 3.4.5a Horizontal bargraph display (single column example)

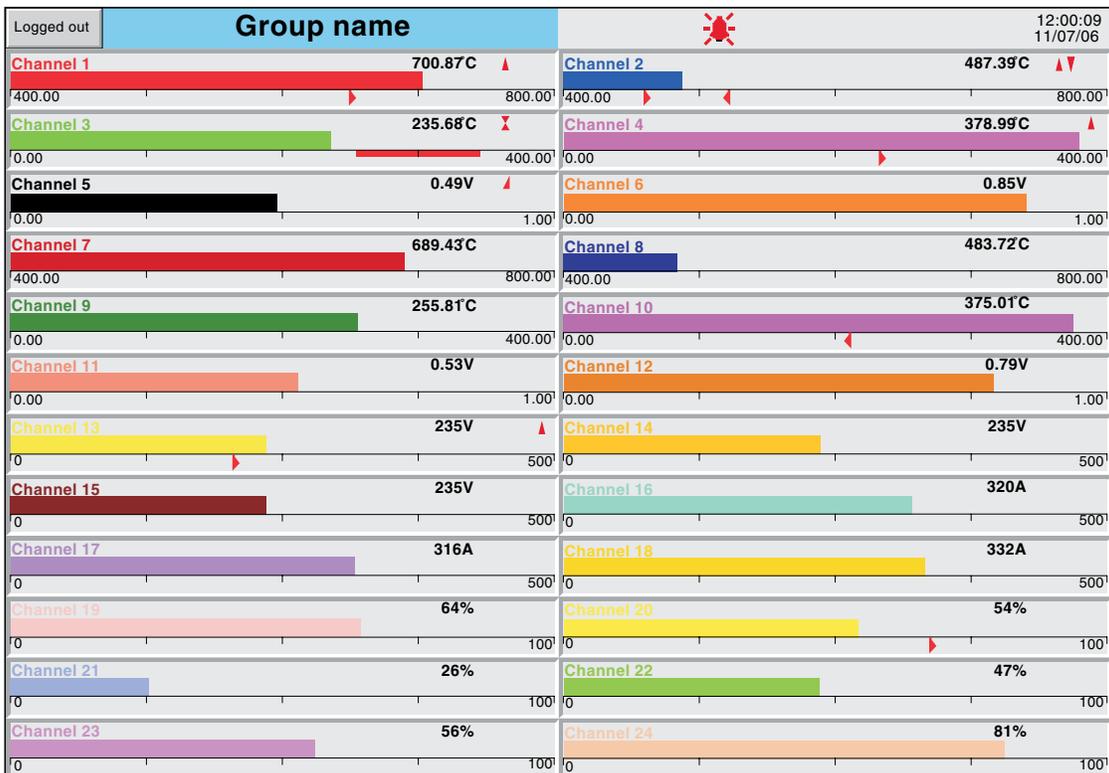


Figure 3.4.5b Horizontal bargraph display (dual column example)

### 3.4.6 Numeric display mode

Entered from [Horizontal bargraph](#) mode by means of the down arrow key, or selected using the Root Menu 'Goto View' key, this display mode shows the Process Variable (PV) values as digital values. The format (which is automatically selected) is based on the number of channels in the display group. Figures 3.4.6a, 3.4.6b and 3.4.6c, show typical (large frame) examples of the one, two and three column versions of this display mode respectively. Within each version, the process variable display areas expand or contract to fill the screen.

Trend history mode is not available from this display mode.

A further operation of the down arrow key returns to Vertical Trend Display mode described in [section 3.4.1](#) above, or if user screens are fitted and enabled, to the first user screen ([section 7](#)). Alternatively, any one of the enabled display modes ([section 4.3.4](#)) can be selected using the Root Menu, 'Goto View' key.

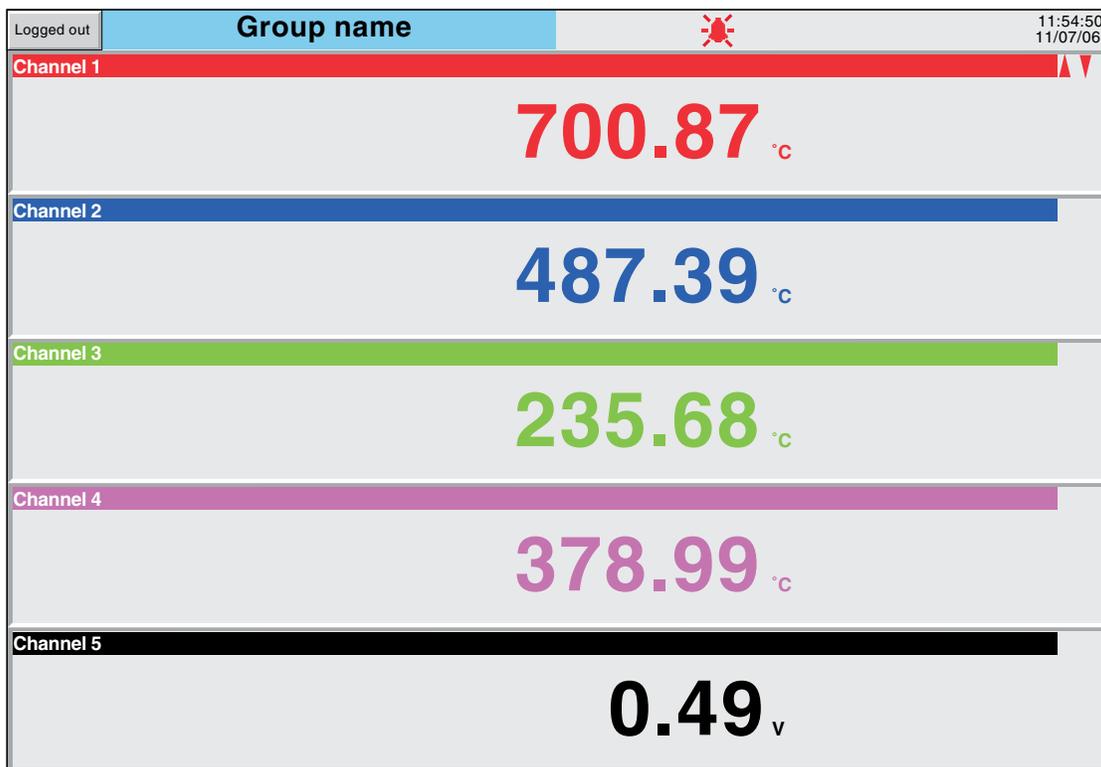


Figure 3.4.6a Numeric display mode (1 to 5 channels example)

Note: Figures 3.4.6a, b and c apply to the large frame instrument. For the small frame instrument, the single column display (figure 3.4.6a) is used for groups with up to four points enabled, and the two column display (figure 3.4.6b) is used, with scroll bar if necessary, for groups with more than four points. The small frame recorder does not employ a three-column mode (figure 3.4.6c).

3.4.6 NUMERIC DISPLAY MODES (Cont.)

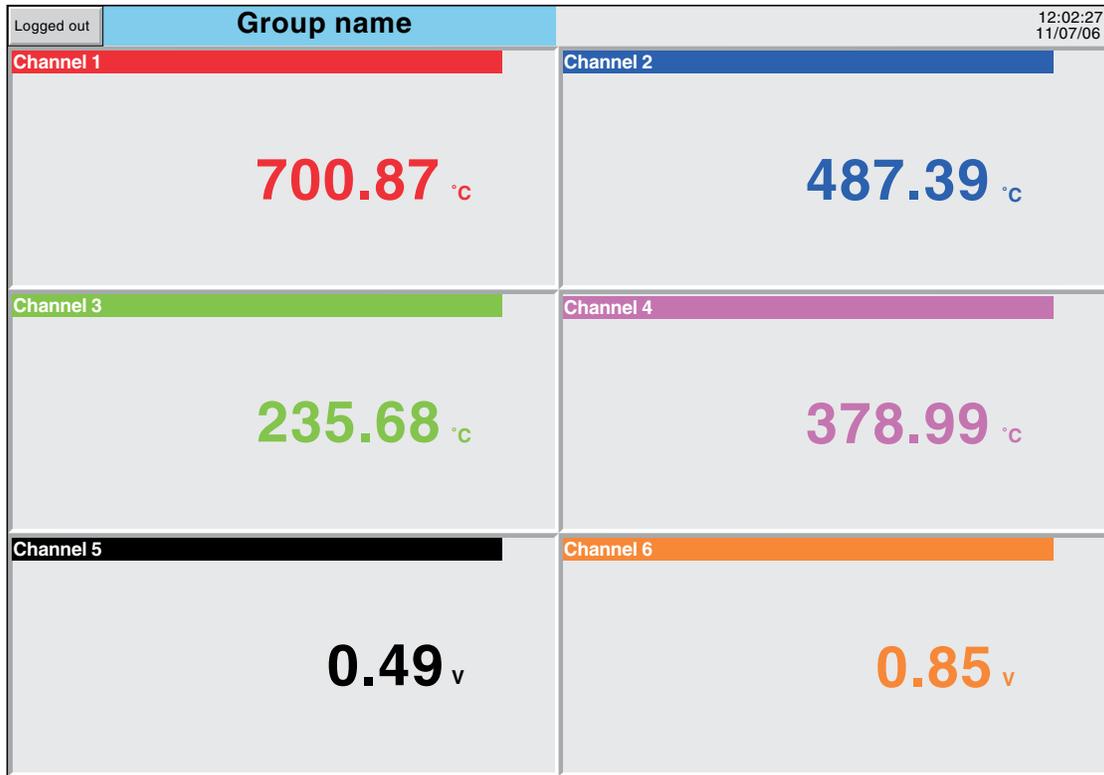


Figure 3.4.6b Numeric display mode example (6 channels)

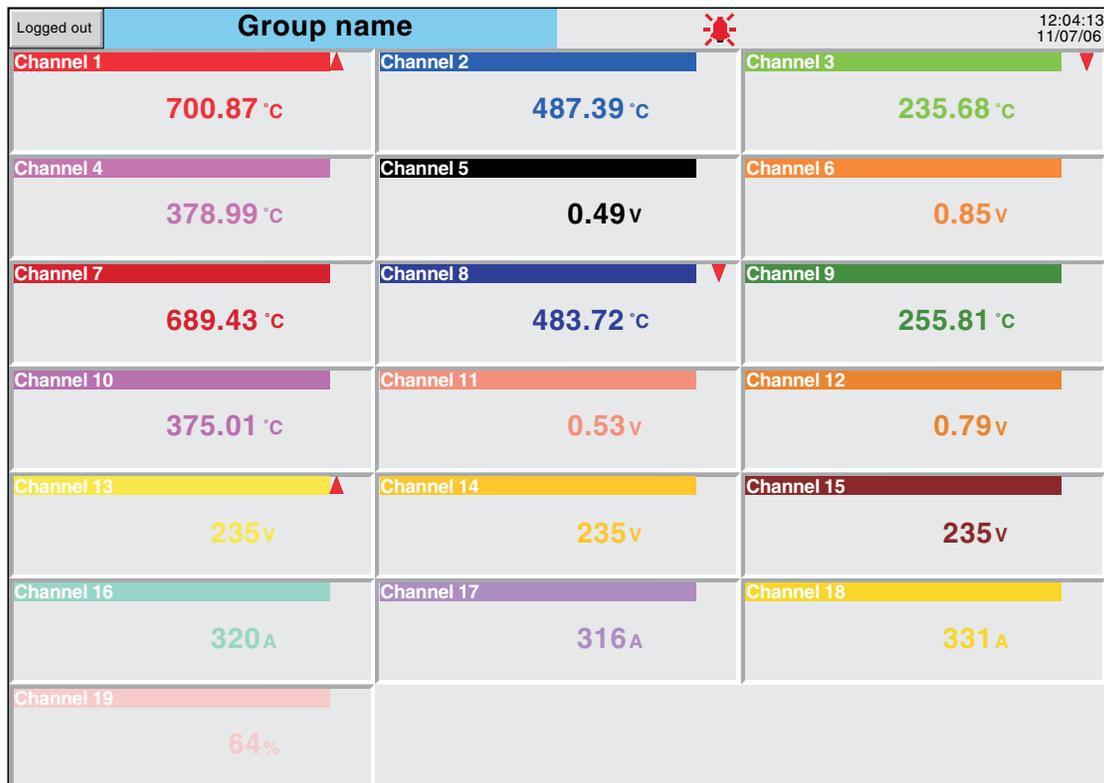



Figure 3.4.6c Numeric display mode example (19 channels)

### 3.5 OPERATOR NOTES

**Note:** Operator notes should not be confused with similar messages, (described in [section 4.3.8](#)), which appear as a result of job action.

It is possible for the user to enter a note, of up to 120 characters, at any time, from any display page (not from configuration pages). Each note is associated with the current display group and becomes a part of that group's history. The notes appear on vertical and horizontal trend displays only, although they can be entered in any display mode.

The note appears on the chart and in the Message Log, preceded by the date, time and current full user name, as shown in the first example below. If 'Audit Trail' is enabled, the note contains audit trail information, as shown in the second example below. See [section 4.4.2](#) for details of the Auditor options.

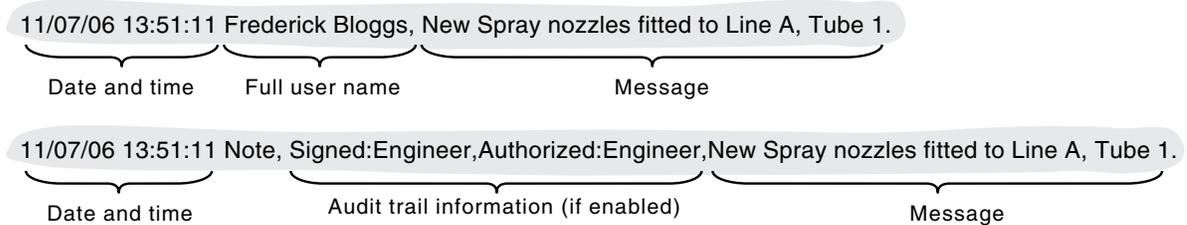

To enter a message:

1. Press the Option key, then the 'Note' key
2. If necessary enter Signature and Authorization passwords (Auditor 21CFR11 option only - see [section 4.4.2](#)).
3. Touch the note area of the resulting pop-up display (see note below).
4. Enter the required text of up to 120 characters (spaces are also counted as characters). Press Ok when finished.
5. View the note and
  - a. press the Ok button to enter the note OR
  - b. re-touch the text area to edit the note OR
  - c. press the Cancel key to quit note entry.

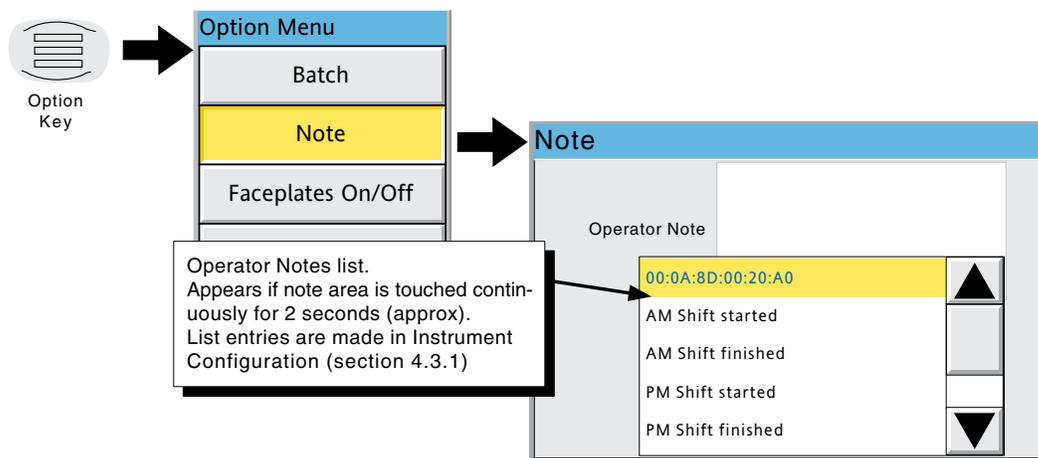


Figure 3.5 Access to Note entry page

**Note:** Touching the note area continuously for two seconds or more, causes a list of pre-defined messages to appear. Touching one of these messages selects it as the operator note, which can then be edited in the normal way (if required) before the OK key is operated. There are a maximum of 13 pre-defined messages, 12 of which are user editable in the Configuration/instrument menu ([section 4.3.1](#)), the 13th being the non-editable MAC address of the recorder.

## 4 SETTING UP THE RECORDER

As described in the '[Access to Configuration](#)' (section 3.3.1) above, the setting-up of the recorder is divided into the following areas:

<a href="#">Archive</a>	Section 4.1 - Allows manual archiving of data <a href="#">to a memory device</a> or to a remote host ( <a href="#">FTP transfer</a> ).
<a href="#">Save/restore</a>	Section 4.2 - Allows new configurations to be created and saved, and saved configurations to be 'restored'. Save/Restore also allows the importing and exporting of User Linearisation Tables and User screens, if the Screen Builder option is fitted.
<a href="#">Config</a>	Section 4.3 - This is the major channel/alarm option etc. area of configuration.
<a href="#">Security</a>	Section 4.4 - Allows passwords to be entered and edited and allows the Engineer-level password holder to enable/disable areas of configuration to Operator-level password holders. New users can be added, with their own user names, passwords and access level permissions.
<a href="#">Network</a>	Section 4.5 - This area sets up the IP address/host names etc. used in FTP transfer, Bridge and SNTP applications.
<a href="#">System</a>	Section 4.6 - Allows <ol style="list-style-type: none"><li>Time and date to be set (<a href="#">Clock</a>).</li><li>Language, date/time format, time zone, and daylight saving start and finish dates to be set (<a href="#">Locale</a>).</li><li>Software upgrades to be carried out (<a href="#">Upgrade</a>).</li><li>A <a href="#">Master Comms Diagnostics</a> page to be displayed (if Master Comms option fitted and enabled).</li><li>A Network diagnostics page to be displayed (<a href="#">Ethernet diagnostics</a>).</li><li>Configuration items (e.g. input channels) to be copied, to speed up configuration (<a href="#">Copy</a>).</li><li>Search criteria to be entered to allow the user to locate trigger sources for a specific job (<a href="#">Job search</a>).</li><li>The appearance of the display screens to be customised (<a href="#">Customise</a>).</li><li>Details of the hardware and software associated with the recorder to be displayed (<a href="#">About</a>).</li></ol>

---

Note: In all the following descriptions, if a change is made to a menu item, then the item text changes to red, until it is 'applied'

---

## 4.1 ARCHIVE

### Notes:

1. The archiving functions described below can also be initiated by job action - see [section 4.7.14](#).
2. Archiving is carried out on a group by group basis, with a message being sent to each group when its archive is finished. When all the groups have been archived, a pop-up appears to inform the user that archiving is complete. Because of the sequential nature of this process, the time given in this pop-up is different from the times which appear in the messages generated for the individual groups.
3. For floppy disk drives (connected via the USB port), it is not recommended that archiving be enabled for more than one group (see 'Group' configuration - [section 4.3.2](#))

### 4.1.1 Local Archive

#### Caution

Removal of the memory device whilst archiving is in progress causes irreparable damage to the filing structure on the device, rendering it unusable. For this reason, archiving should be suspended before the device is removed. It is strongly recommended that the 'Remove Media' facility described in [section 3.1.4](#) (Summary menu) be used to ensure that it is safe to remove the memory device.

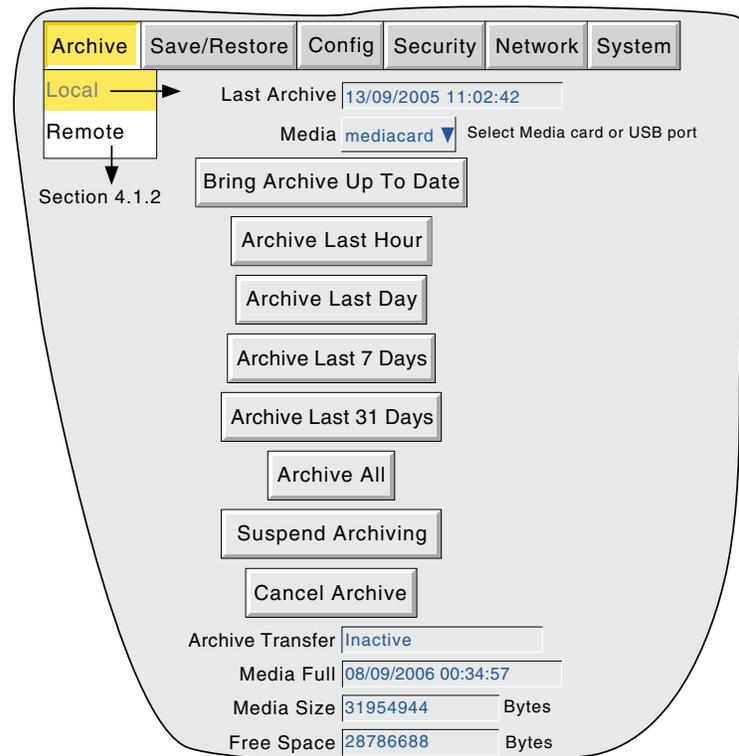


Figure 4.1.1 Local archive configuration

Local archive allows the user to initiate data transfer to the device defined in the 'Media' picklist for all groups with 'Archive to Media' enabled ([Group configuration - section 4.3.2](#)). Archiving is initiated by touching the relevant archive period key (e.g. Last Day'). The memory device can be selected as 'mediacard' (the integral Compact Flash card), or the USB port can be selected if, for example, a memory stick is to be the destination device. The USB port is located on the underside of the instrument.

Archiving starts as soon as the selection is made, and cannot be stopped until completed, unless the Cancel Archive key is operated, in which case the archive will be stopped after a confirmatory message has been responded to. The Cancel key is active only if 'Archiving Control' is enabled in Security/Access ([section 4.4](#)) for the current login.

#### 4.1.1 LOCAL ARCHIVE (Cont.)

##### BRING ARCHIVE UP TO DATE

This causes the recorder to archive all history files created since the last manual or automatic ([section 4.3.5](#)) archive.

##### ARCHIVE ALL

This causes the recorder to archive all its history files.

If the memory device becomes full before archiving is complete, archiving pauses and a pop-up request appears, asking for a replacement. If this request is not responded to within 10 minutes of its appearance, archiving is aborted.

Unattended archiving can be paused by the user (e.g. to change media without losing data) by operating the 'Suspend Archiving' / 'Resume Archiving' button. Any archiving in progress is allowed to complete before the 'Suspend Archiving' request takes effect. Transfer activity is indicated in the 'Archive transfer' window.

Below the selection buttons are a number of status windows relating to the selected memory device. 'Media Full' is an estimate, based on the current configuration, of when the memory device will become full. The meanings of the 'Media Size' and 'Free Space' values are self evident.

If automatic archiving is active ([section 4.3.5](#)), then automatic and manual archives will operate on a first come-first served basis. Some files will be saved twice in such a circumstance, the later archive's files overwriting any earlier archive's files which have the same name.

## 4.1.2 Remote archiving (FTP transfer)

This allows archiving of recorder files, for all groups with 'Archive via FTP' enabled, to a remote computer, connected (using the single RJ45 telephone type connector on the inderside of the recorder) either directly, or via a network . 'Archive via FTP' is enabled/disabled as part of Group configuration - [section 4.3.2](#).

In order to carry out a successful transfer, details of the remote host must be entered in the Archive section of the 'Config' menu ([section 4.3.5](#)).

**Note:** An FTP server must be running on the remote host.

Figure 4.1.2 shows the menu for remote archiving. The Archive last hour/day etc. keys allow the user to determine which files are to be archived. Selection of 'Bring Archive Up To Date' causes the recorder to select whichever of the Last Hour/Last Day etc. categories is appropriate in order to bring the archive up to date. The 'Last Archive' window shows the time and date of the previous archive. The Archive Transfer window shows archive status as 'Active' or 'Inactive'.

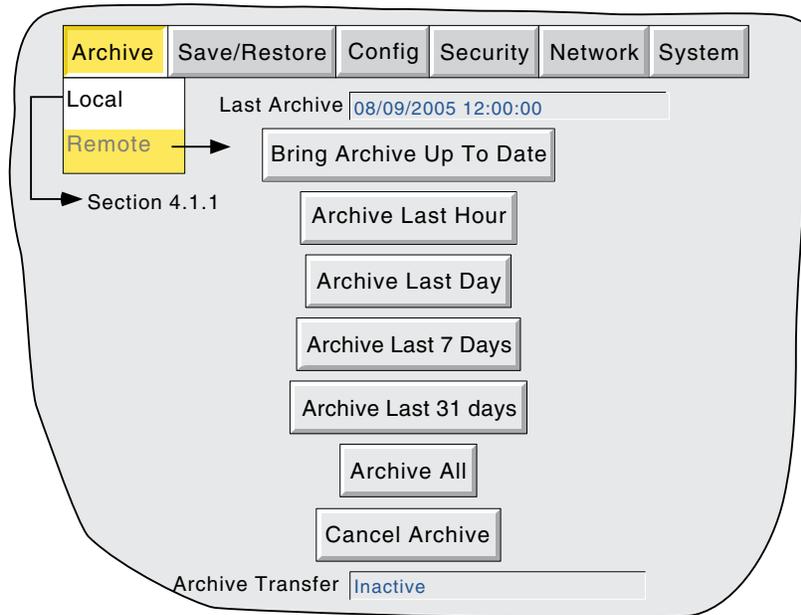


Figure 4.1.2 Remote archive strategy configuration

Additionally, a user on a remote PC has full viewing capabilities, can extract recorder files at any time, and can access those items of recorder configuration that are associated with the user's login. For successful connection, 'Connect from Remote' must be enabled and the 'Remote user name' and 'Remote password' must be defined in one of the accounts (all in the Security access menu ([section 4.4.1](#))).

### Notes:

1. In order to view history files when accessing the instrument remotely, the recorder's address, the 'Remote user name' and the 'Remote password' must be supplied to an FTP client such as PC Review or Microsoft® Internet Explorer.
2. When accessing files using Microsoft® Internet Explorer, the address (URL) field can be in one of two forms:
  - a ftp://<instrument IP address>. This allows the user to log in as the anonymous user (if the instrument has any account with 'Remote user name' set to 'Anonymous' and a blank password).
  - b ftp://<user name>:<password>@<instrument IP address> to log in as a specific user.
3. For IE5 users only: Microsoft® Internet Explorer displays, by default, history files only. To exit the history folder, either uncheck the Tools/Internet Options/Advanced/Browsing/"Enable folder view for FTP sites" option, or check the Tools/Internet Options/Advanced/Browsing/"Use Web based FTP" option.

## 4.2 SAVE / RESTORE

As shown in figure 4.2a, touching the 'Save/Restore' key calls the picklist: Save, Restore, New, Text, Import/Export Screen, Import/Export User Linearisation, Import Printer Driver. Import/Export Screen choices appear only if the User screens option is fitted.

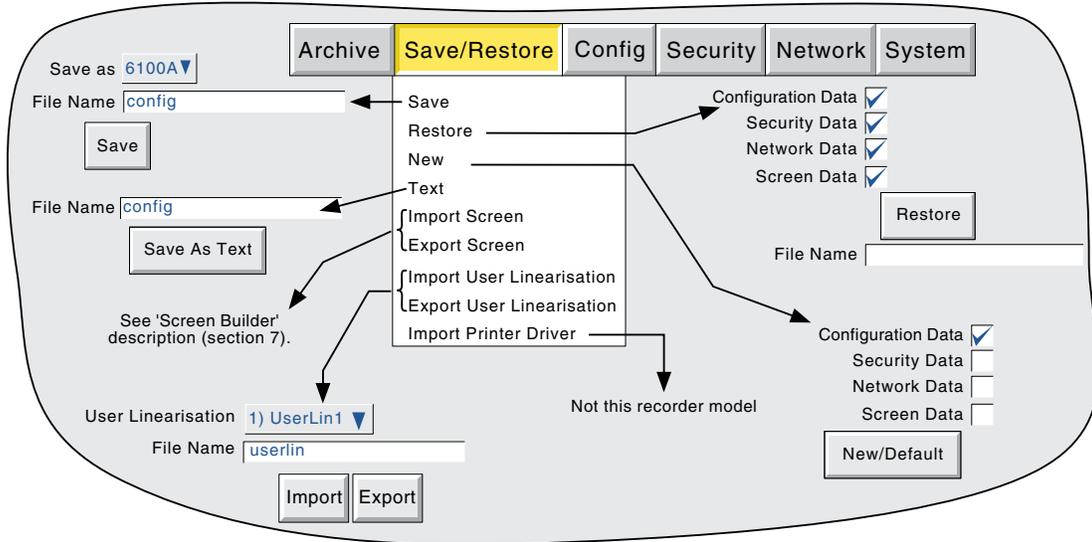


Figure 4.2a Save/Restore menu

Where a file name is required, then, if the displayed file name is suitable, operation of the 'Save', 'Restore', 'Import' or 'Export' key will initiate the action. If, instead, a file name has to be entered, this is carried out as follows:

Touching the filename window causes a pop-up menu to appear, giving a list of 'Volumes' in the Flash memory or on the memory device (if inserted). Figure 4.2b shows an imaginary Volume contents list, displayed by touching the name 'user', then operating the down arrow or 'open folder' key. (See section 5, below for more details). Once the correct folder is open, either select an existing file, or enter a new filename, by touching the FileName window and entering the name using the pop-up keyboard(s) as described in section 3.3.1 above. Operation of the Save/Restore key initiates the action.

Name	Type	Date	Bytes
cal\	Folder	03/07/06 12:35:08	
config\	Folder	01/07/06 10:27:13	
Filter1a	Config	05/06/06 10:22:23	4445
lib\	Folder	05/06/06 10:23:14	
sdb\	Folder	11/05/06 14:01:08	
user\	Folder	06/07/06 15:41:30	

FileName Filter1b [Save] [Cancel]

Figure 4.2b Typical volume contents page

### 4.2.1 Save

Touching this item allows the current configuration to be saved in the recorder's memory. Files saved in this way are not in a 'readable' format and are used only for archive /security purposes or for transfer to another, similar, recorder.

### SAVE AS

This selection box allows a configuration to be saved, if required, in a format suitable for importing into previous recorder models. The default is always the current instrument.

### 4.2.2 Restore

Touching this item allows the user to select or type-in a previously saved configuration file name, which will then be used as the current configuration. Touching the 'Restore' key completes the operation. Check boxes allow one or more of Configuration Data, Security data (note 3), Network data and Screen data to be chosen for the restore function.

---

#### Notes:

- 1 Screen data restores faceplate status for vertical trend and vertical bargraph modes, and user screen information (if the option is fitted).
  2. If archiving is in progress when a 'Restore' is requested, the Restore operation will be delayed until the archive is complete (maybe several minutes). If required, the 'Cancel Archive' key ([section 4.1](#) above) can be used to speed up the Restore process, at the cost of losing the archive data.
  3. If 'Centralised Security' is active (part of Security/Management configuration - [section 4.4.2](#)) 'Security Data' is not selectable (either for 'Restore' or for 'New' (below)).
  4. If the file to be restored has been created using 'C-Edit' software, each of the characters used in the file name must lie within the unicode range 0 to 255, or the file name might not be displayed correctly.
- 

### 4.2.3 New

Touching this item causes the factory entered default configuration to be loaded for use, or for editing. Operation of the New/Default key completes the operation. Tick boxes allow one or more of Configuration Data, Security data (note 3 above) and Network data to be chosen for the restore default function; only those items which are ticked are replaced by default values.

For recorders with the Screen Builder (User Screens) option ([section 7](#)), a further tick box is displayed - 'Screen Data'

### 4.2.4 Text

This is identical to the 'Save' function described above, but the configuration is saved in ASCII format, and can be transferred to a computer and read, printed etc. as required. It is not possible, using this means, to modify the configuration and then re-load it.

### 4.2.5 Import screen


This field appears only if the Screen Builder (User Screens) option ([section 7](#)) is fitted, and allows a previously exported User Screen file to be imported.

### 4.2.6 Export screen

This field appears only if the Screen Builder option ([section 7](#)) is fitted, and allows a User Screen to be exported to a removable memory device or to the internal Flash memory. The exported screen can subsequently be imported either into this recorder or into a different recorder.

### 4.2.7 Import User Linearisation

**Note:** User linearisation tables can be imported into all versions of the recorder, but not every version has a 'Lin Type' field in [Channel configuration](#) allowing such tables to be selected for use.

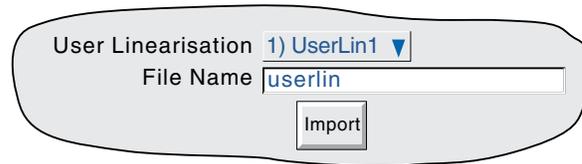

The Import Linearisation feature allows linearisation tables to be imported either from the Compact Flash card, USB device or if Bridge 'Full' software is fitted, directly from the host PC.

Touching the User Linearisation field allows the user to select which of 'UserLin1' to 'UserLin12' is to contain the imported file.

Touching the File Name field, calls a popup menu similar to that shown in figure 4.2b. This allows the user to select the table to be imported.

The file must be comma separated ASCII as follows:

```
n,  
X1,Y1  
X2,Y2  
X3,Y3  
.  
.  
Xn,Yn
```

where 'n' is the total number of XY pairs in the table, and for each pair, X is the input value, and Y is the linearised value corresponding to X. See [section 4.3.9](#) for full details.

**Note:** Imported linearisation tables will not become effective until after the next configuration 'Apply' operation.

### 4.2.8 Export User Linearisation

Similar to 'Import user Linearisation', above, the Export Linearisation feature allows linearisation tables created in the recorder to be exported either via the Compact Flash card or if Bridge 'Full' software is fitted, directly to the host PC. See [section 4.3.9](#) for full details.

### 4.2.9 Import printer driver

Not used for this recorder model.

### 4.3 CONFIG KEY

Touching this key calls the top level configuration pick list:

Instrument,  
Groups,  
Channels,  
Views,  
Archive,  
Events,  
Event Buttons,  
Messages,

User Linearisations,  
Batch,  
Maths,  
Totalisers,  
Counters,  
Timers,  
Connections,

Master Comms,  
Output Channels,  
Demand Writes,  
Emails,  
Reports,  
EtherNet/IP Server  
Options


---

#### Notes:

1. Figure 4.3b gives an overview of the configuration menus.
  2. If an option is not fitted, it does not appear in the above list.
- 

When making changes to the configuration the name of each changed parameter is displayed in red (instead of the normal black) until the 'Apply/Discard' key has been operated. For example, in channel configuration, if the Scale High value is edited, 'Scale High' appears in red, until the Apply key is operated.

Should an attempt be made to leave configuration with unsaved changes, a warning message appears, allowing the user to apply the changes, to discard the changes or to return to configuration (Cancel).

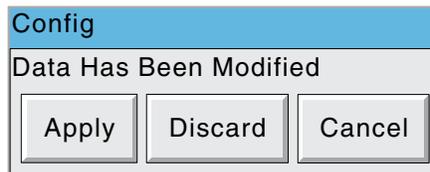

4.3 CONFIG KEY (Cont.)

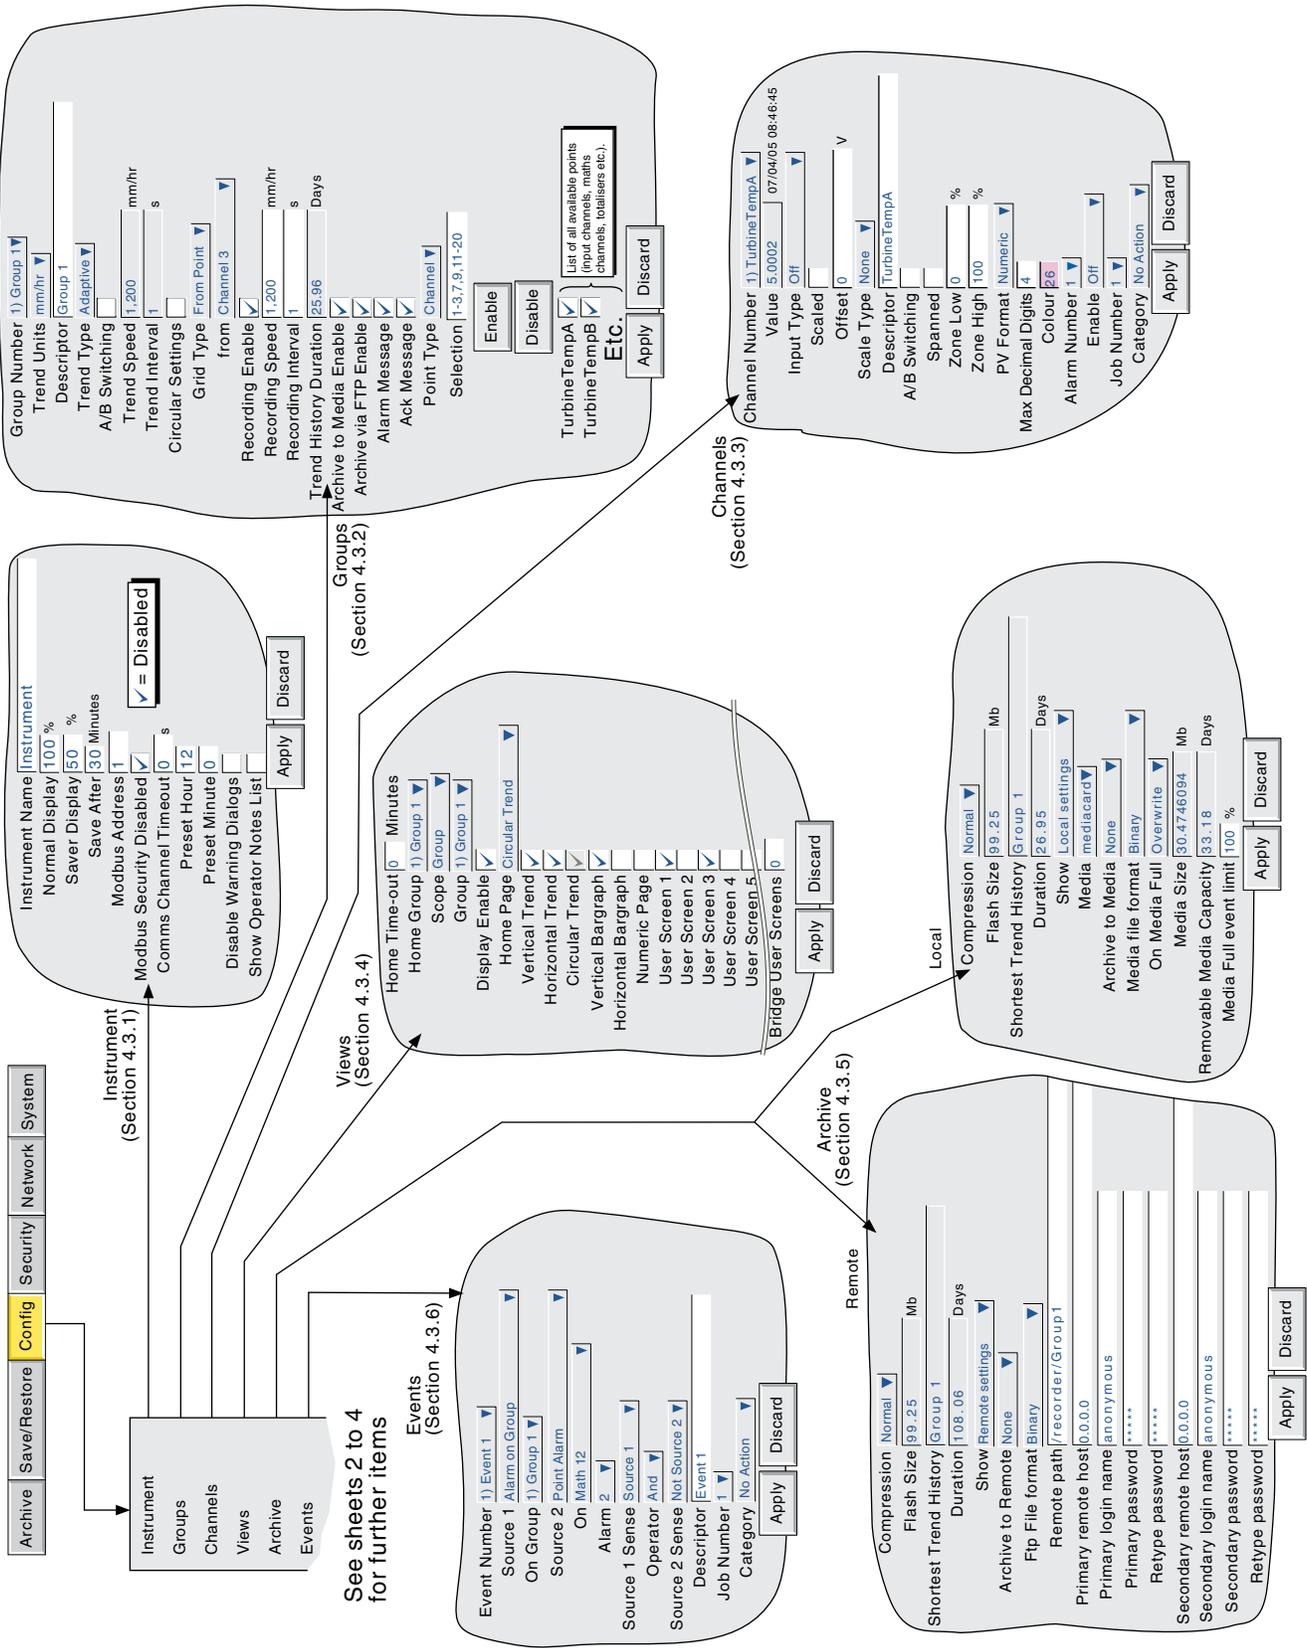


Figure 4.3b Configuration menu overview sheet 1

4.3 CONFIG KEY (Cont.)

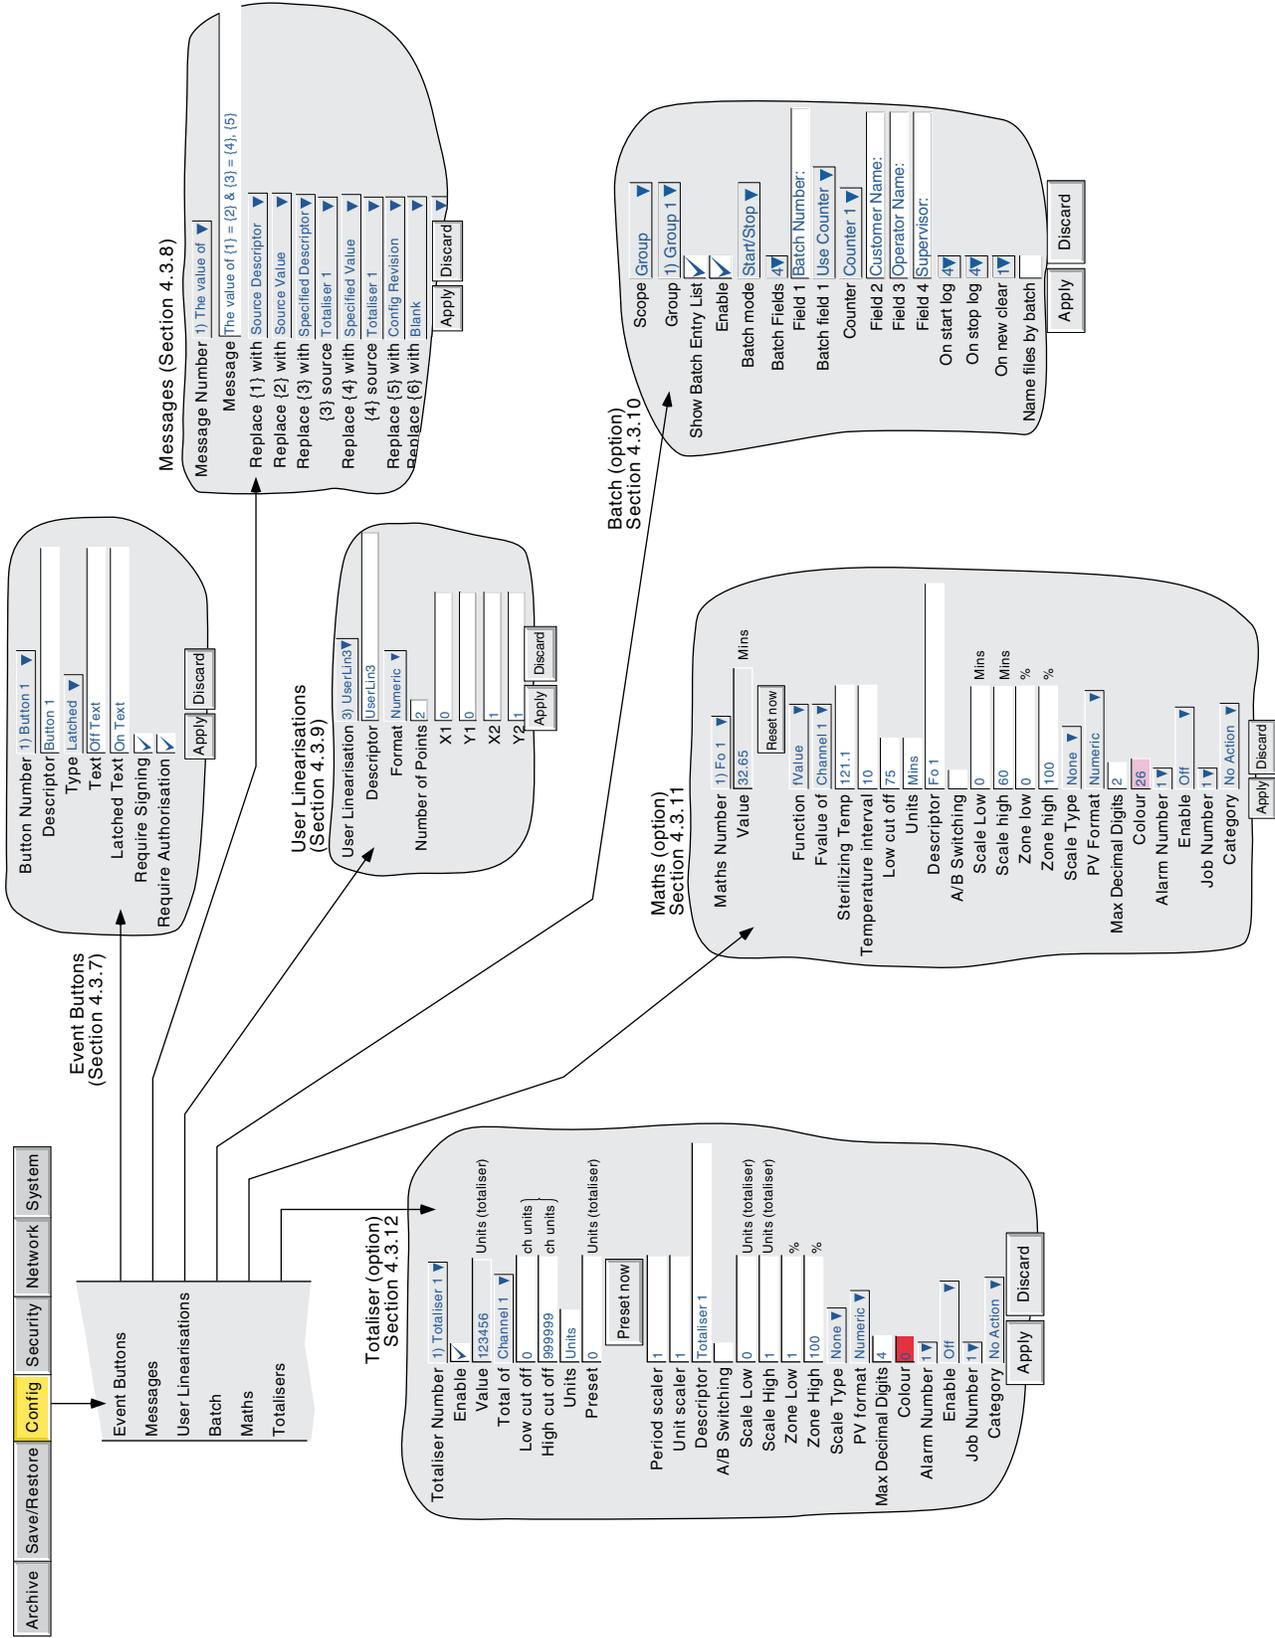


Figure 4.3b Configuration menu overview sheet 2

4.3 CONFIG KEY (Cont.)

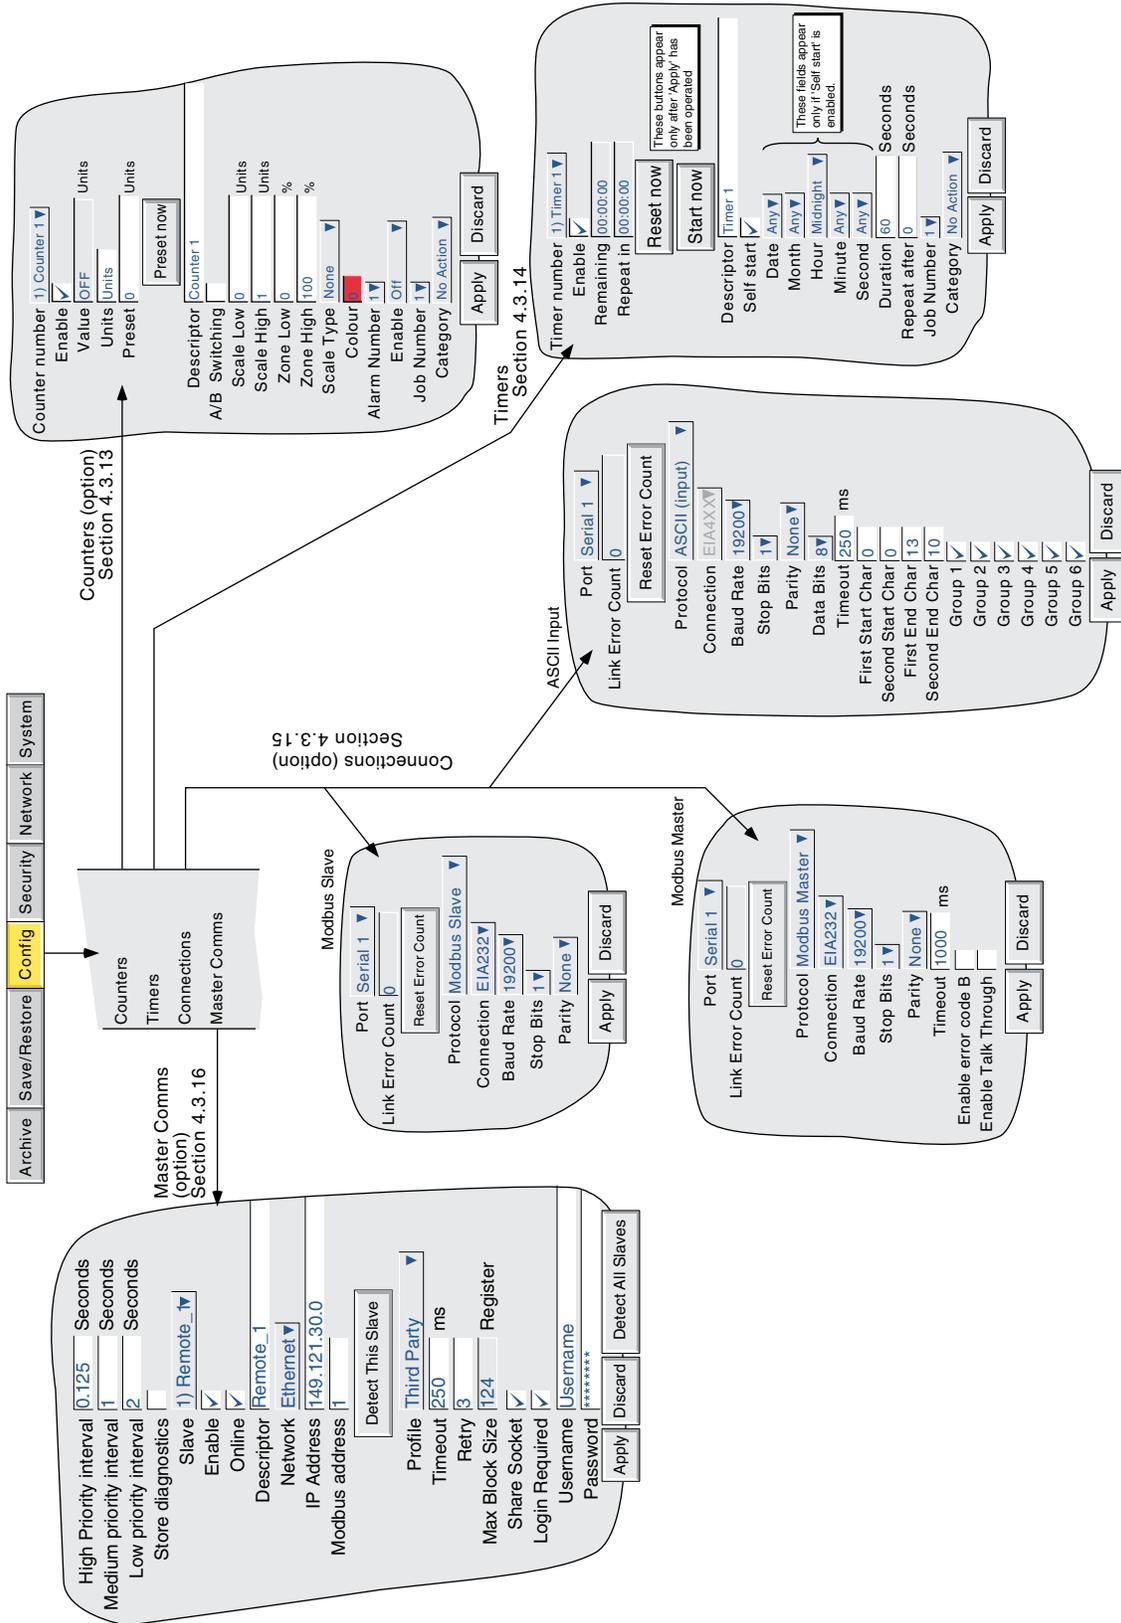


Figure 4.3b Configuration menu overview sheet 3

4.3 CONFIG KEY (Cont.)

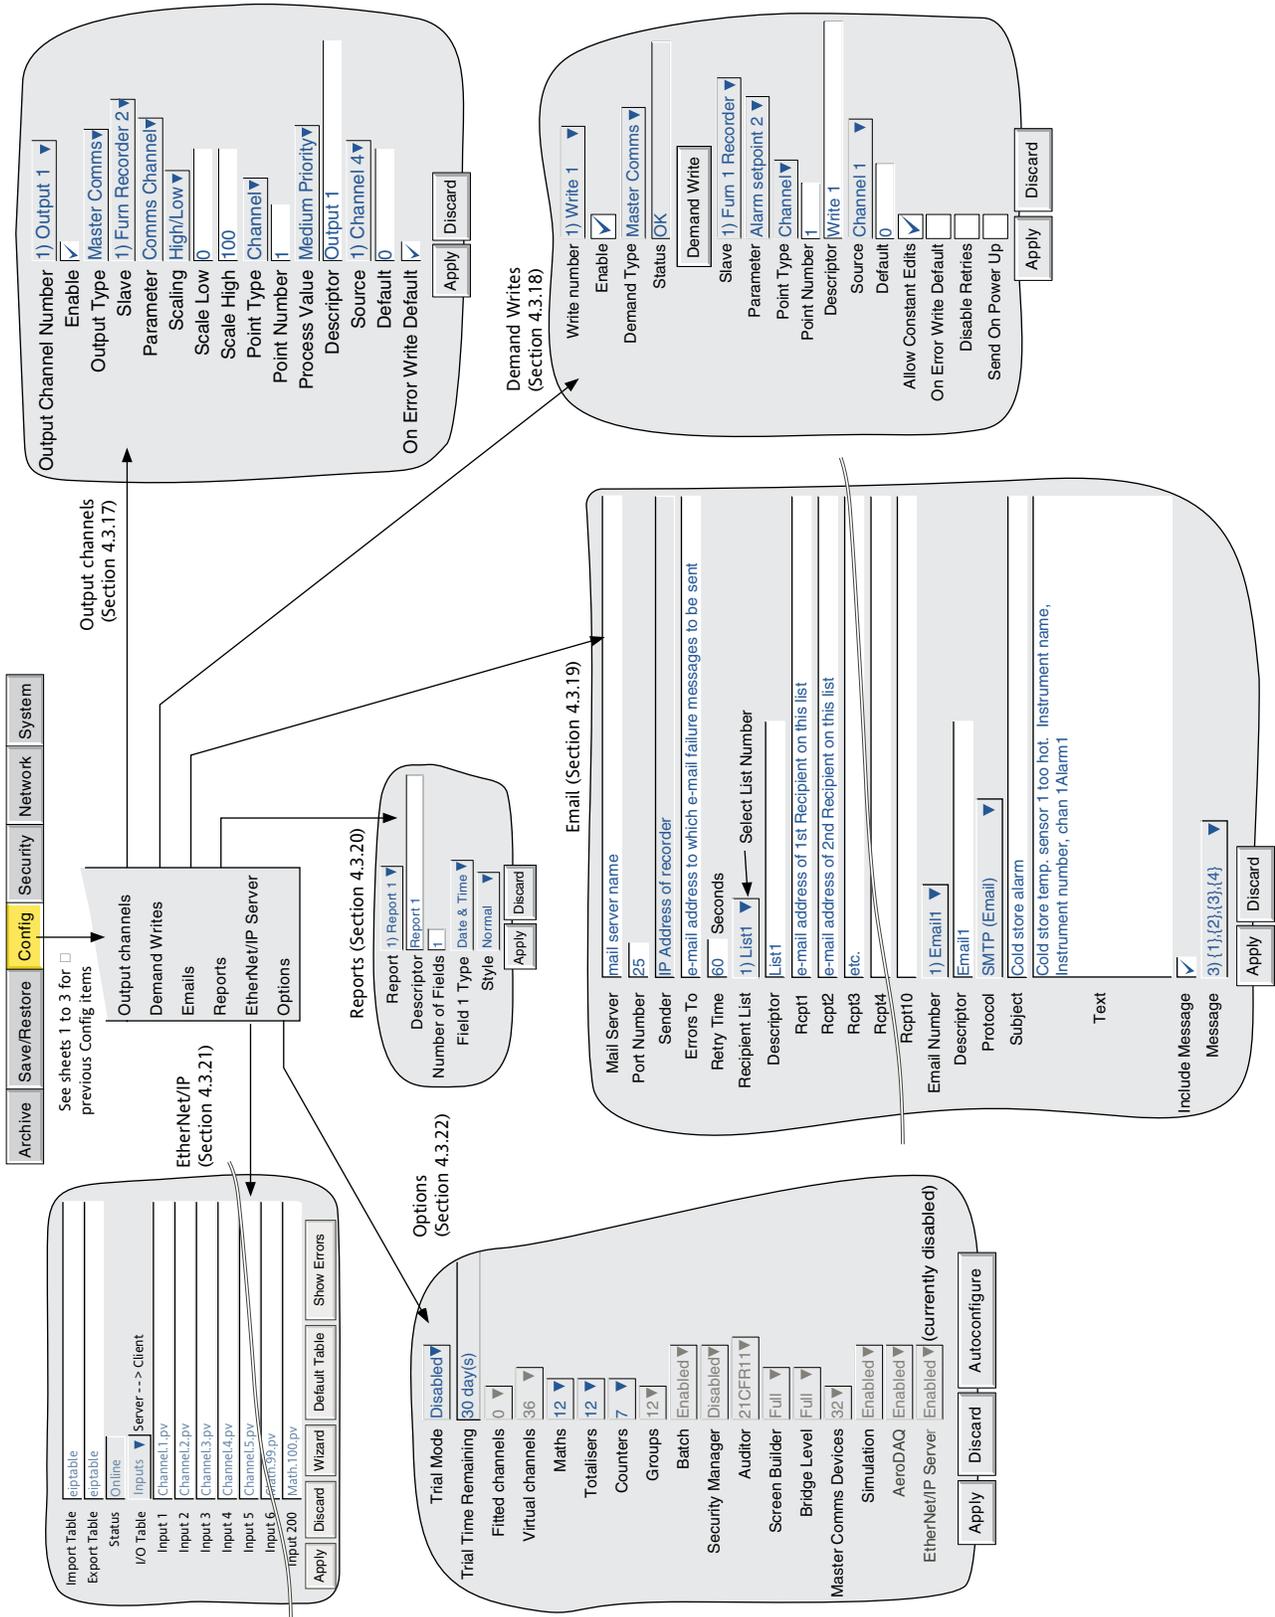


Figure 4.3b Configuration menu overview sheet 4

### 4.3.1 Instrument configuration

The screenshot shows the Instrument Configuration menu with the following settings:

- Instrument Name: Instrument
- Normal Display: 100 %
- Saver Display: 50 %
- Save After: 30 Minutes
- Modbus Address: 1
- Modbus Security Disabled:  (Legend:  = Disabled)
- Comms Channel Timeout: 0 s
- Preset Hour: 12
- Preset Minute: 0
- Disable Warning Dialogs:
- Show Operator Notes List:  (Callout: These fields appear only if 'Show Operator Notes List' is enabled)
- MAC Address: 00:0A:8D:00:20:A0
- Operator Note 1: AM Shift started
- Operator Note 12: (empty)

Buttons: Apply, Discard

Figure 4.3.1 Instrument Configuration menu

#### INSTRUMENT NAME

Allows the entry of an alphanumeric name for the recorder, up to 20 characters long. See [section 3.3.1](#) for text entry techniques.

#### NORMAL/SAVER DISPLAY

Allows normal and 'saver' display brightnesses to be defined. Defaults are Normal = 100%; Saver = 50%

#### SAVE AFTER

The number of minutes (between 1 and 99 inclusive), which are to elapse after a screen operation, before the screen brightness changes from 'normal' to 'saver'. Default is 30 minutes.

#### MODBUS ADDRESS

Allows a Modbus address between 1 and 247 to be set up, for use when the instrument is acting as a Modbus slave.

#### MODBUS SECURITY DISABLED

When using MODBUS, it is possible, by 'checking' this field to allow a host computer to access the recorder without its first having to supply a valid User name and Password. This box must be checked if this unit is acting as a Modbus slave in order for the unit to be detected. Once communications have been established, Modbus security can be enabled, providing that the Slave's Remote user name and password have been entered at the Master. See also [section 8.2.4](#).

#### COMMS CHANNEL TIMEOUT

Allows a number of seconds (between 1 and 999) to be entered. If none of the channels set to 'Comms' is communicated with, within this period, an event source (Comms channel timeout) is set, and remains set until the next communication. An entry of 0 disables the time out.

### 4.3.1 INSTRUMENT CONFIGURATION (Cont.)

#### PRESET HOUR

Enter an hours number between 0 and 23 for use with Clock Job - Preset clock.

#### PRESET MINUTE

Enter a minutes number between 0 and 59 for use with Clock Job - Preset clock.

---

Note: See [section 4.7](#) for a description of recorder jobs, and [section 4.5.1](#) for further details of time synchronisation.

---

#### DISABLE WARNING DIALOGS

Checking this box prevents [instrument alarm messages](#) from appearing on the screen.

#### SHOW OPERATOR NOTES LIST

Enabling this field produces a list of 13 entries which can be used in Operator Notes. The first entry is the MAC address of the recorder and is not editable. The remaining 12 entries (of up to 60 characters each) are freely editable.

Any one of these predefined notes can be selected (as described in [section 3.5](#)) by touching the 'Operator Note' area continuously for two seconds, then touching the required note from the picklist which appears. Once selected the predefined note can be edited before use, like a normal Operator Note. Such editing does not affect the original note entered here in Instrument Configuration.

### 4.3.2 Group configuration

Note: Groups 1 to 6 is a standard recorder feature. The supply of groups seven to twelve is an optional extra.

Group configuration allows the user to define the following:

- Group trend speed/interval
- Group recording speed/interval
- Group descriptor
- Group content
- Circular Trend speed and chart-full operation
- Chart grid divisions

The production of alarm messages and the saving of group data to Flash memory, to removable memory device and/or to remote computer (FTP transfer) can also be enabled / disabled from this menu.

The screenshot shows the Group configuration menu with the following settings and annotations:

- Group Number:** 1) Group 1 (Select Group)
- Trend Units:** mm/hr (Select mm/hr or in/hr)
- Descriptor:** Group 1
- Trend Type:** Adaptive (Select Normal or Adaptive)
- A/B Switching:**
- Trend Speed:** 1,200 mm/hr (Not editable if 'Circular settings' enabled)
- Trend Interval:** 1 s (Not editable if 'Circular settings' enabled)
- Circular Settings:**
- Circular Speed:** 1 week (Appear only if 'Circular Settings' enabled)
- Circular Chart Full:** New Chart (Appear only if 'Circular Settings' enabled)
- Start At:** Monday (Appear only if 'Circular Settings' enabled)
- Circular Extended Backfill:**
- Grid Type:** From Point (Select None, Linear, Log or 'From Point')
- from:** Channel 3
- Recording Enable:**
- Recording Speed:** 1,200 mm/hr (Editable only if 'Recording Enable' is enabled)
- Recording Interval:** 1 s (Editable only if 'Recording Enable' is enabled)
- Trend History Duration:** 314.36 Days (Editable only if 'Recording Enable' is enabled)
- Archive to Media Enable:**
- Archive via FTP Enable:**
- Alarm Message:**
- Ack Message:**  (= Enabled)
- Point Type:** Totaliser
- Selection:** 1-3,5,7,9
- Buttons:** Enable, Disable, Apply, Discard
- Grid Type (Linear):** Grid Divisions - Major: 5, Grid Divisions - Minor: 1
- Grid Type (Log):** Grid Decades: 5
- Annotations:**
  - Not editable if 'Circular settings' enabled
  - Appear only if 'Circular Settings' enabled
  - Select None, Linear, Log or 'From Point'
  - Editable only if 'Recording Enable' is enabled
  - = Enabled
  - List of all available points (input channels, maths channels, totalisers etc.)

Figure 4.3.2a Group configuration menu

### 4.3.2 GROUP CONFIGURATION (Cont.)

#### GROUP NUMBER

Allows a particular group to be selected for configuration.

#### TREND UNITS

Allows mm/hr or inches per hour to be selected for the 'chart' speed. Automatically converts the trend speed field below.

#### DESCRIPTOR

Allows the group name to be edited. See [section 3.3.1](#) for text entry techniques.

#### TREND TYPE

This allows the selection of Adaptive Recording for vertical and horizontal trend modes. The purpose of adaptive recording is to ensure that rapid, short duration spikes (for example), are represented on the 'chart' even at low trend speeds. This allows the user to extend the total amount of history stored in the recorder (by using slow trend speeds) without losing transient data.

The adaptive recording method works by measuring the input signal at the normal 125 msec period, and saving the maximum and minimum values, continuously, over the period of trend update. When the trend is updated, both maximum and minimum values are traced on the chart - i.e. two traces are produced for each channel in the group.

The faceplates and pen positions are still updated every second, as normal.

#### Notes:

- 1 During the period between updates, the maximum and minimum values are shown on the trend as a horizontal line just beneath the pen, where the ends of the line represent the minimum and maximum values so far. This line is removed at trend update time.
- 2 Adaptive recording takes twice as much memory as normal recording, so to maintain the total amount of history stored, the trend speed must be reduced to 50% of that which would be used for non-adaptive recording.
- 3 In Trend History mode, both minimum and maximum values for the cursor position are shown on the faceplate. See [section 3.4](#) for a description of trend history.

Figure 4.3.2b shows the difference between normal and adaptive recording, at slow trend rates. Note that rapid changes in signal, (such as those shown in the circled area of the 'actual signal') are largely filtered out by Normal Tracing, but is displayed by the Adaptive Trace. Figure 4.3.2b is for illustrative purposes only, as traces such as these could never appear on the chart together.

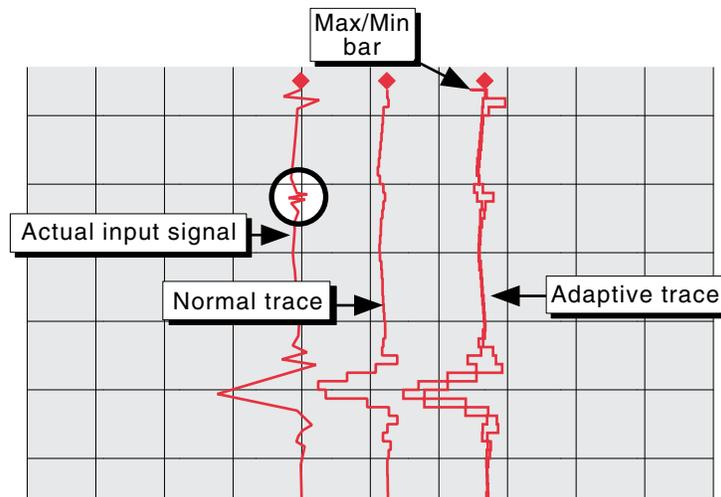


Figure 4.3.2b Adaptive recording compared with Normal tracing

### 4.3.2 GROUP CONFIGURATION (Cont.)

#### A/B SWITCHING

If enabled, this function allows alternative values for Trend speed/interval and Recording speed/interval to be entered. 'A' values are used during normal operation. 'B' values are switched-to by job action, as described in [section 4.7](#).

#### TREND SPEED/TREND INTERVAL

Allows the 'chart' speed to be selected either as 'mm per hour' or 'in per hour', or as an interval. Entering a value in one field automatically converts the value in the other field. A trend interval of N seconds is equivalent to 1200/N mm/hr chart speed; a chart speed of P mm/hr is equivalent to a trend interval of 1200/P seconds.

If A/B switching is enabled, a second Trend Speed /Interval value can be entered. Trend Speed/Interval 'A' is used during normal operation. Trend Speed/Interval 'B' is switched to by job action, as described in [section 4.7](#).

**Note:** Trend speed/interval are not editable fields if 'Circular Settings' is enabled.

#### CIRCULAR SETTINGS

When checked, this checkbox causes the Circular Speed/Chart Full/Start At fields, described below, to appear. When checked, the Trend Speed and Trend Interval fields described above are disabled (i.e. they are no longer editable).

**Notes:** If Circular Settings is not enabled, here in Group configuration, but Circular Trend is enabled for the group in Views configuration ([section 4.3.4](#)), then, although the circular chart will appear, it is unlikely that the chart will contain any trends.

#### CIRCULAR SPEED

This field allows the chart speed to be selected from a pick list, as detailed in table 4.3.2, below. The table also shows the number of major and minor chart divisions.

#### CIRCULAR CHART FULL

This allows 'New Chart' or 'Rotate' to be selected from a picklist. See [section 3.4.3](#) for details. Table 4.3.2 shows the major and minor chart divisions for each chart speed.

#### START AT

This item, (which appears only if 'New Chart' has been selected in 'Circular Chart Full', above) allows the user to select a start time and/or date for the new chart. The exception is for a chart speed of 1 hr/rev, which always starts on the hour.

Chart spd. (1 rev per)	Chart divs		New Chart Start at	
	Major	Minor	Start at choices	Examples/comments
1 hour	12	2	On the hour	
2 hours	12	2	00 to 23 at 00:00 hrs	4 hours/rev.; Start at 12. This chart will start at 1200 hrs and re-start at 1600, 2000, 2400, 0400, 0800 hrs etc.
4 hours	12	2		
6 hours	12	2		
8 hours	8	2		
12 hours	12	2		
16 hours	8	2		
1 day	12	2	Day of week at 00:00:00	2 days/rev.; Start Monday. Chart starts Mon. 00:00:00 and restarts Weds, Fri etc.
2 days	12	2		
1 week	7	4	Day of week at 00:00:00	At each power-on, the system resets to the first week of the period, with the most recent 'Start at' day of the week at the top of the chart.
2 weeks	7	4		
4 weeks	4	7		
30 days	30	0		

Table 4.3.2 Circular chart speed details

## 4.3.2 GROUP CONFIGURATION (Cont.)

### CIRCULAR EXTENDED BACKFILL

When checked, this checkbox enables the Circular Extended Backfill function, which extends the chart backfill to display chart data for multiple power cycles instead of only from the previous power up.

### GRID TYPE

Grid type allows the chart grid type to be defined for the group being configured. This is not necessarily related to channel scale (section 4.3.3), unless 'From point' is selected, when the grid matches the scale of the selected point.

#### NONE

No chart grid is traced.

#### LINEAR

The chart grid is linear, with the major and minor divisions defined by the fields Grid Divisions - Major and Minor, which appear if 'Linear' is selected as grid type. Figure 4.3.2c, below, defines major and minor divisions.

#### LOG

The chart grid is logarithmic, with the number of decades being selected in the 'Grid Decades' field which appears if 'Log' is selected as Grid Type. Figure 4.3.2c gives an example.

**Note:** For the small frame recorder, the minor divisions within each decade are shown only for groups with 'Number of decades'  $\leq 5$ .

#### FROM POINT

This allows the chart grid to be aligned with the scale of a particular 'point', selected in the 'from' field which appears if 'From Point' is selected as 'Grid Type'.

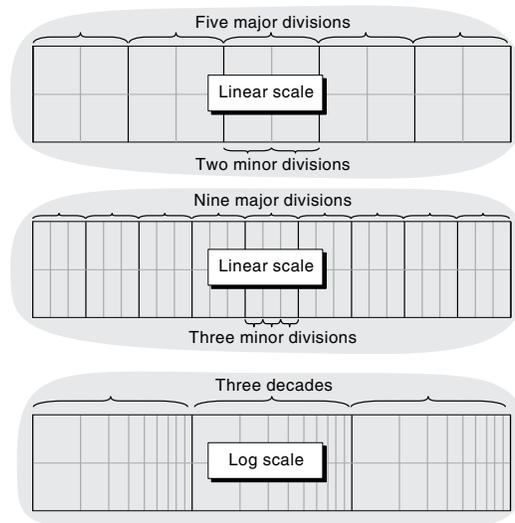


Figure 4.3.2c Typical chart grid definitions

## RECORDING ENABLE

This tick box allows the logging of this group's data to the flash memory to be enabled/disabled. When disabled:

- a The recording speed/interval fields are not editable, and Trend History duration is set to zero.
- b Display trends are present on the chart, but are not preserved when changing 'Views'.
- c It is not possible to enter trace history if 'Recording Enable' is not selected.

---

### Notes

- 1 A blue line is drawn across the chart, when recording is re-enabled to indicate a time change in the trace.
  - 2 If a 'Recording enable' job ([section 4.7.9](#)) is set to act on a particular group, then the group will be recorded only whilst the job is active, and only if Recording is enabled for the group.
- 

## RECORDING SPEED/RECORDING INTERVAL

If recording is enabled, these fields are as for trend speed/interval but define the rate at which data is saved to Flash memory. This value also affects how much trace history appears per screen in trend history mode ([section 3.4](#)). If recording is not enabled, these fields are 'greyed' and not editable.

If [A/B switching](#) is enabled, a second Recording Speed /Interval value can be entered. Recording Speed/Interval 'A' is used during normal operation. Recording Speed/Interval 'B' is switched to by job action, as described in [section 4.7](#).

---

**Note:** With large numbers of points configured in one or more groups, the total amount of data generated per iteration may exceed the amount that can be written to the internal FLASH memory in the time available. Such a situation may also arise if many messages are being generated. The recorder responds by reducing the recording speed, and a message 'Recording failed - internal overflow. Slowing recording interval of fastest group(s)' appears, to draw the user's attention to the situation.

---

## TREND HISTORY DURATION

Gives an estimated time to fill the group's trend history area of the Flash memory. The calculation is based on the archive rate, the compression ratio, the flash size and on the exact nature of the data. (Rapidly changing values use more space than static/slowly changing values.) If [A/B switching](#) is enabled the calculation is based on Recording Speed/Interval 'A'.

Changing the contents of one group may affect the Trend History Duration of other groups. This happens because the recorder attempts to store, as nearly as possible, the same amount of history for all groups, regardless of how many points there are in the groups.

For 'empty' groups, or if Recording is not enabled for a group, the Trend History Duration is displayed as '0' Days.

## ARCHIVE TO MEDIA ENABLE/ARCHIVE VIA FTP ENABLE

If recording is enabled, these tick boxes allow the archiving of this group's data to removable mass storage media and/or to a remote host (FTP) to be enabled or disabled. If recording is disabled, these fields cannot be edited.

---

**Note:** When recording to floppy disk drives (via the USB port), it is recommended that only one group be set up with 'Archive to media' enabled. This is because history files are typically 400kB in size and this limits the number of files which can be saved to a 1.4MB floppy disk, to three. If more than one group is set up to archive, and if 'Overwrite' strategy is selected, then it is likely that all the data for one or more of the groups will be lost. No warning is given.

---

## ALARM MESSAGE

This box allows the printing of alarm on and off messages on the 'chart' to be enabled or disabled as required. Alarm messages appear on the trend display and in PC Review in the form HH:MM:SS Alarm ON n/m and HH:MM:SS Alarm OFF n/m, where 'n' is the relevant channel number and 'm' is the alarm number (1 or 2).

## ACK MESSAGE

This tick box allows the printing of alarm acknowledgement messages on the 'chart' to be enabled or disabled as required. Acknowledge messages appear on the trend display and in PC Review in the form HH:MM:SS.

## ALARM ACKNOWLEDGE

Alarms are acknowledged as described in [section 3.1.4](#).

## POINT TYPE/SELECTION

The 'Point Type' box, together with the 'Selection' box immediately below, offers a quick way of editing the contents of a group, as follows:

1. Select the type of point (Channel, Maths, Totaliser or Counter) to be edited from the Point Type drop down menu.
2. Enter the numbers of all the points of the selected type to be added or deleted, in the 'Selection' box. See notes below for further details.
3. Click on 'Enable' to add the selected points to the group contents, or on 'Disable' to remove them.
4. Repeat for other point types, as required.

---

### Notes:

1. The status of all points not included in the selection box, remains unchanged.
  2. Point numbers are entered individually, or as one or more ranges, separated by commas (if applicable). For example, an entry of '1-3,6,9-11' would cause points 1, 2, 3, 6, 9, 10 and 11 to be added or removed from the group contents. Only numeric characters, commas and hyphens (minus signs) are accepted. If any other character (including space(s)) is included in the list, the edit will fail, with a message 'Invalid Selection' appearing when the 'Enable' or 'Disable' key is operated..
  3. Ranges must be complete: '1-' is not acceptable.
  4. Each group may contain any or all points, but for vertical and horizontal trend modes, only the first 36 are displayed, and for circular trend mode, only the first twelve are traced.
  5. If a point number is entered which is greater than the number of that point type fitted, then the selection is ignored. For example, if totalisers 1-60 are selected for deletion, and only 12 are enabled, then the range will be accepted, and totalisers 1 to 12 deleted from the group's contents.
- 

Alternatively, a group's contents can be edited using the tick-boxes, to include the ticked items in, or to exclude non-ticked items from, the group, as required.

### 4.3.3 Channel/Alarm configuration

Figure 4.3.3a below, shows a typical configuration menu for an input channel. (For maths channels see [section 4.3.11](#)). The actual fields that appear depend on what input type is selected, what linearisation type is selected, and so on.

The screenshot displays a configuration menu for 'Channel 1'. The settings are as follows:

- Channel Number: 1) Channel 1 (dropdown)
- Value: 6.6893 (text input)
- Input Type: Off (dropdown) → Off, Slave comms, Test, Master comms.
- Scaled:
- Scale Low: 0 (text input) V
- Scale High: 1 (text input) V
- Units: V (dropdown)
- Offset: 0 (text input) V
- Scale Type: Linear (dropdown) → Select: None, Linear or Log (Log available only if 'Scaled' is ticked.)
- Scale Divisions - Major: 10 (text input)
- Scale Divisions - Minor: 1 (text input) → These fields vary with the type of scale selected
- Descriptor: Channel 1 (text input)
- A/B Switching:  → Allows Span A high/low, Span B high/low, Zone A high/low, Zone B high/low and Colour A/B values to be entered for use by Trend jobs.
- Spanned:
- Span Low: 0 (text input) V
- Span High: 1 (text input) V
- Zone Low: 0 (text input) %
- Zone High: 100 (text input) %
- Pv Format: Numeric (dropdown) → Select Numeric or Scientific
- Max Decimal Digits: 4 (text input)
- Colour: 0 (text input)
- Alarm Number: 1 (dropdown) → Select Alarm number
- Enable: Unlatched (dropdown)
- Type: Absolute High (dropdown)
- Setpoint Source: Constant (dropdown)
- Threshold: 0 (text input) V
- Hysteresis: 0 (text input) V
- Dwell: 0 (text input) s
- Job Number: 1 (dropdown) → Select Job number
- Category: Batch (dropdown)
- Action: Start (dropdown)
- Group: 1) Group 1 (dropdown)
- On: Active (dropdown)

Annotations in the image:

- A bracket groups Scale Low, Scale High, and Units, stating: "These fields appear only if 'Scaled' is selected."
- A bracket groups Scale Divisions - Major and Scale Divisions - Minor, stating: "These fields vary with the type of scale selected"
- A bracket groups Span Low, Span High, Zone Low, and Zone High, stating: "These fields appear only if 'Spanned' is selected."
- A bracket groups Threshold, Hysteresis, and Dwell, stating: "These fields vary according to Alarm Type selection"
- A bracket groups Action and Group, stating: "These fields vary according to the selected job category"

Buttons: Apply, Discard

Figure 4.3.3a Channel/alarm configuration menu (typical)

#### Notes:

1. Numeric values (e.g. 'input low') can be up to 10 characters including decimal point
2. Refer to [section 3.3.1](#) for numeric and text entry techniques.

### 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

#### CHANNEL NUMBER

The current channel and its descriptor are displayed. Touching the window area allows another channel to be selected for configuration. Alternatively, the right and left arrow keys at the bottom of the screen can be used to increment and decrement, respectively, the channel number.

#### VALUE

Shows the current value of the channel.

#### INPUT TYPE

Select Off, Modbus Comms Input, EtherNet/IP Comms Input, Test or Master Comms as input type. Slave Comms must be selected if the channel is to be written-to via Modbus. Select 'Modbus Comms Input' if the channel is to be written to via Modbus. Use 'EtherNet/IP Comms Input' if the channel is to be written to by an EtherNet/IP client. Master Comms must be selected if this channel is to read from another instrument. See [section 4.3.16](#) for details of Master Comms, [section 4.3.21](#) for details of the EtherNet/IP option and [section 4.3.15](#) for Modbus Comms (Connections).

#### SCALED

This box allows the user to select low and high values and units for a scale. This box must be ticked if logarithmic scales are to be used.

#### SCALE LOW

Enter the scale value to correspond with input range low (e.g. 0).

#### SCALE HIGH

Enter the scale value to correspond with input range high (e.g. 100).

#### SCALE UNITS

Enter up to five characters of unit descriptor (e.g.%).

---

**Note:**

User [linearisation tables](#) units,

To set user linearisation table units to temperature units (°C for example), the Range Units selection box can be used.

To enter custom units, 'Scaled' must be selected. Scale low must be set to Range Low; Scale high must be set to Range High. The required Units string is entered in the Scale units text entry box.

---

#### OFFSET

Allows a fixed value to be added to or subtracted from the process variable. Recorder accuracy figures no longer apply if an offset is included.

#### SCALE TYPE

This field allows 'None', 'Linear' or 'Log' to be selected as scale type. For linear scales, the number of major/minor scale divisions can be selected. This does not affect the 'chart' grid divisions, which is set up as a part of Group configuration ([section 4.3.2](#)). Figures 4.3.3b1 and 4.3.3b2 show various examples.

#### NONE

Channels with Scale Type selected to 'None', appear with no scale information in any display mode.

#### LINEAR

Channels with Scale Type = Linear, appear with scale information in all display modes (except numeric). The number of major and minor divisions can be selected from subsequent fields. Examples are shown in figure 4.3.3b1.

### 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

#### SCALE TYPE (Cont.)

##### SCALE DIVISIONS - MAJOR

Appears for Linear Scale types only. Setting major divisions to 1, means that the scale consists only of 'zero' and full scale. Setting Major divisions to 2, means that the scale has divisions at zero, 50% and full scale, and so on. Intermediate scale values appear at major divisions if there is sufficient space. Default = 10 for large frame recorders or 5 for small frame units.

##### SCALE DIVISIONS - MINOR

Appears for Linear Scale types only. With minor divisions set to 1 (default), the scale major divisions are not divided i.e. no minor division tick marks appear. Setting Minor divisions to 2, means that each major scale division is divided into two, and so on. See figure 4.3.3b1 for an example showing five minor divisions.

#### LOG

For some input type selections, this appears only if 'Scaled' is ticked.

Channels with Scale Type = Log, appear with logarithmic scales. These scales have major divisions at each decade boundary, and (space permitting), minor divisions for mantissa values 2 to 9. Examples are shown in figure 4.3.3b1. Because of the nature of logarithms, neither negative values nor the value 0 can be used as scale 'zero'. Linear inputs are traced as exponential curves (figure 4.3.3b2).

#### LOG/LINEAR

For some input type selections, this appears only if 'Scaled' is ticked.

Channels with Scale Type = Log/Linear, appear with logarithmic scales. These scales have major divisions at each decade boundary, and (space permitting), minor divisions for mantissa values 2 to 9. Examples are shown in figure 4.3.3b1. Because of the nature of logarithms, neither negative values nor the value 0 can be used as scale 'zero'. Linear inputs are traced as straight lines (figure 4.3.3b2).

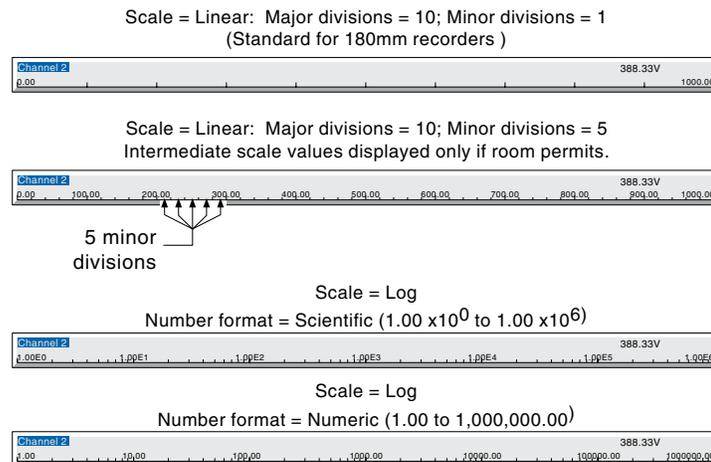


Figure 4.3.3b1 Scale type examples (large frame)

## 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

## SCALE TYPE (Cont.)

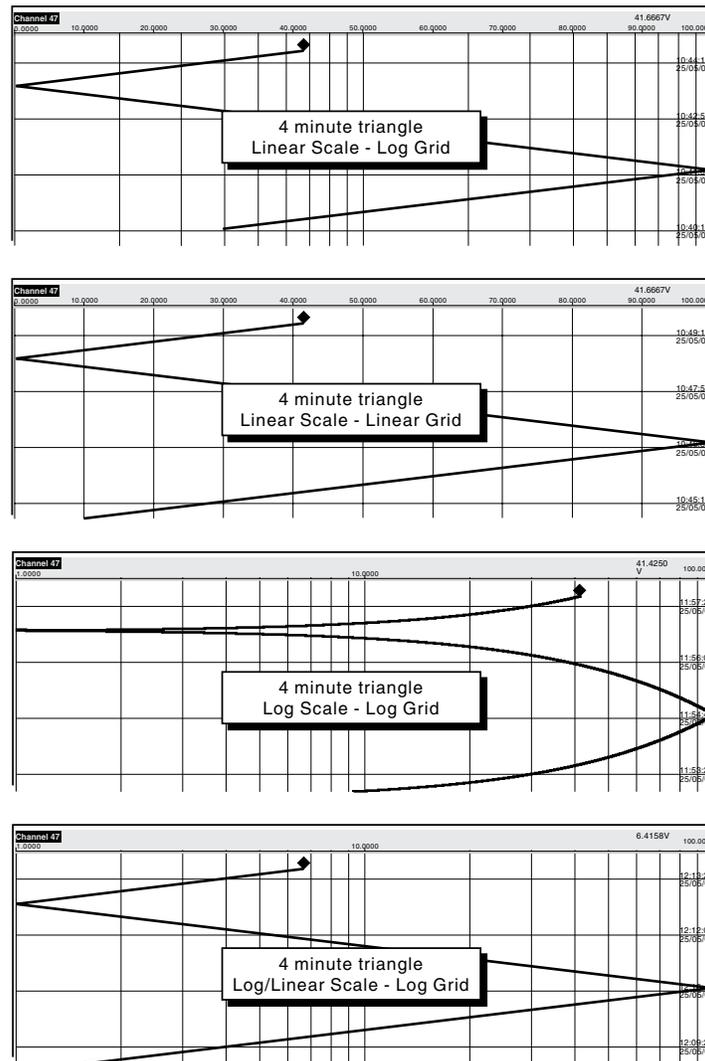


Figure 4.3.3b2 Trace examples for different scale types (large frame)

Note: Grid type is selected in [Group configuration](#). Grid (and chart text) colour is defined in 'Trend Foreground' in [System/Customisation configuration](#) (section 4.6.8).

### 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

#### DESCRIPTOR

Allows a text string of up to 30 characters (including spaces) to be entered for the channel descriptor (e.g. 'Turbine 2 tempA').

#### A/B SWITCHING

If enabled, this function allows alternative Span, Zone and Trace Colour values to be entered. 'A' values are used during normal operation. 'B' values are switched to by job action, as described in [section 4.7](#).

#### SPANNED

This box, when selected, allows span low and high values to be entered. For example, in an input range of 0 to 600 deg C, it may be that the temperature range between 500 and 600 degrees is of most interest. In such a case, setting span low to 500 and span high to 600 will cause the recorder to display only that part of the input range, and this will fill the zone width which is selected next, effectively magnifying the area of interest.

If A/B switching is enabled, a second set of span low and span high values can be entered. 'A' values are used during normal operation. 'B' values are switched to by job action, as described in [section 4.7](#).

#### ZONE

This allows the portion of the chart which the channel occupies to be defined in terms of percent, where the left edge of the chart is 0% and the right hand edge is 100%. For example, setting a low value of 50 and a high value of 100 causes the channel trace to be confined to the right hand half of the chart.

If A/B switching is enabled, a second set of zone low and zone high values can be entered. 'A' values are used during normal operation. 'B' values are switched to by job action, as described in [section 4.7](#).

#### PV FORMAT

This allows the PV value, alarm setpoints, hysteresis values etc. to be displayed as normal numeric values (Numeric) or in 'Scientific' format (Scientific). When 'Scientific' is selected, values are displayed and entered as a decimal number between 1 and 10<sup>†</sup> (the mantissa), followed by a multiplier (the exponent). E.G. to enter a value of 1244.5678, the value entered would be 1.2445678E3, where 3 represents the number of places that the decimal point has been shifted to the left in order to convert the value to a number between 1 and 10<sup>†</sup>. To enter a value of 0.0004196, the entry would be 4.196E-4.

---

#### † Notes

1. Strictly this is a number less than 10, as 10 would be 1.0E1.
  2. There must be at least one number after the decimal point.
- 

#### MAXIMUM DECIMAL DIGITS

This defines the number of decimal places in the process value. Settable between zero and nine. Leading and trailing zeros are not displayed. Values too long for the available displaying width are truncated as described in [section 3](#).

#### COLOUR

Allows the trace colour to be selected from a colour chart. Each of the 56 available colours is displayed with a number, and it is this number which is entered. The background colour to the selection box changes to the selected colour.

If A/B switching is enabled, a second colour selection can be entered. Colour 'A' is used during normal operation. Colour 'B' is switched to by job action, as described in [section 4.7](#).

#### ALARM NUMBER

Allows an alarm to be selected for configuration.

### 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

#### ENABLE

Allows the alarm to be defined as Off, Unlatched, Latched or Trigger.

Off	Alarm is disabled and the remainder of the alarm configuration is hidden.
Unlatched	Unlatched alarms become active when the trigger source becomes active and remain active until the source returns to a non-active state. The indicator is on (flashing before acknowledgment - steady after acknowledgement) until the alarm clears. Alarm messages are printed if enabled in group configuration.
Latched	Latched alarms become active when the trigger source becomes active and remain active until the alarm is acknowledged AND the trigger source has returned to a non-active state. The indicator is on (flashing before acknowledgment - steady after acknowledgement) until the alarm has been acknowledged AND the trigger source has returned to a non-active state. Alarm messages are printed if enabled in group configuration. Continuous jobs remain active only whilst the alarm trigger source is active. I.E. the job finishes when the alarm clears, whether acknowledged or not.
Trigger	When triggered all associated jobs are initiated, and continuous jobs remain active until the alarm clears. There is no alarm indication, and no messages are printed.

#### TYPE

This field appears only when the alarm Enable is not selected Off. Each alarm can be defined as absolute high, absolute low, deviation-in, deviation-out, rate-of-change rise or rate-of-change fall.

Absolute High	As shown in figure 4.3.3d, an absolute high alarm becomes active when the channel value exceeds the threshold value. The alarm remains active until the channel value falls below (Threshold minus hysteresis). If a dwell value is defined, the alarm does not become effective until this dwell time has been exceeded.
Absolute Low	As shown in figure 4.3.3d, an absolute low alarm becomes active when the channel value falls below the threshold value. The alarm remains active until the channel value exceeds (Threshold + hysteresis). If a dwell value is defined, the alarm does not become effective until this dwell time has been exceeded.
Deviation in	As shown in figure 4.3.3e, a deviation-in alarm becomes active whenever the channel value enters the band: Reference $\pm$ Deviation. It remains active until the channel value leaves the band: Reference $\pm$ (Deviation+ Hysteresis). If a dwell value is defined, the alarm does not become effective until this dwell time has been exceeded.
Deviation out	As shown in figure 4.3.3e, a deviation-out alarm is active whenever the channel value leaves the band Reference $\pm$ Deviation. It remains active until the channel value enters the band: Reference $\pm$ (Deviation - Hysteresis). If a dwell value is defined, the alarm does not become effective until this dwell time has been exceeded.
Rate of change	As shown in figure 4.3.3f, rate of change alarms become active whenever the signal value changes by more than a specified amount within a specified period. If a dwell value is defined, the alarm does not become effective until this dwell time has been exceeded. An averaging period can be set to remove the effects of sudden, but short-lived changes, such as noise spikes on the signal.

---

Note: Alarm icons appear at the display, as described in section 3.

---

#### SETPOINT SOURCE

Allows the user to choose either a fixed, user-defined value (constant) or the value of another point (input channel, maths channel, totaliser etc.) to be chosen as the trigger point. In the latter it is possible, for example, to trigger an alarm, when one channel's value rises above, falls below etc. the value of a second channel.

### 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

#### PARAMETERS

Figures 4.3.3d, e and f illustrate the following terms for the different alarm types.

Threshold	For Absolute alarms, this defines the value (in engineering units) at which an alarm is triggered. The alarm also returns to its non-active state at this value (unless a hysteresis value has been set). If a dwell value is set, the alarm does not become active until this dwell time has elapsed.
Hysteresis	Defines a 'deadband' (in engineering units) to eliminate spurious triggering if the signal value is hovering around the trigger point. The deadband lies: Below Absolute High thresholds Above Absolute Low thresholds Outside the deviation band for Deviation-in alarms Inside the deviation band for Deviation-out alarms.
Dwell	Allows a dwell period to be entered in seconds. The alarm does not take effect until this period has expired. If an alarm clears before the dwell period has expired, the alarm is ignored.
Reference	For Deviation alarms, this is the central value of the deviation band.
Deviation	For Deviation alarms, this value defines the width of the deviation band, each side of the reference value. I.E. the total width of the deviation band is 2 x Deviation value.
Amount	For Rate-of-change alarms, this value defines the minimum amount by which the signal value would have to change, within the 'Change Time' period (below), in order for the alarm to become active.
Change Time	For Rate-of-change alarms, this selects the time period (Per second, Per minute, Per hour) within which the change in signal value must exceed the Amount value (entered in the preceding field) in order for the alarm to become active. See Rate-of-Change example below for more details.
Average time	For rate-of-change alarms, this allows an average period to be entered for signal smoothing.

#### HYSTERESIS EXAMPLE

Threshold = 100 units; Hysteresis = 5 units

With the above settings, an absolute high alarm would become active if its input were to rise above 100 and would remain active until its value fell to below 95 units. An absolute low alarm would become active if its input fell below 100 units, and would remain active until its input rose above 105 units. Deviation alarms behave in a similar manner.

#### RATE-OF CHANGE ALARM EXAMPLE

Rate-of-change alarms allow the user to enter an 'amount' (say 3 degrees) and a time period (say 1 minute), and if the process value changes by the specified amount or more, within the specified time period (more than 3 degrees in a minute in this example), then the alarm becomes active.

The recorder uses its iteration rate of 125 msec (1/8th second) as the time base for its calculations. For our example, 3 degrees per minute equates to 3/60 degrees per second or  $3/(60 \times 8) = 0.00625$  degrees per iteration. If a change greater than this is detected, then the alarm becomes active.

In order to reduce sensitivity, an averaging period can be configured. This means that an average of all the 1/8th second samples is taken over the specified period, and the alarm becomes active only if the average value exceeds the specified rate of change.

Configuring a dwell time can also reduce 'jitter' because, if during the specified dwell time, any one sample is non active, then the elapsed dwell time is reset to zero. The alarm becomes active only after the dwell time has elapsed i.e. only if the rate of change has been exceeded for every software cycle throughout the specified dwell time.

4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

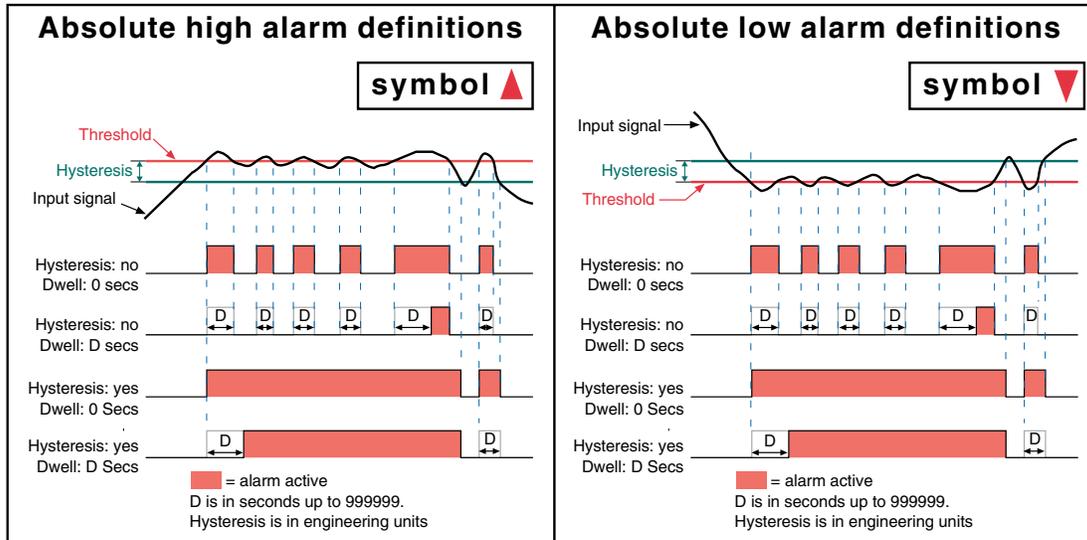


Figure 4.3.3d Absolute alarm definitions

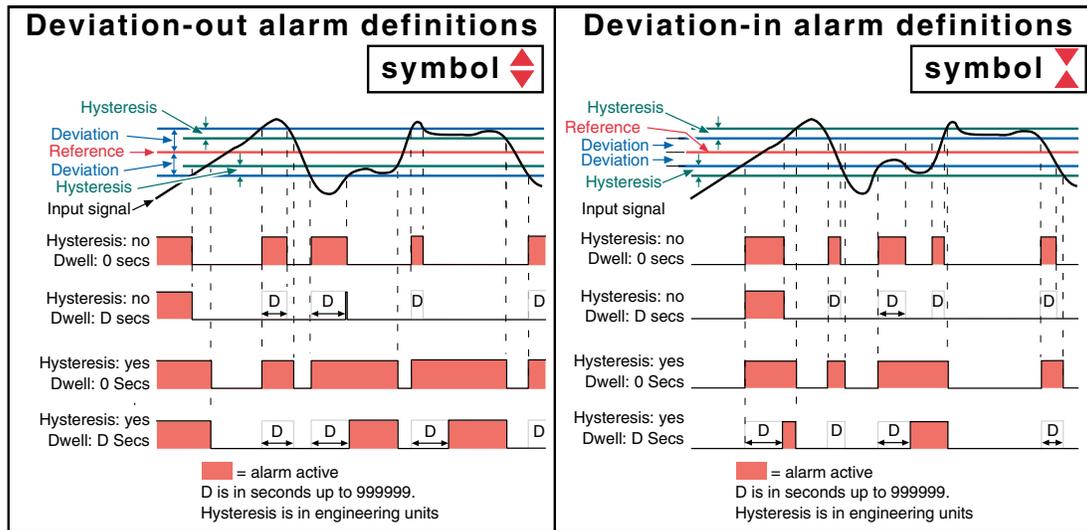


Figure 4.3.3e Deviation alarm definitions

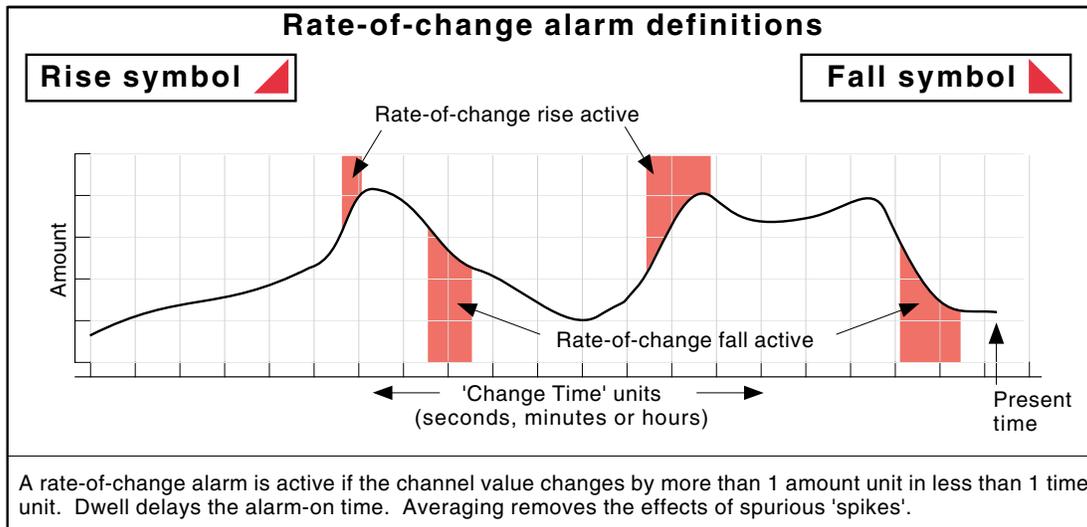


Figure 4.3.3f Rate-of-change alarm definitions

### 4.3.3 CHANNEL/ALARM CONFIGURATION (Cont.)

#### JOB NUMBER

Select the required job number.

#### CATEGORY

Select the required job to be carried out when the channel is in alarm (e.g. send email) See [section 4.7](#) for a description of job categories.

#### WHILE/ON

Allows the action of the alarm job to be chosen as

- while active, while inactive or while unacknowledged for continuous jobs (e.g. speed/interval B), or,
- on going active, on going inactive or on acknowledgement for 'one-shot' jobs (e.g. increment counter).

Figure 4.3.3g, below, shows the various actions graphically. For 'While unacknowledged' and 'on acknowledgement' settings, two cases are shown, one where the alarm goes inactive before acknowledgement; the other where the alarm is acknowledged whilst the alarm is still active. The coloured (shaded) areas show the duration for which continuous jobs run; the down arrows show trigger points for 'one-shot' jobs. See [section 3.1.4](#) for details on how to acknowledge alarms.

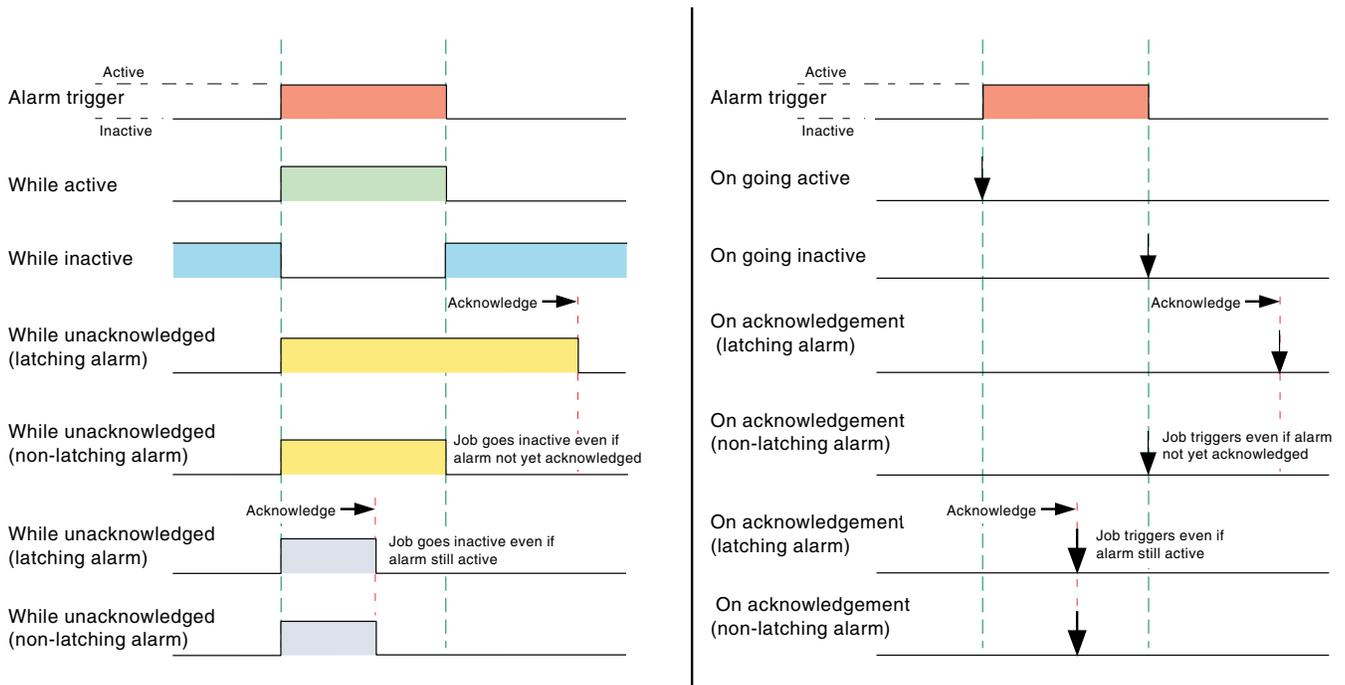


Figure 4.3.3g Graphical representation of job actions

#### ALARM MESSAGES

Alarm on/off and alarm acknowledge message printing on the chart can be enabled/disabled as a part of 'Group configuration' described above. See [section 3.1.4](#) for details on how to acknowledge alarms.

### 4.3.4 Views Configuration

This part of the recorder's configuration allows groups to be set up (either individually, or globally) to include the various display modes described in [section 3.4](#), above, and user screens (if fitted). When enabled, a display mode is added to the Group's 'Goto View' menu and to the up/down arrow scroll list.

Home Group and Home Page picklists allow a group and display mode to be defined for display when the Home key is pressed in the [Root](#) menu.

The screenshot shows the Views Configuration menu with the following settings:

- Group Cycling Interval: 0 s
- Home Time-out: 0 Minutes
- Home Group: 1) Group 1 (dropdown)
- Scope: Group (dropdown)
- Group: 1) Group 1 (dropdown)
- Display Enable:
- Home Page: Circular Trend (dropdown)
- Vertical Trend:
- Horizontal Trend:
- Circular Trend:
- Vertical Bargraph:
- Horizontal Bargraph:
- Numeric Page:
- User Screen 1:
- User Screen 2:
- User Screen 3:
- User Screen 4:
- User Screen 23:
- User Screen 24:
- Bridge User Screens: 0

Annotations in the image:

- A box on the left states: "These fields appear only if Scope = 'Group'", pointing to the Home Group, Scope, and Group dropdowns.
- Arrows point from the Home Group, Scope, and Group dropdowns to the text: "Select group for Home display", "Select Instrument or Group", and "Select group for display mode enable" respectively.
- An arrow points from the Home Page dropdown to the text: "Select Home display mode for instrument or for selected group".
- A box indicates: "✓ = Enabled".
- A box at the bottom right states: "User screens appear only if the Screen Builder option (Section 7) is fitted. Bridge user screens are accessible only from a remote PC which has Bridge software installed and running.".

Buttons at the bottom: Apply, Discard.

Figure 4.3.4a Views Configuration menu

#### GROUP CYCLING INTERVAL

When enabled (set to a value between 10 and 99 seconds), groups will automatically cycle when a group view is selected for display, pausing for the set number of seconds before moving onto the next group. Disable by setting this to zero.

#### HOME TIMEOUT

The recorder returns to the specified home page after the timeout value of minutes has elapsed since the last touch on the display. Timeout action is inhibited if a configuration is incomplete (there are changes which have not been 'Applied'), or if a system-generated message (e.g. 'Clock Failure') is on display. User displays (e.g. Root menu) are timed-out after approximately 50 seconds.

A value of zero disables the time-out function. Valid entries are between 1 and 99 minutes.

#### HOME GROUP

This picklist allows a particular group to be selected for display when the root menu 'Home' key is pressed.

### 4.3.4 VIEWS CONFIGURATION (Cont.)

#### SCOPE

The remaining items of Views configuration can be selected to act globally (Instrument) or to act on individual groups (Group). When 'Instrument' is selected, enabled display modes appear in all groups' up/down arrow scroll lists and are active in the Root Menu 'Goto View' menu (figure 4.3.4b). When 'Group' is selected, each group can be set up with individual display mode lists. For the particular group on display, the up and down arrow keys can be used to scroll through the enabled display modes, or a particular mode can be selected using the 'Goto View' menu.

#### GROUP

This field appears only if 'Scope' is set to 'Group', and allows each group to be selected for display configuration. For other items of Group configuration, see [Section 4.3.2](#).

#### DISPLAY ENABLE

This field appears only if 'Scope' is set to 'Group', and allows the selected group to be enabled or disabled for display. When enabled, the group can be displayed either by using the 'Root menu/Goto screens/Group N' selection (figure 4.3.4b) or can be scrolled-to using the right/left arrow keys. When disabled, the group is 'greyed' in the 'Root menu/Goto screens/Group N' selection and is skipped when using the right/left arrow keys. It is not possible to disable the Home group.

#### HOME PAGE

Allows a particular display mode to be selected as the default display, either for all groups (Scope = instrument) or on a group-by-group basis (Scope = group).

#### DISPLAY MODE ENABLING

A series of tick boxes allow the various display modes to be added to (or removed from) the up/down arrow scroll list and to be activated/deactivated in the Root menu 'Goto View' menu, either for all groups (Scope = instrument) or on a group-by-group basis (Scope = group). It is not possible to disable the selected Home page mode.

---

**Note:** If Circular Trend view is enabled here in Views configuration, but the 'Circular settings' checkbox is not enabled in Group configuration ([section 4.3.2](#)), then, although the circular chart will appear, it will not contain any trends.

---

#### 4.3.4 VIEWS CONFIGURATION (Cont.)

##### USER SCREENS 1 TO N

This field appears only for recorders with the Screen Builder option (fully described in [section 7](#)). Up to 24 user screens can be included in the up/down arrow scroll list and to be active in the Root menu 'Goto View' menu (figure 4.3.4b).

In addition to the 24 screens accessible from the recorder display, up to 100 extra screens, which can be accessed only by using Bridge 'Full' software, can be specified. The number selected should be kept to the minimum necessary, in order to reduce the number of 'Goto View' 'More...' displays. Once created a Bridge screen can be copied to one or more recorder screens 1 to 24 if required, making it accessible from the recorder.

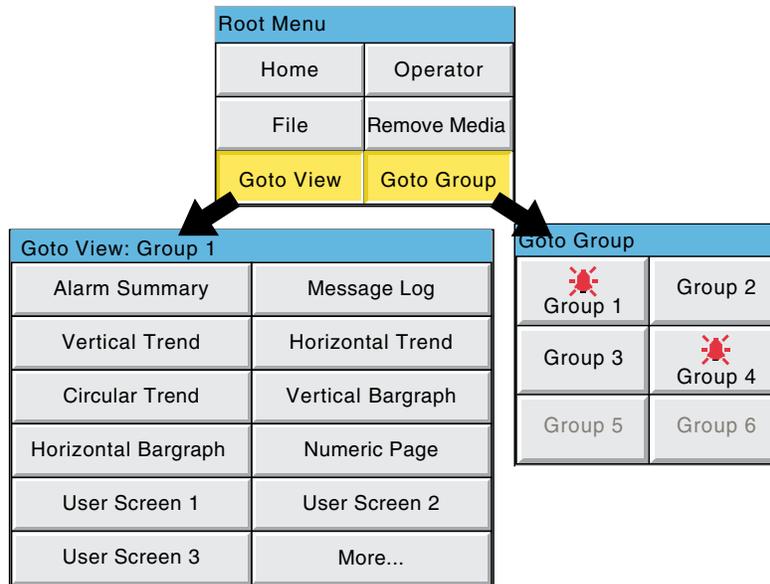


Figure 4.3.4b Goto View and Goto Group submenus

### 4.3.5 Archive configuration

#### Notes:

1. For the sake of brevity, the phrase 'memory device' is used for whatever mass-storage medium is fitted to the recorder (integral or via a USB port).
2. CSV format files are not as secure as Packed Binary format files.

This allows an archive strategy to be set up for saving data to a local memory device or to a remote PC. The local strategy includes archive period, memory device full operation, compression factor and an estimate of the maximum-time-to-next-archive to avoid data being overwritten in memory (Duration).

The recorder uses a dedicated area of its Flash memory as an archive data buffer, which means that data is written to the memory device or remote PC only when required, rather than continuously.

In order to carry out a successful remote archive, details of the remote host must be entered both in this Archive section of the 'Config' menu, and in Network configuration ([section 4.5](#)). Further, the current access level must have 'Connect from remote' enabled in the Security/Access menu ([section 4.4.1](#)).

Compression **Normal** ▼ → Select: Normal or High  
 Flash Size **99.25** Mb  
 Shortest Trend History **Group 1**  
 Duration **108.6** Days  
 Show **Local settings** ▼ → Select Local or Remote settings  
 Media **mediacard** ▼ → Select Media card or USB port  
 Archive to Media **Automatic** ▼ → Select archive frequency  
 Archiving **Hourly** ← Appears only for 'Automatic'  
 Media file format **Binary** ▼ → Select Binary and/or CSV  
 On Media Full **Overwrite** ▼ → Select: Overwrite or Stop  
 Media Size **30.4746094** Mb  
 Removable Media Capacity **33.18** Days  
 Media Full event limit **100** %  
 Apply Discard

Figure 4.3.5a Archive configuration menu (Local settings)

Compression **Normal** ▼ → Select: Normal or High  
 Flash Size **99.25** Mb  
 Shortest Trend History **Group 1**  
 Duration **108.06** Days  
 Show **Remote settings** ▼  
 Archive to Remote **None** ▼ → Select archive interval  
 Ftp File format **Binary** ▼ → Select Binary and/or CSV  
 Remote path **/recorder/Group 1**  
 Primary remote host **0.0.0.0**  
 Primary login name **anonymous**  
 Primary password **\*\*\*\*\***  
 Retype password **\*\*\*\*\***  
 Secondary remote host **0.0.0.0**  
 Secondary login name **anonymous**  
 Secondary password **\*\*\*\*\***  
 Retype password **\*\*\*\*\***  
 Apply Discard

Figure 4.3.5b Archive configuration menu (Remote settings)

### 4.3.5 ARCHIVE CONFIGURATION (Cont.)

#### COMPRESSION

Select Normal or High compression. 'Normal' compresses the data but still provides an exact copy. 'High' compresses more, but channel values are saved only to 1 part in  $10^8$  resolution. This field does not appear if 'CSV' is selected as file format (see below).

**Note:** Where very high values are involved (e.g. some totaliser values) 'High' compression may cause the value displayed by the recorder, and held in the history file, to be incorrect. This problem may be solved by moving the relevant point to a group using 'Normal' compression, or by re-scaling the totaliser to read (for example) TeraWatt hours instead of Megawatt hours.

#### FLASH SIZE

Allows the size of the internal flash memory to be viewed by the user.

#### SHORTEST TREND HISTORY / DURATION

This shows which group has the shortest amount of Flash memory allocated to its history record. Providing the archive period is less than the value displayed in the Duration window, no data will be lost from any group. If the archive period is greater than this value, then some of the data in one or more groups will have been overwritten and therefore lost.

If there is more than one group with the same Shortest Trend History Duration, the group with the lowest number is displayed. (E.G. If groups two and four both have the same duration, 'Group 2' will appear in this window.)

**Note:** Trend history duration depends on many factors, as described in Group Configuration (section 4.3.2) above.

#### CSV CHECK BOXES, DATE/TIME FORMAT

These appear only if the 'Media File Format' or 'FTP file format' are set to either 'CSV' or 'Binary and CSV'. Refer to 'CSV Files' at the end of this subsection (4.3.5).

#### SHOW

This allows the fields which are to appear below 'Show' to be applicable to the local memory device (Local Settings), or to the setting up of a remote host path for archiving purposes (Remote settings). The following descriptions contain all the fields which may appear in either menu.

#### MEDIA

For 'Local' setting only

For standard recorders, this allows 'mediacard' or 'usbfront' to be selected as the local archive destination. The USB port supports floppy disk drives and 'memory sticks'.

#### ARCHIVE TO MEDIA

For 'Local' setting only:

None	Archive must be initiated by the operator (section 4.1)	If the recorder has been powered down prior to archive time, the archive takes place the next time the unit is powered up.
Hourly	Archive occurs on the hour every hour	
Daily	Archive occurs at 00:00* hrs each day	
Weekly	Archive occurs at 00:00* hrs every Monday	
Monthly	Archive occurs at 00:00* hrs on the 1st of each month	
Automatic	The recorder selects the least frequent archive period (Hourly, Daily, Weekly, Monthly), which is guaranteed not to lose data as a result of either the internal Flash, or the local memory device, running out of space (calculated assuming that the memory device is initially 'empty'). When Automatic is selected, a further, non-editable menu item appears, showing which of the archive frequencies has been selected.	

**\*Note:** Archive times are not adjusted for Daylight Saving hour changes. Thus if the archive is set to 'daily', 'weekly' or 'monthly' then, during 'Summer Time', the archive will occur an hour late (i.e. at 01:00 hrs. instead of midnight).

### 4.3.5 ARCHIVE CONFIGURATION (Cont.)

#### MEDIA FILE FORMAT/FTP FILE FORMAT

Allows 'Binary' (.uhh) files, 'CSV' (.csv) files or 'Binary and CSV' to be chosen for FTP transfer. For further details of CVS archiving, see description at the end of this subsection (4.3.5).

#### ON MEDIA FULL

For 'Local' setting only:

Overwrite	Oldest data is replaced with latest data when storage medium is full.
Stop	Archiving stops when the storage medium is full.

---

Note: When in 'Overwrite' mode, the recorder will overwrite only those files which it has itself created. Thus, if a storage medium is inserted which contains history files from another recorder, these cannot be overwritten. The file names are of the form UUU...UUUIIIIIIFFGSSSSSS, where IIIIII represent the lowest three bytes of MAC address of the recorder which created the file (see [section 4.5.1](#)). It is not possible for the user to delete files created by another instrument (i.e. one with a different MAC address).

---

#### MEDIA SIZE

For 'Local' setting only, this displays the capacity of the memory device.

#### REMOVABLE MEDIA CAPACITY

For 'Local' setting only, this gives an estimated time to fill the archive medium, based on the archive rate, the compression ratio, the storage medium size and on the exact nature of the data. (Rapidly changing values use more space than static/slowly changing values.) When archiving to Floppy disks (via USB port), this field remains empty until after the first archive has taken place.

#### MEDIA FULL EVENT LIMIT

For 'Local' setting only, this allows the user to specify a percentage-full value for the storage medium, at which the event source 'Archive media % full' is triggered. The event remains active until the storage medium is replaced, or has data removed from it to make more room available.

#### ARCHIVE TO REMOTE

For 'Remote' setting only:

None	Archive to host is initiated by the operator ( <a href="#">section 4.1.2</a> )
Hourly	Archive to host occurs on the hour every hour
Daily	Archive to host occurs at 00:00* hrs each day
Weekly	Archive to host occurs at 00:00* hrs every Monday
Monthly	Archive to host occurs at 00:00* hrs on the 1st of each month
Automatic	The recorder selects the slowest out of 'Hourly', Daily, Weekly or Monthly, which is guaranteed not to lose data (depends on the size of the Trend History Buffer).

---

\*Note: Archive times are not adjusted for Daylight Saving hour changes. Thus if the archive is set to 'daily', 'weekly' or 'monthly' then, during 'Summer Time', the archive will occur an hour late (i.e. at 01:00 hrs. instead of midnight).

---

#### REMOTE PATH

For Remote setting only, this specifies the route to a folder or directory on the remote host, set up as a part of that host's FTP configuration. The path name may be up to 103 characters in length.

### 4.3.5 ARCHIVE CONFIGURATION (Cont.)

#### PRIMARY REMOTE HOST

For 'Remote' setting only:

If a Domain Name Server (DNS) is specified in the Network key 'Name' page (fig 4.5.2), then the Primary Remote Host is the server name. If DNS is not selected, then the Primary Remote Host is the IP address of the remote host, set up in the host's Control Panel\Network.

#### PRIMARY LOGIN NAME/PASSWORD

For 'Remote' setting only:

Login name and password of the remote host account assigned either by the Network administrator, or in the Guest account of the remote host's FTP Server or User Manager configuration. The password, which must be of between eight and 20 characters, must be entered twice to ensure integrity.

#### SECONDARY REMOTE HOST/LOGIN/PASSWORD

For 'Remote' setting only:

As for primary versions, but for a secondary host. The secondary route is used only if the primary route fails.

#### CSV FILES

This allows archive files to be transferred in comma-separated-values (CSV) format, to a memory device or, via FTP, to a remote host computer.

The screenshot shows a configuration window for CSV archive settings. The items are as follows:

- Compression: Normal (dropdown) → Binary format only
- Flash Size: 99.25 Mb
- Shortest Trend History: Group 1
- Duration: 108.86 Days
- CSV include Values:
- CSV include Messages:
- CSV include Header details:
- CSV include Column headings:
- CSV Date/Time format: Text (dropdown)
- CSV use Tab delimiter:
- Show: Local settings (dropdown)
- Archive to Media: None (dropdown)
- Media file format: Binary and CSV (dropdown)
- On Media Full: Overwrite (dropdown)
- Media Size: 30.4746094 Mb
- Disk Archive Capacity: 33.18 Days
- Media Full event limit: 100 %

At the bottom of the window are two buttons: 'Apply' and 'Discard'.

Figure 4.3.5c CSV archive menu items

#### MEDIA FILE FORMAT

For Local Settings only, this allows 'Binary', 'CSV' or both to be selected for file type when archiving. 'Binary' is the proprietary format used by the instrument and it requires other software (e.g. Review Software) to interpret the data, before it can be presented in spreadsheets, shown as if on a chart etc. Binary files have the extension '.uhh'.

CSV format is a standard open-file format for numeric data. A simple ASCII-based format, it is readable by a wide range of PC applications as well as being suitable for direct import into many commercial databases. CSV files have the extension '.csv'.

**Note:** CSV is ASCII based, and cannot interpret Unicode characters. Some characters available to the user will therefore be displayed incorrectly in CSV files.

### 4.3.5 ARCHIVE CONFIGURATION (Cont.)

#### MEDIA FILE FORMAT (Cont.)

If 'CSV' or 'Binary and CSV' is selected, a number of extra check boxes appear. Figure 4.3.5c above, shows a typical menu page. Figure 4.3.5d below, shows the effects of enabling the CSV check boxes, with the exception of 'CSV use Tab delimiter' the use of which is as follows:

#### CSV USE TAB DELIMITER

Despite its name, CSV does not always use commas as separators.

For example, in some countries, the decimal point is represented by a full stop (period), whilst in other areas, a comma is used. In order to avoid confusion between the comma as a decimal point and the comma as a separator, a different separator is used, usually the semicolon.

The instrument automatically chooses a separator suitable for use with the 'Locale' selected in System Configuration ([section 4.6.2](#)). 'CSV Use Tab delimiter' allows the user to override this choice, and force the instrument to use tabs as separators. This can be particularly useful when moving the data from one locale to another.

#### CSV DATE/TIME FORMAT

Allows 'Text' or Spreadsheet numeric to be selected. Text causes a time/date to appear in the spreadsheet. Spreadsheet numeric displays the number of days since December 30th 1899. The decimal part of the value represents the latest 6 hours, so DDD---DDD.25 represents 0600 hrs, DDD---DDD.5 represents noon etc. Numeric format is more easily interpretable by some spreadsheets than Text format is.

Click/drag separator to edit field width

A1	B	C	D	E	F	G	H	I	J	K	L	M	N	O
Instrument Name=	Distil temp	Serial Numl	9921	Software V4.0	Timezone=GMT									
Mac Addr=	00:AB:8D:80:26:C0	Language=en		Country=	GB									
Group Nar	Tank Tem													
Tank1 Ten Low=		0 High=	40 -C											
Tank1 Ten Low=		0 High=	40 -C											
Tank1 Ten Low=		0 High=	40 Deg C											
Tank2 Ten Low=		0 High=	40 Deg C											
Tank2 Ten Low=		0 High=	40 Deg C											
Tank2 Ten Low=		0 High=	40 Deg C											
Difference Low=		-20 High=	+20 Deg C											
Date/Time	Tank1 Ten	Tank1 Ten	Tank1 Ten	Tank2 Ten	Tank2 Ten	Tank2 Ten	Tank2 Ten	Ten	Difference					
-C	-C	Deg C	Deg C	Deg C	Deg C	Deg C	Deg C	Deg C	Deg C					
09.39.0	23.49	23.74	24.01	31.2334	29.7693	30.0983	30.0983	6.61						
09.44.0	23.53	23.70	23.88	30.6458	29.0673	29.9083	29.9083	6.13						
09.49.0	23.57	23.68	23.91	30.0945	28.8936	29.9083	29.9083	5.91						
09.54.0	23.50	23.69	23.99	31.1437	29.4387	30.0235	30.0235	6.47						
09.11/07/06	14:09:54	Alarm off												
End of Archive														

Right click, then:  
Format cells...  
Select 'Time' as number category  
Select time/date 'Type' as required

Figure 4.3.5d CSV data example

#### FTP FILE FORMAT

The above description for 'Media file format' also applies to 'Remote' setting.

### 4.3.6 Event configuration

A number of internal and triggers are available for use in initiating Events which will then run job lists. Events can have up to two sources each, but can themselves be used as sources allowing a large number of inputs to be used. Input sources can be logically combined, and can be inverted if required.

The screenshot shows the Event configuration menu with the following fields and options:

- Event Number: 1) Event 1 (Select 1 to 96)
- Source 1: Alarm on Group (Select source 1)
- On Group: 1) Group 1 (Make source 1 sub selection (if any))
- Source 2: Point Alarm (Select source 2)
- On: Math 12 (Make source 2 sub selection (if any))
- Alarm: 2 (Make sub-sub selection (if any))
- Source 1 Sense: Source 1 (Select source inversion or not)
- Operator: And (Select logic combination: Only, AND, OR, NAND, NOR, XOR)
- Source 2 Sense: Not Source 2 (Select source inversion or not)
- Descriptor: Event 1
- Job Number: 1 (Select job number)
- Category: No Action (Select Job Category)

Buttons: Apply, Discard

Figure 4.3.6 Event configuration menu layout (typical)

#### EVENT NUMBER

Allows the required event (1 to 96) to be selected for configuration.

#### SOURCE TYPES

**Note:** Event sources associated with options appear only if those options are fitted.

Off	The event is disabled
Global alarm	The event is active whilst any one or more alarms is active.
Global Unack'd alarm	The event is active as long as there is an unacknowledged alarm present.
Comms channel timeout	The event is set if no communication has been made with 'Comms' channels within the Comms channel timeout period set in Instrument configuration ( <a href="#">section 4.3.1</a> ). The source is reset when the next communication occurs.
Timer active	The event is triggered when a specified timer ( <a href="#">section 4.3.14</a> ) becomes active.
Batch Running*	The event is triggered when a batch is started and remains active until the batch stops. If Scope = 'Group' in Batch configuration ( <a href="#">section 4.3.10</a> ) then a group can be specified. If Scope = 'Instrument', the group select field does not appear. If the Batch option is not fitted, 'Batch running' does not appear in the picklist.
Batch Start*	The event is triggered, fleetingly, when a batch is started. If Scope = 'Group' in Batch configuration ( <a href="#">section 4.3.10</a> ) then a group can be specified. If Scope = 'Instrument', the group select field does not appear. If the Batch option is not fitted, 'Batch running' does not appear in the picklist.
Event	Allows another event to be specified as a source.
Point alarm	Triggered by the specified alarm on the specified point.
Unack'd point alarm	Triggered by the specified alarm on the specified point. Remains active until the alarm is acknowledged ( <a href="#">section 3.1.4</a> ).
Alarm on Group	Triggered if any alarm in the specified group becomes active.

(Continued)

\* Batch stop also available - see below.

### 4.3.6 EVENT CONFIGURATION (Cont.)

#### EVENT SOURCES (CONT.)

Unack'd Alarm on Group	Triggered if any alarm in the specified group becomes active. The event remains active until the alarm is acknowledged.
Instrument alarm	This source triggers an event if any of the following becomes active: Any, Input channel failure, Removable media failure, Removable media full, No removable media fitted, FTP primary server failure, FTP secondary server failure, Maths channel failure, Clock failure, Unrecognised PCCard, Recording failure - overflow, Network not found, SNTP server failure, Time synchronisation failure, Battery backed RAM cleared. See <a href="#">section 3.1.3</a> for Instrument alarm details. The event remains active until the instrument alarm clears.
Power up	A transient event is triggered at power up.
Maths channel partial failure	For recorders fitted with Maths channels ( <a href="#">section 4.3.11</a> ), this event is set if, say, one of the inputs to a group averaging function becomes invalid. In such a case, the average will be calculated on the remaining input values, but the result may not be as accurate as expected. Loss of one input can also be important in functions such as Fvalue, where several sensors may be distributed within the load and their outputs used in a group minimum calculation for input into the Fvalue equation.
Battery Low	This event is set when the battery is reaching the end of its useful life. The event remains active until the battery is replaced (see <a href="#">Annex B</a> for details).
Archive media % full	Triggered when the archive medium has reached the % fullness defined in Archive configuration ( <a href="#">section 4.3.5</a> ).
Invalid Password Entry	Transient event at the point of an invalid password entry attempt
User Login Account Disabled	Transient event at the point when an account is disabled because the number of password re-tries has been exceeded ( <a href="#">Section 4.4.2</a> ). Available only if the Auditor 21CFR11 option is fitted.
User Logged In	This event becomes active whenever a user with the specified Event Permission logs in. The event remains active until all local and remote users, with the specified permission, have logged out. See also <a href="#">section 4.4.1</a> (Access levels).
Event Button	Allows the operation of an event button(if Screen Builder option fitted - <a href="#">section 7</a> ) to be used as an event source. See <a href="#">section 4.3.7</a> for Event Button details.
Master Comms Slave Failure	If the Master Comms option is fitted, this event source allows either a communications failure with a specifiable remote device, or communications failure with 'Any' connected remote device to be used as an event source. See <a href="#">section 4.3.16</a> for more details.
Email Failure	Triggered if an attempt to send an e-mail ( <a href="#">section 4.3.19</a> ) is unsuccessful.
Batch Stop	The event is triggered, fleetingly, when a batch is stopped. If Scope = 'Group' in Batch configuration ( <a href="#">section 4.3.10</a> ) then a group can be specified. If Scope = 'Instrument', the group select field does not appear. If the Batch option is not fitted, 'Batch Stop' does not appear in the picklist.

#### SOURCE 1 SENSE

Allows source 1 to be used in its normal sense (Select 'Source 1') or inverted (Select 'Not Source 1').

Example: Source 1 is alarm 1 on channel 3

With Source 1 Sense = Source 1, the event is active whenever channel 3 alarm 1 is active.

With Source 1 Sense = Not Source 1, the event is active whenever the alarm is not active.

### 4.3.6 EVENT CONFIGURATION (Cont.)

#### OPERATOR

This allows a logical combination of input sources to be used to trigger an event. The selections and their definitions are shown in table 4.3.6, below.

Operator	Event active when:	Event not active when:
Only	S1 Active	S1 not active
AND	S1 and S2 both active	S1 and/or S2 not active
OR	S1 and/or S2 active	S1 and S2 both not active
NAND	S1 and/or S2 not active	S1 and S2 both active
NOR	S1 and S2 both not active	S1 and/or S2 both active
XOR	S1 or S2 active	S1 and S2 both active or both not active
S1 = Source 1; S2 = Source 2		

Table 4.3.6 Logical operators for event sources

#### SOURCE 2 SENSE

Allows source 2 to be used in its normal sense (Select 'Source 2') or inverted (Select 'Not Source 2').

Example: Source 2 is Group 1 Batch Running

With Source 2 Sense = Source 2, the event is active whilst the batch is running.

With Source 2 Sense = Not Source 2, the event is active whilst the batch is not running.

#### DESCRIPTOR

Allows a text string to be entered as the event title. See [section 3.3.1](#) for text entry techniques.

#### JOB NUMBER

Select the required job number for this event.

#### CATEGORY

Select the required job to be carried out when the channel is in alarm (e.g. Enable recording) See [section 4.7](#) for a description of job categories.

#### WHILE/ON

Allows the action of the alarm job to be chosen as

- a. while active, while inactive or while unacknowledged for continuous jobs (e.g. Speed/interval B), or,
- b. on going active, on going inactive or on acknowledgement for 'one-shot' jobs (e.g. increment counter).

See also [figure 4.3.3g](#) and associated text.

#### EVENT EXAMPLE

An event is to be active whenever Channel 1 Alarm 1 is active whilst Channel 3 alarm 2 is not active.

Source 1 = Point alarm (On = Channel 1; Alarm = 1)

Source 2 = Point alarm (On = Channel 3; Alarm = 2)

Source 1 Sense = Source 1

Operator = And

Source 2 Sense = Not Source 2

It is possible to achieve the same result by inverting both Source senses and using the Nor operator.

### 4.3.7 Event Buttons

This configuration item appears only if the Screen Builder Option is fitted ([section 7](#)).

The Event Button configuration menu allows a number of 'Push-Buttons' to be set up for use as event sources. Buttons can be defined as 'Unlatched' (push = on; release = off) or 'Latched' (push once = on; push again = off etc.).

**Note:** Unlatched button action occurs when the button is released.

Unlatched types have a single text string associated with them. Latched types have two text strings, one for the 'On' (latched) state; the other for the 'Off' state. Figure 4.3.7 shows the configuration menu.

Event buttons are independent of the Security Management option, described in [section 4.4.2](#). This allows individual buttons to be a) entirely open to the user, b) to require signing, or c) to require both signing and authorization, as required.

The screenshot shows a configuration window for an event button. It contains the following elements:

- Button Number:** A dropdown menu showing '1) Button 1' with a right-pointing arrow and the text 'Select 1 to 96'.
- Descriptor:** A text input field containing 'Button 1'.
- Type:** A dropdown menu showing 'Latched' with a right-pointing arrow and the text 'Select Latched or Unlatched'.
- Text:** A text input field containing 'Off Text' with a right-pointing arrow and the text 'Enter button text'.
- Latched Text:** A text input field containing 'On Text' with a right-pointing arrow and the text 'Enter latched text (appears only if Type = latched)'.
- Require Signing:** A checked checkbox.
- Require Authorisation:** A checked checkbox.
- Buttons:** 'Apply' and 'Discard' buttons at the bottom.

Figure 4.3.7 Event Button option configuration menu

Button number	Allows selection of the button (1 to 96) which is to be configured.
Descriptor	Allows a button name, of up to 20 characters, to be entered.
Type	Select Latched or Unlatched, as defined above.
Text	For unlatched buttons, this allows entry of the legend which is to appear on the button when displayed. For latched buttons, this is the legend which appears when the button is in its non-active (off) state.
Latched Text	This field appears only if Type = Latched, and allows entry of the legend which is to appear on the button when in its active (on) state.
Require Signing	If this field is enabled, then the button can be used only by those whose 'Can Sign' permission is enabled in the 'Access' menu described in section 4.4.1. When the button is operated in the User screen, a 'signature' page appears which requires the entry of the correct password for the selected user, and of a note which would normally be used to give the reason for the operation.
Require Authorisation	This field appears only if 'Require Signing' is enabled. If Require Authorisation is enabled, then the button can be used only by those whose 'Can Authorize' permission is enabled in the 'Access' menu described in section 4.4.1. When button operation is attempted, a 'signature' page ( <a href="#">figure 4.4.2b</a> ) appears which requires the entry of the correct password for the selected user, and a note which would normally be used to give the reason for the change.

#### Notes:

- 'Require Signing' and 'Require Authorisation' appear only if the Auditor 21CFR11 option is fitted.
- If the Auditor 21CFR11 option is fitted, a message appears on the chart after authorization and/or signing are complete. The example below shows the message when both Signing and Authorisation are enabled.

DD/MM/YY HH:MM:SS Button Descriptor,Signed:Engineer,Authorised:Engineer,Note

### 4.3.8 Messages

This feature allows messages to be sent, by job action (section 4.7), to the display, to a specified group or to all groups. Messages can also be included in e-mails (section 4.3.19). The messages are of the form: Date, Time, Message. The message can be just text (up to 80 characters), or it can include up to nine embedded items which are typed into the message as {1} to {9}. The embedded values represented by {1} to {9} are selected from picklists.

If a Group-destination message contains more characters than can be displayed on the screen (depends on recorder model), the right-hand part of the message is invisible to the user. The message appears in full in the [message log](#) (section 3.1.4) and when Review Software is used. Display-destination messages are always fully visible.

#### MESSAGE ENTRY

The message configuration page is shown below in figure 4.3.8 The page is accessed from the Root menu/Operator/Config menu.

Figure 4.3.8 Message entry configuration page.

#### CONFIGURABLE PARAMETERS

**Message Number** Select the required message from the picklist.

**Message** Enter the message by using the pop-up keyboards (section 3.3.1)

**Replace{n} with** A picklist allowing the user to select data to be embedded in the message

**Source Descriptor:** The descriptor of the source which triggers the job message.

**Source Value:** The instantaneous value of the source at trigger time.

**Source Alarm Data:** Details (see table 4.3.8) of the source alarm at message trigger time.

Alarm Type	Embedded details
Absolute	Enable, Type (high or low), Threshold, Status
Deviation	Enable, Type (in or out), Reference, Deviation, Status
Rate of change	Enable, Type (rise or fall), Amount, Change time, Status

Table 4.3.8 Alarm details versus alarm type

**Note:** If any of 'Source Descriptor', 'Source Value' or 'Source Alarm Data' are embedded in a message which is triggered by a job which cannot be associated with a specific source (e.g. event, timer), then the embedded value is: ??????

(Continued)

### 4.3.8 MESSAGES (Cont.)

Replace {n} with (Cont.)

**Specified Descriptor, Specified Value, Specified Alarm data:** Produces a further field '{n} source', described below.

**Batch Status:** Causes the status ('Active' or 'Inactive') of the current batch to be embedded. See [Section 4.3.10](#) for details of the Batch option.

**Batch Field data:** Allows a selected batch field to be included in the message. If a batch is not running at the time the message is triggered, the Batch field data is replaced by '?????'. See [Section 4.3.10](#) for details of the Batch option.

---

**Note:** Group number must be entered if the batch is configured for Group mode.

---

**Instrument Name:** Allows the Instrument Name (as entered in Configuration/Instrument - [section 4.3.1](#)) to be included in the message.

**Instrument Number:** Causes the instrument number (Network/Address - [Section 4.5.1](#)) to be embedded.

**Config Revision:** Embeds the Config File Version number (System/About - [section 4.6.9](#)) in the message.

**Local User:** Embeds the currently logged-in user (e.g. 'Engineer', 'John W' etc.)

{n} source

This field appears only if the previous field (Replace {n} with) is selected as 'Specified Descriptor', 'Specified Value' or 'Specified alarm data'. The associated picklist(s) allow a specific point, and a specific alarm (if appropriate) to be selected. It is thus possible to configure, say alarm 1 on channel 2, to produce a message giving the descriptor and/or value of, say, totaliser 1.

---

**Notes:**

1. n = 1 to 9
  2. The example below is intended to clarify message entry techniques.
-

### 4.3.8 MESSAGES (Cont.)

#### EXAMPLE

To configure Message 2 to read "The value of Chan two = (Value channel 2) & Tot one = (Value totaliser 1)"

Before configuring the message:

In channel configuration:

Set channel 2 descriptor to: Chan two

Set Channel 2 alarm job to:

Category: Message

Send message(s) to: All Groups

First message: 2) Message 2

Last Message: 2) Message 2

On: Active

In Totaliser configuration:

Set Totaliser 1 descriptor to: Tot one

In Messages configuration:

1. Select Message 2.
2. Access the Symbols keyboard ([section 3.3.1](#)) and enter, without spaces, {}={}&{}={}
3. Access the Numeric keyboard and insert 1, 2, 3, 4 within the braces to give: {1}={2}&{3}={4}
4. Access the Alphabet keyboard, and insert text and spaces: The value of {1} = {2} & {3} = {4}
5. Set 'Replace {1}' to "Source Descriptor"
6. Set 'Replace {2}' to 'Source Value'
7. Set 'Replace {3}' to 'Specified Descriptor'
8. Set '{3} source' to Tot one
9. Set 'Replace {4}' to 'Specified Value'
10. Set '{4} source' to 'Tot one'

The result of this is that, should the channel 2 alarm go active, the following message would be sent to all groups, appear on the 'chart' and become part of all groups' histories:

12/07/06 11:19:58 The value of Chan two = 6.0°C & Tot one = 3383.8073 Units

---

**Note:** On some models, the message may be wider than the screen. If necessary, the message can be shortened (e.g. use 'Ch2' instead of 'Chan two'), or it can be viewed in full, either in Message log, ([section 3.1.4](#)) or by using Review Software, if available.

---

### 4.3.9 User Linearisation Tables

**Note:** The User Linearisation configuration menu appears for all versions of the recorder, but not every version has a 'Lin Type' field in Channel configuration allowing such tables to be selected for use.

The Channel configuration item 'Lin Type' includes 12 linearisation tables called, initially, UserLin1 to UserLin12. This User Linearisation part of the instrument configuration allows the user to enter a linearisation look-up table of between two and 66 pairs of points.

The pairs of points are entered as X1Y1, X2Y2... ..XnYn,

where 'n' is the specified number of points.

X1 to Xn represent the inputs to the function.

Y1 to Yn represent the corresponding outputs from the function.

#### Notes:

1. Each Y value must be unique - i.e. there cannot be more than one X value with the same Y value assigned to it.
2. Each X value (other than the first) must be greater than the previous one.
3. Each Y value (other than the first) must be greater than the previous one.
4. To specify units other than temperature units, the channel 'scaled' facility must be used. The scale low/high values should be set to be the same as the range low/high values, and the required units entered

The import/export Linearisation tables feature described in 'Save/Restore' (section 4.2) offers an alternative way of entering linearisation tables.

Figure 4.3.9a shows the default configuration page. Figure 4.3.9b shows a simple table for relating water depth to water volume for a cylindrical tank with a conical bottom.

Figure 4.3.9a User linearisation configuration page

#### CONFIGURATION PARAMETERS

User Linearisation	Allows a user linearisation table to be selected for configuration.
Descriptor	Allows the user to enter a name of up to 20 characters (including spaces) for the table.
Format	This allows the point pair values to be entered as normal numeric values (Numeric) or in 'Scientific' format (Scientific). When 'Scientific' is selected, values are displayed and entered as a decimal number between 1 and 10 <sup>†</sup> (the mantissa), followed by a multiplier (the exponent). E.G. to enter a value of 1244.5678, the value entered would be 1.2445678E3, where 3 represents the number of places that the decimal point has been shifted to the left in order to convert the value to a number between 1 and 10 <sup>†</sup> . To enter a value of 0.0004196, the entry would be 4.196E-4. Figure 4.3.9b, below, gives further examples.

#### † Notes

1. Strictly this is a number less than 10, as 10 would be 1.0E1.
2. There must be at least one number after the decimal point.

4.3.9 USER LINEARISATION TABLES (Cont.)

CONFIGURATION PARAMETERS (Cont.)

Number of points This is used to enter the total number of point pairs in the table. The following XY fields increase in number up to the entered value. (A scroll bar appears if there are more points than can be displayed in the available screen height.)

X1 to XN The input values to the table, where N is the 'Number of Points' entered above.

Y1 to YN The resulting, corresponding output values from the look-up table.

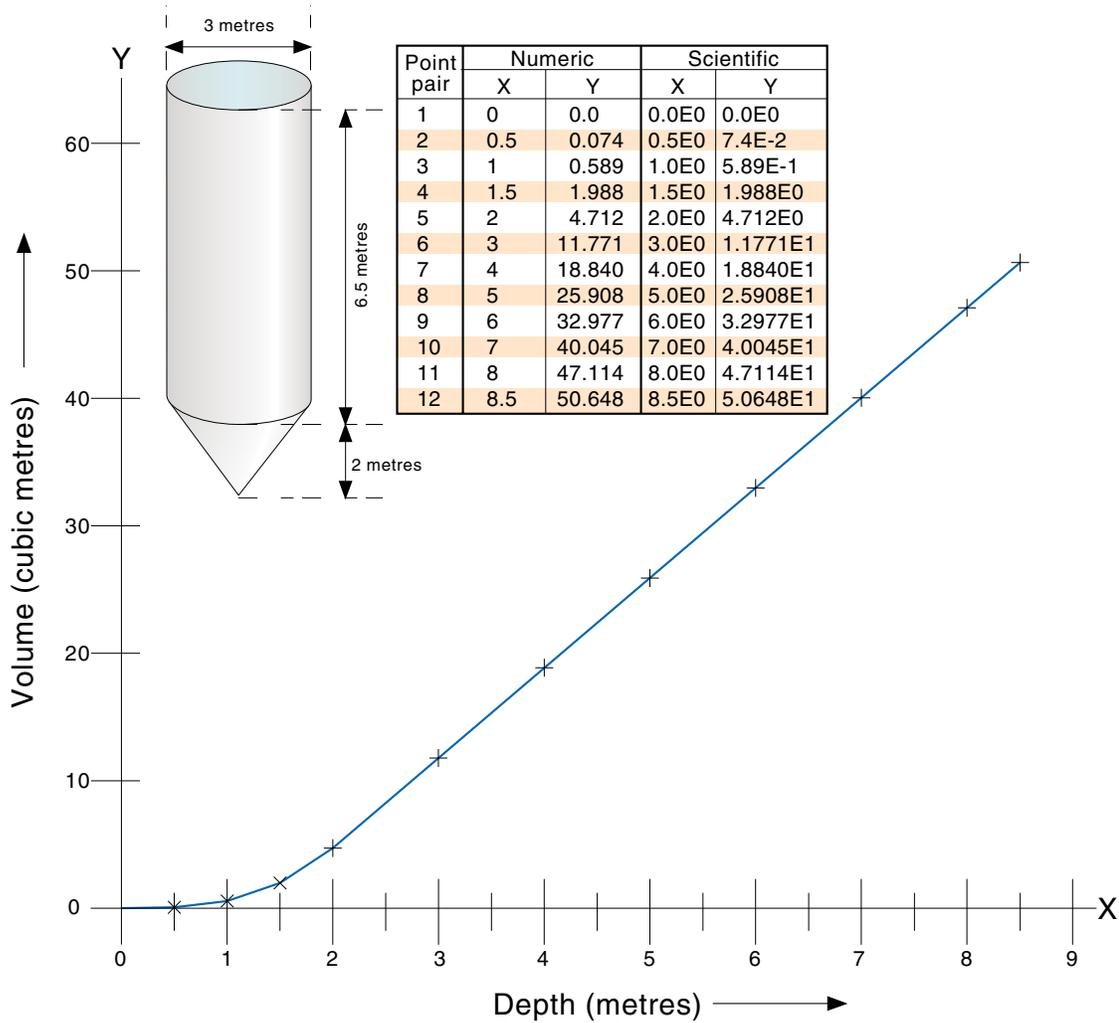


Figure 4.3.9b Sample User Linearisation table.

### 4.3.10 Batch recording option

Batch records form a part of recording history and are included in the normal archiving process to a removable Compact Flash card or to a remote PC (sections 4.1 and 4.3.5). Batches can be initiated directly by the operator (if access permission is granted), automatically whenever a specified counter changes value, by job or remotely via MODBUS/TCP.

Batches can be defined as start/stop, or continuous and can incorporate all channels, or just those associated with a specified Group. For start/stop batches, the batch record starts when the batch is started, and continues until it is stopped. For continuous batches, the batch record starts when the batch is started and continues until the next batch is started, or until batch recording is disabled.

When using 'PC review' software the 'Go to Batch' feature can be used to select a particular batch record.

If 'Name files by Batch' is enabled a separate history file is created for each batch.

For each batch start, a start message is printed:

```
DD/MM/YY HH:MM:SS Batch start (User Full Name)
```

Where DD/MM/YY is the date, HH:MM:SS is the time, and User Full name is either the current user name, the security level (e.g. Engineer) or 'Automatic' if the batch has been initiated by job, or 'Modbus' if triggered remotely. A similar message is printed at Batch Stop. (There are no stop messages associated with continuous batch selection).

In addition to the above start/stop messages, up to six lines of text can, if required, be printed on the 'chart' at the start of a batch and, if required, at the end of a batch. The messages are in two parts, which for the sake of this document, are called 'Headings' and 'Values' The Headings are entered in Fields 1 to 6 in Batch Configuration. The Values associated with these headings are entered by the operator at initiation.

### AUDITOR MESSAGES

If either Auditor option is fitted a Config/Security Revision message appears immediately after the Batch Start message:

```
DD/MM/YY HH:MM:SS Config Revision:NNNNNN Security Revision:SSSSSS
```

```
DD/MM/YY HH:MM:SS Batch start (User Full Name)
```

### BATCH SUMMARY

A Batch Summary page can be displayed from the Summary menu described in section 3.1.4, above.

## 4.3.10 BATCH OPTION (Cont.)

## CONFIGURATION

The screenshot shows the 'Batch configuration menu' with the following settings:

- Scope: Group (dropdown menu, with a note 'Select Instrument or Group')
- Group: 1) Group 1 (dropdown menu)
- Show Batch Entry List:  (with a note 'These fields appear only if 'Show Batch Entry List' is enabled')
- MAC Address: 00:0A:8D:00:20:A0
- Predefined Entry 1: FishesRus
- Predefined Entry 12: (empty)
- Enable:
- Batch mode: Start/Stop (dropdown menu, with a note 'Select Start/Stop or Continuous')
- Batch Fields: 4 (dropdown menu)
- Field 1: Batch Number: (text input)
- Batch field 1: Use Counter (dropdown menu, with a note 'Select Counter or Text')
- Counter: Counter 1 (dropdown menu, with a note 'Select Counter (Appears only if 'Use Counter' selected)')
- Field 2: Customer Name: (text input)
- Field 3: Operator Name: (text input)
- Field 4: Supervisor: (text input)
- On start log: 4 (dropdown menu)
- On stop log: 1 (dropdown menu)
- On new clear: 1 (dropdown menu)
- Name files by batch:
- Buttons: Apply, Discard

Figure 4.3.10a Batch configuration menu

As depicted in figure 4.3.10a, the following configuration entries can be made:

## SCOPE

Allows the user to define all configured channels (instrument) or just those in a particular group, for batch control. If 'Group' is selected, a further picklist appears allowing a specific group to be selected.

## SHOW BATCH ENTRY LIST

Enabling this field produces a list of 13 entries which can be used as field entries when starting or storing a batch (as described in 'Operator initiation', below). The first entry is the MAC address of the recorder and is not editable. The remaining 12 entries (of up to 60 characters each) are freely editable. This is a different list from that entered (for Operator notes) in Instrument configuration (section 4.3.1).

## ENABLE

Allows the batch function to be switched on or off.

## BATCH MODE

Allows batch mode to be selected as Continuous or Start/Stop.

### 4.3.10 BATCH CONFIGURATION (Cont.)

#### BATCH FIELDS

Allows the number of messages to be printed at batch start/stop to be selected.

#### FIELD 1

This field is the first of up to 10 which can be used as headings for batch information. Headings can be up to 20 characters long (including spaces). In the example shown in Figure 4.3.10a, Heading 1 (Field 1) has the entry 'Batch Number:'. When initiating the batch, the operator has to enter a value to be associated with this heading (see below), unless 'Use Counter' is selected in the following 'Batch Number' field.

#### BATCH NUMBER

This allows the Value entered for Field 1's heading to be selected as 'Use Text' or 'Use Counter'.

USE TEXT. When Text is selected, the value for field 1 is entered by the operator on initiation of the batch.

USE COUNTER. When Counter is selected, a further field appears ('counter') allowing a specific counter to be selected from a picklist. The selected counter initiates a new batch whenever it changes value, and the counter value is appended to the text associated with Field 1 (but see note 2). See [section 4.3.13](#) for details of counters.

---

#### Notes:

1. Start batch is initiated on any change in counter value - not just increment.
  2. it is recommended that, when 'Use Counter' is selected, only Counter 1 be used as the batch initiator. Other counters may be selected but operation is not guaranteed.
- 

#### FIELDS 2 TO 10

Fields 2 to 10 are also used as headings for batch information. Values for these headings must be entered by the operator prior to Batch initiation. See also 'On new clear', below. Headings can be up to 20 characters long (including spaces).

#### ON START LOG

This defines how many of the selected Fields are to be printed at batch start. An entry of '1' means that only Field 1 will be printed. An entry of '2' means that Fields 1 and 2 will be used, and so on. An entry of 0 means that only the 'Batch Start' message will be printed. It is not possible to print only, say, Field 3. If Field 3 is required, it must be preceded by Fields 1 and 2.

#### ON STOP LOG

As for On start log, above, but for batch stop. This item appears only if Start/Stop is selected as batch mode.

#### ON NEW CLEAR

For 'Use Text' Batches only, this allows the user to clear none or more of the batch entries at each batch start. In the example above, if the user enters a batch number of say 060509.015, with Customer Name: FishesRus, Operator name: Marvin, Supervisor: Fred, then setting 'On New Clear' to '1', causes the batch number to be cleared, and to have to be re-entered, each time a new batch is started.

In a similar way, setting 'On New Clear' to '2' means that the batch number value and the Customer Name: value to be cleared. A new batch cannot be started without new values first being entered.

### 4.3.10 BATCH CONFIGURATION (Cont.)

#### NAME FILES BY BATCH

As an aid to identification, if 'Name Files by Batch' is selected, the Batch Name, as entered by the operator, is inserted into the history file name.


For example, if a batch name of 060511.001 is amongst the items archived to disk, then this file will appear in the form:

Group Name~060511.001~YYYYMMDD\_HHHHHHHHHHHHHHHH,

Where YYYYMMDD is the date (e.g.20060511 = 11th May 2006) and HH---HH is a 16 digit hex code\* used by the recorder and by review software to identify the file. If name files by batch is not selected, the Batch name is not included, and the file will appear as:

Group Name~YYYYMMDD\_HHHHHHHHHHHHHHHH,

\*The HHH--HHH code contains the following information:


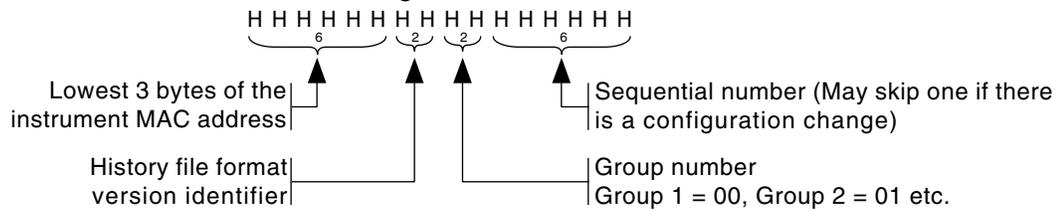


#### OPERATOR INITIATION

This section describes how the operator initiates a new batch. Batches can be initiated from any of the trend, bargraph or numeric display modes, but the start/stop and other messages appear only on the Vertical Trend screen in the trend history display and in Message Log. Batch information and status are retained whilst power is off.

To initiate a batch, either

1. Operate the Option key, then press 'Batch' in the Option Menu\* which appears, or
2. Touch the coloured message area at the top of the screen. The batch Status page appears - in this example - with no batch running.
3. Press 'New'. A new display page appears (figure 4.3.10b), showing all the headings entered in Field 1 to Field 6 during configuration. If the Batch Fields entry is less than 6, then only the selected number appear (in our example, 4).

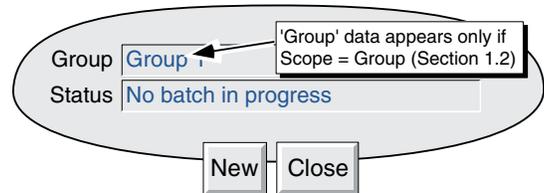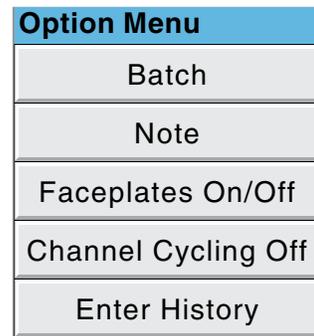

**\*Notes:**

1. The option menu is context sensitive, so its appearance may differ from the example shown.
2. Batches can also be started and stopped from the Batch Summary page as described in section 3.1.4.

### 4.3.10 BATCH CONFIGURATION (Cont.)

#### OPERATOR INITIATION (Cont.)

'Values' can now be entered for these headings by entering strings of up to 60 characters (including spaces).

This may be done by touching the empty field and using the resulting pop-up keyboard to type-in the entry, or by touching the field continuously for two seconds or more and then selecting one of the predefined Batch Entry messages previously entered in the [configuration page](#). In the latter case, the predefined message may be edited in the normal way before being Applied. Such editing has no effect on the original message.

Once the entries are complete, operation of the Start button initiates batch recording. Operation of the Store button saves the configuration for later initiation by job, by counter or via MODBUS/TCP.

The Values entry page is replaced by the batch status page (figure 4.3.10c), this time showing details of the batch in progress. This page allows the batch to be stopped or a new one triggered.

**Note:** Text may also be entered using a suitable keyboard connected via the USB port at the rear of the instrument ([section 2.1](#)).

**Batch - Furnace1 Temps**

Batch Number: 060509.015

Customer Name: FishesRus

Operator name: Marvin

Supervisor:

00:0A:8D:00:20:A0

FishesRus

Marvin

Arthur

Tricia

Fred

Manky Clothes Ltd.

Rat's Nest Hair Co.

Store Start Close

**Batch Entry list.**  
Appears if batch entry area is touched continuously for 2 seconds (approx). List entries are made in Batch Configuration.

**These keys not shown whilst the Batch Entry list displayed**

Figure 4.3.10b Batch values entry page

4.3.10 BATCH INITIATION (Cont.)

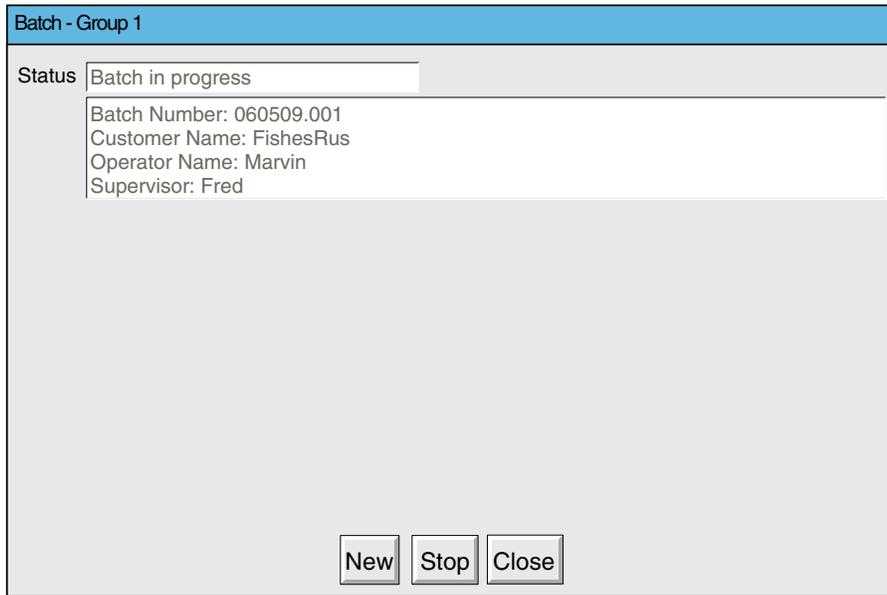


Figure 4.3.10c Status page (Batch running)

BATCH MESSAGE DISPLAY

The messages are displayed on the Graph Trend display as shown in figure 4.3.10d, below. This figure uses the example given in the previous sections, and uses only four messages. Further messages would appear above message 4. The figure also shows that time and date are added to the messages, and that the currently running batch number is given in the Group name area. Touching this area calls the Batch status page. In this job-triggered batch, the alarm triggering the job also appears (as shown).

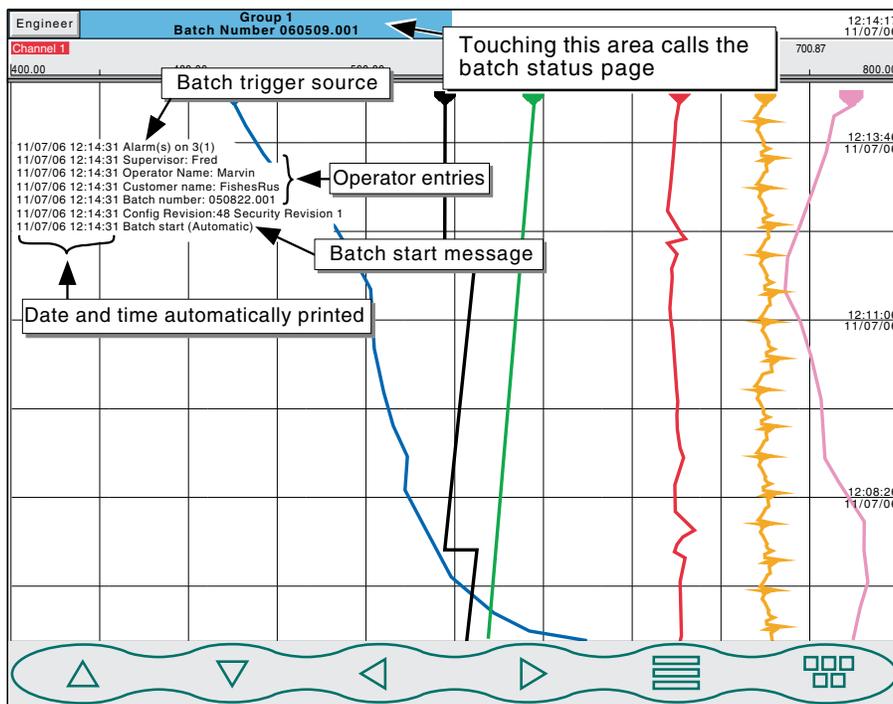


Figure 4.3.10d Typical Batch start messages

### 4.3.10 BATCH INITIATION (Cont.)

#### NON OPERATOR INITIATION

Batch start/stop can be initiated by job, by counter or via MODBUS/TCP

#### JOB INITIATION

As described in [section 4.7.8](#), a job can be set up to initiate a batch whenever the job source becomes active. If 'Scope' is set to 'Group' a specific group can be selected (default = Group 1) and the job will act only on the batch associated with this group. Batch 'Start' jobs automatically start the batch using the entries made during the 'Store' function, described above. 'Display Batch Dialog' jobs allow the user to enter the field values manually, before the job starts.

#### COUNTER INITIATION

If Batch Number is selected as 'Use Counter', then a new batch will automatically be started whenever the selected counter changes value (increment, decrement or preset). The new value of the counter is used as the value associated with Field 1.

For the other fields to have values printed on the chart, these must have been entered as described above for Operator initiation, then the 'Store' button touched.

The 'On new clear' setting is ignored, the stored values being used each new batch.

Batch start messages are of the form:

```
DD/MM/YY HH:MM:SS Batch start (Automatic)
```

Batch recording cannot be stopped by Counter action.

#### MODBUS INITIATION

In order to initiate batch recording via MODBUS/TCP, a Batch Start flag has to be set (value = 0001). For Scope = Group, the flag for the specified group must be set. For Scope = Instrument any group's Batch Start flag may be used.

The address of the flag for group 1 is decimal 42364; the address for group N is {42364 + 629(N-1)}

For further details of the Modbus TCP option see [section 8](#).

If Batch mode = Start/Stop, batches can also be stopped via MODBUS. The address for group 1 is 42365; the address for group N is {42364 + 629(N-1)}. Again the value must be set to 0001.

Modbus start messages are of the form:

```
DD/MM/YY HH:MM:SS Batch start (Modbus)
```

Stop messages are similar.

#### EVENT SOURCES

As described in [section 4.3.6](#), 'Batch Start', 'Batch Running' and 'Batch Stop' can be selected as event sources. If 'Scope' = 'Group' in [Configuration](#) (described above), then the user can select which group's batch is to be used as the event source.

### 4.3.11 Maths

#### CONFIGURATION

This feature allows a range of mathematical functions to be performed. Figure 4.3.11a shows a typical configuration page - the selected maths function determines which configuration fields actually appear.

The screenshot shows a configuration menu for a maths function. The fields and their values are as follows:

- Maths Number: 1) Fo 1 (dropdown)
- Value: 32.65 (text field)
- Reset now: (button)
- Function: fValue (dropdown)
- Fvalue of: Channel 1 (dropdown)
- Sterilizing Temp: 121.1 (text field)
- Temperature interval: 10 (text field)
- Low cut off: 75 (text field)
- Units: Mins (text field)
- Descriptor: Fo 1 (text field)
- A/B Switching: (checkbox)
- Scale Low: 0 (text field) Mins
- Scale high: 60 (text field) Mins
- Zone low: 0 (text field) %
- Zone high: 100 (text field) %
- Scale Type: None (dropdown)
- PV Format: Numeric (dropdown)
- Max Decimal Digits: 2 (text field)
- Colour: 26 (text field)
- Alarm Number: 1 (dropdown)
- Enable: Off (dropdown)
- Job Number: 1 (dropdown)
- Category: No Action (dropdown)

Annotations in the image:

- Arrow pointing to '1) Fo 1' dropdown: Select maths channel number
- Arrow pointing to '32.65' text field: Current value
- Box around 'Reset now' button: Reset button appears only for resettable functions
- Arrow pointing to 'fValue' dropdown: Select Required maths function
- Arrow pointing to 'Channel 1' dropdown: Select Source input
- Arrow pointing to 'None' dropdown: Select None, Linear or Log
- Arrow pointing to 'Numeric' dropdown: Select Numeric, Elapsed Time, Scientific, Time or Date
- Arrow pointing to '1' dropdown: Select Alarm number
- Arrow pointing to 'Off' dropdown: Select: Off, Unlatched, Latched or Trigger
- Arrow pointing to '1' dropdown: Select Job number
- Arrow pointing to 'No Action' dropdown: Select job category

Buttons at the bottom: Apply, Discard

Figure 4.3.11a Maths configuration menu (typical - varies from function to function)

Maths number	Allows the user to select the required maths channel for configuration. The maximum number of maths channels is configured using the Virtual channels section of the Options menu, described in <a href="#">section 4.3.22</a> .
Value	This field shows the current value of the selected maths channel. If the channel has not yet been configured, the value reads 'Off'.
Reset Now	This button appears only after a resettable function has been selected. Operation of the button sets the maths value to zero.

### 4.3.11 MATHS CONFIGURATION (Cont.)

#### Function

This picklist allows the relevant maths function to be selected. In the following description, the word 'channel' is used as an umbrella term for input channels, maths channels, totalisers etc.

Off	Allows the function to be disabled. Once 'Apply' has been actioned, all configuration for this Maths number is lost.
Constant	Allows a maths channel to be set to a constant value.
Add	Allows any channel or a constant value to be added to any other.
Subtract	Allows any channel or a constant value to be subtracted from any other.
Multiply	Allows any channel or a constant value to be multiplied by any other.
Divide	Allows any channel or a constant value to be divided by any other. Should the value of the divisor pass through zero, 'Maths Channel N error' and 'Maths Channel Failure' messages appear.
Group average*	The instantaneous value of all the channels in the source group added together and divided by the number of channels in the group. For example, in a group of four channels whose instantaneous values are 4, 8, 2 and 6, the group average is $(4 + 8 + 2 + 6) / 4 = 5$ . The relevant source group is selected by picklist. Should a channel return a non-valid value, it is excluded from the calculation, and the result of the function is the average of the remaining channels.
Group minimum*	The lowest value of any of the channels in the source group. For example, in a group of four channels whose instantaneous values are 4, 8, 2 and 6, the group minimum is 2. The required source group is selected by picklist. Should a channel return a non-valid value, it is excluded from the calculation, and the result of the function is the minimum of the remaining channels.
Group maximum*	The highest value of any of the channels in the source group. For example, in a group of four channels whose instantaneous values are 4, 8, 2 and 6, the group maximum is 8. The required source group is selected by picklist. Should a channel return a non-valid value, it is excluded from the calculation, and the result of the function is the maximum of the remaining channels.

---

\*Note: If a maths channel with a Group function is contained within its own source group, then it will act on itself as well as on the other group contents, thus changing the calculation. For example, if Group 1 were to contain channel 1, channel 2 and maths channel 1, where maths channel 1 had the function 'Group Maximum' for Group 1, then the Group Maximum would become a latching function, showing the highest value ever reached by channel 1, channel 2 or maths channel 1 since the group was configured. In order to trace the instantaneous highest value, channel 1 and channel 2 would have to be contained in e.g. Group 1, and the group maximum channel contained in, say, Group 2, but with a source of 'Group 1'.

---

Modbus Comms Input	Allows Modbus Communications to be selected for reading values from slave instruments - see <a href="#">section 4.3.15</a> . If virtual channels are used - see <a href="#">section 4.3.22</a> .
EtherNet/IP Comms Input	Allows EtherNet/IP to be selected for reading values from a client instrument - see <a href="#">section 4.3.21</a> .
Stopwatch	This causes the value of the maths channel to increment in milliseconds. The value can be displayed in milliseconds (PV format = numeric), or in HH:MM:SS (PV format = elapsed time). The value can be held, using a 'Disable' job or set to zero either using a 'reset' job or by the operation of the 'Reset now' button in the maths configuration page. See <a href="#">section 4.7</a> for a description of jobs. The function value is retained during power off.

---

Note: The scale low and high values are displayed in numeric format for both numeric and elapsed time display formats

---

**4.3.11 FUNCTION (Cont.)**

Copy	Copies the value of a selected point to the maths channel being configured. Allows extra alarms to be set up for the copied point.
Polynomial	Provides a polynomial curve fit for the specified point, using up to 8 orders,
Fvalue	This function calculates 'equivalent time at sterilizing temperature' for temperatures above and below the sterilizing temperature. Fo (dry) and FH (steam) sterilizing calculations can be carried out, by entering the correct constant. The value can be held, using a 'Disable' job or set to zero (prior to the next run) using a 'reset' job. See <a href="#">section 4.7</a> for a description of jobs. The function value is retained during power off.
Switch	Allows two channels ('A' and 'B') to be selected as alternative sources for the selected maths channel to copy. The maths channel copies source 'A', unless a 'Switch to B' job is active on the maths channel. See <a href="#">section 4.7</a> for Job descriptions.
Linear Mass Flow	This function calculates mass flow from linear-type transducer outputs.
Root Mass Flow	This function calculates mass flow from square root-type transducer outputs.
Rolling Average	This takes the average value of a single channel over a specified number of readings taken at a specified interval. The function value is retained during power off.
MKT	Mean Kinetic Temperature. A single calculation to simulate non-isothermal effects of variations in storage temperature.
10 to the power	Output = 10 raised to the power of the selected input value.
Group Latched Minimum	Outputs the minimum value reached by any of the points in a selected source group since last reset. The function ignores points that are not producing valid PV. A disable job stops the function reading its input. A reset job sets the function to the current minimum value within the group. Note that for proper operation, the maths function must be in a group which is not the source group. If this is not the case, it will always see itself as the lowest valued point in the group, and Reset operations will have no useful effect.
Group Latched Maximum	As for Group Latched Minimum, above, but outputs the maximum value of the source group.
Sample and Hold	This function is initiated by a trigger job. At trigger time, the selected point value is sampled, and its value at trigger time is output continuously by this function. On reset, the PV becomes 'No data'.
Square Root	Outputs the square root of the value of the selected point.
High Select	Allows two points to be selected as inputs. The output of the function is the value of that input point which currently has the higher value.
Low Select	Allows two points to be selected as inputs. The output of the function is the value of that input point which currently has the lower value.
Saturated Steam Mass Flow	Calculates mass flow in kg/s for saturated steam, using either the steam temperature (Celsius) or pressure (MPa) as appropriate to the process.
Saturated Steam Heat Flow	Calculates the energy flow in kJ/s for saturated steam, using either the steam temperature (Celsius) or pressure (MPa) as appropriate to the process.
Saturated Steam Heat Consumed	Calculates the heat consumed in kJ/s for saturated steam, using the inlet steam temperature (Celsius) or pressure (MPa) (as appropriate to the process), and the return (condensate) temperature.
Group MKT	Calculates Mean Kinetic Temperature of a specified group of channels

**4.3.11 FUNCTION (Cont.)**

Log Base 10	Takes $\log_{10}$ of selected input. (For example: Input = 2 gives maths function value = 0.3010)
Log Base e	Takes $\log_e$ of selected input. (For example: Input = 2 gives maths function value = 0.6931)
e to the power	Takes natural antilog of input. (For example: Input = 0.6931 gives maths function value = 2)
Modulus	This function copies the magnitude of the input value, without the sign. For example, the modulus of value +100 = +100; the modulus of -100 = +100.
Channel Maximum	Maths function value is the minimum value the input point has reached since last reset. When reset, the value is reset to the current input value.
Channel Minimum	Maths function value is the minimum value the input point has reached since last reset. When reset, the value is reset to the current input value.
Channel Average	Takes the average value of the selected channel over a specified time period. The time period must be a multiple of 125 msecs. For example, a period of 0.2 seconds would be rejected, but a period of 0.25 seconds would be accepted.
Master comms	Allows a maths channel to read point values from other instruments on the Modbus link. If virtual channels are used - see <a href="#">section 4.3.22</a> .
<a href="#">Rate of change</a>	Produces a value for the speed at which a signal changes over a specified period.
<a href="#">O2 Correction</a>	This function carries out O <sub>2</sub> correction of gas measurements for use in Continuous Emissions Monitoring applications.
<a href="#">Relative Humidity</a>	This uses wet and dry bulb temperatures and atmospheric pressure inputs to produce a percentage Relative Humidity reading.
<a href="#">Zirconia probe</a>	Allows oxygen concentration and oxygen potential to be determined by solving the Nernst oxygen equation.
Timestamp	When triggered by an event or alarm job, this causes the current number of milliseconds since 00:00 hrs on 1st January 1970 to appear as the function value. If the selected PV format is date or time, the result is displayed as date or time, respectively.
Config Revision Number*	Allows the Configuration Revision number to be used as the input to a maths channel. When this maths channel is included in a group, the user can determine the Configuration Revision number obtaining at any time in the history record.
Security Revision Number*	Allows the Security Revision number to be used as the input to a maths channel. When this maths channel is included in a group, the user can determine the Security Revision number obtaining at any time in the history record.

---

\*Note: See 'About' in [section 4.6](#) for a description of the Configuration and Security Revision numbers.

---

**[Thermocouple Cal Correction](#)**

Defines correction points allowing offsets to be added to channel inputs to compensate (for example) for equipment errors.

**SCALE LOW / SCALE HIGH**

The 'zero' and full scale values for the maths function, as displayed.

If A/B switching is enabled, a second set of scale low and scale high values can be entered. 'A' values are used during normal operation. 'B' values are switched to by job action, as described in [section 4.7](#).

### 4.3.11 FUNCTION (Cont.)

#### PV FORMAT

Numeric	Provides a decimal value for the maths channel.
Elapsed time	Shows the maths channel value in HH:MM:SS (hours minutes, seconds) format. Normally used only for time functions. For other functions, elapsed time counts in milliseconds e.g. a PV of 10000 would be displayed as 00:00:10; a PV of 60000 would be displayed as 00:01:00
Scientific	Values are displayed and entered as a decimal number between 1.0 and 10† (the mantissa), followed by a multiplier (the exponent). E.G. to enter a value of 1244.5678, the value entered would be 1.2445678E3, where 3 represents the number of places that the decimal point must be shifted <u>to the left</u> in order to convert the value to a number between 1 and 10†. To enter a value of 0.0004196, the entry would be 4.196E-4.
Time/date	For timestamp functions, displays the timestamp as time or date as selected, instead of a number of milliseconds, as would be displayed in numeric format.

#### † Notes

1. Strictly this is a number less than 10, as 10 would be 1.0E1.
2. There must be at least one number after the decimal point.

#### REMAINING CONFIGURATION ITEMS

The remaining configuration items are identical with the relevant items in Input Channel configuration (section 4.3.3).

#### FUNCTION DETAILS

##### POLYNOMIAL FIT

A polynomial curve fit of up to eight orders:

$A_0 + A_1(X) + A_2(X^2) + A_3(X^3) + A_4(X^4) + A_5(X^5) + A_6(X^6) + A_7(X^7) + A_8(X^8)$  where X is the value of the source channel and A0 to A8 are constants. Figure 4.11.3b shows the configuration items for a third order fit with channel 2 used as the source (X), and A0 = 1, A1 = 2, A2 = 3 and A3 = 4.

The image shows a configuration window for a polynomial fit. The fields are as follows:

- Maths Number: 1) Math 1
- Value: OFF
- Units: (empty)
- Function: Polynomial
- Orders: 3
- Polynomial of: Channel 2
- A0: 1
- A1: 2
- A2: 3
- A3: 4
- Units: Units

Figure 4.3.11b Polynomial configuration fields (3rd order)

### 4.3.11 FUNCTION (Cont.)

#### FVALUE

To calculate the equivalent time at Sterilizing Temperature (for temperatures below, at and above Sterilizing Temperature) both in dry (FH) and steam (Fo) sterilizing environments, using the following equation:

$$Fval_t = Fval_{t-1} + \left( T \times 10^{\frac{ma_t - \text{Target Temp}}{Z}} \right)$$

Where  $Fval_t$  = F value at time t (minutes)

$Fval_{t-1}$  = F value last iteration

T = Internal recorder iteration interval (minutes)

$ma_t$  = Value of temperature measuring channel

Target temp = 121.1°C for Fo; 170°C for FH

Z = Temperature interval representing a factor-of-10 reduction in killing efficiency

= 10°C for Fo; = 20°C for FH

User configuration consists of entering the channel which is measuring temperature, the relevant sterilizing temperature and temperature interval (Z-value) and a low cut-off value, if required.

Figure 4.3.11c shows the configuration fields for measuring Fo, using channel 1 as the temperature input channel, Fo values for target temperature (121.1°C) and z-value (10°C), and 75°C as the low cut-off value, below which killing credits are not to be counted.

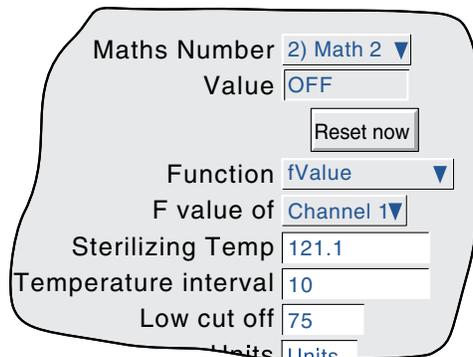


Figure 4.3.11c Fo setup example

#### APPLICATION NOTE

To ensure that sterilizer loads which contain materials with differing thermal inertias are thoroughly sterilized, a typical sterilizer has up to 12 different measuring points within the load. To ensure accuracy, the temperature sensors should be calibrated, and the channel adjustment facility used to compensate for any inaccuracies found.

If each of the inputs is used to compute an F value, each of these values can then be used as an input to a Group Minimum function, with a high absolute alarm set at the correct F value.

**4.3.11 FUNCTION (Cont.)**

## LINEAR MASS FLOW

Note: The overall accuracy of a flow measurement installation depends on a number of factors outside the control of the recorder manufacturer. For this reason, the recorder manufacturer takes no responsibility for the accuracy of the results obtained using the mass flow equations implemented in the maths pack.

The equations solved is:

$$QM_t = \frac{K}{Rg \times Z} + \frac{Flow_t \times AbsP_t}{Temp}$$

where,  $QM_t$  = Mass flow (in kg/sec), at time 't'

K = Scaling factor (see below)

Rg = Specific gas constant in J/kg-K (see below)

Z = Compressibility factor (see below)

Flow<sub>t</sub> = Measured value from the flow meter at time 't'

AbsP<sub>t</sub> = Absolute pressure of the fluid at time 't' in kPa(A)

Temp = Temperature of the fluid in Kelvins

## SCALING FACTOR

This is determined from an assumed value of Qm at a known Flow, AbsP and Temp. The value is chosen to give an output within the range low scale to high scale.

## SPECIFIC GAS CONSTANT

The specific gas constant for any gas is available from published tables. For convenience, the value for a number of common gases is given in table 4.3.11a, below.

Gas	RG (J/kg-K)
Air	287.1
Ammonia	488.2
Carbon dioxide	188.9
Carbon monoxide	296.8
Ethylene	296.4
Hydrogen	4116.0
Methane	518.4
Nitrogen	296.8
Oxygen	259.8
Propane	188.5
Steam	461.4

Table 4.3.11a Common gas constants

**4.3.11 FUNCTION (Cont.)****LINEAR MASS FLOW (Cont.)****COMPRESSIBILITY FACTOR ( Z-FACTOR)**

Compressibility factor is a density-related measure of how far a particular gas deviates from a 'perfect' gas under any set of temperature and pressure conditions, and is give by the equation:

$$Z = \frac{P}{T} \times \frac{1}{\rho}$$

where: Z = Compressibility factor

P = Absolute pressure of the gas in kPa(A)

T = Absolute temperature of the gas (Kelvins)

$\rho$  = gas density at pressure P and temperature T (from published tables)

**CONFIGURABLE PARAMETERS**

Figure 4.3.11d shows the relevant part of the configuration menu for a maths channel with 'Linear Mass Flow' function selected.

Maths Number 1) Math 1 ▾  
 Value 123.4567 Units  
 Function Linear Mass Flow ▾  
 Flow Channel 1 ▾  
 Temperature Channel 2 ▾  
 Absolute Pressure Channel 3 ▾  
 Scale o/p 0  
 Ma 0  
 Gas Constant 0 J/kg-K  
 Z 0  
 Units Units  
 Apply Discard

Figure 4.3.11d Linear mass flow menu

Flow	Allows the input channel measuring the flowmeter output to be entered
Temperature	Allows the input channel measuring the fluid temperature (Kelvins) to be entered
Absolute Pressure	Allows the input channel measuring the absolute gas pressure (kPa(A)) to be entered
Scale o/p	Full scale output from the flowmeter in flowmeter units (S)
Ma	Full scale input range set for 'Flow' channel in flowmeter units ( $ma_{max}$ )
Gas Constant	the relevant gas constant in J/kg-K
Z	The compressibility factor described above.

**4.3.11 FUNCTION (Cont.)**

## ROOT MASS FLOW

---

Note: The overall accuracy of a flow measurement installation depends on a number of factors outside the control of the recorder manufacturer. For this reason, the recorder manufacturer takes no responsibility for the accuracy of the results obtained using the mass flow equations implemented in the maths pack.

---

The equation solved is:

$$QM_t = \sqrt{\frac{K2}{Rg \times Z}} \times \sqrt{\frac{\text{Delta}P_t \times \text{Abs}P_t}{\text{Temp}}}$$

where,  $QM_t$  = Mass flow (in kg/sec), at time 't'

K = Scaling factor (see below)

Rg = Specific gas constant in J/kg-K (see below)

Z = Compressibility factor (see below)

$\text{Delta}P_t$  = Measured value across the orifice plate at time 't'

$\text{Abs}P_t$  = Absolute pressure of the fluid at the up-stream tapping at time 't' in kPa(A)

Temp = Temperature of the fluid at the up-stream tapping in Kelvins

## SCALING FACTOR

This is determined from an assumed value of  $Q_m$  at a known  $\text{Delta}P$ ,  $\text{Abs}P$  and Temp. The value is chosen to give an output within the range low scale to high scale.

## SPECIFIC GAS CONSTANT

The specific gas constant for any gas is available from published tables. For convenience, the value for a number of common gases is given in [table 4.3.11a](#), above.

## COMPRESSIBILITY FACTOR (Z-FACTOR)

Compressibility factor is a density-related measure of how far a particular gas deviates from a 'perfect' gas under any set of temperature and pressure conditions, and is give by the equation:

$$Z = \frac{P}{T} \times \frac{1}{\rho}$$

where: Z = Compressibility factor

P = Absolute pressure of the gas in kPa(A)

T = Absolute temperature of the gas (Kelvins)

$\rho$  = gas density at pressure P and temperature T (from published tables)

**4.3.11 FUNCTION (Cont.)****ROOT MASS FLOW (Cont.)**

## CONFIGURABLE PARAMETERS

Figure 4.3.11e shows the relevant part of the configuration menu for a maths channel with 'Root Mass Flow' function selected.

The screenshot shows a configuration menu for a maths channel. The parameters are as follows:

Maths Number	1) Math 1	
Value	123.4567	Units
Function	Root Mass Flow	
Delta Pressure	Channel 1	
Temperature	Channel 2	
Absolute Pressure	Channel 3	
Scale o/p	0	
Ma	0	
Gas Constant	0	J/kg-K
Z	0	
Units	Units	

Buttons: Apply, Discard

Figure 4.3.11e Root mass flow menu

Delta Pressure	Allows the input channel measuring the differential pressure output from the orifice plate to be entered
Temperature	Allows the input channel measuring the fluid temperature (Kelvins) at the upstream tapping to be entered
Absolute Pressure	Allows the input channel measuring the absolute gas pressure (kPa(A)) to be entered
Scale o/p	Full scale output from the flowmeter in flowmeter units (S)
Ma	Full scale input range set for 'Flow' channel in flowmeter units ( $ma_{max}$ )
Gas Constant	The relevant gas constant in J/kg-K
Z	The compressibility factor described above.

### 4.3.11 FUNCTION (Cont.)

#### ROLLING AVERAGE

This calculates the average value of the last R samples of a channel, taken at N second intervals, where R and N can be defined by the user. At initiation, up to the time of the first sample reading, the displayed value is the average of the channel sampled every iteration (i.e. at 8 Hz).

The number of readings over which the average can be taken is limited by the amount of free RAM instantaneously available, and is thus dependent on the overall configuration of the recorder. An instrument alarm is generated if there is insufficient free RAM available - see [section 3.1.3](#) for details.

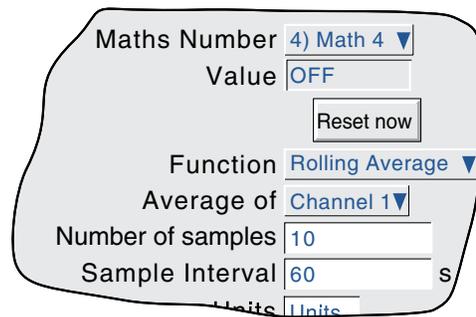


Figure 4.3.11f Rolling average menu

#### MEAN KINETIC TEMPERATURE (MKT)

MKT is defined as 'the isothermal temperature that corresponds to the kinetic effects of time-temperature distribution'. The recorder calculates MKT, using the equation below:

$$T_k = \frac{-\Delta H}{R \ln \left( \frac{e^{\frac{-\Delta H}{RT_{1max}}} + e^{\frac{-\Delta H}{RT_{1min}}} + e^{\frac{-\Delta H}{RT_{Nmax}}} + e^{\frac{-\Delta H}{RT_{Nmin}}}}{2N} \right)}$$

where:  $T_k$  = The required mean kinetic temperature in Kelvins

$\Delta H$  = The heat of activation

$R$  = The universal gas constant

$T_{1max}$  = The highest temperature reached during the first measurement period (in Kelvins)

$T_{1min}$  = The lowest temperature reached during the first measurement period (in Kelvins)

$T_{Nmax}$  = The highest temperature reached during the Nth measurement period (in Kelvins)

$T_{Nmin}$  = The lowest temperature reached during the Nth measurement period (in Kelvins)

$N$  = The total number of measurement periods

As described in 'Configurable items, below, this is simplified for the recorder user, to four entries viz: The number of the channel measuring temperature, the number of samples to be used, the time between the samples and the relevant 'Heat of Activation'.

Note: The input temperature must be in Kelvins. This can be achieved either by setting the relevant channel's units to Kelvins, or by using a further maths channel to convert the measuring units to Kelvins.

( $K = ^\circ C + 273.15$  or  $K = 0.555(^{\circ}F - 32) + 273.15$ ).

## 4.3.11 FUNCTION (Cont.)

## MEAN KINETIC TEMPERATURE (Cont.)

## CONFIGURABLE ITEMS

Figure 4.3.11g shows the configurable items for the MKT function.

Maths Number 1) Math 1 ▾  
 Value 0.0000 Units  
 Function MKT ▾  
 Mean Kinetic Temperature of Math 2 ▾  
 Number of samples 52  
 Sample interval 604800 s  
 Heat of Activation 83.144 kJ/mole  
 Units  
 Apply Discard

Figure 4.3.11g MKT function parameters

## Mean Kinetic Temperature of

Select the source from which MKT is to be derived. This may be an input channel, scaled in Kelvins, or it can be a maths channel used to convert a different temperature scale into Kelvins (see 'Note' on previous page).

Number of Samples Enter the number of samples over which the MKT is to be measured.

Sample interval Enter the time period, in seconds, between samples. At each sample interval, the maximum and minimum temperatures reached by the input source, since the last sample, are entered into the equation.

Heat of Activation The default value is an average value based on many common organic reactions. Allows the user to enter an alternative value, if known.

EXAMPLE 1: To Produce a 4-weekly value of MKT, taking samples every day.

Number of samples = 28

Sample interval = No. of seconds in a day =  $24 \times 60 \times 60 = 86,400$

EXAMPLE 2: To produce an annual value of MKT, taking samples every week.

Number of sample = 52

Sample interval = No. of seconds in a week =  $7 \times 24 \times 60 \times 60 = 604,800$

## Notes

- 1 This function produces a 'rolling' result. I.E. when the final (Nth) sample has been taken, the next sample (N + 1)th replaces Sample 1, the (N + 2th) sample replaces Sample 2, and so on.
- 2 During the first sample, the current minimum and maximum values of temperature are entered into the equation at the recorder iteration rate (i.e. 8Hz).
3. The number of readings over which the value can be taken is limited by the amount of free RAM instantaneously available, and is thus dependent on the overall configuration of the recorder. An instrument alarm is generated if there is insufficient free RAM available - see [section 3.1.3](#) for details.

### 4.3.11 FUNCTION (Cont.)

#### SATURATED STEAM MASS FLOW

Note: The overall accuracy of a flow measurement installation depends on a number of factors outside the control of the recorder manufacturer. For this reason, the recorder manufacturer takes no responsibility for the accuracy of the results obtained using the mass flow equations implemented in the maths pack.

The equations solved is:

$$QM_t = \frac{\text{Flow}_t}{V_{LT} + \Delta V_T \left(\frac{d}{100}\right)}$$

where,  $QM_t$  = Mass flow (in kg/sec), at time 't' (Note 1)

$\text{Flow}_t$  = Measured flow in  $\text{m}^3/\text{sec}$ . at time 't' (Note 1)

$V_{LT}$  = Volume of liquid per kg of steam ( $\text{m}^3/\text{kg}$ ) at temperature  $T$  °C

$\Delta V_T = V_{VT} - V_{LT}$ , where  $V_{VT}$  is the volume of vapour per kg of steam at temperature  $T$  °C

$d$  = Dryness factor between 0 (no vapour) and 100 (no liquid)

$V_{LT}$  and  $\Delta V_T$  are available from published tables (note 2), but the recorder user need only enter 'values' for measured flow and either the temperature or the pressure of the steam. These 'values' can be constants, input channels or maths channels. Figure 4.3.11h and accompanying parameter descriptions give full details.

Maths Number 1) Math 1 ▼  
 Value 123.4567 Units  
 Function Saturated Steam Mass Flow ▼  
 Flow Channel 1 ▼  
 Use Temperature ▼  
 Temperature Channel 2 ▼  
 Dryness 0 %  
 Units Units  
 Apply Discard

Figure 4.3.11h Typical Saturated Steam Mass Flow configuration page

#### PARAMETERS

Flow	Select 'Constant' or the number of the channel supplying the measured flow rate. If 'Constant' selected, a further 'box' allows the value for the constant to be entered.
Use	Allows the user to select Temperature (°C) or Pressure (MPa) for the calculation.
Temperature	Appears only if Use = Temperature. Select 'Constant' or the number of the channel supplying the steam temperature. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered.
Pressure	Appears only if Use = Pressure. Select 'Constant' or the number of the channel supplying the steam pressure. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered. Table 4.3.11b, below, gives multipliers for converting some common pressure units to MPa. More details may be found at websites <a href="http://www.ex.ac.uk/trol/scol/ccpress.htm">http://www.ex.ac.uk/trol/scol/ccpress.htm</a> and <a href="http://www.onlineconversion.com/pressure.htm">http://www.onlineconversion.com/pressure.htm</a> , amongst others.
Dryness	Enter a value between 0 and 100 to represent the dryness of the steam. 0 = no vapour; 100 = no liquid.

#### Notes:

- The units of kg/sec and  $\text{m}^3/\text{sec}$  are used above for simplicity. In fact any time unit can be used. For example if the measured flow is in  $\text{m}^3/\text{hour}$ , then the Mass flow will be in kg/hour.
- ASME Steam tables 1999, from IAPWF IF97.

## 4.3.11 FUNCTION (Cont.)

## SATURATED STEAM MASS FLOW (Cont.)

## PRESSURE UNITS CONVERSION

There is a wide range of pressure measuring units in use throughout the world. The following table gives a multiplication factor for converting some common units to MPa (MegaPascals), to four significant figures. Further conversion factors can be found at the websites given on the previous page. (Where the conversion is to Pascals, not to MegaPascals, the factors given have to be divided by 1,000,000.)

Pressure units	Multiplier for MPa	Pressure units	Multiplier for MPa
Atmospheres	0.1013	Newtons/cm <sup>2</sup>	0.01
Bar	0.1	Newtons/m <sup>2</sup>	0.000 001
kg/cm <sup>2</sup>	0.09 807	Pascals	0.000 001
kNewton/m <sup>2</sup>	0.001	Tonnes/m <sup>2</sup>	0.009 807
kPa	0.001	Tons(UK)/ft <sup>2</sup>	0.1 073
mBar	0.0001	Tons(US)/ft <sup>2</sup>	0.09 576
Lb/ft <sup>2</sup>	0.00 004 788	Water (feet of)	0.002 989
Lb/in <sup>2</sup> (PSI)	0.006 895	Water (inches of)	0.0 002 491
Mercury (inches of)	0.003 386	Water (mm of)	0.000 009 807
Mercury (mm of)	0.0 001 333		

Table 4.3.11b Pressure unit conversion

The table above shows multiplying factors to convert common pressure units to MPa. This conversion is carried out as follows:

Example: A pressure transducer, connected to input channel 3 gives an output in the range 10 to 100 PSI. The input to a steam equation in maths channel 1 requires the pressure units to be MPa. To convert, set up a further maths channel (e.g. No. 2) as shown below, then use maths channel 2 as the source channel for the pressure input to the steam equation.

The suggested scale low/high values are based on the resulting pressure range in MPa -i.e 0.06895 to 0.6895.

Maths Number 2) Steam Pressure ▾

Value  Units

Function  ▾

Multiply  ▾

by  ▾

Constant Value

Units

Descriptor

Scale low  MPa

Scale high  MPa

Figure 4.3.11i PSI to MPa conversion example

**4.3.11 FUNCTION (Cont.)****SATURATED STEAM HEAT FLOW**

Note: The overall accuracy of a flow measurement installation depends on a number of factors outside the control of the recorder manufacturer. For this reason, the recorder manufacturer takes no responsibility for the accuracy of the results obtained using the mass flow equations implemented in the maths pack.

The equations solved is:

$$QE_t = \left( \frac{\text{Flow}_t}{V_{LT} + \Delta V_T \left( \frac{d}{100} \right)} \right) \left( h_{LT} + \Delta h_T \left( \frac{d}{100} \right) \right)$$

where,  $QE_t$  = Heat energy flow (in kJ/sec), at time 't' (Note 1)

$\text{Flow}_t$  = Measured flow in m<sup>3</sup>/sec (Note 1)

$V_{LT}$  = Volume of liquid per kg of steam (m<sup>3</sup>/kg) at temperature T °C

$\Delta V_T = V_{VT} - V_{LT}$ , where  $V_{VT}$  is the volume of vapour per kg of steam at temperature T °C

d = Dryness factor between 0 (no vapour) and 100 (no liquid)

$h_{LT}$  = Enthalpy of the liquid in kJ/kg at temperature T °C

$\Delta h_T = h_{VT} - h_{LT}$ , where  $h_{VT}$  is the enthalpy of vapour in kJ/kg vapour at temperature T °C

$V_{LT}$  and  $\Delta V_T$ ;  $h_{LT}$  and  $\Delta h_T$  are available from published tables (note 2), but the recorder user needs only to enter 'values' for measured flow and either the temperature or the pressure of the steam. These 'values' can be constants, input channels or maths channels. Figure 4.3.11j and accompanying parameter descriptions give full details.

Maths Number **2) Math 2** ▼  
 Value **987.6543** Units  
 Function **Saturated Steam Heat Flow** ▼  
 Flow **Channel 1** ▼  
 Use **Pressure** ▼  
 Pressure **Channel 2** ▼  
 Dryness **10** %  
 Units **Units**  
 Apply Discard

Figure 4.3.11j Typical Saturated Steam Heat Flow configuration page

**PARAMETERS**

Flow	Select 'Constant' or the number of the channel supplying the measured flow rate. If 'Constant' selected, a further 'box' allows the value for the constant to be entered.
Use	Allows the user to select Temperature (°C) or Pressure (MPa) for the calculation.
Temperature	Appears only if Use = Temperature. Select 'Constant' or the number of the channel supplying the steam temperature. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered.
Pressure (note 3)	Appears only if Use = Pressure. Select 'Constant' or the number of the channel supplying the steam pressure. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered.
Dryness	Enter a value between 0 and 100 to represent the dryness of the steam. 0 = no vapour; 100 = no liquid.

**Notes:**

- 1 The units of kg/sec and m<sup>3</sup>/sec are used above for simplicity. In fact any time unit can be used. For example if the measured flow is in m<sup>3</sup>/hour, then the Mass flow will be in kg/hour.
2. ASME Steam tables 1999, from IAPWF IF97.
3. See 'Saturated Steam Mass Flow' above for details of pressure unit conversion

### 4.3.11 FUNCTION (Cont.)

#### SATURATED STEAM HEAT CONSUMED

Note: The following assumptions are made with regard to this implementation:

1. The condensate return is 100% wet saturated water. No flash steam component is included.
2. The same mass leaves the system as enters it.

Note: The overall accuracy of a flow measurement installation depends on a number of factors outside the control of the recorder manufacturer. For this reason, the recorder manufacturer takes no responsibility for the accuracy of the results obtained using the mass flow equations implemented in the maths pack.

The equations solved is:

$$QE_t = \left( \frac{\text{Flow}_t}{V_{LT1} + \Delta V_{T1} \left( \frac{d}{100} \right)} \right) \left( h_{LT1} + \Delta h_{T1} \left( \frac{d}{100} \right) - h_{LT2} \right)$$

where,  $QE_t$  = Heat energy consumed (in kJ/sec), at time 't' (Note 1)

$\text{Flow}_t$  = Measured flow in  $\text{m}^3/\text{sec}$  (Note 1)

$V_{LT1}$  = Volume of liquid per kg of steam ( $\text{m}^3/\text{kg}$ ) at temperature  $T1$  °C

$\Delta V_{T1} = V_{VT1} - V_{LT1}$ , where  $V_{VT1}$  is the volume of vapour per kg of steam at temperature  $T1$  °C

$d$  = Dryness factor between 0 (no vapour) and 100 (no liquid)

$h_{LT1}$  = Enthalpy of the liquid in kJ/kg at temperature  $T1$  °C

$\Delta h_{T1} = h_{VT1} - h_{LT1}$ , where  $h_{VT1}$  is the enthalpy of vapour in kJ/kg vapour at temperature  $T1$  °C

$h_{LT2}$  = Enthalpy of the condensate liquid in kJ/kg at temperature  $T2$  °C

$V_{LT1}$  and  $\Delta V_{T1}$ ;  $h_{LT1}$ ,  $h_{LT2}$  and  $\Delta h_{T1}$  are available from published tables (note 2), but the recorder user needs only to enter 'values' for measured flow, either the temperature or the pressure of the steam and the temperature of the condensate. These 'values' can be constants, input channels or maths channels. Figure 4.3.11l and accompanying parameter descriptions give full details.

Figure 4.3.11k is a simplified sketch of a typical installation, showing where flow rate, pressure and temperature readings are taken.

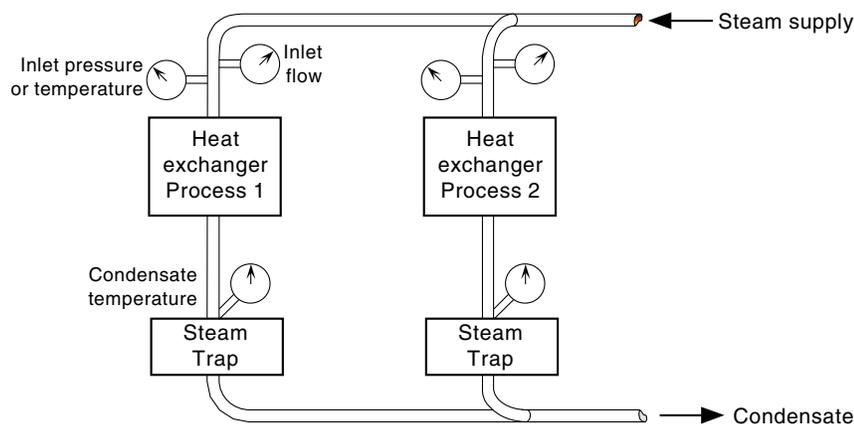


Figure 4.3.11k Measurement transducer - typical locations

#### Notes:

1. The units of kg/sec and  $\text{m}^3/\text{sec}$  are used above for simplicity. In fact any time unit can be used. For example if the measured flow is in  $\text{m}^3/\text{hour}$ , then the Mass flow will be in kg/hour.
2. ASME Steam tables 1999, from IAPWF IF97.

## 4.3.11 FUNCTION (Cont.)

## SATURATED STEAM HEAT CONSUMED (Cont.)

Maths Number    
 Value  Units   
 Function    
 Inlet Flow    
 Use    
 Inlet Pressure    
 Inlet Dryness  %   
 Return Temperature    
 Units

Figure 4.3.11l Typical Saturated Steam Heat Flow configuration page

## PARAMETERS

Inlet Flow	Select 'Constant' or the number of the channel supplying the measured flow rate. If 'Constant' selected, a further 'box' allows the value for the constant to be entered.
Use	Allows the user to select Temperature (°C) or Pressure (MPa) for the calculation.
Inlet Temperature	Appears only if Use = Temperature. Select 'Constant' or the number of the channel supplying the steam temperature. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered.
Inlet Pressure	Appears only if Use = Pressure. Select 'Constant' or the number of the channel supplying the steam pressure. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered.
Inlet Dryness	Enter a value between 0 and 100 to represent the dryness of the steam. 0 = no vapour; 100 = no liquid.
Return Temperature	Select 'Constant' or the number of the channel supplying the condensate temperature. If 'Constant' is selected, a further 'box' allows a value for the constant to be entered.

\*Note: See [Saturated Steam Mass Flow](#), above, for details of pressure unit conversion

## GROUP MKT

Similar in operation to [MKT](#), described above, except that the MKT is derived from a specified group of points rather than a single point.

For each sample period, the maximum and minimum values reached by any point(s) within the specified group are saved, and used as inputs to the Equation.

Maths Number    
 Value  Units   
 Function    
 Source    
 Number of samples    
 Sample interval  s   
 Heat of Activation  kJ/mole   
 Units

Figure 4.3.11m Group MKT configuration page

**4.3.11 FUNCTION (Cont.)****RATE-OF-CHANGE**

The equation solved is:

$$\frac{dPV}{dt} = \frac{In_t - In_{t-p}}{P} \times R$$

Where:

$dPV/dt$  = Rate of change of PV with time

$In_t$  = Input value 'this time'

$In_{t-p}$  = Input value 'last time' (i.e. 'this time' - P)

P = Sample period (i.e. 'this time' - 'last time') in seconds. Only periods that are a multiple of 0.125 seconds are accepted.\*

R = Scaling factor. Generally, R is the number of seconds in the required 'per unit time' value. For example: if R = 1, the rate is 'per second'; if R = 60, the rate is 'per minute'; if R = 3600, the rate is 'per hour'.

\*Note: For channels being read over Modbus, the 'priority intervals' set in the Modbus Master configuration menu (section 4.3.16) may cause the readings to be inaccurate or to be continuously zero. For this reason, a minimum sample period of 1 second is recommended.

Maths Number 1) Math 1 ▾  
 Value 0.0000 Units  
 Reset now  
 Function Rate of change ▾  
 Rate of change of 1) Channel 1 ▾  
 Sample period 0.125 s  
 Rate Scalar 0.125  
 Units Units  
 Apply Discard

Figure 4.3.11n Rate of change configuration menu

**4.3.11 FUNCTION (Cont.)****OXYGEN (O<sub>2</sub>) CORRECTION**

This function carries out O<sub>2</sub> correction of gas measurements for use in Continuous Emissions Monitoring applications. The equation calculated is:

$$\text{Correction} = \frac{20.9\% - \text{Specified O}_2}{20.9\% - \text{Measured O}_2} \times \text{Measured Gas}$$

where,

Specified O<sub>2</sub> = specified oxygen entered as a constant 5-digit value (prescribed for the particular process).

Measured O<sub>2</sub> = measured oxygen, entered as a channel number (gas analyser input) (See application note, below).

Measured Gas = the measured gas, entered as a channel number (gas analyser input).

**APPLICATION NOTE**

Some Authorities allow Oxygen correction to be made ONLY if the Measured Oxygen value is above a limit specified by such Authorities.

For the oxygen correction function to conform with this requirement it is necessary to 'Filter' the Measured Oxygen value using a High Select function, with 'Measured Oxygen' and the Specified Limit constant as its inputs. The output from this function (derived channel number) is then used as the 'Measured oxygen' value.

The screenshot shows a configuration menu for the Oxygen correction function. It contains the following elements:

- Maths Number:** 1) Math 1
- Value:** 0.0000
- Units:** (empty)
- Function:** O2 Correction
- Measured O2:** Channel 1
- Measured Gas:** Channel 2
- Specified O2:** 0
- Units:** Units
- Buttons:** Apply, Discard

Figure 4.3.11p Oxygen correction configuration menu

**4.3.11 FUNCTION (Cont.)****RELATIVE HUMIDITY**

This determines the percentage relative humidity from wet and dry temperature and atmospheric pressure inputs.

Standard temperature and pressure at sea level are defined as 1.01325 Bar, and 15°C. Pressure varies with height as indicated in table 4.3.11c. The standard psychrometric constant is 0.000666 (6.66 x 10<sup>-4</sup>).

The equation solved is:

$$RH = \frac{A_0 + wA_1 + w^2A_2 + w^3A_3 + w^4A_4 + w^5A_5 - \{p \times \text{AbsP}(d - w)\}}{A_0 + dA_1 + d^2A_2 + d^3A_3 + d^4A_4 + d^5A_5}$$

Where:

RH = Percentage relative humidity

$$A_0 = 6.17204663 \times 10^{-3}$$

$$A_1 = 4.28096024 \times 10^{-4}$$

$$A_2 = 1.53342964 \times 10^{-5}$$

$$A_3 = 2.40833685 \times 10^{-7}$$

$$A_4 = 3.04249240 \times 10^{-9}$$

$$A_5 = 2.65867713 \times 10^{-11}$$

p = Psychrometric constant (0.000666)

AbsP = Pressure in Bar (absolute not gauge)

d = Dry bulb temperature in degrees Celsius

w = Wet bulb temperature in degrees Celsius

Geometric height (metres)	Pressure (Bar)
-250	1.04365
0	1.01325
250	0.983576
500	0.954612
750	0.926346
1000	0.898762
1500	0.845596
2000	0.795014

Table 4.3.11 c  
Height versus atmospheric pressure

Maths Number 1) Math 1 ▾  
 Value 0.0000 Units  
 Function Relative Humidity ▾  
 Wet bulb temperature Channel 1 ▾  
 Dry bulb temperature Channel 2 ▾  
 Pressure Channel 3 ▾  
 Psychrometric Constant 6.66E-4  
 Units Units  
 Apply Discard

Figure 4.3.11q Relative humidity configuration menu

### 4.3.11 FUNCTION (Cont.)

#### ZIRCONIA PROBE

A zirconia (oxygen) probe consists of two platinum electrodes bonded to a pellet or cylinder of zirconia. At elevated temperatures, such a probe develops an emf across it which is proportional to probe temperature and to the log of the difference in oxygen partial pressure between its two ends.

#### OXYGEN CONCENTRATION

In order to measure oxygen concentrations, one end of the probe is inserted into the atmosphere to be measured, whilst the other is subjected to a reference atmosphere. For most applications, air provides a suitable reference (reference input = 20.95 for air).

The temperature of the probe is normally measured using a type K or type R thermocouple. The temperature effect on the thermocouple is such, that for successful operation the probe temperature must be greater than 973K (700°C).

The equation solved by the maths function is:

$$P2 = \frac{P1}{10^{\frac{E}{0.0496 \times T}}}$$

where:

P2 = Partial pressure of oxygen in the sampled gas (%)

P1 = partial pressure of oxygen in the reference atmosphere (%) (20.95% for air)

E = Electromotive force (emf) across the probe in mV

T = Probe temperature in Kelvins

Figure 4.3.11r shows the configuration menu. Figure 4.3.11s shows oxygen concentration versus probe emf for various temperatures.

Maths Number	1) Math 1	▼
Value	0.0000	Units
Function	Zirconia Probe	▼
Probe temperature	Channel 1	▼
Probe emf	Channel 2	▼
Reference Partial Pressure	20.95	
Units	Units	
<input type="button" value="Apply"/> <input type="button" value="Discard"/>		

Figure 4.3.11r Zirconia probe function configuration menu

To obtain a useful result, it is necessary to scale correctly.

The channel which is measuring the probe output would normally need to be set to: Input Type = mV; Input low = 0; input high = 100..

A typical temperature-measuring channel might be set up as:

Input Type = Thermocouple; Lin type = Type K; Range low = 273; Range high = 1800, Range units = K.

The maths channel scaling would typically be configured as:

Units = %; Scale Low = 0; Scale High = 5 (for boiler flues) or 10 (for kilns).

4.3.11 FUNCTION (Cont.)

ZIRCONIA PROBE (Cont.)

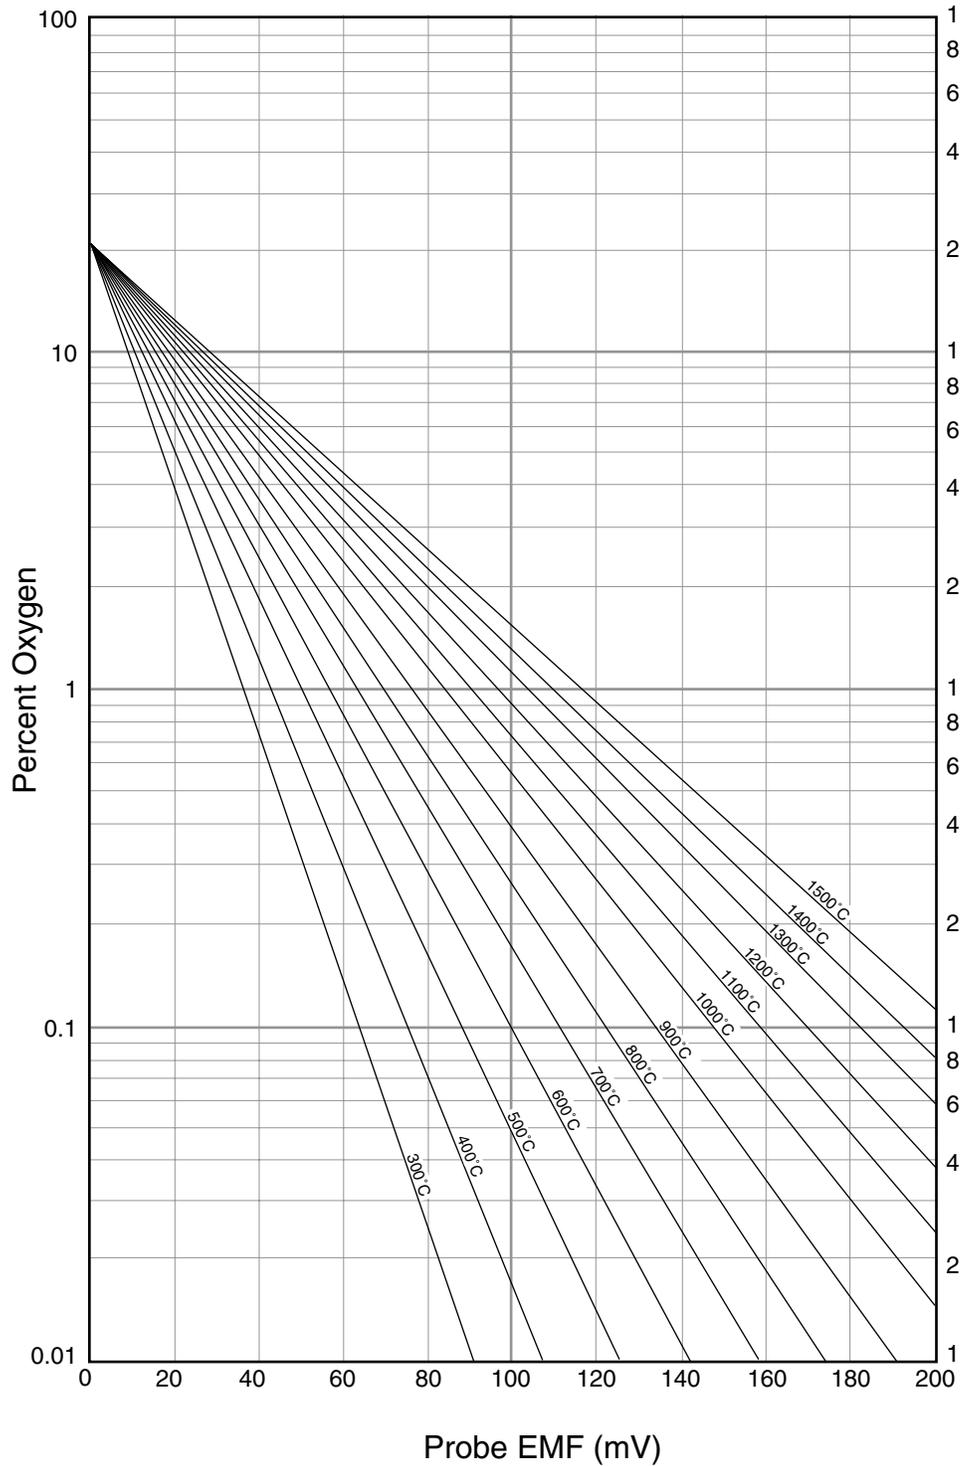


Figure 4.3.11s Probe emf versus temperature

#### 4.3.11 FUNCTION (Cont.)

##### ZIRCONIA PROBE (Cont.)

###### OXYGEN POTENTIAL

The oxygen potential of an atmosphere is a measurement of its ability to oxidise or reduce. For any element, a value of oxygen potential (free energy of formation) is known. Above this value, the material will oxidise, below it, no oxidation will occur. Figure 4.3.11t, below, is a free energy diagram for a number of oxidising processes.

Oxygen potential is given by the equation

$$Op = 0.00457 \times T \times \log Op'$$

Where:  $Op$  = Required oxygen potential (in kilocalories)

$T$  = Probe temperature (in Kelvins)

$Op'$  = Partial pressure of oxygen in the reference atmosphere (in atmospheres)

It can be shown that, because the oxygen potential of air is essentially constant over the range 870 to 1450 kelvins, the zirconia probe output is proportional to the oxygen potential of an atmosphere, according to:


$$E = (10.84 \times T) + 40 \text{ mV (in the range 870 to 1450 K)}$$

Thus, it is possible to measure oxygen potential directly from a zirconia probe, using a standard input channel of the instrument, scaled in units of oxygen potential. A typical configuration might be:

Input Type = mV; Input low = 40; Input high = 1124; Scale low = -100; Scale high = 0; Units kCal. Such a configuration would be suitable over the temperature range 873 to 1473 K (600 to 1200 °C).

4.3.11 FUNCTION (Cont.)

ZIRCONIA PROBE (Cont.)

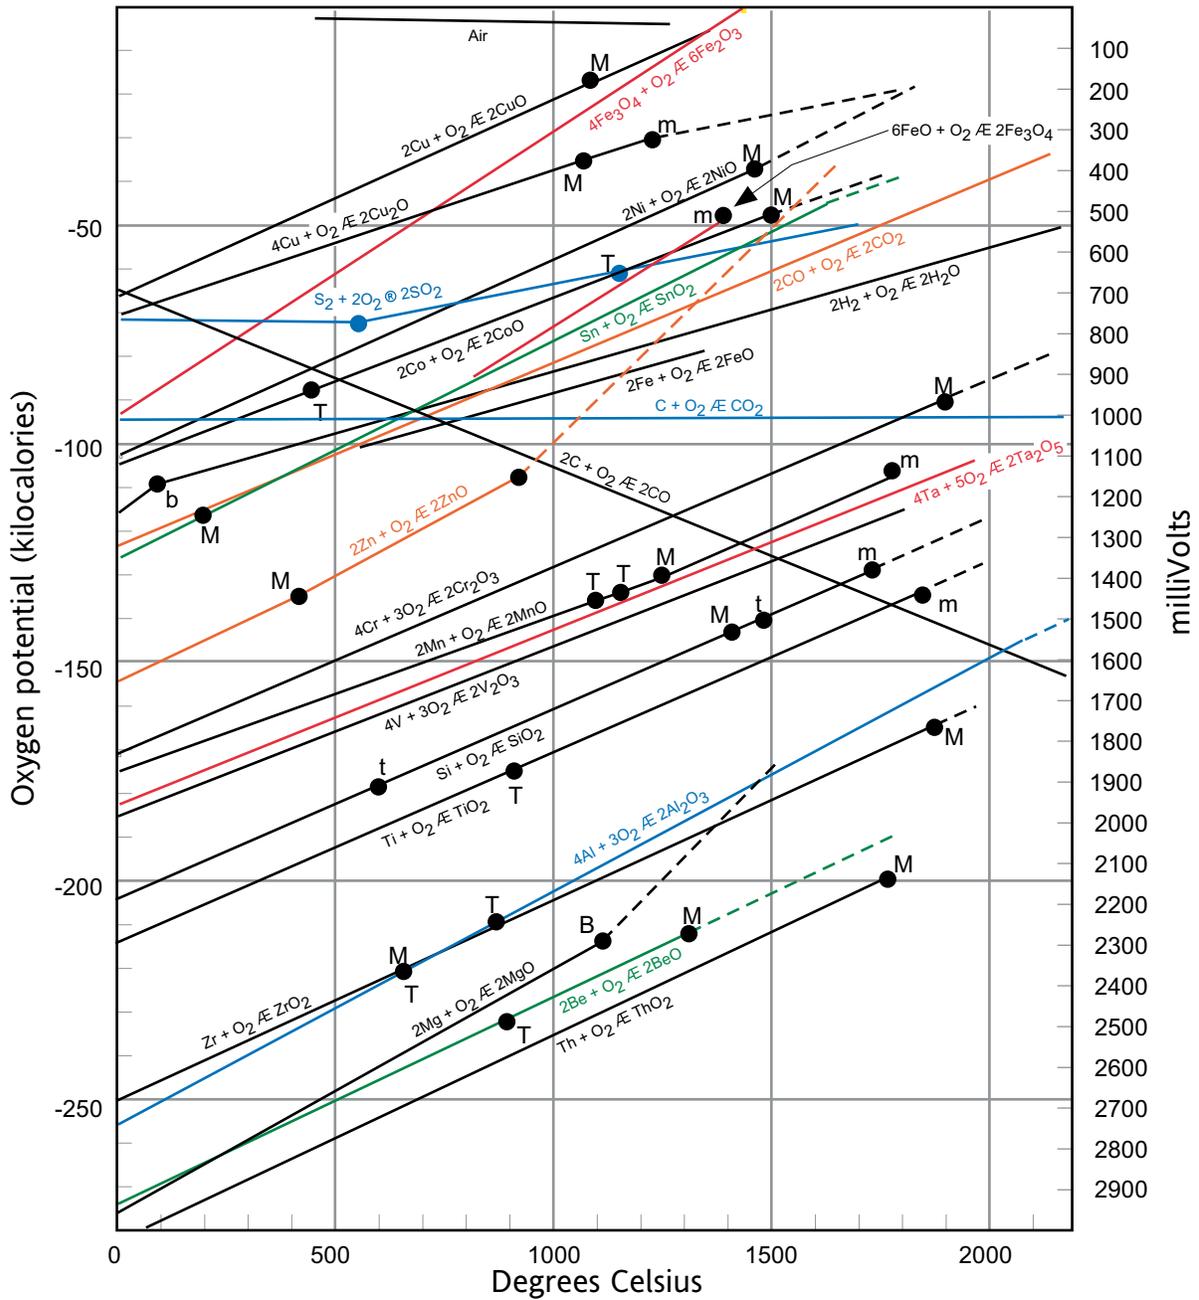

Note:  
Colours serve no purpose in the figure above, other than to simplify interpretation.

Change of state	Element	Oxide
Melting point	M	m
Boiling point	B	b
Sublimation point	S	s
Transition point	T	t

Figure 4.3.11t Free energy diagram

### 4.3.11 FUNCTION (Cont.)

#### GROUP MINIMUM

The following description assumes a group name of 'Furnace 1', which contains four channels with descriptors 'Temp 1', 'Temp 2', 'Temp 3' and 'Temp 4'

The output of the Group Minimum function is the current lowest value of any of the points in the source group. The required source group is selected by picklist. Should a point return a non-valid value, it is excluded from the calculation, and the result of the function is the minimum of the remaining points.

#### DESCRIPTORS

As a part of the Group Minimum function configuration, it is possible to select one of two types of descriptor: 'User Defined' and 'Minimum Channel'. Figure 4.3.11u, below shows the relevant area of the configuration page.

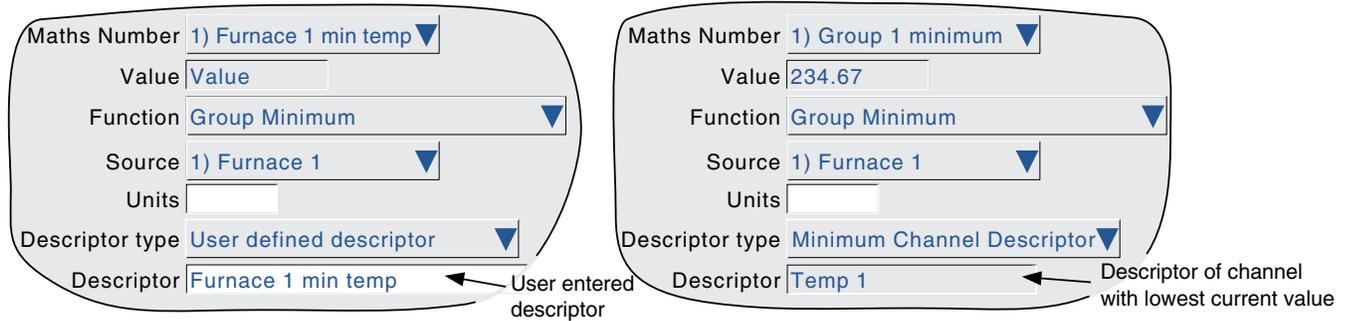


Figure 4.3.11u Group minimum configuration page

#### User Defined Descriptor.

This allows a descriptor to be entered in the normal way. For example 'Furnace 1 min temp'. This descriptor is copied to the Maths Number field at the top of the display page.

#### Minimum Channel Descriptor

This selection causes the descriptor of the point with the instantaneous current lowest value in the group, to become the (non-editable) maths channel descriptor. For example if the four channels in the group (Temp 1 to Temp 4) have the instantaneous values 800, 950, 790 and 873 respectively, then the Descriptor will be 'Temp 3'. Should Temp 3 rise above 800, whilst all the others remain static, then the Descriptor would become 'Temp 1'.

The 'Maths Number' field which normally copies the maths channel descriptor, contains instead the text: 'N) Group N minimum', where 'Group N' is the default name of the source group.

A typical application of the 'Minimum channel descriptor' would be to include the descriptor in a message sent to the chart on a regular basis by a Timer function. [Section 4.3.8](#) describes the entry of the messages, and [section 4.3.14](#) describes the setting up of timers.

(Continued)

### 4.3.11 FUNCTION (Cont.)

#### GROUP MINIMUM (Cont.)

A typical message entry would be:

Message: Lowest temperature is {1} at chan {2}

Replace {1} with: Specified Value

{1} source: Group 1 minimum

Replace {2} with: Specified Descriptor

{2} source: Group 1 Minimum

resulting in a message such as:

```
12/07/06 14:22:06  Lowest temperature is 790.00 Units at chan Temp 3.
```

where 'Units' is the text entered in the Group Minimum maths channel configuration, not that for the input channel, although typically, they would be the same.

---

**Note:** The Group configuration checkboxes for maths channels with 'Minimum Channel Descriptor' selected, are 'greyed' thus preventing such channels from being used as inputs to their own source group. See [section 4.3.2](#) for Group configuration details.

---

### 4.3.11 FUNCTION (Cont.)

#### THERMOCOUPLE CAL CORRECTION

This function allows two correction value tables, each of up to 25 points to be entered. For each point, a correction value can be entered, and the recorder will interpolate between points. The output of this maths function is the sum of the source channel and the two correction values. The Instrument correction values are obtained from a recorder calibration carried out by the user or by an agency; the thermocouple correction values are obtained from the thermocouple test certificate.

Figure 4.3.11v shows a configuration page with an 'Inst Calibration' table of three points, and a 'T/C calibration' table of four points.

Maths Number	1) Math 1
Value	100.00
Units	Units
Function	Thermocouple Cal Correction
Thermocouple	1) Channel 1
Serial number	AX 10023
Inst calibration points	3
Inst cal temp 1	20
Inst cal corr 1	-0.2
Inst cal temp 2	200
Inst cal corr 2	0.2
Inst cal temp 3	400
Inst cal corr 3	-0.18
T/C calibration points	4
T/C cal temp 1	0
T/C cal corr 1	-1.2
T/C cal temp 2	100
T/C cal corr 2	-1.1
T/C cal temp 3	200
T/C cal corr 3	-0.98
T/C cal temp 4	300
T/C cal corr 4	-0.8
Units	Units
Descriptor	Math 1

Apply Discard

Figure 4.3.11v Thermocouple Cal correction configuration page

Thermocouple	Select any real or virtual channel, or 'Constant' as the source channel.
Serial number	Enter an identifier for the thermocouple.
Inst calibration points	Enter the number of Instrument calibration points that are to be used (25 max.).
Inst cal temp n	The nth calibration point where 'n' = 1 to the 'Inst calibration points' value.
Inst cal corr n	The correction value for the nth calibration point.
T/C calibration points	Enter the number of Thermocouple calibration points that are to be used (25 max.).
T/C cal temp n	The nth calibration point where 'n' = 1 to the 'T/C calibration points' value.
T/C cal corr n	The correction value for the nth calibration point.

Other parameters are as described in 'Channel configuration' ([section 4.3.3](#))

#### Notes:

1. For both tables, each 'cal temp' value must be higher than the previous one.
2. For both tables, no correction is applied if the input is less than the minimum table entry, or greater than the maximum table entry.

### 4.3.11 MATHS OPTION (Cont.)

#### MODBUS ADDRESSING

The following table gives hex addresses for maths channel 1. Generally: Maths channel N parameter address = maths channel 1 parameter address + 162 (N-1) (decimal). For full details of the Modbus TCP implementation, see [section 8](#).

Please see the [notes](#) at the end of this section (4.3.11).

#### MATHS CHANNEL CONFIGURATION DATA

##### CHANNEL 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch1 Span high	Upper span value (display full scale)	Scaled	Read only	2FF1 (12273)	1
Ch1 Span low	Lower span value (display 'zero')	Scaled	Read only	2FF2 (12274)	1
Ch1 Zone high	Zone high value (two decimal places)	Scaled	Read only	2FF3 (12275)	1
Ch1 Zone low	Zone low value (two decimal places)	Scaled	Read only	2FF4 (12276)	1
Ch1 PV type	Input type 1 = Analogue input      3 = Totaliser 2 = Maths                    4 = Counter	Enum	Read only	2FF5 (12277)	1
Ch1 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	2FF6 (12278)	1
Ch1 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	2FF7 (12279)	1
Ch1 Units	Units string (up to five characters)	String_5	Read only	2FF8 (12280)	3
Spare				2FFB (12283)	2
Ch1 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	2FFD (12285)	4
Spare				3001 (12289)	4
Ch1 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	3005 (12293)	4
Spare				3009 (12297)	4
Ch1 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	300D (12301)	10
Spare				3017 (12311)	10
Ch1 No of alarms	Number of alarms on this channel	Uint16	Read only	3021 (12321)	1
Ch1 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	3022 (12322)	1
Spare				3023 (12323)	60
Ch1 Alarm 1 enable	Alarm 1 enable 0 = Off                      2 = Latched 1 = Unlatched              3 = Trigger	Enum	Read only	305F (12383)	1
Ch1 Alarm 1 type	Alarm 1 type 0 = Absolute low          1 = Absolute high 2 = Deviation in          3 = Deviation out 4 = Rate of change rise   5 = Rate of change fall	Enum	Read only	3060 (12384)	1
Ch1 Alarm 1 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	3061 (12385)	1
Spare				3062 (12386)	10
Ch1 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable above)	Enum	Read only	306C (12396)	1
Ch1 Alarm 2 type	Alarm 2 type (As alarm 1 type above)	Enum	Read only	306D (12397)	1
Ch1 Alarm 2 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	306E (12398)	1
Spare				306F (12399)	10
Ch1 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	3079 (12409)	1
Ch1 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	307A (12410)	1
Ch1 Alarm 3 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	307B (12411)	1
Spare				307C (12412)	10
Ch1 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	3086 (12422)	1
Ch1 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	3087 (12423)	1
Ch1 Alarm 4 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	3088 (12424)	1
Spare				3089 (12425)	10

**4.3.11 MATHS OPTION (Cont.)****MATHS CHANNEL RUN-TIME DATA**

This table show addresses for maths channel 1 run-time data. Generally: channel N address = channel 1 address + 3(N-1) (decimal) Please see the [notes](#) at the end of this section (4.3.11)

**CHANNEL 1**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch1 value	Current process value (PV)	Scaled	Read/Write	A2BA (41658)	1
Ch1 status	Channel status	Enum	Read only	A2BB (41659)	1
Ch1 Alarms	0 = Good PV                      5 = Ranging error 1 = Channel off                6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	-  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A2BC (41660)	1

**IEEE 32-BIT CHANNEL CONFIGURATION DATA**

The following table shows addresses for the specified 32-bit floating-point values, for Maths channel 1. Generally, Parameter address for channel N = Parameter address for channel 1 + 36(N-1) (decimal).

Please see the [notes](#) at the end of this section (4.3.11)

**CHANNEL 1**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch1 span high	Upper span value (Display full scale)	Float	Read only	DF73 (57203)	2
Ch1 span low	Lower span value (display 'zero')	Float	Read only	DF75 (57205)	2
Ch1 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	DF77 (57207)	2
Ch1 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	DF79 (57209)	2
Ch1 Alarm 1 setpoint	Trigger setpoint for alarm 1 (see note)	Float	Read/Write	DF7B (57211)	2
Ch1 Alarm 2 setpoint	Trigger setpoint for alarm 2 (see note)	Float	Read/Write	DF7D (57213)	2
Ch 1 Alarm 3 setpoint	Trigger setpoint for alarm 3 (see note)	Float	Read/Write	DF7F (57215)	2
Ch 1 Alarm 4 setpoint	Trigger setpoint for alarm 4 (see note)	Float	Read/Write	DF81 (57217)	2
Spare				DF83 (57219)	20

**4.3.11 MATHS OPTION (Cont.)**

IEEE Area Maths Channel run-time data

The following table gives addresses for the specified 32-bit floating-point values, for maths channel 1. Generally, Parameter address for channel N = Parameter address for channel 1 + 4(N-1) (decimal).

Please see the notes below

**CHANNEL 1**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 1 value	Current process value (PV)	Float	Read/Write	F9EF (63983)	2
Channel 1 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F9F1 (63985)	1
Channel 1 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F9F2 (63986)	1

**Notes**

1. A/B Switching: 'B' values are not accessible via Modbus. For this reason, Span, Zone, Colour etc. are all 'A' values.
2. If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.
3. Maths channels 101 onwards are not accessible via Modbus.

### 4.3.12 Totalisers

#### INTRODUCTION

Each totaliser allows the user to maintain a running total of any input channel, or of any maths channel. Using the maths functions, it is possible to totalise combinations of input channels, so the value of two channels added together, or the difference between two channels could be totalised if required. The totaliser equation is :

$$\text{tot}_t = \text{tot}_{t-1} + \frac{\text{ma}_t}{\text{PSF} \times \text{USF}}$$

where  $\text{tot}_t$  = totaliser value this sample\*

$\text{tot}_{t-1}$  = totaliser value last sample\*

$\text{ma}_t$  = value of totalised channel this sample\*

PSF = Period Scaling Factor (See Period scaler description below)

USF = Units Scaling Factor (See Unit scaler description below)

---

\*Note: Time between samples = Recording interval set in Group configuration.  
See 'Update information' in Annex A for details.

---

#### CONFIGURATION

Figure 4.3.12, below, shows a typical (enabled) totaliser configuration page

Totaliser Number	Allows any of the available totalisers to be selected from the picklist, for configuration.
Enable	Allows the user to enable/disable the totaliser.
Value	Shows the (dynamic) current value of the selected totaliser.
Total of	Allows an input channel or a maths channel to be selected as the source to be totalised.
Low Cutoff	The value of the source channel (in engineering units) below which it is not to be totalised.
High Cutoff	The value of the source channel (in engineering units) above which it is not to be totalised.
Units	The totalised units (e.g. m <sup>3</sup> )
Preset	Allows the entry of a 10-character positive, or nine-character negative value from which the totaliser is to start counting. Direction of counting is defined by the sign of the Unit scaler viz: + = increment; - = decrement.
Preset now	Operation of this key initiates the totaliser preset.

## 4.3.12 TOTALISER CONFIGURATION (Cont.)

The screenshot shows the 'Totaliser configuration menu' with the following fields and options:

- Totaliser Number:** 1) Totaliser 1 (dropdown) → Select totaliser number
- Enable:**
- Value:** 123456 (text input) Units (totaliser)
- Total of:** Channel 1 (dropdown) → Select channel etc. to be totalised
- Low cut off:** 0 (text input) ch units
- High cut off:** 999999 (text input) ch units } Units of channel being totalised
- Units:** Units (text input)
- Preset:** 0 (text input) Units (totaliser)
- Preset now:** (button)
- Period scaler:** 1 (text input)
- Unit scaler:** 1 (text input)
- Descriptor:** Totaliser 1 (text input)
- A/B Switching:**
- Scale Low:** 0 (text input) Units (totaliser)
- Scale High:** 1 (text input) Units (totaliser)
- Zone Low:** 1 (text input) %
- Zone High:** 100 (text input) %
- Scale Type:** None (dropdown) → Select None, Linear or Log
- PV format:** Numeric (dropdown) → Select Numeric or Scientific
- Max Decimal Digits:** 4 (text input)
- Colour:** 0 (text input)
- Alarm Number:** 1 (dropdown) → Select Alarm number
- Enable:** Off (dropdown) → Select: Off, Unlatched, Latched, Trigger
- Job Number:** 1 (dropdown) → Select Job number
- Category:** No Action (dropdown) → Select Job category
- Buttons:** Apply, Discard

Figure 4.3.12 Totaliser configuration menu

- Period Scaler** The totaliser equation works in seconds. If the totalised channel units are other than 'per second' a period scaler other than the default (1) must be entered. For example, if the input channel is in litres per hour, then the period scaler would have to be the number of seconds in an hour (3600).
- Unit Scaler** If, for example, the input channel is in litres per hour, the totalised value will be in litres, unless the unit scaler is set to a value other than 1. If it is more convenient, the totalised value can be in thousands of litres by setting the unit scaler to 1000. Setting the unit scaler negative causes the totaliser to decrement rather than increment.
- Scale Low/High** The 'zero' and full scale values for the totaliser, as traced on the screen. If A/B switching is enabled, a second set of scale low and scale high values can be entered. 'A' values are used during normal operation. 'B' values are switched to by job action, as described in [section 4.7](#).

The remaining configuration items are identical with the relevant items in Input Channel configuration ([section 4.3.3](#)) except that Log/Linear scale type is not available. For job information, see [section 4.7](#).

**Note:** Selecting 'High' compression in [Archive configuration](#) may cause very high totaliser values to be displayed incorrectly by the recorder and held incorrectly in the history file. This problem may be solved by moving the relevant point to a group using 'Normal' compression, or by re-scaling the totaliser to read (for example) TeraWatt hours instead of Megawatt hours.

### 4.3.12 (Cont.) TOTALISER MODBUS ADDRESSING

The following table gives addresses for totaliser 1 configuration data. Generally: Totaliser N parameter address = totaliser 1 parameter address + 162 (N-1) (decimal).

For full details of the Modbus TCP implementation, see [section 8](#).

Note: A/B Switching:

B values are not accessible via modbus for this software version. Span, Zone, Colour etc. are therefore all setting A

#### TOTALISER CONFIGURATION DATA

##### TOTALISER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Span high	Upper span value (display full scale)	Scaled	Read only	6F39 (28473)	1
Span low	Lower span value (display 'zero')	Scaled	Read only	6F3A (28474)	1
Zone high	Zone high value (two decimal places)	Scaled	Read only	6F3B (28475)	1
Zone low	Zone low value (two decimal places)	Scaled	Read only	6F3C (28476)	1
PV type	Input type 1 = Analogue input      3 = Totaliser 2 = Maths                    4 = Counter	Enum	Read only	6F3D (28477)	1
Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	6F3E (28478)	1
Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	6F3F (28479)	1
Units	Units string (up to five characters)	String_5	Read only	6F40 (28480)	3
Spare				6F43 (28483)	2
Open string	Open Digital Input string (up to eight characters)	String_8	Read only	6F45 (28485)	4
Spare				6F49 (28489)	4
Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	6F4D (28493)	4
Spare				6F51 (28497)	4
Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	6F55 (28501)	10
Spare				6F5F (28511)	10
No of alarms	Number of alarms on this channel	Uint16	Read only	6F69 (28521)	1
PV format	0 = Numeric 1 = Digital strings	Enum	Read only	6F6A (28522)	1
Spare				6F6B (28523)	60
Alarm 1 enable	Alarm 1 enable 0 = Off                      2 = Latched 1 = Unlatched              3 = Trigger	Enum	Read only	6FA7 (28583)	1
Alarm 1 type	Alarm 1 type 0 = Absolute low            1 = Absolute high 2 = Deviation in            3 = Deviation out 4 = Rate of change rise    5 = Rate of change fall	Enum	Read only	6FA8 (28584)	1
Alarm 1 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	6FA9 (28585)	1
Spare				6FAA (28586)	10
Alarm 2 enable	Alarm 2 enable (As alarm 1 enable above)	Enum	Read only	6FB4 (28596)	1
Alarm 2 type	Alarm 2 type (As alarm 1 type above)	Enum	Read only	6FB5 (28597)	1
Alarm 2 setpoint	Trigger setpoint (see note 1)	Scaled	Read/Write	6FB6 (28598)	1
Spare				6FB7 (28599)	10
Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	6FC1 (28609)	1
Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	6FC2 (28610)	1
Alarm 3 setpoint	Trigger setpoint (see note 1)	Scaled	Read/Write	6FC3 (28611)	1
Spare				6FC4 (28612)	10
Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	6FCE (28622)	1
Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	6FCF (28623)	1
Alarm 4 setpoint	Trigger setpoint (see note 1)	Scaled	Read/Write	6FD0 (28624)	1
Spare				6FD1 (28625)	10

#### Notes:

1. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.
2. If more than 100 Maths channels are configured in 'Virtual channels', then the extra channels occupy totaliser address space such that maths channel 101 occupies totaliser 1 address and so on. Totaliser 1 value is to be found at the first address after the final maths channel. Thus, if there are, for example, 105 maths channels, then Totaliser 1 is found where Totaliser 6 would normally be. This in turn affects counter addressing as counter addresses immediately follow totaliser addresses, and in the above example, Counter 1 value would be found at counter 6 address.

**4.3.12 (Cont.) TOTALISER MODBUS ADDRESSING**

## RUN-TIME DATA

This table shows addresses for totaliser 1. Generally: totaliser N address = totaliser 1 address + 3(N-1) (decimal)

## TOTALISER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Value	Current process value (PV)	Scaled	Read/Write	A3E6 (41958)	1
Status	Channel status 0 = Good PV 1 = Channel off 2 = Over range 3 = Under range 4 = Hardware error	Enum	Read only	A3E7 (41959)	1
Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write Read only Read only Read/Write Read only Read only Read/Write Read only Read only Read/Write	A3E8 (41960)	1

## IEEE 32-BIT CONFIGURATION DATA

The following table gives addresses for the specified 32-bit floating-point values, for Totaliser 1. Generally, Parameter address for totaliser N = Parameter address for totaliser 1 + 36(N-1) (decimal).

## TOTALISER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Span high	Upper span value (Display full scale)	Float	Read only	ED83 (60803)	2
Span low	Lower span value (display 'zero')	Float	Read only	ED85 (60805)	2
Zone high	Zone upper value (% of 'chart' width)	Float	Read only	ED87 (60807)	2
Zone low	Zone lower value (% of 'chart' width)	Float	Read only	ED89 (60809)	2
Alarm 1 setpoint	Trigger setpoint for alarm 1 (see note)	Float	Read/Write	ED8B (60811)	2
Alarm 2 setpoint	Trigger setpoint for alarm 2 (see note)	Float	Read/Write	ED8D (60813)	2
Alarm 3 setpoint	Trigger setpoint for alarm 3 (see note)	Float	Read/Write	ED8F (60815)	2
Alarm 4 setpoint	Trigger setpoint for alarm 4 (see note)	Float	Read/Write	ED91 (60817)	2
Spare				ED93 (60819)	20

Note: If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**4.3.12 (Cont.) TOTALISER MODBUS ADDRESSING**

## IEEE AREA TOTALISER RUN-TIME DATA

The following table gives addresses for the specified 32-bit floating-point values, for totaliser 1. Generally, Parameter address for totaliser N = Parameter address for totaliser 1 + 4(N-1) (decimal).

## TOTALISER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Totaliser 1 value	Current process value (PV)	Float	Read/Write	FB7F (64383)	2
Totaliser 1 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                   7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	FB81 (64385)	1
Totaliser 1 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write Read only Read only Read/Write Read only Read only Read/Write Read only Read only Read/Write	FB82 (64386)	1

### 4.3.13 Counters

#### INTRODUCTION

The virtual channels option introduces a user-configurable number of counters, which can be preset, disabled, incremented or decremented by Job action. If access is permitted, the user can preset the counter to a selected value, as and when required, from the configuration page. See [section 4.7](#) for Job details and [section 4.3.22](#) for a description of virtual channels. If the Batch option is fitted ([section 4.3.10](#)), then batches can be started whenever counter 1 changes value, and if this is done, the current value of counter 1 is appended to batch field 1. (Other counters can be selected for batch initiation, but operation is not guaranteed)

#### CONFIGURATION

Figure 4.3.13 shows a typical (enabled) counter configuration page. The page is accessed from the Root menu/Operator/Config menu.

The screenshot shows a configuration menu for a counter. The parameters and their values are as follows:

- Counter number: 1) Counter 1 (dropdown menu)
- Enable:  (checkbox)
- Value: OFF (text field)
- Units: Units (text field)
- Preset: 0 (text field)
- Buttons: Preset now
- Descriptor: Counter 1 (text field)
- A/B Switching: (checkbox)
- Scale Low: 0 (text field)
- Scale High: 1 (text field)
- Zone Low: 0 (text field)
- Zone High: 100 (text field)
- Scale Type: None (dropdown menu)
- Colour: 0 (text field)
- Alarm Number: 1 (dropdown menu)
- Enable: Off (dropdown menu)
- Job Number: 1 (dropdown menu)
- Category: No Action (dropdown menu)
- Buttons: Apply, Discard

Figure 4.3.13 Typical Counter configuration menu

#### CONFIGURABLE PARAMETERS

Counter number	Allows any of the available counters to be selected for configuration
Enable	Allows the user to start/stop counting by enabling/disabling the counter.
Value	Shows the current dynamic value of the counter
Units	Allows a text string of up to 5 characters to be entered as a units description
Preset	Allows a counter value to be entered for manual or job action preset.
Scale low/high	The values to appear at the scale end points. If A/B switching is enabled, a second set of scale low and scale high values can be entered. 'A' values are used during normal operation. 'B' values are switched to by job action, as described in <a href="#">section 4.7</a> .

The remaining configuration items are as described for input channels in [section 4.3.3](#) except that Log/Linear scale type is not available.

**Note:** An absolute high alarm (for example) with a threshold of 10, will not be triggered until the value exceeds 10 (i.e. counter value = 11). In order to trip the alarm at 10, a threshold lower than 10 must be entered (e.g. threshold = 9.5). A similar situation exists for absolute low and deviation alarms.

## 4.3.13 COUNTERS (Cont.)

## COUNTER MODBUS ADDRESSING

The table below gives addresses for counter 1 configuration data. Generally: Counter N parameter address = counter 1 parameter address + 162 (N-1) (decimal). For full details of the Modbus implementation, see [section 8](#).

Note: A/B Switching:

B values are not accessible via modbus for this software version. Span, Zone, Colour etc. are therefore all setting A

## COUNTER CONFIGURATION DATA

## COUNTER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Span high	Upper span value (display full scale)	Scaled	Read only	8EDD (36573)	1
Span low	Lower span value (display 'zero')	Scaled	Read only	8EDE (36574)	1
Zone high	Zone high value (two decimal places)	Scaled	Read only	8EDF (36575)	1
Zone low	Zone low value (two decimal places)	Scaled	Read only	8EE0 (36576)	1
PV type	Input type 1 = Analogue input      3 = Totaliser 2 = Maths                    4 = Counter	Enum	Read only	8EE1 (36577)	1
Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	8EE2 (36578)	1
Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	8EE3 (36579)	1
Units	Units string (up to five characters)	String_5	Read only	8EE4 (36580)	3
Spare				8EE7 (36583)	2
Open string	Open Digital Input string (up to eight characters)	String_8	Read only	8EE9 (36585)	4
Spare				8EED (36589)	4
Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	8EF1(36593)	4
Spare				8EF5 (36597)	4
Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	8EF9 (36601)	10
Spare				8F03 (36611)	10
No of alarms	Number of alarms on this channel	Uint16	Read only	8F0D (36621)	1
PV format	0 = Numeric 1 = Digital strings	Enum	Read only	8F0E (36622)	1
Spare				8F0F (36623)	60
Alarm 1 enable	Alarm 1 enable 0 = Off                      2 = Latched 1 = Unlatched              3 = Trigger	Enum	Read only	8F4B (36683)	1
Alarm 1 type	Alarm 1 type 0 = Absolute low          1 = Absolute high 2 = Deviation in          3 = Deviation out 4 = Rate of change rise   5 = Rate of change fall	Enum	Read only	8F4C (36684)	1
Alarm 1 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	8F4D (36685)	1
Spare				8F4E (36686)	10
Alarm 2 enable	Alarm 2 enable (As alarm 1 enable above)	Enum	Read only	8F58 (36696)	1
Alarm 2 type	Alarm 2 type (As alarm 1 type above)	Enum	Read only	8F59 (36697)	1
Alarm 2 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	8F5A (36698)	1
Spare				8F5B (36699)	10
Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	8F65 (36709)	1
Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	8F66 (36710)	1
Alarm 3 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	8F67 (36711)	1
Spare				8F68 (36712)	10
Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	8F72 (36722)	1
Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	8F73 (36723)	1
Alarm 4 setpoint	Trigger setpoint (see note)	Scaled	Read/Write	8F74 (36724)	1
Spare				8F75 (36725)	10

## Notes:

1. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.
2. If more than 100 Maths channels are configured in 'Virtual channels', then the extra channels occupy totaliser address space such that maths channel 101 occupies totaliser 1 address and so on. Totaliser 1 value is to be found at the first address after the final maths channel. Thus, if there are, for example, 105 maths channels, then Totaliser 1 is found where Totaliser 6 would normally be. This in turn affects counter addressing as counter addresses immediately follow totaliser addresses, and in the above example, Counter 1 value would be found at counter 6 address.

**4.3.13 COUNTERS (Cont.)**

## RUN-TIME DATA

This table shows addresses for counter 1. Generally: Counter N address = counter 1 address + 3(N-1) (decimal)

## COUNTER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Value	Current process value (PV)	Scaled	Read only	A47C (42108)	1
Status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	A47D (42109)	1
Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write Read only Read only Read/Write Read only Read only Read/Write Read only Read only Read/Write	A47E (42110)	1

## IEEE 32-BIT CONFIGURATION DATA

The following table gives addresses for the specified 32-bit floating-point values, for Counter 1. Generally, Parameter address for counter N = Parameter address for counter 1 + 36(N-1) (decimal).

## COUNTER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Span high	Upper span value (Display full scale)	Float	Read only	F48B (62603)	2
Span low	Lower span value (display 'zero')	Float	Read only	F48D (62605)	2
Zone high	Zone upper value (% of 'chart' width)	Float	Read only	F48F (62607)	2
Zone low	Zone lower value (% of 'chart' width)	Float	Read only	F491 (62609)	2
Alarm 1 setpoint	Trigger setpoint for alarm 1 (see note)	Float	Read/Write	F493 (62611)	2
Alarm 2 setpoint	Trigger setpoint for alarm 2 (see note)	Float	Read/Write	F495 (62613)	2
Alarm 3 setpoint	Trigger setpoint for alarm 3 (see note)	Float	Read/Write	F497 (62615)	2
Alarm 4 setpoint	Trigger setpoint for alarm 4 (see note)	Float	Read/Write	F499 (62617)	2
Spare				F49B (62619)	20

Note: If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**4.3.13 COUNTERS (Cont.)**

## IEEE AREA COUNTER RUN-TIME DATA

The following table gives addresses for the specified 32-bit floating-point values, for counter 1. Generally, Parameter address for counter N = Parameter address for counter 1 + 4(N-1) (decimal).

## COUNTER 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Counter 1 value	Current process value (PV)	Float	Read only	FC47 (64583)	2
Counter 1 status	Channel status	Enum	Read only	FC49 (64585)	1
	0 = Good PV                      5 = Ranging error 1 = Channel off                6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error				
Counter 1 Alarms	Alarm information	Uint16	-	FC4A (64586)	1
	Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare		Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write		

## 4.3.14 Timers

### INTRODUCTION

This feature supplies 12 count-down timers which can be used for general timing purposes. The timers can be either one-shot or repeating, and can be initiated in the following ways:

1. directly by the operator from the configuration page (if access permission is granted),
2. by job action (see [section 4.7](#)),
3. at a predefined time/date,
4. every 'time period', where the 'time period' can be configured to be anything from 1 second to 1 year. For example, setting seconds to '30' and leaving all other fields 'Any', the timer will start every minute on the half minute. Setting seconds to '30' and minutes to '0' will cause the timer to start at 30 seconds past each hour.

**Note:** Times are not adjusted for Daylight Saving changes. Thus if the timer is set to trigger on a daily, weekly, etc, basis, then, during 'Summer Time', the trigger will occur an hour late (i.e. at 01:00 hrs. instead of at midnight).

The full range of jobs is available as described in [section 4.7](#). 'Timer Active' is defined as an internal event trigger ([section 4.3.6](#)).

### CONFIGURATION

Figure 4.3.14 shows a typical timer configuration display. The page is accessed from the Root menu/Operator/Config menu.

Timer number 1) Timer 1 → Select timer

Enable

Remaining 00:00:00

Repeat in 00:00:00

Reset now

Start now

Descriptor Timer 1

Self start

Date Any ▾

Month Any ▾

Hour Midnight ▾

Minute Any ▾

Second Any ▾

Duration 60 Seconds

Repeat after 0 Seconds

Job Number 1 → Select Job number

Category No Action ▾ → Select Job category

Apply Discard

These fields appear only if 'Self start' is enabled.

Figure 4.3.14 Typical timer configuration page

**4.3.14 TIMERS (Cont.)**

## Configurable parameters

Timer number	Allows a specific timer to be selected for configuration
Enable	Allows the user to enable/disable the selected timer
Remaining	This is a dynamic display showing the time remaining in hours:minutes:seconds format.
Repeat in	For repeat timers, shows the time remaining before the repeat is initiated. Display is 00:00:00 whilst timer is counting down.
Reset now	Allows a running timer to be reset to 00:00:00.
Start now	Allows the operator to initiate the timer.
Descriptor	Allows a descriptor to be entered for the timer.
Self Start	If enabled, this causes date and time selection fields to appear as shown in figure 4.3.14 above. Date: allows a day number to be selected from a picklist of 1 to N and 'Any', where N is the maximum number of days in the selected month. Month: allows a month number to be entered from a picklist of 1 to 12 and 'Any'. Hour: allows an hour number to be selected from a picklist of 1 to 23, 'Midnight' and 'Any'. Minute: allows a minutes number to be entered from a picklist of 0 to 59 and 'Any'. Seconds: allows a seconds value to be entered from a picklist of 0 to 59 and 'Any'.
Duration	Allows the user to enter a count-down time period in seconds.
Repeat after	Allows the user to enter a repeat rate. It should be noted that the repeat value includes the duration time. For example, to time down from 50 seconds, every minute, a 'Duration' value of 50 seconds should be entered, with a 'Repeat after' value of 60 seconds (not 10 seconds).

---

Note: If Month = 'Any', and Day = 31, then the timer will not be triggered in February, April, June, September or November. Similarly, if Day = 30, the timer will not be triggered in February, and so on.

---

Job configuration is as described in [section 4.7](#).

**SELF-START EXAMPLE**

To preset Totaliser number 1 to zero, daily, at midnight:

In totaliser configuration, enter 0 as the Preset value for Totaliser 1.

In timer configuration, select:

1. Timer number Timer 1
2. Enable Enabled
3. Self start Enabled
4. Date Any
5. Month Any
6. Hour Midnight
7. Minute 0
8. Second 0
9. Duration 0.125
10. Repeat after 0
11. Job number 1
12. Job category Totaliser
13. Action Preset
14. Totaliser Totaliser 1
15. On Active

### 4.3.15 Connections

#### INTRODUCTION

This allows the serial communications ports (RJ45 connectors) of the recorder to be configured. Two modes of operation are available: ASCII (INPUT) and Modbus.

#### ASCII (INPUT)

This mode allows the recorder to receive simple ASCII messages from, for example, barcode readers, Programmable Logic Controllers (PLCs), Global Positioning Systems (GPSs) (NMEA-0183 protocol) etc. Messages are sent to as many groups as are set up to receive them, and become a part of these groups' histories, and appear on vertical and horizontal trend displays in the following format:

23/08/05 10:25:06 (Serial), Message of up to 85 characters

Date and time      Source      Message

#### MODBUS RTU

This allows the recorder's serial communications 'port' to be used as Modbus master or Modbus slave. When acting as a master, the unit can communicate with up to either 16 slaves (standard) or 32 slaves (option). Use of the Serial port is complementary to the use of Ethernet connections.

---

*Note: When configuring a unit as a Modbus slave, it is recommended that the Instrument and Point Configurations give easily identifiable instrument and point names (descriptors).*

---

#### TERMINATION AND BIASING

If the communications line is left open-ended, the end of the cable acts as a reflector, returning what can appear to be 'true' data signals back down the line. A receiver cannot distinguish between 'true' and reflected data, with the result that the 'true' data is corrupted. In order to avoid this, a termination resistor is fitted across the line at the final instrument. For this instrument, a terminating resistor can be switched into or out of circuit, as shown in [section 2.2.2](#).

[Section 2.2.2](#) also gives a pinout for the RJ45 connectors.

## 4.3.15 CONNECTIONS (Cont.)

## CONFIGURATION

The default (ASCII) Serial comms configuration menu is as shown in figure 4.3.15a below. Figures 4.3.15b and 4.3.15c show the alternative menus for Modbus slave and Modbus master selections, respectively.

## Notes:

1. The serial communications hardware is limited to one start bit.
2. The master/slave selections made here, must match the switch settings described in [section 2.2.2](#).

The screenshot displays the Serial Communications configuration menu for ASCII input. The settings are as follows:

- Port: Serial 1 (dropdown menu)
- Link Error Count: 0
- Reset Error Count: (button)
- Protocol: ASCII (input) (dropdown menu)
- Connection: EIA232 (dropdown menu)
- Baud Rate: 19200 (dropdown menu) - Select required Baud rate.
- Stop Bits: 1 (dropdown menu) - Select 1 or 2
- Parity: None (dropdown menu) - Select None, Odd or Even
- Data Bits: 8 (dropdown menu) - Select 7 or 8
- Timeout: 250 ms - Enter required Timeout value
- First Start Char: 0
- Second Start Char: 0
- First End Char: 13
- Second End Char: 10
- Filter:
- Filter 1: GPGLL
- Timeout 1: 600 s
- Filter 2: GPZDA
- Timeout 2: 600 s
- Filter 3: (empty)
- Timeout 3: 0 s
- Group 1:
- Group 2:
- Group 3:
- Group 4:
- Group 5:
- Group 6:

Additional instructions and labels:

- Enter decimal ASCII value between 0 and 127. (0 = no character.) See User Guide, (section B6) for list.
- ASCII Input Text Filters.
- Select Group(s) to receive messages ( = Receive)

Buttons: Apply, Discard

Figure 4.3.15a Serial Communications configuration menu (ASCII input)

### 4.3.15 CONNECTIONS (Cont.)

Port **Serial 1** Select port

Link Error Count **0**

Reset Error Count

Protocol **Modbus Slave**

Connection **EIA4XX**

Baud Rate **19200** Select required Baud rate.

Stop Bits **1** Select 1 or 2

Parity **None** Select None, Odd or Even

Apply Discard

Figure 4.3.15b

Serial Communications configuration menu (Modbus slave)

Port **Serial 1** Select port

Link Error Count **0**

Reset Error Count

Protocol **Modbus Master**

Connection **EIA4XX**

Baud Rate **19200** Select required Baud rate.

Stop Bits **1** Select 1 or 2

Parity **None** Select None, Odd or Even

Timeout **1000** ms

Enable error code B

Enable Talk Through

Apply Discard

Figure 4.3.15c

Serial Communications configuration menu (Modbus master)

## CONFIGURATION PARAMETERS

### SERIAL PORT

Allows the user to select Serial 1 or Serial 2 port for configuration. See [figure 2.2.2b](#) for port locations.

### LINK ERROR COUNT

A Link error count is provided for every slave. The count is incremented every time there is a framing error, a parity error or a Cyclic redundancy check (CRC) error. The 'Reset Error Count' key is used to reset the count to zero.

### PROTOCOL

ASCII (input), Modbus Slave, Modbus Master can be selected. Master or Slave selections must match the switch settings for the relevant port, as shown in [table 2.2.2b](#).

### CONNECTION

Only EIA485 available as transmission standard. Three-wire or Five-wire working is selected by means of a switch accessed from the rear of the instrument, as described in [section 2.2.2](#).

### BAUD RATE

Allows a Baud rate to be chosen from a picklist of: 300, 600, 1200, 4800, 9600, 19200, 38400. This value must be the same for all devices in the serial link.

### STOP BITS

Selectable as 1 or 2. This value must be the same for all devices in the serial link.

### PARITY

Allows Parity to be chosen from a pick list of: None, Odd, Even. This value must be the same for all devices in the serial link.

### DATA BITS

For ASCII (input) protocol only, selectable as 7 or 8. This value must be the same for all devices in the serial link.

#### 4.3.15 CONFIGURATION PARAMETERS (Cont.)

##### TIMEOUT

For ASCII (input) protocol, this allows a timeout value to be entered of between 50 and 3000 msec inclusive. A value of 0 = no timeout. See also 'Messaging information', below.

For Modbus Master protocol, this allows a timeout to be entered of between 100 and 9,999 msec (inclusive), An error code B is generated (if so configured - see 'Enable Error Code B' below). If the master has not received a reply to a request within the timeout period. For slaves configured with their own timeout periods, these will override the entry here.

##### MESSAGE START/END CHARACTERS

For ASCII (input) protocol only, the message can be prefixed by 0, 1 or 2 specific characters and can be suffixed by 0, 1 or 2 specific characters. The First and Second Start and End characters are entered as decimal ASCII codes between 0 and 127 as required. 0 = no character, 10 = Line Feed; 13 = Carriage Return. See [Annex B](#) for a list of ASCII codes. If only one start or end character is required, the first character must be entered, and the second character be entered as zero.

##### FILTERS

For information on ASCII input text filters, refer to section 9.3.3.

##### GROUP SELECTION

For ASCII input protocol, this allows groups to be deselected/selected for receipt of the messages. A checked box indicates that the associated group will receive the messages.

##### ENABLE ERROR CODE B

For Modbus Master only.

If enabled, this causes an error code B to be generated in the event of a timeout or a Cyclic Redundancy Check (CRC) error.

##### ENABLE TALK THROUGH

For Modbus Master only.

If disabled, this prevents 'external' (Ethernet) masters from accessing the slaves connected to this instrument. (I.E. only this instrument can act as a master to its slaves.)

#### MESSAGING INFORMATION

Characters are read into a buffer, until the end of message characters are received, or until the time-since-last-character exceeds the entered Timeout value. Date, Time and '(Serial)' are then prefixed to the message, which is then sent to the selected groups. The date and time relate to when the first buffered character was received. If Start-of-message characters are configured, characters will be read into the buffer only after these characters have been received.

The buffer holds up to 120 characters plus date/time etc. and start/end-of-message characters. Further characters are discarded until End-of-message is received, or timeout occurs.

Message characters below Hex 20 (decimal 32) will be replaced by question marks (?).

Message characters above Hex 7F (decimal 127) will be treated as Unicode.

### 4.3.15 CONFIGURATION PARAMETERS (Cont.)

#### MESSAGING RULES

- 1 If no start-of-message characters are configured, but a timeout value other than 0 has been entered, the new message will start after the timeout period has elapsed.
- 2 If no end-of-message characters are configured, but a timeout value other than 0 has been entered, the new message will end after the timeout period has elapsed.
- 3 If start-of-message characters are configured, and a timeout value other than 0 has been entered, all characters prior to the Start-of-message characters are ignored.
- 4 If start-of-message characters are configured but neither end characters nor timeout have been configured, then this is an invalid configuration.  
Should this configuration be a requirement, if the same characters are entered as end-of-message characters instead, then each message will be sent to the groups when the next message is received.
- 5 If no start or end-of-message characters are entered and no timeout value is entered, all received characters are discarded
- 6 If a received message is deemed to be corrupt, it is discarded and the software will await a further message.
- 7 Start and End-of-message characters are removed before the messages are sent to the groups.

#### MODBUS ADDRESS

When acting as a slave, the recorder will respond both to the address set in Instrument Configuration ([section 4.3.1](#)) and to address 255 (used by some network scanning software).

### 4.3.16 Master comms

#### INTRODUCTION

This option allows the unit to be used as a Modbus Master unit, as well as a Modbus Slave. The instrument can communicate using the Ethernet (RJ45) connection, or by means of one of the serial communications ports (see [section 4.3.15](#) for details) or both simultaneously. The serial comms port must be set to Master both in Connections ([section 4.3.15](#)) and at the switch, accessed from the rear of the recorder as described in [section 2.2.2](#).

Master Configuration consists of entering a Modbus Address, and, for Ethernet connection, an IP address or DNS path name for each of the available remote devices which are to be used as slaves. The configuration also allows three different priority intervals to be entered, and read/write parameters can be configured to be accessed at one of these three rates.

The unit comes complete with a number of 'Profiles' for known instruments. This allows it to 'recognise' an instrument as a slave type, and simplifies the read/write process for 'known' instruments, by presenting commonly used Parameters by name. Other parameters can be accessed by entering the relevant register's address. The unit will also communicate with 'third party' instruments, but in such a case, the user has to define the required read/write register addresses derived from data supplied by the manufacturer of the instrument.

Once the remote unit has been recognised by the master, the master and slave units can be configured to carry out the following:

1. By setting a master input channel to: Type = 'Master Comms', selected parameters can be read by the master from a selected slave. This master channel can then be included in display groups, can have alarm setpoints, run jobs etc., independently of the original channel. In a similar way, maths functions can be read by setting a master Maths channel to: Function = 'Master Comms'.
2. The 'Demand Write' feature can write values to a selected parameter in a selected slave, as a one-shot update. Demand Writes can be initiated by operator action, or they can be initiated by job action or (if the User Screens option is fitted), by Operator Key action.
3. For slaves whose input and/or maths channels can be set to 'Modbus Comms Input', the master's '[Output channels](#)' feature can copy master input or maths channels to a selected slave, as a continuous process.

---

#### Notes

1. If reading from or writing to more than one instrument, it is recommended that some thought be given to instrument and point descriptors, as confusion can easily arise. This is particularly true if Bridge is connected to a master which has several slaves attached.
  2. If 'Link error' occurs whilst connected to a Modbus slave, the slave's delay parameter (if any) should be enabled. If no such parameter is available, the slave's manufacturer should be contacted for advice.
- 

An [example configuration](#) is given later in this section showing how to set up a master unit to read inputs from two slaves, and to re-write one of these channels to a third slave.

## 4.3.16 MASTER COMMS (Cont.)

## MASTER COMMS CONFIGURATION MENU

A typical master comms configuration page is shown in figure 4.3.16a, below.

Note: For the sake of completeness, the figure below shows all possible fields, even though some are actually mutually exclusive (e.g. 'Login Required' does not appear for 'Profile = Third party').

High Priority interval  Seconds  
 Medium priority interval  Seconds  
 Low priority interval  Seconds  
 Store diagnostics   
 Slave  ▾  
 Enable   
 Online   
 Descriptor   
 Network  ▾ ← Select 'Ethernet' or Serial port  
 IP Address  ← IP Address field appears only if 'Ethernet' selected as Network type.  
 Modbus address   
  
 Profile  ▾  
 Timeout  ms  
 Retry   
 Max Block Size  Register  
 Share Socket   
 Login Required  ← Appears only if Profile slave type supports login security  
 Username   
 Password  } Appear only if 'Login Required' is selected

Figure 4.3.16a Master Comms configuration menu.

## CONFIGURABLE PARAMETERS

- |                    |  |
|--------------------|--|
| Priority intervals | This allows three levels of update rate to be entered. These rates are used in point configuration, to define how often a value is read. In order to optimise the performance of the serial link, it is recommended that the slowest rate consistent with requirements be selected. The interval is entered in multiples of 1/8th second (0.125 seconds). In some cases, two update rates can be defined. For example, when reading a Process Value (PV) channel from a slave, it is possible to set the reading frequency of the PV to the highest rate available, but other, less frequently changing, values (scale low/high for example) can be read at a slower rate. |
| Store Diagnostics  | If enabled, <a href="#">diagnostics information</a> is kept in non-volatile memory, and is thus retained during power cycling.   |
| Slave              | A picklist of slaves, initially called 'Remote Device N'. When the device is detected, this name changes to the detected Instrument's Descriptor (if any) or a default tag. The slave name can be edited in the 'Descriptor' entry field below.  |

**4.3.16 MASTER COMMS (Cont.)****CONFIGURABLE PARAMETERS (Cont.)**

Enable	If this window is not selected, none of the following fields appears, and the Remote Device cannot be accessed.
Online	If enabled, normal communications with the slave are carried out. When disabled, the connection with the slave is terminated.
Descriptor	Allows a new name for the slave device to be entered. (This name is used only within the master - it does not overwrite the Instrument Descriptor in the slave itself).
Network	Select Ethernet or a Serial port. All the slaves on the link must have the same communications parameter values (e.g. Baud Rate) as are set for the master. See <a href="#">Section 4.3.15</a> for Serial Communications Configuration details.

---

**Note:** Serial ports appear in the selection list only if 'Protocol' has been set to 'Modbus Master' in the Serial Comms Configuration ([section 4.3.15](#)). The relevant port must also be set to 'Master' at the switch described in [section 2.2.2](#).

---

IP Address	This field appears only if Network = Ethernet. This must match the IP address or DNS name of the slave. For this unit, this information is to be found in Network/Address and Network/Name respectively. For other instruments, refer to the documentation supplied with those instruments.
Modbus Address	For Ethernet links, Modbus addresses are associated with the IP address. This means that, for any IP address, the range of Modbus addresses used for slaves can (if required) be the same as the range used by a unit with a different IP address. For Serial communications, each unit (including the master) must have a unique Modbus address. For the unit described by this manual, the Modbus address is accessed in 'Instrument' configuration ( <a href="#">section 4.3.1</a> ). For other instrument the documentation supplied with those instruments should be referred to.
Profile	A pick list of supported instrument types. Third party is used as a default, and for non-listed instrument types. This field is updated automatically if the slave is Detected. (If an instrument is detected and is configured to use more than 100 math channels in the slave instrument - see <a href="#">section 4.3.22</a> ).
Timeout	Allows a timeout period to be set for the read/write process. See 'Retry' below, and 'Disable Retries' in <a href="#">section 4.3.18</a> .
Retry	Allows entry of the number of times the master attempts to get a response from the slave, before aborting. If not successful, an error message appears.
Max Block size	Always 124 for supported instruments, this field is editable for 'Third party' instruments. The maximum block length supported by a particular instrument is found from that instrument's documentation.
Share Socket	This item appears only for slaves with Network = Ethernet. When enabled, allows a reduction in the number of links between a master and multiple slaves. See 'Share Socket', below for more details. Generally, it is recommended that this item is left at the default for the particular slave being configured.
Login Required	Some slaves require a user name and password to be entered before access can be gained. The user name and password set here in the master Comms configuration must match those of the slave. For this type of instrument, the user name is the 'Remote user name' and the password is the 'Remote password' set up in the Security/Access configuration ( <a href="#">section 4.4.1</a> ). Password is necessary only when Modbus security disabled is not selected in 'Instrument' configuration ( <a href="#">section 4.3.1</a> ). For other types of instrument, refer to the documentation supplied with that instrument.
Username/Password	See Login Required, immediately above

**DETECT THIS SLAVE**

This button causes the master to search for the slave set up on this configuration page. If the search is successful, the Remote Device name changes to the instrument name or default tag.

## 4.3.16 MASTER COMMS (Cont.)

## DETECT ALL SLAVES

Figure 4.3.16b Detect all slaves set-up menu

The 'Detect All Slaves' key is used to detect any slaves connected to the system, within certain search parameters.

Operation of the button calls a display page (figure 4.3.16b) which allows the entry of a start IP address, a range of IP addresses, and a range of Modbus addresses. In the above example, the search is carried out for all devices with Modbus addresses in the range 1 to 2 inclusive, associated with instruments which have IP addresses between 149.121.130.200 and 149.121.130.249 inclusive.

## PARAMETERS AND KEYS

Network	Allows the user to select a network to search over.
Overwrite existing slaves	The Auto Detect results page (see below) lists all the instruments found within the search parameters, along with a 'tick box' for each one. Each instrument whose tick box is enabled is assigned to the 'Remote Device' list in the Master Comms configuration page. If 'Overwrite existing slaves' is enabled, then newly found instruments will temporarily over write instruments previously configured there. The list becomes permanent when the Modbus configuration page 'Apply' key is operated, but any of the slaves can be edited, if required, prior to this.
Timeout	The search for a slave is aborted if it does not respond within this time, and the search moves on to the next slave.
From Node	The start address for the search
For (nodes)	The number of contiguous addresses to be searched starting with the 'From Node' address.
Modbus Address	The lowest Modbus address for the search. The search will seek all slaves whose Modbus Address lies between the value entered here, and the value entered in the 'To' field, below, inclusive.
To	The highest Modbus address to be included in the search.
Abort	This key allows the user to quit the search
Start	Once the search information has been entered, operation of the Start key causes the unit to search for any instruments which respond to the search criteria.
Discard	Returns to the Modbus configuration page, without saving.
Apply	Saves the details of the detected slaves to the Modbus configuration page. The changes to the configuration page are temporary
Re-scan	Allows the user to repeat the scan, with the same or edited search criteria.

### 4.3.16 MASTER COMMS (Cont.)

#### AUTO DETECT PAGE

The 'Autodetect' page displays the progress of the search. Once the search is complete, the results are displayed as shown in figure 4.3.16c, below. For example, the top two lines show that devices with Modbus addresses 1 and 2 were detected at IP address 149.121.130.211.

For instrument types similar to those described in this manual, the Instrument Descriptor is displayed in the list. For other instruments, if the type is recognised, then the instrument type ID (e.g. model number) appears. As can be seen from the figure, the instrument descriptors for the first two detected instruments have been edited ([section 4.3.1](#)); the second two have the default descriptor (Instrument), and the final one is a model 2747.

**Note:** The model number '2747' is used for illustrative purposes only. If such an instrument type exists, it should not be assumed from the above that it will be recognised by the auto detect system.

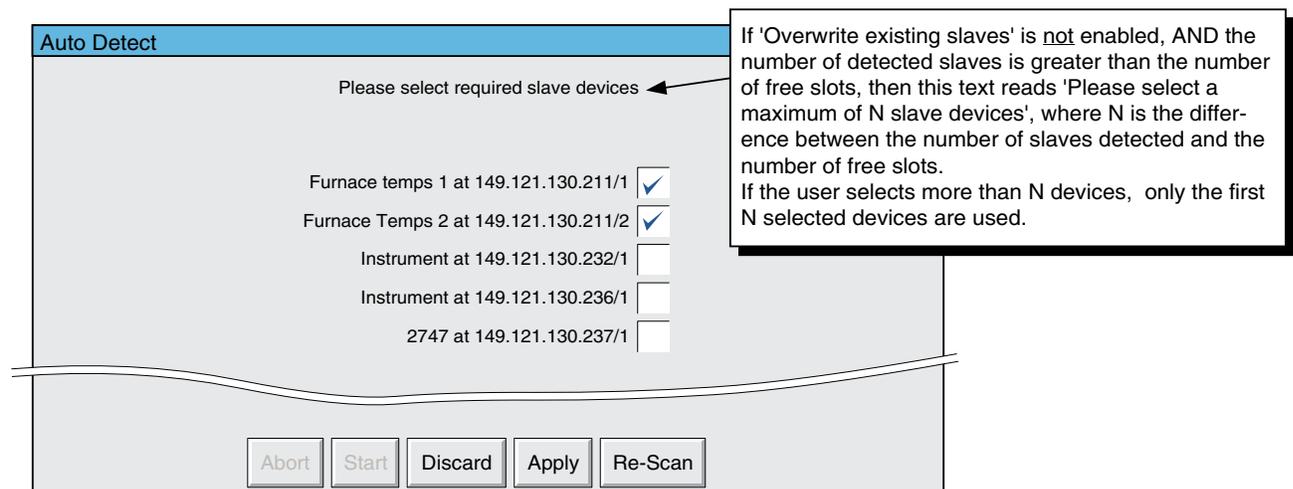


Figure 4.3.16c Auto detect results page

As can be seen from the figure above, each instrument has a tick box associated with it. The user enables those instruments which are to be included in the Slave List, by touching the relevant boxes. Operation of 'Apply' then causes the selected instruments to be incorporated into the Slave list in the Modbus Master configuration page.

If 'Overwrite existing slaves' is enabled, existing slaves are overwritten starting with slave 1 in the list.

If 'Overwrite existing slaves' is not enabled, then new slaves selected from the Auto detect page will be inserted into the free slots in the slave list.

**Note:** A 'free slot' is either an empty slot, or a slot containing a slave which has not yet been enabled.

### 4.3.16 MASTER COMMS (Cont.)

#### SHARE SOCKET

This advanced configuration feature is used to improve communications performance, to take advantage of the higher speed of Ethernet links compared with 'Serial' links. It is recommended that the default value (enabled or disabled according to type) be left as despatched from the factory, unless there is good reason to change it.

A socket is the name given to a logical connection between two Ethernet nodes. The establishment and maintenance of sockets is controlled by the recorder, and the user has no control other than to enable or disable the 'Share sockets' facility. The share socket feature is available only for slaves configured as Ethernet devices (i.e. Network = Ethernet).

The upper illustration in figure 4.3.16d, shows master 1 communicating with slaves 1 to n via an Ethernet-to-Serial converter, called a Modbus Gateway. In such a case, it is more efficient to allow all the slaves to communicate over one link between master 1 and master 2, than to establish individual links between master 1 and each of the slaves. In this example, 'Share sockets' should be enabled.

The lower illustration show a similar situation, except that master 2 is not just a gateway, but is a measuring device in its own right. In such a case, Socket 1 is used for high speed communications between master 1 and master 2, and Socket 2 is used to link master 1 to the slaves individually. In this case 'Share Sockets' should be disabled for master 2, and enabled for all other devices.

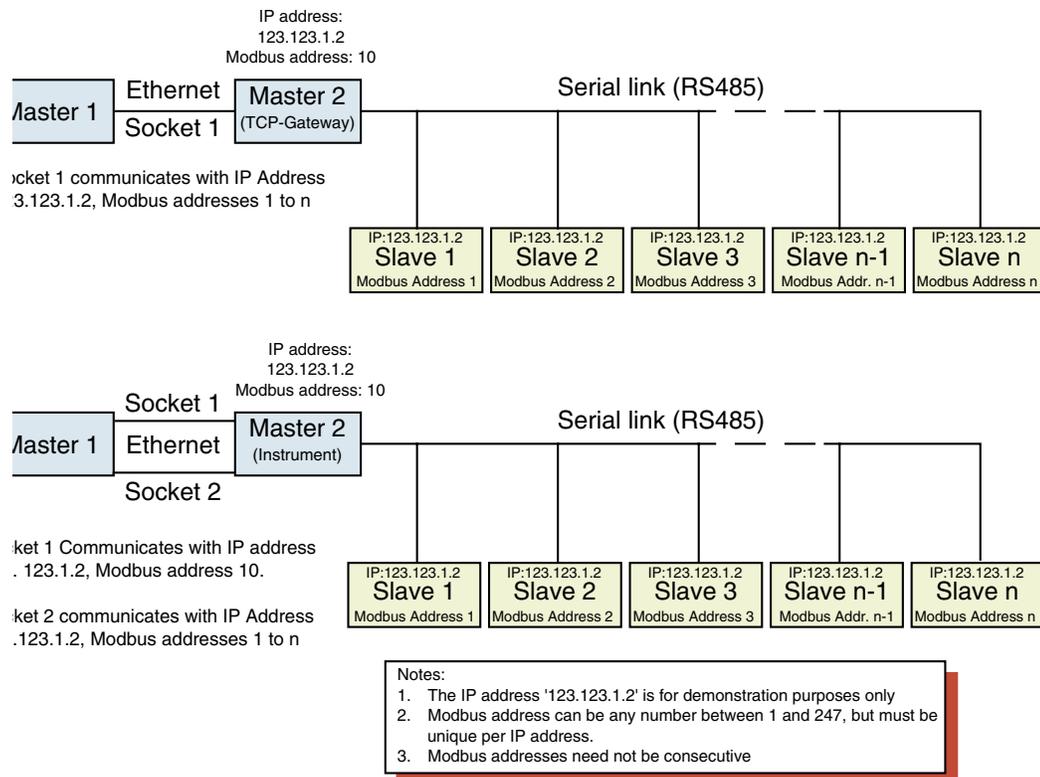


Figure 4.3.16d Share socket examples

### 4.3.16 MASTER COMMS (Cont.)

#### MASTER COMMS CHANNEL CONFIGURATION

This display page, shown below, is called from the Operator/Config/Channels as described in [section 4.3.3](#). A similar page appears in the Operator/Config/Maths configuration described in [section 4.3.11](#). The actual picklists which appear, depend entirely on the type or model of instrument being read from. It is assumed that the user knows which parameters are to be accessed.

The following sections describe

- a typical input channel configuration page with 'Master Comms' selected as Input Type, and a recorder or data acquisition unit as slave.
- a typical input channel configuration page with 'Master Comms' selected as Input Type for a slave controller.
- the situation where 'User Defined' has been selected as Parameter. In such a case, the user must determine the required register number from the documentation supplied with the slave.

**Note:** For completeness, figures 4.3.16e, 4.3.16f and 4.3.16g show all possible configuration fields. The fields that actually appear are slave-model, and parameter dependent.

#### RECORDER/DATA ACQUISITION UNIT CONFIGURABLE PARAMETERS

Channel Number 1) Read 1 ▾ ← Copies descriptor entry

Value -0.4670 Unadjusted

Input Type Master Comms ▾

Slave 1) Furn 1 Recorder ▾ ← Select required slave

Digital

Parameter Process Value ▾ ← Select required slave parameter type

Scaling None ▾ ← Appears only for some slave types

Point Type Channel ▾ } Select Required Slave parameter point

Point Number 1

Process Value Medium Priority ▾ ← Select iteration rate for parameter update

PV Format Numeric ▾

Span Low 0 Units

Span High 1 Units

Zone Low 0 %

Zone High 100 %

Max Decimal Digits 4

Colour 0

Units Units

Descriptor Read 1

Alarm Number 1

Enable Trigger ▾

Apply Discard

Figure 4.3.16e Channel configuration page-Typical Recorder

### 4.3.16 MASTER COMMS (Cont.)

#### RECORDER/DAQ CONFIGURABLE PARAMETERS (Cont.)

##### TYPICAL RECORDER PARAMETERS

The following parameters may be accessible from a recorder or data acquisition unit, depending on model number. Figure 4.3.16e, above, refers

---

##### Notes:

1. Items such as Scale, Zone and descriptor may be editable (white background) or not (grey background), depending on model.
  2. This description includes only those items which are unique to input channels with Input Type = Master Comms. For other items please see [section 4.3.3](#).
- 

Channel Number	Allows the user to select the number of the channel to be configured. As soon as Modbus master is selected as input type, the display changes from 'Channel 1' (for example) to 'Read 1'. This legend stays as 'Read 1' until a descriptor is entered (below), which immediately overwrites it.
Slave	Allows the user to select (from a picklist), the slave from which data is to be retrieved. The picklist contains all the Remote Devices configured as slaves in the <a href="#">Master Comms Configuration</a> described above.
Digital Parameter	Allows data to be read into a <a href="#">digital input</a> . Allows the user to select Alarm setpoints, Process Value, Batch status (model dependent) or 'User defined' to be selected. 'User defined' allows a (decimal) register address to be entered
Scaling	For some slaves, scale zero (scale low) is returned as value 0 and full scale (scale high) as value 65,535 (Hex FFFF) with intermediate values having proportionate values. For example the value 15, would be represented as 32,767 (7FFF) for a channel scale 0 to 30, as would a value of 50 for a channel scaled 0 to 100, and a value of 45 for a channel scaled 30 to 60. In order to convert this reading to an understandable value, a scaling factor must be entered. If the low and high scale entries match the slave channel's scale, the master reading will be the same as the slave's reading. Selecting 'High/Low' allows Scale low and Scale high values to be entered for the selected parameter. If 'None' is selected, the process value is displayed as a proportion of 64k.
Point type	This item appears for Alarm setpoints and Process Value parameters only. Point type allows the relevant point type (i.e. input channel, maths channel, totaliser etc.) in the slave to be selected. (If an instrument is configured to use more than 100 math channels in the slave instrument - see <a href="#">section 4.3.22</a> ).
Point number	This item appears for Alarm setpoints and Process Value parameters only. Point number allows the relevant point number in the slave to be selected.
Group Number	This item appears for Parameter = 'Batch Status' only. Group number allows that group, the status of which is to be read, to be defined.
Process Value	Allows one of three rates to be set for reading the Process Value. The three rates (Low, Medium and High) have the values set in the <a href="#">Master Comms configuration</a> .
Span	Where the input value is scaled (see above), this 'Span' setting sets the Zero and Full Scale values for the channel. This is different from the situation obtaining in input channels, where span and scale have different meanings.

Remaining items are as described in Channel Configuration in [section 4.3.3](#).

### 4.3.16 MASTER COMMS (Cont.)

#### CONTROLLER PARAMETERS

The following parameters may be accessible from a controller, depending on type.

Note: Figure 4.3.16f is a typical page and may show more or fewer items than appear on the actual screen for a particular controller

Channel Number 1) Read 1 ▼ ← Reflects descriptor entry

Value -0.4670 Unadjusted

Input Type Master Comms ▼

Slave 1) Furn 1 Control ▼ ← Select Required slave

Digital

Parameter Working Setpoint ▼ ← Select Required slave parameter

Loop Number 1 ← Select required loop

Process Value Medium Priority ▼ ← Select iteration rate for parameter update

PV Format Numeric ▼

Span Low 0 Units

Span High 1 Units

Zone Low 0 %

Zone High 100 %

Max Decimal Digits 4

Colour  

Units Units

Descriptor Read 1

Alarm Number 1

Enable Trigger ▼

Apply Discard

Figure 4.3.16f Typical Controller parameter page

**4.3.16 MASTER COMMS (Cont.)**

## TYPICAL CONTROLLER PARAMETERS

Channel Number	Allows the user to select the number of the channel to be configured. As soon as Modbus Master is selected as input type, this changes from 'Channel 1' (for example) to 'Read 1'. Once communication with the slave is established, this will change to the descriptor of the remote channel (unless the controller type does not support this item, in which case a suitable descriptor can be entered later in the configuration).
Slave	Allows the user to select (from a picklist), the slave from which data is to be retrieved. The picklist contains all the Remote Devices configured as slaves in the <a href="#">Master Comms Configuration</a> described above.
Digital Parameter	Allows data to be read into a <a href="#">digital input</a> . Allows the user to select a specific parameter (table 4.3.16a shows a typical set) or 'User defined' to be selected. 'User defined' allows a (decimal) register address to be entered (see 'User defined', below).
Loop number	Allows the user to enter a Loop Number for the parameter read.
Process Value	Allows one of three rates to be set for reading the Process Value. The three rates (Low, Medium and High) have the values set in the <a href="#">Master Comms configuration</a> .
Span	This 'Span' setting allows the Zero and Full Scale values for the parameter to be entered.
Zone etc.	The remaining items are as described in Channel Configuration in <a href="#">section 4.3.3</a> .

Alarm status
Auto/Manual
Process value
Read alarm active status
Read alarm unacknowledged status
Working output power
Working setpoint

Table 4.3.16a Typical Controller read parameters

### 4.3.16 MASTER COMMS (Cont.)

#### USER DEFINED REGISTERS

As previously mentioned, 'User Defined' can be selected for all slaves and for some slave types it is the only way of accessing some or all parameters.

The number of the register holding the required parameter is to be found in the user documentation supplied with the slave. For instance, if the unit to which this manual refers, were to be a slave, then the list of registers is to be found in [section 8](#). For example, for this instrument, to determine what type of alarm, alarm 1 on channel 2 is, register 396 would be used, and the expected value would be 0 for Absolute low, 1 for absolute high, 2 for Deviation in, 3 for Deviation out, 4 for Rate-of-change high or 5 for Rate-of-Change low.

Channel Number **1) Read 1** ▼ ← Reflects descriptor, once the Apply key has been operated.

Value **0.0400** Unadjusted

Input Type **Master Comms** ▼

Slave **1) Furn1 Recorder2** ▼ ← Select required slave

Digital

Parameter **User Defined** ▼ ← Select required slave parameter

Function Code **Read holding registers (3)** ▼ ← Select Function Code

Register **396** ← Enter required register number (decimal)

Data Type **UInteger (16 Bit)** ▼ ← Select Data Type

Scaling **Decimal Places** ▼ ← Select 'None' or 'Decimal Places'

Decimal Places **2** ← Enter No. of decimal point shifts

Process Value **Medium Priority** ▼ ← Select iteration rate for continuous parameters

PV Format **Numeric** ▼

Span Low **0** Units

Span High **1** Units

Zone Low **0** %

Zone High **100** %

Max Decimal digit

Apply Discard

Figure 4.3.16g Configuration page for user defined parameters

### 4.3.16 MASTER COMMS (Cont.)

#### CONFIGURABLE PARAMETERS

This section defines those parameters which are unique to user defined registers.

Value	Shows the value returned from the selected register, as modified by the scaling factor (if any).
Function Code	Allows Modbus function code 03 or 04 to be selected. In some implementations, the functions of the two codes are identical. In others, the codes have different functions. See the documentation supplied with the slave for a list of supported Modbus codes. For this instrument see <a href="#">section 8.2.1</a> .
Register	A decimal number representing the required parameter's location in the slave's Modbus Register map. This information must be determined from the documentation supplied with the slave. For this instrument, <a href="#">section 8.4</a> contains listings for a number of instrument, groups, and input channels. For details of maths, totalisers etc., refer to the relevant option description.
Data Type	Select a suitable data type for the selected parameter (again from the slave documentation). For this instrument, a list of relevant data types is given in <a href="#">section 8.4</a> .
Scaling	Whether Scaling appears or not is Model and Parameter dependent. If scaling is required, the choice may be 'Decimal Places, or High/Low, again according to Model. 'Decimal Places' allows a dividing factor to be entered. An entry of 1, divides the returned value by 10. An entry of 2, divides by 100 etc. for successful implementation, there must be a sufficient number of decimal places defined in the 'Max Decimal Digits' configuration field for the value to be displayed with the required precision. 'None' leaves the returned value unchanged.

For some slaves, scale zero (scale low) is returned as value 0 and full scale (scale high) as value 65,535 (Hex FFFF) with intermediate values having proportionate values. For example the value 15, would be represented as 32,767 (7FFF) for a channel scale 0 to 30, as would a value of 50 for a channel scaled 0 to 100, and a value of 45 for a channel scaled 30 to 60. In order to convert this reading to an understandable value, a scaling factor must be entered. If the low and high scale entries match the slave channel's scale, the master reading will be the same as the slave's reading. Selecting 'High/Low' allows Scale low and Scale high values to be entered for the selected parameter. If 'None' is selected, the process value is displayed as a proportion of 65,535.

### 4.3.16 MASTER COMMS (Cont.)

#### READING DIGITAL VALUES

Digital values can either be the open/closed status of a discrete input, or it can be a status string showing, for example Instrument Status, if 'User Defined' is selected as Parameter Type,

#### OPEN/CLOSED STRINGS

The text strings for the open and closed statuses of a digital input channel can be read by 'Enabling' the Digital checkbox for the relevant slave and Channel number. The strings returned will be those entered in the slave channel's configuration.

The default values are representations of an open switch (for Open) and a closed switch (for Closed). Figure 4.3.16h shows these two states.

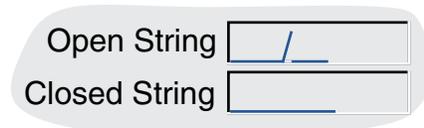


Figure 4.3.16h Default Open/Closed depictions

#### STATUS BITS

This allows the user to view the value of a bit in a status word such as Instrument Status, Channels in Group etc. The relevant Register is accessed by entering its decimal number into the Register field which appears when 'User Defined' is selected as Parameter.

#### Example

Figure 4.3.16i, below shows a master channel configuration page which causes a message\* to be sent to all groups if the memory device inserted in a slave recorder is full. Open / closed strings are also entered as Disk OK and DiskFull respectively, so that if this channel is included in a group, then whichever of these legends is appropriate will be displayed in the channel faceplate.

\* Note: The message string is entered as a part of Message Configuration as described in section 4.3.8.

From the recorder's documentation, Instrument Status is held at register number 22. As can be seen from table 4.3.16b, disk full status is reported by bit 4.

Bit	Item being tested	Status	Value
0	Not used	Always zero	1
1	Not used	Always zero	2
2	Not used	Always zero	4
3	Card/Disk.	0 = Inserted 1 = Missing	8
4	Card/Disk	0 = Not full 1 = Full	16
5	Not used	Always zero	32
6	Not used	Always zero	64
7	Channel status.	0 = No failures 1 = Channel failure	128

Table 4.3.16b Instrument status (Register 22)

## 4.3.16 MASTER COMMS (Cont.)

## READING DIGITAL VALUES EXAMPLE (Cont.)

Channel Number 1) Card in? ▾  
Value Card in  
Input Type Master Comms ▾  
Slave 1) Recorder ▾  
Digital   
Parameter User Defined ▾  
Function Code Read input reg (4) ▾  
Register 22  
Data Type Bit (from register) ▾  
Bit Position 3  
Process Value Medium Priority ▾  
Zone Low 75 %  
Zone High 100 %  
Colour 0  
Open String Card in  
Closed String Card out  
Descriptor Card in?  
Alarm Number 1 ▾  
Enable Trigger ▾  
Type Digital ▾  
Active when Card out ▾  
Dwell 0 s  
Job Number 1 ▾  
Category Message ▾  
Send Message(s) to All Groups ▾  
First Message 1) Card missing ▾  
Last Message 1) Card missing ▾  
On Active ▾  
Apply Discard

Figure 4.3.16i Example configuration page

#### 4.3.16 MASTER COMMS (Cont.)

##### MASTER COMMS CHANNEL CONFIGURATION EXAMPLE

This example describes a recorder (Furn1 Master) acting as a master to two other recorders (Furn1 Record and Furn2 Record) and a controller (Furn1 Control). This example shows only the configuration pages necessary to set up the master input/output channels and the slave Comms channel. It is assumed that:

- the master comms configuration has been completed with Remote devices 1, 2 and 3 set up as Furn1 Control, Furn1 Record and Furn2 control, respectively.
- all recorders are of the type described in this manual. Other types of slave may need more inputs, or different inputs to be entered.

EXAMPLE (see figure 4.3.16j)

to:

Read Loop1 PV from Controller 1 to Channel 1 of Recorder 1 (the master)

Read Channel 1 from Recorder 2 to Channel 2 of the master

Write Channel 2 of the Master to Channel 1 of Recorder 3.

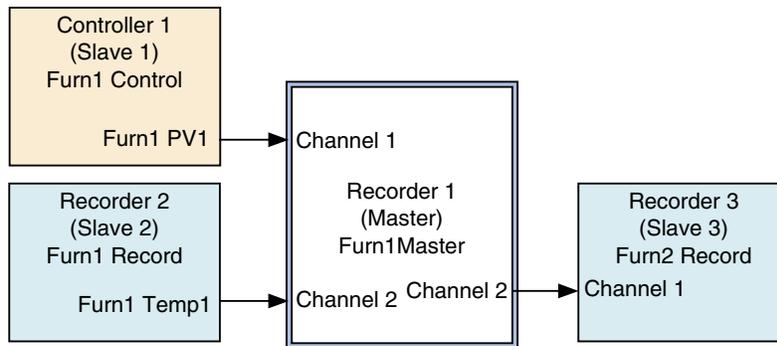


Figure 4.3.16j Required setup

### 4.3.16 MASTER COMMS (Cont.)

#### MASTER CHANNEL 1 SETUP

Master channel 1 setup, to read the Loop1 PV from 'Furn1 Control' into channel 1, is shown in figure 4.3.16k, below. Note that, for this example that a Span High of 100 and Descriptor 'Furn1 PV1' have been entered. The span zero and span high values should match those of the PV being read.

Channel Number 1) Furn1 PV1 ▼  
Value 33.2453 Unadjusted  
Input Type Master Comms▼  
Slave 1) Furn1 Control ▼  
Digital   
Parameter Process Value ▼  
Loop Number 1  
Process Value Medium Priority▼  
PV Format Numeric ▼  
Span Low 0 Units  
Span High 100 Units  
Zone Low 0 %  
Zone High 100 %  
Max Decimal Digits 4  
Colour 0  
Units Units  
Descriptor Furn1 PV1  
Configuration Data Low Priority ▼  
Alarm Number 1  
Enable Trigger ▼  
Apply Discard

Figure 4.3.16k Master Channel 1 setup example

#### 4.3.16 MASTER COMMS (Cont.)

##### MASTER CHANNEL 2 SETUP

Master channel 2 setup, to read the Channel 1 PV from 'Furn1 record into channel 2', is shown in figure 4.3.16l, below.

Channel Number	2) Furn1 Temp1 ▾
Value	658.3654 Unadjusted
Input Type	Master Comms ▾
Slave	2) Furn1 Record ▾
Digital	<input type="checkbox"/>
Parameter	Process Value ▾
Point Type	Channel ▾
Point Number	1
Process Value	Medium Priority ▾
PV Format	Numeric ▾
Span Low	0 Units
Span High	1000 Units
Zone Low	0 %
Zone High	100 %
Max Decimal Digits	4
Colour	<input type="checkbox"/>
Units	Units
Descriptor	Furn1 Temp 1
Configuration Data	Low Priority ▾
Alarm Number	1
Enabled	<input type="checkbox"/>

Apply Discard

Figure 4.3.16l Master Channel 2 setup example

### 4.3.16 MASTER COMMS (Cont.)

#### MASTER OUTPUT 1 SETUP

This shows the setup required in order to output the master's channel 2 (Furn1 Temp1) to Furn2 Record channel 1. The Descriptor Furn1 Temp1 has been entered as the Output Name. This happens to be the same as the channel descriptor, but could be any required text string.

Output Channel Number 1) Furn1 Temp 1  
 Enable   
 Output Type Master Comms  
 Slave 3) Furn2 Record  
 Parameter Comms Channel  
 Point Type Channel  
 Point Number 1  
 Process Value Medium Priority  
 Descriptor Furn1 PV1  
 Source 2) Furn1 Temp1  
 Default 0  
 On Error Write Default   
 Apply Discard

Figure 4.3.16m Master Output 1 setup example

#### SLAVE INPUT CHANNEL 1 SETUP

Figure 4.3.16n shows how to set up a slave channel to read an input from a master. Note that the scaling of this channel must match the scaling of the source channel.

Channel Number 1) Furn1 Temp1  
 Value 658.3654 Unadjusted  
 Input Type Modbus Comms Input  
 Scale Low 0 Deg C  
 Scale High 1000 Deg C  
 Units Deg C  
 Scale Type Linear  
 Scale Divisions - Major 10  
 Scale Divisions Minor 1  
 Descriptor Furn1 Temp 1  
 Apply Discard

Figure 4.3.16n Slave channel setup

### 4.3.16 MASTER COMMS (Cont.)

#### MASTER COMMS DIAGNOSTICS

Master Comms Diagnostics appears as an additional item on the System Menu. For details of the other items see [section 4.6](#).

Most items are self-evident.

The Total requests and Bad requests totals both exclude retries. The numbers in parentheses are exception code numbers as described in [table 8.2.1b](#).

The Initiate Comms Test is a loop-back test that sends a message to the selected slave and waits for it to be returned. If the test is successful, the 'Successful Comms Test' is incremented. If not successful, one (or more) of the error box values is incremented.

Figure 4.3.16p shows a typical page.

Archive	Save/Restore	Config	Security	Network	System
					Clock
					Locale
					Upgrade
					Master Comms Diagnostics
					Ethernet diagnostics

Slave	1) Furn recorder 1	▼
Actual High Priority	2	Seconds
Actual Medium Priority	1	Seconds
Actual Low Priority	0.125	Seconds
Modbus Address	1	
Slave Status	Online	
Last Transaction Status	OK	▼
Total Requests	1308	
Bad requests	10	
Good requests	1298	
Illegal function codes (01)	0	
Illegal addresses (02)	0	
Illegal Values (03)	0	
Slave Failures (04)	0	
No Gateway path (10)	0	
Gateway Target Fail (11)	0	
Timed out requests	10	
Master Rejects	0	
Retried requests	4	
Serial Link Error Count	0	
Successful Comms Tests	1	

Initiate Comms Test

Reset Diagnostics

Figure 4.3.16p Master Comms diagnostic page

### 4.3.17 Output channels

'Output Channels' appears as a configuration item only if the Master Comms option is fitted and allows a Master Unit to write one (or more) of its points to one (or more) slaves' channels. Figure 4.3.17a shows a typical configuration page.

Figure 4.3.17a Typical output channel configuration page

#### CONFIGURABLE PARAMETERS

Output Channel Number	Allows the user to select the Output to be configured.
Enable	Allows the output channel to be enabled or disabled.
Output Type	Select Master Comms
Slave	Select the slave to be written-to.
Parameter	Select required parameter from picklist (varies according to slave type/model)
Scaling	If this field appears (depends on slave type), the Low and High scaling should match that of the slave Channel being written to.
Point Type	Allows a point type to be chosen from a picklist. (Picklist items vary according to slave type/model)
Point Number	For recorders, allows a point number to be entered. This point must be configured as 'Comms' or 'Slave Comms' etc. (depending on slave type or model) at the slave.
Loop Number	For Controllers, allows a loop number to be selected from a picklist.
Process Value	Allows the selection of High, Medium or Low priority interval, as defined in the Master Comms configuration page in <a href="#">section 4.3.16</a> .
Descriptor	Allows a descriptor of up to 20 characters to be entered for the output channel name.
Source	This allows the user to select the source point to be written to the slave destination point.
Default	This is the value written, if the source is in 'Error', and the 'On error Write Default' item (below) has been enabled.
On Error Write Default	If this item is enabled, the default value is written instead of the selected Source, if the Source is in 'Error'.

### 4.3.18 Demand Writes

#### DEMAND WRITE CONFIGURATION

Demand writes allow slave values to be written from the master by operator action (from the configuration page), by job action, or (if the Screen Builder option is fitted - [section 7](#)) by operation of a suitably configured Operator key. Figure 4.3.18a shows a typical configuration page. Modbus codes 6 and 16 can be selected for this purpose - see [section 8.2.1](#) for code definitions.

Figure 4.3.18a shows a typical configuration page for writing to a recorder. Figure 4.3.18b shows the Edit Constant page. Figure 4.3.18c shows a configuration page for the case where the destination is defined as a register location.

#### WRITING TO A KNOWN DEVICE

Figure 4.3.18a shows the configuration page for writing a value from the master unit to a 'known' slave unit.

The screenshot shows a configuration page for a Demand Write. The fields and their values are as follows:

- Write number:** 1) Write\_1 (dropdown menu)
- Enable:**
- Demand Type:** Master Comms (dropdown menu)
- Status:** OK (text field)
- Buttons:** Demand Write
- Slave:** 1) Furn 1 Recorder (dropdown menu)
- Parameter:** Alarm setpoint 2 (dropdown menu)
- Point Type:** Channel (dropdown menu)
- Point Number:** 1 (text field)
- Descriptor:** Write 1 (text field)
- Source:** Constant (dropdown menu)
- Default:** 0 (text field)
- Allow Constant Edits:**
- On Error Write Default:**
- Disable Retries:**
- Send On Power Up:**
- Buttons:** Apply, Discard

Annotations with arrows point to the following elements:

- Write number: Select the Write number to be configured
- Demand Type: Select 'Master Comms' or 'Off'
- Slave: Select destination slave
- Parameter: Select parameter to be written-to
- Point Type: Select destination
- Default: Enter default value
- Allow Constant Edits: Allows user to edit the constant prior to write (if Source = 'constant')
- On Error Write Default: If enabled, the default value is written, should the selected source be in an 'Error' state.
- Disable Retries: If enabled, the write is attempted only once.
- Send On Power Up: Write is triggered when the unit powers up.

Figure 4.3.18a Typical Demand write configuration page

**4.3.18 DEMAND WRITES (Cont.)**

## CONFIGURABLE ITEMS

Write number	Allows the user to select the Demand Write number to be configured
Enable	Allows the user to enable/disable the write.
Demand Type	Select 'Master Comms' or 'Off'
Status	Shows the status of the transaction. The meaning of most status strings are self-evident, the remaining ones have the following definitions: OK: Transaction was carried out and a satisfactory response has been received Idle: Appears only before the first Write following a power cycle, or if the Write has not previously been configured. Pending: Appears if the Write is waiting to happen, or a response is being waited for. Can appear, for example, if the Write is queued. Timeout: Appears if the slave fails to respond within the timeout set in the Master Comms configuration page. Transaction Disabled: Appears, for example, if the Write has been disabled, but a job is still trying to trigger it.
Slave	Allows the user to select the Slave to be written-to, from a picklist containing all the configured devices in the Master Comms configuration page.
Parameter	Select parameter to be written to (picklist varies according to slave type/model)
Point type/Loop Number/Group Number	Allows a point, loop or group number to be entered for the selected parameter.
Descriptor	Allows a descriptor to be entered for the Write.
Source	Allows the source of the Write to be chosen, from a picklist containing 'Constant' plus all points in the recorder.
Default	Allows a value to be entered for use as a default to be written to the destination point. Appears if 'Source'= 'Constant', or for any other source, if the 'On Error Write Default' checkbox (see below) is enabled.
Allow Constant edits	If this is enabled, the user may change the default value before it is sent. Applies only to user-triggered writes. See 'Demand Write Button', below.
On Error Write Default	Appears for all sources other than 'Constant'. If this function is enabled, then the default value is written, instead of the source value, should the source be in an Error state. When enabled, the 'Default' entry box appears, if it was previously hidden.
Disable Retries	If enabled, this function causes the recorder to attempt the Write only once, instead of retrying according to the number of retries set in the Master Comms Configuration Page.
Send On Power Up	If enabled, this causes the default value to be Written at Power-Up.

## DEMAND WRITE BUTTON

When operated, this pushbutton causes the Write to be initiated. If the source is 'Constant' and the 'Allow Constant Edits' item is enabled, an 'Edit' page appears (figure 4.3.18b) allowing the user to change the constant value from its default value, before the Write is carried out. Otherwise, the Write is carried out without any further action being required.

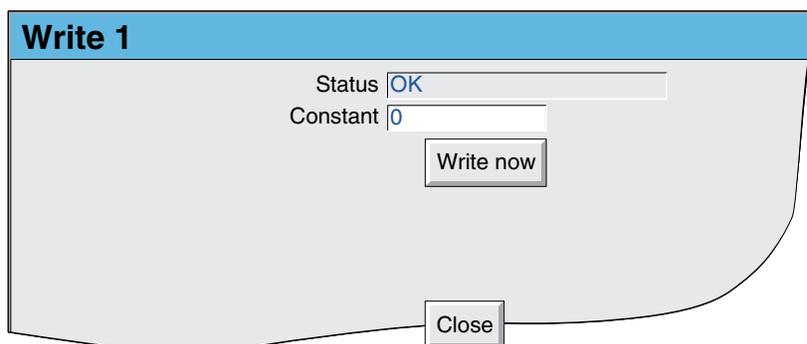


Figure 4.3.18b Constant Edit page

### 4.3.18 DEMAND WRITES (Cont.)

#### WRITING TO A SPECIFIC REGISTER

When 'User Defined' is selected, or if the slave device is 'Unknown', then a register can be defined which can be written-to directly. The register addresses must be found from the documentation supplied with the slave device.

The screenshot shows a configuration window for 'Demand Writes to specific register'. The fields are as follows:

- Write number: 1) Write 1 (dropdown menu)
- Enable:
- Demand Type: Master Comms (dropdown menu)
- Status: Idle
- Slave: 1) Furn 1 Recorder (dropdown menu)
- Parameter: User Defined (dropdown menu)
- Function Code: Preset Multiple reg (16) (dropdown menu)
- Register: 248
- Data Type: Float (32 Bit) (dropdown menu)
- Descriptor: Write 1
- Source: Constant (dropdown menu)
- Default: 0
- Allow Constant Edits:
- Disable Retries:
- Send On Power Up:

Buttons at the bottom: Apply, Discard.

Figure 4.3.18c Demand Writes to specific register

#### CONFIGURABLE PARAMETERS

This contains details of parameters unique to Demand Writes to specific registers. Other parameters are as described above.

Function Code	Allows the Modbus function code 6 or 16 to be selected. See the documentation supplied with the slave for a list of supported Modbus codes (for this instrument see <a href="#">section 8.2.1</a> ). Demand writes of a single 8 or 16-bit register can use either code, but code 6 is more efficient. Writing two or more registers requires the use of code 16.
Register	A decimal number representing the required parameter's location in the slave's Modbus Register map. This information must be determined from the documentation supplied with the slave. For this instrument, <a href="#">section 8.4</a> contains listings for a number of instrument, groups, and input channels. For details of maths, totalisers etc., refer to the relevant option description.
Data Type	Select a suitable data type for the selected parameter (again from the slave documentation). For this instrument, a list of relevant data types is given in <a href="#">section 8.4</a> .

### 4.3.18 DEMAND WRITES (Cont.)

#### WRITING TO A SPECIFIC REGISTER (Cont.)

#### CONFIGURABLE PARAMETERS (Cont.)

Scaling Whether Scaling appears or not is Model and Parameter dependent. If scaling is required, the choice may be 'Decimal Places, or High/Low, again according to Model.

'Decimal Places' allows a dividing factor to be entered. An entry of 1, divides the returned value by 10. An entry of 2, divides by 100 etc. for successful implementation, there must be a sufficient number of decimal places defined in the 'Max Decimal Digits' configuration field for the value to be displayed with the required precision.. 'None' leaves the returned value unchanged. 'None' leaves the returned value unchanged.

For some slaves, scale zero (scale low) is returned as value 0 and full scale (scale high) as value 65,535 (Hex FFFF) with intermediate values having proportionate values. For example the value 15, would be represented as 32,767 (7FFF) for a channel scale 0 to 30, as would a value of 50 for a channel scaled 0 to 100, and a value of 45 for a channel scaled 30 to 60. In order to convert this reading to an understandable value, a scaling factor must be entered. If the low and high scale entries match the slave channel's scale, the master reading will be the same as the slave's reading. Selecting 'High/Low' allows Scale low and Scale high values to be entered for the selected parameter. If 'None' is selected, the process value is displayed as a proportion of 65,535.

#### DEMAND WRITES WITH AUDIT TRAIL

Normal Audit Trail messages include both the new value and the previous value, for example

```
12/07/06 11:27:58 1) Temp1 Alarm Number 1 Enable Latched was Off
```

With Demand Writes, the recorder has no way of determining what the value of the parameter being written to was, prior to the Write. For this reason no 'was' value is included in the message. A typical Demand Write audit trail message would be:

```
12/07/06 11:35:10 Write_1 wrote 255.75
```

Please see [section 4.4.2](#) for more details of Audit Trail.

### 4.3.19 E-mails

E-mails can be sent by the instrument to one or more recipients. The user can enter 10 recipient e-mail addresses in each of five mailing lists, giving a maximum of 50 addresses, 10 of which can be sent-to at any one time. A Recipient can appear in as many lists as required.

Up to 24 e-mails can be configured, but which of these e-mails is sent, is defined during [Job](#) or [Event Button](#) configuration. Any function capable of triggering a job, can cause any of the available e-mails to be sent.

As well as a 'Subject', and the body text, each e-mail can include one of the messages set up in 'Message Configuration', and can thus include embedded values, alarm status, batch status etc., as described in [section 4.3.8](#).

### E-MAIL CONFIGURATION

The figure below shows the e-mail configuration page (using fictitious names for email server/address information).

The screenshot displays the E-mail configuration interface with the following fields and values:

- Mail Server: mail server name
- Port Number: 25
- Sender: IP Address of Recorder
- Errors To: e-mail address to which e-mail failure messages to be sent
- Retry Time: 60 Seconds
- Recipient List: 1) List1 (dropdown menu with arrow pointing to "Select List Number")
- Descriptor: List1
- Rcpt1: e-mail address of 1st Recipient on this list
- Rcpt2: e-mail address of 2nd Recipient on this list
- Rcpt3: etc.
- Rcpt4: (empty)
- Rcpt5: (empty)
- Rcpt6: (empty)
- Rcpt7: (empty)
- Rcpt8: (empty)
- Rcpt9: (empty)
- Rcpt10: (empty)
- Email Number: 1) Email1 (dropdown menu)
- Descriptor: Email1
- Protocol: SMTP (Email) (dropdown menu with arrow pointing to "Select SMTP, SMS (Subject Only) or SMS (Body only)")
- Subject: Cold store alarm
- Text: Cold store temp. sensor 1 too hot. Instrument name, Instrument number, chan 1Alarm1
- Include Message:
- Message: 3) {1},{2},{3},{4} (dropdown menu with arrow pointing to "Select Message Number")

At the bottom of the form are two buttons: "Apply" and "Discard".

Figure 4.3.19a E-mail configuration (SMTP Protocol)

**4.3.19 EMAILS (Cont.)****CONFIGURABLE PARAMETERS**

This subsection contains details of the parameters that appear in the E-mail configuration page (figure 4.3.19a above). Figure 4.3.19b (below) may also be referred-to for further explanation.

Mail Server	Enter the name (note 1) of the mail server or IP address here. This is the destination to which e-mails are sent, for subsequent delivery.
Port Number	This is the port number used for SMTP by the servers. Most servers use port 25 for this function, and this value should be changed from the default only by experienced personnel.
Sender	For DNS operation, this is a combination of the Local Host and Domain entries set up in the 'Network/Name' area of configuration described in <a href="#">section 4.5</a> . If Fixed I.P. Address is selected, the I.P. Address appears instead. The unit accesses the 'Sender' information automatically, and it cannot be edited here. The 'Sender' is placed in the 'From:' part of the e-mail header.
Errors To	An e-mail address to which any error messages can be sent for display etc. The instrument itself cannot receive e-mails and so is unable to display (for example 'undeliverable') messages itself. An entry in this field must be made. The same address may be used for any number of instruments.
Retry time	The product tries repeatedly (until successful) to dispatch the e-mail until the 'Retry time' has expired. If the e-mail has not been sent within this period, it is deleted, and a 'General' message is generated.
Recipient List Descriptor	Allows a list to be chosen for entry of recipient e-mail addresses
Rcpt1 to Rcpt10	Allows a name to be entered for the selected list. These fields allow 10 recipients' e-mail addresses to be entered for the selected list. The first valid address appears in the 'To:' part of the e-mail header; subsequent valid addresses appear in the 'Cc:' part of the e-mail header (note 2).
Email Number Descriptor	Allows an e-mail to be selected for configuration. Allows a descriptor to be entered for the e-mail. This appears in the list of e-mails when setting up a job, and also in the message log.
Protocol	Choose one of 'SMTP (Email)', 'SMS (Subject Only)' and 'SMS (Body Only)'. 'Operation' (below) gives some details of the application of the SMS protocol in this instrument. SMTP (Email). Selecting this protocol allows both a Subject and Body text to be entered. SMS (Subject Only). Selecting this protocol allows a subject to be entered, but the entry field for the body text is not presented for use. Any text previously entered here, whilst another protocol was selected, is lost. SMS (Body Only) Selecting this protocol allows Body text to be entered, but the Subject field is not displayed. Any text previously entered as a Subject, whilst another protocol was selected, is lost.
Subject	Allows the entry of up to 100 characters to appear in the 'Subject:' part of the e-mail header. The field does not appear if 'SMS Body Only' is selected as the Protocol.
Text	Allows the entry of up to 240 characters to appear as the body of the e-mail. The field does not appear if 'SMS Subject Only' is selected as the Protocol. Also referred to as 'Body Text'.
Include message	If this checkbox is enabled, one of the messages in the 'Message Configuration' area can be selected to appear below the body text in the e-mail.

**Notes:**

1. Domain Name Service (DNS) must be enabled in the recorder network configuration ([section 4.5.2](#)) if a mail server name is to be used.
2. A 'general' message is generated if there are any invalid recipients in any list (who would not receive e-mails). Such messages may be viewed in 'Message Log' ([section 3.1.4](#)).

### 4.3.19 EMAILS (Cont.)

#### E-MAIL DETAILS

Figure 4.3.19b depicts an e-mail using fictitious entries.

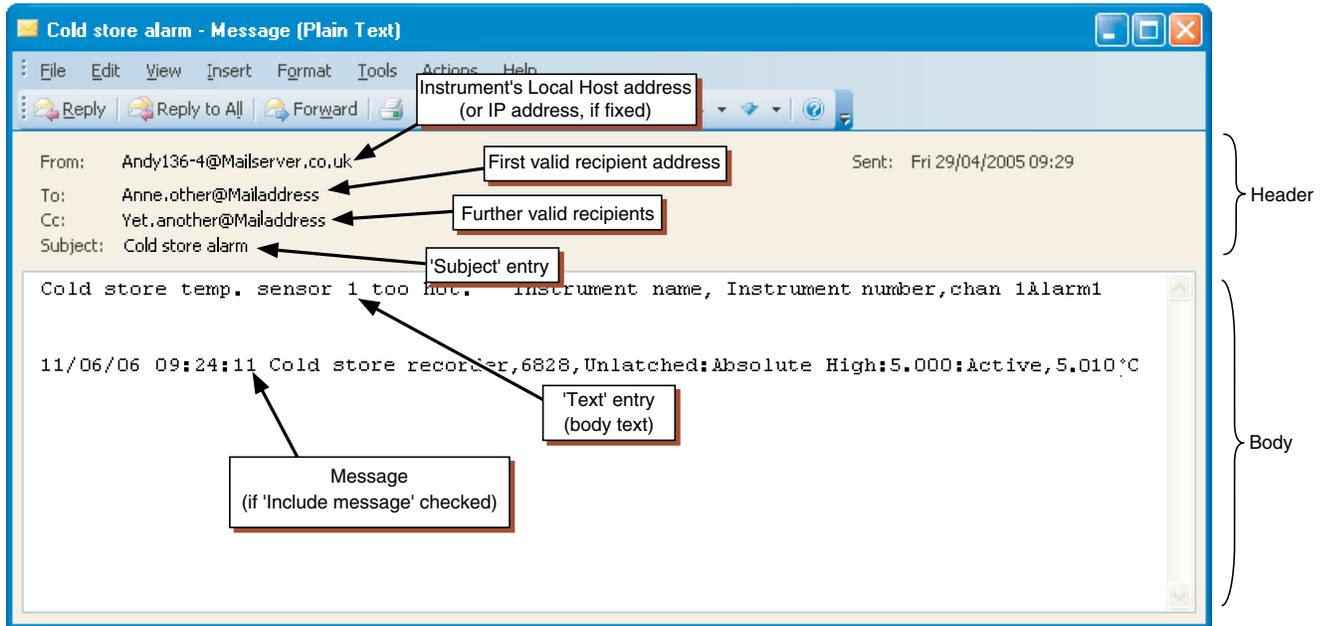


Figure 4.3.19b E-mail appearance

The figure above shows that the e-mail is in two distinct parts, the header (grey area) and the body (white area).

#### THE HEADER AREA

The header contains details of the sender, the recipient(s), the subject and the time and date.

**Note:** The time and date may be local to the generating instrument, or local to the recipient, depending on the recipient's mail host configuration

The header is important in the prevention of 'spamming'. The instrument adheres to the RFC2822 standard with respect to e-mail headers. Some servers are stricter than others, and it is not guaranteed that an e-mail generated by the instrument will not be interpreted as a spam message by the receiving server.

From:

This contains either the 'Local Host' name (as defined in [Network/Name Setup](#)) and mailserver address, or the IP address if a fixed IP address is selected in [Network/Address](#) settings. See [section 4.5](#) for details of the Network key.

To:

The first valid recipient address in the selected list.

CC:

The remaining valid addresses in the recipient list

Subject:

Contains the subject text entered during configuration. Empty if 'SMS Body' selected as Protocol

### 4.3.19 EMAILS (Cont.)

#### THE BODY AREA

This contains the body text, along with any appended messages. In the example above the message has the embedded values of Instrument name, Instrument number, channel 1 alarm 1 status, as implied by the body text.

#### OPERATION

1. E-mails are generated either by job or by operation of an [Event Button](#) from a User screen (if the Screen builder option is fitted).
2. Every time the sending of an e-mail is requested, a 'General' note is generated and appears in the message log for all groups. The format is: Date, Time Sent <e-mail descriptor> to List N, where <e-mail descriptor> represents the descriptor entered in the configuration page for the e-mail, and 'List N' is the recipient list to whom the e-mail was sent.
3. Access to e-mails is restricted to users with '[Full Configuration](#)' permission.
4. Signing/Authorizing restrictions can be applied only to e-mails generated by Event button operation, as part of the Event button's configuration ([section 4.3.7](#)).
5. The instrument implements the Simple Message Transfer Protocol (SMTP), incorporating Multipurpose Internet Mail extensions.
6. The instrument does not implement the Short Message Service (SMS) protocol, though it is able to send SMS messages to a mobile phone via an appropriate server or gateway. As some servers/gateways use the 'subject' as the SMS message, and others use the body text, these alternatives are provided for in the Protocol pick list in the Configuration page described above.
7. A new [event source](#) 'Email fail' can be used to trigger a job list should an e-mail send failure occur.

### 4.3.20 Reports configuration

This allows the user to configure up to 10 'reports' for output to the chart as a result of job action. Figure 4.3.20a shows a typical configuration page, accessed from the CONFIG button 'Reports' item.

Report 1) Report 1 ▼

Descriptor Report 1

Number of Fields 6 ▼

Field 1 Type Date & Time ▼

Style Normal ▼

Field 2 Type Text ▼

Text

Style Bold ▼

Field 3 Type Process Value ▼

Point Channel 1 ▼

Style Emphasised ▼

Field 4 Type Batch Field 1 ▼

Style Banner ▼

Field 5 Type 1) Message ▼

Style Normal ▼

Field 6 Type Line Feed ▼

Line Feed 1 ▼

Apply Discard

Figure 4.3.20a Reports Configuration

#### REPORT

Allows the user to select the required report number for configuration.

#### DESCRIPTOR

A name for the Report can be entered here.

#### NUMBER OF FIELDS

Select 0 to 10 for the number of items to be included in the report.

#### FIELD N TYPE

N = 1 to the number of fields selected in the previous item.

Date & Time	Causes the time and date of report generation to be included in the report
Text	Allows the user to enter a text message of up to 60 characters.
Process value	Allows a specified point's process value (including descriptor and units) to be included in the report
Batch Field 1	Batch field 1 can be included in the report. See <a href="#">section 4.3.10</a> for Batch details.
Message	A message can be selected for inclusion in the report. See <a href="#">section 4.3.8</a> for details of message configuration.
Line Feed	Not implemented.

#### **4.3.20 REPORTS CONFIGURATION (Cont.)**

##### **STYLE**

Normal always used for this implementation regardless of selection.

##### **POINT**

Allows a point to be chosen when 'Process value' has been selected as Field Type. The point is selected from a pick-list containing all the input channels, derived channels, totalisers etc. in the instrument.

##### **LINE FEED**

Not implemented

### 4.3.21 Ethernet/IP™ Option

**Note:** Full details of Ethernet/IP protocol are available from the ODVA web site <http://www.odva.org>

EtherNet/IP (Ethernet/Industrial Protocol) is a 'producer-consumer' communication system used to allow industrial devices to exchange time-critical control data. Such devices range from simple I/O devices such as sensors/actuators, to complex control devices such as robots and PLCs. The producer-consumer model allows the exchange of information between a single sending device (producer) and a large number of receiving devices (consumers) without having to send data multiple times to multiple destinations.

EtherNet/IP makes use of the CIP (Control & Information Protocol), common network, transport and application layers currently implemented by DeviceNet and ControlNet. Standard Ethernet and TCP/IP technology is used to transport CIP communications packets. The result is a common, open application layer on top of Ethernet and TCP/IP protocols.

In order to record and trend data that has been written by the client, the relevant channel or maths channel must be configured with 'Input Type' set to 'Ethernet/IP Comms Input' and the channel must be included in a Recording-enabled group. See sections, [4.3.2](#) (Group configuration), [4.3.3](#) (Channel configuration) and [4.3.11](#) (maths configuration) as necessary.

#### MESSAGING

Ethernet/IP uses two forms of messaging:

##### UNCONNECTED MESSAGING

This is used in the connection establishment process and for infrequent, low-priority messages. The unconnected resources in a device are called the 'Unconnected Message Manager' (UCMM).

##### CONNECTED MESSAGING

This uses resources within each node that are dedicated, in advance, to a particular purpose, such as frequent explicit message transactions or real-time I/O data transfers. Connection resources are reserved and configured using communications services available via the UCMM.

The process of opening a connection is called 'Connection Origination'. The node that initiates the connection establishment request is called the 'Connection Originator' (or 'Originator') and the node that responds to the establishment request is called a 'Connection Target' (or 'Target'). Ethernet/IP has two types of messaging connections:

##### EXPLICIT MESSAGING CONNECTIONS

These are point-to-point relationships that are established to facilitate request-response transaction between two nodes. These connections are general purpose in nature and can be used to reach any network-accessible items within a device. Explicit messaging connections use TCP/IP services to move messages across Ethernet.

##### IMPLICIT (I/O DATA) CONNECTIONS

These are established to move application-specific I/O data at regular intervals. These connections are typically set up as one-to-many relationships in order to take full advantage of the producer-consumer multicast model. Implicit messaging uses UDP/IP resources to establish multicast data.

## 4.3.21 ETHERNET/IP OPTION (Cont.)

## CONFIGURATION

Figure 4.3.21a shows the configuration page.

Import Table	eiptable
Export Table	eiptable
Status	Online
I/O Table	Inputs ▾ Server --> Client
Input 1	Channel.1.pv
Input 2	Channel.2.pv
Input 3	Channel.3.pv
Input 4	Channel.4.pv
Input 5	Channel.5.pv
Input 6	Math.99.pv
Input 200	Math.100.pv

Apply Discard Wizard Default Table Show Errors

Figure 4.3.21a Ethernet/IP option configuration (large frame unit)

Import Table	Touching this field opens the file window, allowing the user to select a .uht file for import. This file may be a file previously exported using the 'Export table' field, in which case it will be found in the \user\ folder, or it may be located on a USB stick or other memory device, in which case it will appear in a separate folder.
Export Table	This allows the user to export the current table to the instrument's flash memory or to a memory stick or other memory device. Exported tables may be imported into other suitable instruments, or into a pc to be used as a 'template' for creating other tables.
Status	Initialising: Initial status at start-up. Switches to 'Online' when the Ethernet/IP configuration has been read successfully and the server has completed its configuration. Online: All cyclic inputs and outputs are updated continuously Offline: The server ignores all transactions and tables are not updated.
I/O Table	Select 'Inputs' (Server -->Client) or 'Outputs' (Client --> Server) for the displayed table.
Input (output) 1	Shows the first selected input (output) parameter which is to be read or written. Input tables can be completed by importing a suitable previously configured table, by entering individual parameters into each field, by using the Wizard key or by using the Default table and editing it as necessary. See 'Table entry', 'Wizard key' and/or 'Default table', below for further details. Output tables cannot be edited
Input (output) 2 to 200	As for input (output) 1, above, but for the remaining table entries.
Apply key	Touch this to save the table configuration. An error message is generated if the channel number is out of range, or if the syntax is incorrect. See 'Table entry', below.
Discard key	Touching this key causes all changes made since the previous 'Apply' to be discarded.
Wizard key	This provides a mechanism for the rapid entry of input and output table parameters. See 'WIZARD' below for a fuller explanation.
Default Table key	Fills the displayed input or output table with channel and math PV parameters. This can then be edited either on an entry by entry basis, or by exporting the table so that it may be edited in a pc. Described in more detail <a href="#">later</a> .
Show Errors key	Shows any errors in the current configuration. For each parameter without error, the parameter's Modbus address is displayed instead.

### 4.3.21 ETHERNET/IP OPTION (Cont.)

#### TABLE ENTRY

The normal text entry techniques can be used to enter parameters into the Input table. The following syntax must be used, or an error message will be generated when 'Apply' is operated and the configuration will remain unchanged:

#### Notes:

1. The syntax is not case sensitive; for example, it may be 'Channel', or 'channel' or 'CHANNEL'.
2. Channels 1 to 18 (small frame) and 1 to 48 (large frame), may be configured as measuring channels or as Ethernet/IP comms input channels. The remaining channels, up to 100, must be configured as Ethernet/IP Comms input channels. For channels 76 to 100, only 'pv' is supported.

Channel.n.pv	Channel 'n' process value where 'n' = 1 to 100 - see note 2 above.
Channel.n.status	Channel 'n' status, where 'n' = 1 to 75 - see note 2 above.
Channel.n.spanhi	The Span High value for channel 'n', where 'n' = 1 to 75 - see note 2 above.
Channel.n.spanlo	The Span Low value for channel 'n', where 'n' = 1 to 75 - see note 2 above.
Channel.n.dp	Number of decimal places for channel 'n', where 'n' = 1 to 75 - see note 2 above.
Math.n.pv	Maths channel 'n' process value where 'n' = 1 to 100.
Math.n.status	Maths channel 'n' status, where 'n' = 1 to 100.
Math.n.spanhi	The Span High value for maths channel 'n', where 'n' = 1 to 100.
Math.n.spanlo	The Span Low value for maths channel 'n', where 'n' = 1 to 100.
Math.n.dp	Number of decimal places for maths channel 'n', where 'n' = 1 to 100.

#### ERROR MESSAGES

If an error is made during editing, a brief description of the error can be viewed by operating the 'Show Errors' key:

?Out of Range	this means that the channel or maths number is greater than the maximum given in the description above (e.g. channel 101)
?Syntax Error	There is an error in capitalisation, or commas have been used instead of full stops (periods) or some other text error has been made.
?Unsupported Data	A suffix implying a data type which is not supported by this implementation of Ethernet/IP has been appended. (Example: Channel.4.alm).

If the 'Apply' key is operated whilst there are uncorrected errors, a message appears showing the number of first input in which a fault has been found. The user must correct the fault and operate 'Apply' again in order to save the configuration. If there are further errors, the message reappears showing in which input the next error lies (Input two in the figure below).

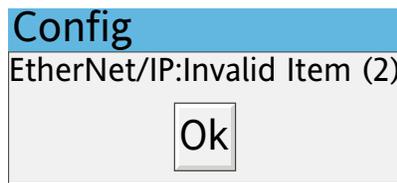


Figure 4.3.21b Error message

**Note:** The 'Show Errors' key allows the user to view all current configuration errors at the same time. In this display, each valid parameter displays its associated Modbus address, but any error channels display an error message instead.

### 4.3.21 EtherNET/IP OPTION (Cont.)

#### UHT FILE RULES

1. Table configuration files must have the extension '.uht'
2. The first line must be: HEADER,ETHERNET\_IP\_SERVER,1
3. Subsequent lines may be comments (preceded with a # character and terminated with a Carriage return) or a configuration item in the <point type>.<point number>.<suffix> as described in 'Table Entry' above.

#### WIZARD

The wizard offers a quick and easy way of loading the Input Table by touching the required point parameters and then entering start and end values for the range of points to be included. For current software, the Output table is not editable, so any changes made in the Wizard are ignored.

Figure 4.3.21c Input table wizard

Point Type	Select 'Channel' or 'Math' for configuration. The 'Configure' key must be operated before changing from 'Channel' to 'Math' or vice-versa, as only the configuration for the currently displayed Point Type (i.e. Channel or Math) is saved to the Input table.
Process Value	Select to include Process Value
Point Status	Select to include Point Status (not supported for channels 76 to 100)
Span High	Select to include Span High (not supported for channels 76 to 100)
Span Low	Select to include Span Low (not supported for channels 76 to 100)
Decimal Places	Select to include the points' decimal places values (not supported for channels. 76 to 100)
Start New Table	If ticked (default), the existing list is deleted and replaced by the Wizard items when 'configure' is operated. If not ticked, the selected items are appended to the existing table, using any empty spaces. If there are no spaces, the new entries are ignored. If there are insufficient spaces, the available spaces are filled using lowest channel numbers first, and any overflow is lost.
From point	Enter the number of the first point of the required point range. This value must be lower than the 'To point' value.
To point	Enter the number of the final point of the required point range This value must be higher than the 'From point' value..

#### Notes:

1. The point range is the same for all parameters selected, and the points are contiguous. In order to select non-contiguous points, or to enter different ranges for different point types, it is necessary to configure each required range separately and operate the 'Configure' key after each range, ensuring that the 'Start New Table' selection is not ticked.
2. If any parameter other than 'Process Value' is selected for any channel in the range 76 to 100, the selection will be accepted, but the values returned will be meaningless.

### 4.3.21 ETHERNET/IP OPTION (Cont.)

#### DEFAULT TABLE KEY

Clicking on this key causes the relevant table to be populated with a default set of parameters.

For input tables, these parameters are: Channel.1.pv to Channel.100.pv followed by Math.1.pv to Math.100.pv.

The output table parameters are: Channel.1.pv to Channel.100.pv followed by Math.1.pv to Math.100.pv.

#### SHOW ERRORS KEY

Clicking on this key causes the parameter addresses to appear after the parameter names in the input and output tables. If a syntax or other error has been made in loading the input table, a description of the error type appears in this view (see ['ERROR MESSAGES'](#), above).

#### OUTPUT TABLE PARAMETER MODBUS ADDRESSES

In all cases, the addresses for the output parameters can be viewed by operating the 'Show errors' key. The addresses for channels 1 to 75 and maths 1 to 100 can be found as described in [Section 8.4.3](#) (Channel Runtime data), and [section 4.3.11](#) (Maths channel Run-time data). Addresses for channels 76 to 100, are given below:

Parameter Name	Description	Type	Access	Start Addr. Hex (Dec)	Register Length
Channel.76.pv	Channel 76 process value	Scaled	Read only	FCCB (64703)	1
Channel.77.pv	Channel 77 process value	Scaled	Read only	FCC2 (64706)	1
Channel.78.pv	Channel 78 process value	Scaled	Read only	FCC5 (64709)	1
Channel.79.pv	Channel 79 process value	Scaled	Read only	FCC8 (64712)	1
Channel.80.pv	Channel 80 process value	Scaled	Read only	FCCB (64715)	1
Channel.81.pv	Channel 81 process value	Scaled	Read only	FCCE (64718)	1
Channel.82.pv	Channel 82 process value	Scaled	Read only	FCD1 (64721)	1
Channel.83.pv	Channel 63 process value	Scaled	Read only	FCD4 (64724)	1
Channel.84.pv	Channel 64 process value	Scaled	Read only	FCD7 (64727)	1
Channel.85.pv	Channel 65 process value	Scaled	Read only	FCDA (64730)	1
Channel.86.pv	Channel 66 process value	Scaled	Read only	FCDD (64733)	1
Channel.87.pv	Channel 67 process value	Scaled	Read only	FCE0 (64736)	1
Channel.88.pv	Channel 68 process value	Scaled	Read only	FCE3 (64739)	1
Channel.89.pv	Channel 69 process value	Scaled	Read only	FCE6 (64742)	1
Channel.90.pv	Channel 70 process value	Scaled	Read only	FCE9 (64745)	1
Channel.91.pv	Channel 71 process value	Scaled	Read only	FCEC (64748)	1
Channel.92.pv	Channel 72 process value	Scaled	Read only	FCEF (64751)	1
Channel.93.pv	Channel 73 process value	Scaled	Read only	FCF2 (64754)	1
Channel.94.pv	Channel 74 process value	Scaled	Read only	FCF5 (64757)	1
Channel.95.pv	Channel 75 process value	Scaled	Read only	FCF8 (64760)	1
Channel.96.pv	Channel 76 process value	Scaled	Read only	FCFB (64763)	1
Channel.97.pv	Channel 77 process value	Scaled	Read only	FCFE (64766)	1
Channel.98.pv	Channel 78 process value	Scaled	Read only	FD01 (64769)	1
Channel.99.pv	Channel 79 process value	Scaled	Read only	FD04 (64772)	1
Channel.100.pv	Channel 80 process value	Scaled	Read only	FD07 (64775)	1

Table 4.3.21 Parameter addresses for channels 76 to 100

### CONFIGURING A PLC

The following instructions describe how to configure a PLC to communicate with a Paperless graphic recorder. Although a specific PLC was used in generating these instructions, the detail should be general enough to allow any other PLC to be used.

### 4.3.21 ETHERNET/IP OPTION (Cont.)

#### INSTALLATION

1. Install the PLC software according to the instructions supplied with the PLC. For this particular PLC, once installation is complete, the 'RSLinx Classic' and 'RSLogix 5000' software items (AMONGST OTHERS) must be present. RSLinx classic is used to provide a link between the PLC network and Windows, and RSLogix 5000 is configuration and programming software for the PLC.
2. Use a cross-over type serial cable to connect one of the pc ports to the serial port (typically a 9-way D-Type connector) of the PLC
3. Connect an Ethernet cable between the Ethernet port on the PLC (typically an RJ45 socket) and the recorder. If a direct connection is used, the cable must be a cross-over type; if connecting via a switch, then non cross-over cable must be used.
4. Power up the PLC and the Recorder. Switch the PLC to 'Programmer' mode.

#### SETTING UP THE LINK BETWEEN WINDOWS AND THE PLC NETWORK

1. Click on Start/All Programs/Rockwell software/RSLinx/RSLinx Classic. The 'RSLinx Classic' window opens.
2. Click on 'Communications' and select 'Configure Drivers'. When the 'Configure Drivers' window opens, select 'RS232 DF1 devices' in the 'Available Drive Types' pull down menu (figure 4.3.21d).
3. Click on 'Add New' and enter a suitable Driver Name in the pop-up window that then appears. Click on 'OK'. The 'Configure RS-232 DF1 devices' window opens (figure 4.3.21e).

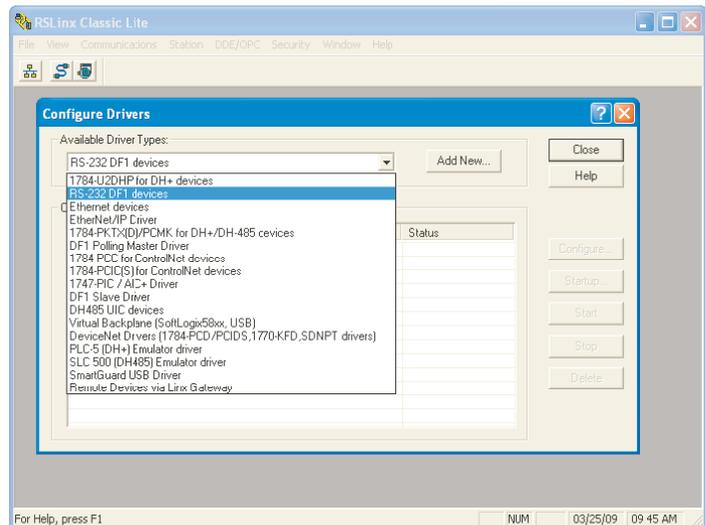


Figure 4.3.21d Configure drivers.

4. In the 'Device:' field pull-down menu, select the relevant device name. Select the PC COM port, and the relevant Baud Rate, Parity etc. (normally the defaults are acceptable). Click on 'Auto-Configure'.
5. When the Auto-Configure process is complete, click on 'OK', to close the 'Configure Drivers' window, and then minimise the 'RSLinx Classic' window.
6. Start the RSLogix 5000 program (from 'Start/All programs/... /RSLogix 5000). When the 'Quick Start' window opens, close it.
7. At the top of the RSLogix 5000 window, click on the 'Who active' icon  or click on 'Who Active' in the 'Communications' drop down menu. The 'Who Active' window opens.

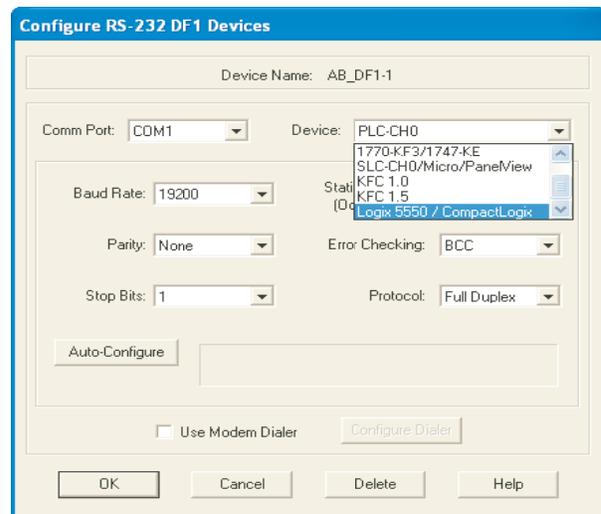


Figure 4.3.21e Configure RS-232 DF1 Devices

## 4.3.21 ETHERNET/IP OPTION (Cont.)

## UPDATING FIRMWARE

**CAUTION**

Power must be maintained during the Update process (which may take some tens of minutes).  
Loss of power during update may render the PLC inoperative.

1. Select the relevant instrument (figure 4.3.21f) and click on 'Update Firmware'. In the 'Choose Firmware Revision' window, select the latest version. Click on 'Update'.
2. Click on 'Yes' or 'OK' as appropriate to accept all the warnings and notes, and wait for the process to complete and to be validated.
3. When the update process is complete, close the 'Who Active' window.

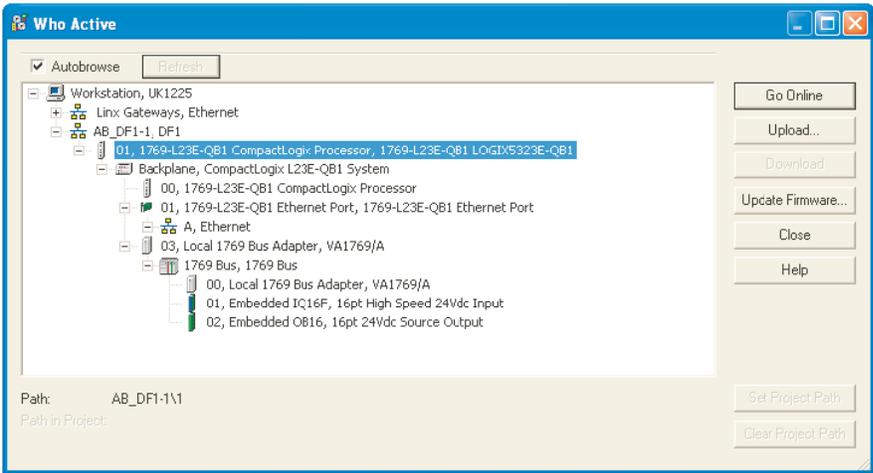


Figure 4.3.21f Who active window

## COMPLETING THE LINK

1. In the 'File' menu select 'New', or click on the 'New Tool' icon . The 'New Controller' window opens (figure 4.3.21g).
2. Select the relevant PLC from the drop-down menu. Enter a name, if required and click on 'OK'. After some seconds, the selected controller's window opens.
3. Open the 'Who active' window, and select the relevant instrument from the hierarchy. Click on 'Download'.
4. When the download is complete, right click on the relevant Ethernet port in the left pane 'tree', and select 'Properties' (figure 4.3.21h).

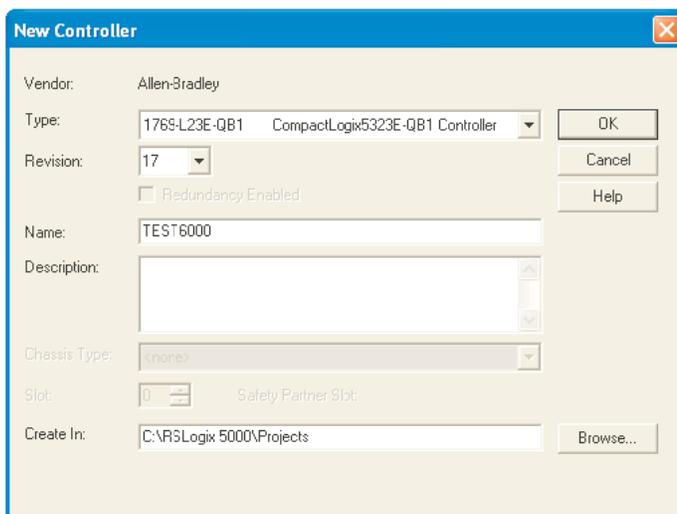


Figure 4.3.21g New Controller window

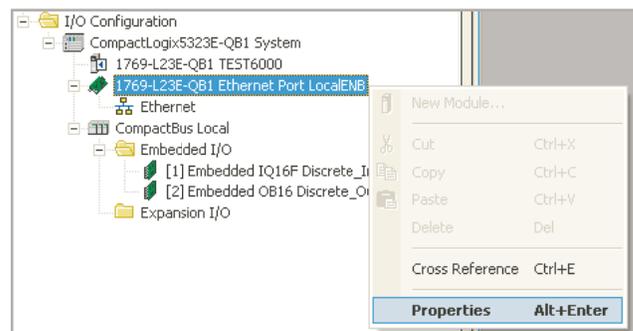


Figure 4.3.21h Ethernet port location

### 4.3.21 ETHERNET/IP OPTION (Cont.)

5. The Module Properties window opens. Select the 'Port Configuration' tab. For fixed IP Address applications, 'uncheck' the 'Enable BootP' check box, and enter an appropriate IP address and Subnet mask for the PLC.
6. Click on 'Set', and click on 'OK' on the warnings and notes displays.
7. Click on 'OK' to close the Properties window.
8. Left click on the 'Program' icon (figure 4.3.21j) and select 'Go OffLine' from the menu which appears.

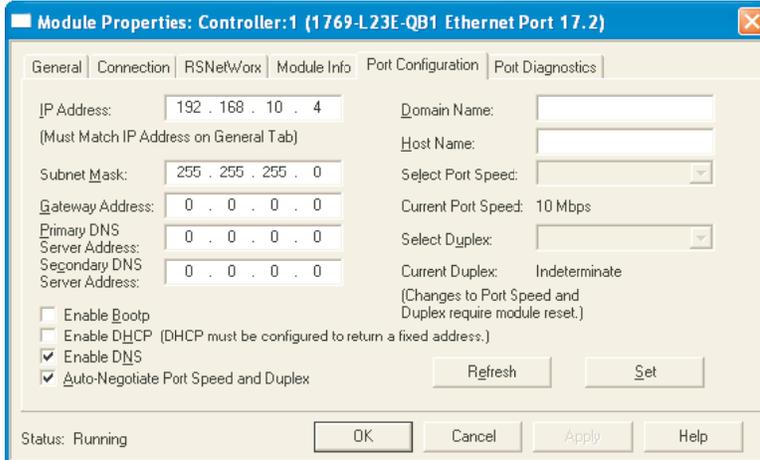


Figure 4.3.21i Module Properties



Figure 4.3.21j Click on 'Program' icon

9. Download, either from 'Who Active' or from the Program icon.
10. Connect the PLC to the Ethernet port (RJ45) of the PC.
11. Restore the RSLinx window. In the communications menu Configure Drivers window, select 'EtherNet/IP Driver'. Click on 'Add New' and enter a name for the driver.
12. Select 'Browse local subnet' if this is not already selected.
13. Click on the relevant Network Card and Click on 'OK'.
14. Minimise the RSLinx window.

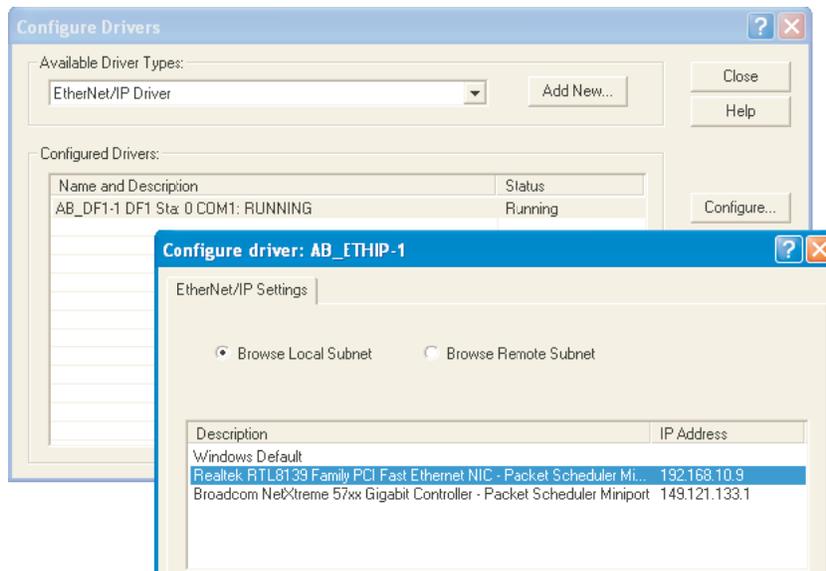


Figure 4.3.21k Configure EtherNet/IP driver

### 4.3.21 ETHERNET/IP OPTION (Cont.)

#### CREATING A NETWORK SCANNER

1. In the left pane tree-view of the RSLogix 5000 window, right click on the EtherNet symbol and select 'New Module...' from the menu (figure 4.3.21l).
2. Expand the communications list (click on the + symbol) (figure 4.3.21m)

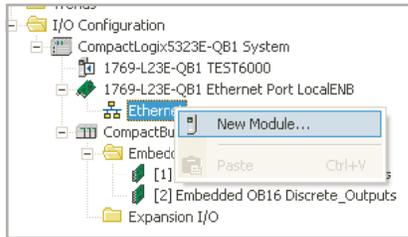


Figure 4.3.21l Right click on the EtherNet symbol

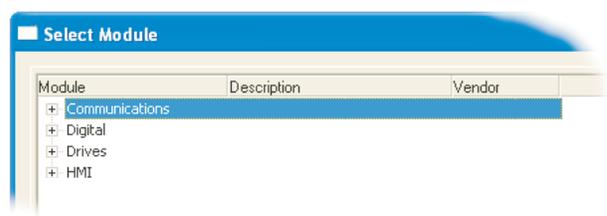


Figure 4.3.21m The communications list (unexpanded)

3. Using the scroll bar as necessary, click on the 'Generic EtherNet Module' item (figure 4.3.21n) and click on 'OK' (or double click on the selected item).
4. In the Parameters page that appears (figure 4.3.21p), enter a name for the module, and set the following values:  
 Comm Format: Data - INT  
 Address/Host name: The IP address of the recorder (from Operator/Network/Address menu)  
 Input: 100; size: 200  
 Output: 112; size: 200  
 Configuration: 1; size 0
5. Tick (click on) the 'Open Module Properties' checkbox if it is not already ticked.
6. Click on 'OK'

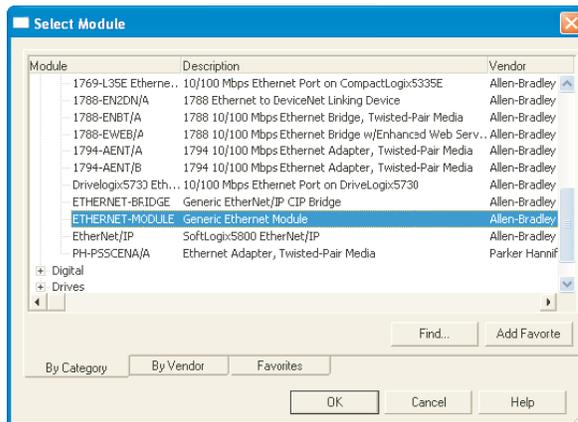


Figure 4.3.21n 'Select Generic EtherNet Module'

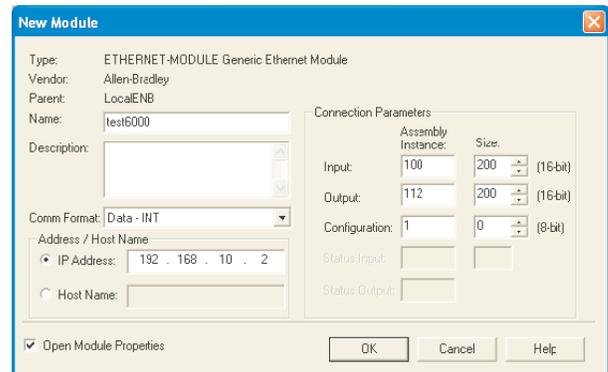


Figure 4.3.21p Enter parameters

### 4.3.21 ETHERNET/IP OPTION (Cont.)

#### CREATING A NETWORK SCANNER (Cont.)

- In the Module properties page (Figure 4.3.21q), set RPI to 1000 and click 'OK'.

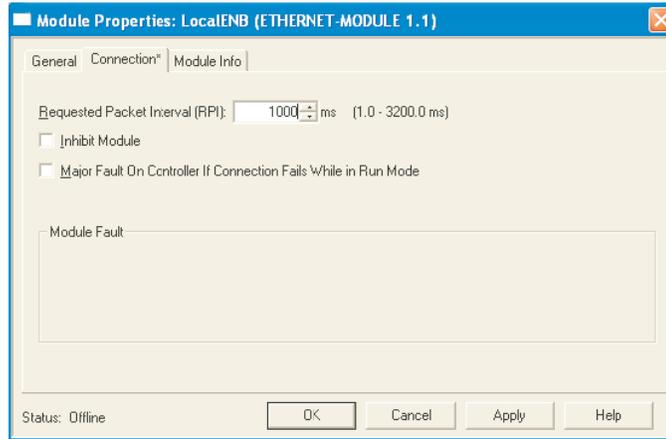


Figure 4.3.21q Module properties page

#### RECORDER CONFIGURATION

- At the recorder, log in ([section 3.3.1](#)).
- In the Operator/Config menu, touch the 'Options' item (at the bottom of the list). Check that 'EtherNet/IP' is enabled. If not, the software needs to be upgraded as described in [section 4.6.3](#) and an 'Autoconfigure' carried out.
- In the Operator/Config/Channels area ([section 4.3.3](#)), configure the channels as appropriate. Those channels which are to receive data from the PLC should have their 'Input Type' set to 'EtherNet/IP Comms Input'. The System/Copy facility ([section 4.6.6](#)) can be used to speed up the process. Maths channels are set up in a similar way ([section 4.3.11](#)).
- Set scale, units etc. to appropriate values.

**Note...** For the EtherNet/IP application, the number of decimal places is set to zero by default. Editing this value may lead to loss of resolution in the values displayed.

- Configure the EtherNet/IP input table as required (described earlier in this section).
- Ensure that the PLC is connected to the recorder either directly using a cross-over EtherNet cable or via a switch using non cross-over cable.

#### RUN MODE

- Set the PLC into either 'Remote' or 'Run' mode.
- Set the PLC online

#### STATUS INDICATORS

The status indicators at the top left corner of the RSLogix 5000 Page (Figure 4.3.21s) show the status of the link between the pc and the PLC.



Figure 4.3.21s Status displays

It is possible to check that the PLC is communicating with the recorder using the 'Tags' display to write values to the recorder and to receive values from it. Once it is proved that the link is working, the pc may be disconnected from the PLC if required.

### 4.3.22 Options

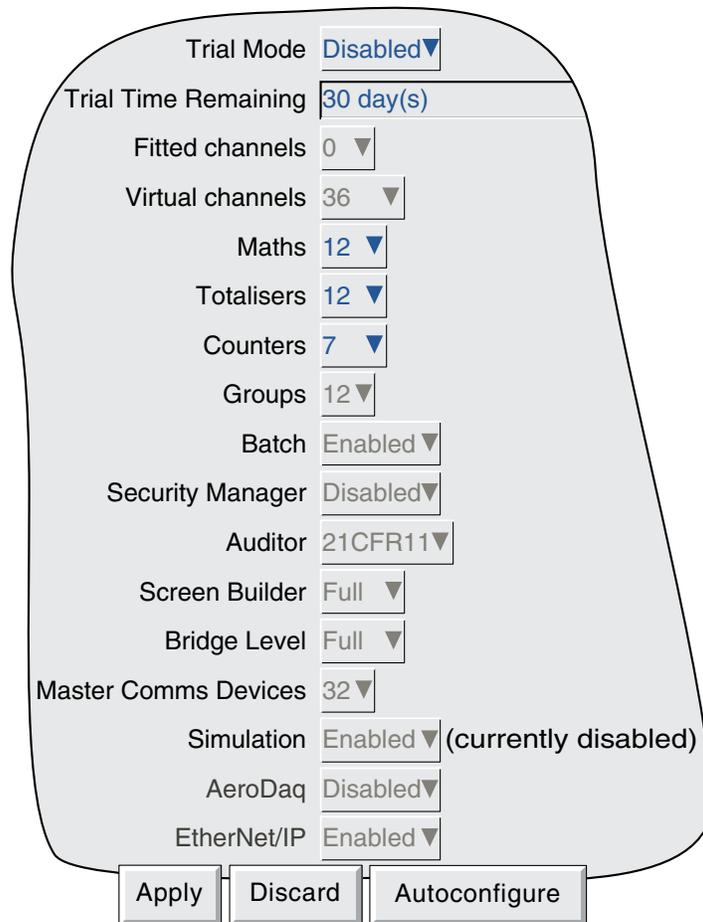


Figure 4.3.22 Options menu layout

Touching this key calls a display showing the current recorder hardware/software setup. Subsequently, should further options be fitted, this page shows the difference between the hardware actually fitted and the hardware the recorder software is configured for (currently ...). Whenever there is a difference, the 'Autoconfigure' key can be pressed to alert the recorder to the fact that extra options have been added (or taken away).

If no changes have occurred since last switch-on, then the '(currently ...)' fields and the 'Autoconfigure' key do not appear.

#### TRIAL MODE

##### Notes:

1. Trial mode enables/disables all options or features which are not fitted or enabled in the recorder, with the exception of the Simulator option and the History Maintenance option. The number and distribution of virtual channels reverts to that configured before Trial mode was invoked.
2. When disabling Trial mode, all configuration for the trial features is lost. Should the user decide to purchase a trial feature, then it is recommended that the trial configuration be saved (see [section 4.2](#)) so that it may be restored once the purchased trial feature is fitted and enabled ([keycodes](#) cannot be entered in Trial Mode).
3. Trial mode can be enabled only by users with 'Perform upgrades' permission ([section 4.4.1](#)).

Enabling 'Trial Mode' allows the user to enable, temporarily, the various software options that are available. Once the user has made the required choices, the 'Set Trial Options' key at the bottom of the screen, must be operated, followed by an 'Autoconfigure' procedure.

(Continued...)

### 4.3.22 OPTIONS (Cont.)

#### TRIAL MODE (Cont.)

Initially, the trial mode is set to expire 30 days after enabling (whether the recorder is powered or not). Any change in configuration results in a pop-up message stating how much of the 30 days period remains. Once Trial mode is disabled by the user, the remaining Trial Time Remaining' value is retained until Trial Mode is re-enabled.

#### VIRTUAL CHANNELS

Virtual channels are Maths channels, Totalisers and Counters. The total number of virtual channels is as specified at time of order. A maximum of 128 virtual channels is possible (as a chargeable option). The user can select whatever combination of maths channels, totalisers and counters is required, so long as the total does not exceed the number of virtual channels available. If it does, a warning is given when the 'Apply' button is operated, and the edit is ignored.

---

**Note:** If more than 100 maths channels are required, it is possible to use some of the totaliser channels modbus address space, however the Modbus register addresses of totalisers and counters are affected, to make room for the additional channels.

If for example there were 105 maths channels, the value of the new maths channel 101 would be at the address normally associated with totaliser 1, in turn totaliser 1 would be found in totaliser 6, and the value of counter 1 would be found at the address normally associated with counter 6. The 5 new channels being added will increment the existing allocated values along by the same amount of channels being added - to a maximum of 28.

---

#### SIMULATION OPTION

This option consists of a number of additional jobs, described below. The Simulation option is not enabled in Trial Mode'.

#### TREND FREEZE

When this 'Trend' category job ([section 4.7.10](#)) is initiated, the displays are held at their values at the time of initiation. When the recorder is 'unfrozen' the displays switch to their current values, and the clock will re-start from where it stopped. No blue line is drawn across the trace to indicate time discontinuity (Time change records - [section 3.4](#)).

---

**Note:** If 'SNTP client enable' is enabled (Network Address area - [section 4.5](#)), then the recorder time is synchronised at power-up only. I.E. the normal checks of recorder time compared with server time are not carried out with the Simulator option enabled.  
If 'SNTP server enable' is enabled, then the recorder will supply recorder time.

---

#### CLEAR

This 'Trend' category job ([section 4.7.10](#)) clears the display. Used in conjunction with 'Erase all History (below), this is known, in some applications, as Recall Mode.

#### ERASE ALL HISTORY

This 'Recording' category job ([section 4.7.9](#)) erases all the history files in the recorder. Used in conjunction with 'Clear' (above), this is known, in some applications, as Recall Mode.

---

**Note:** If the 21CFR11 option is enabled, Erase All History jobs can be triggered, but are ignored, leaving the recording history unaffected.

---

#### SCREEN SAVER

This 'Trend' category job ([section 4.7.10](#)) switches the display brightness to the value set up in 'Saver Display' (Instrument Configuration - [section 4.3.1](#)) for the duration of the job. The job overrides the 'Save after' time value also set up in Instrument Configuration.

## 4.4 SECURITY

Touching this key allows the operator to select 'Login' (described in [section 3.3.1](#)), 'Management', 'Access' or 'Add/Remove User' for configuration. Selecting 'Access' displays the current user level. Touching this area allows the user to select 'Logged out', 'Operator', 'Engineer' or any of the added users. The user may also go directly to logged out mode by operating the 'Logout' key.

For users with Security Manager option enabled, 'Change Password' and 'Clear Password Cache' may also appear in this menu depending on the user's access level.

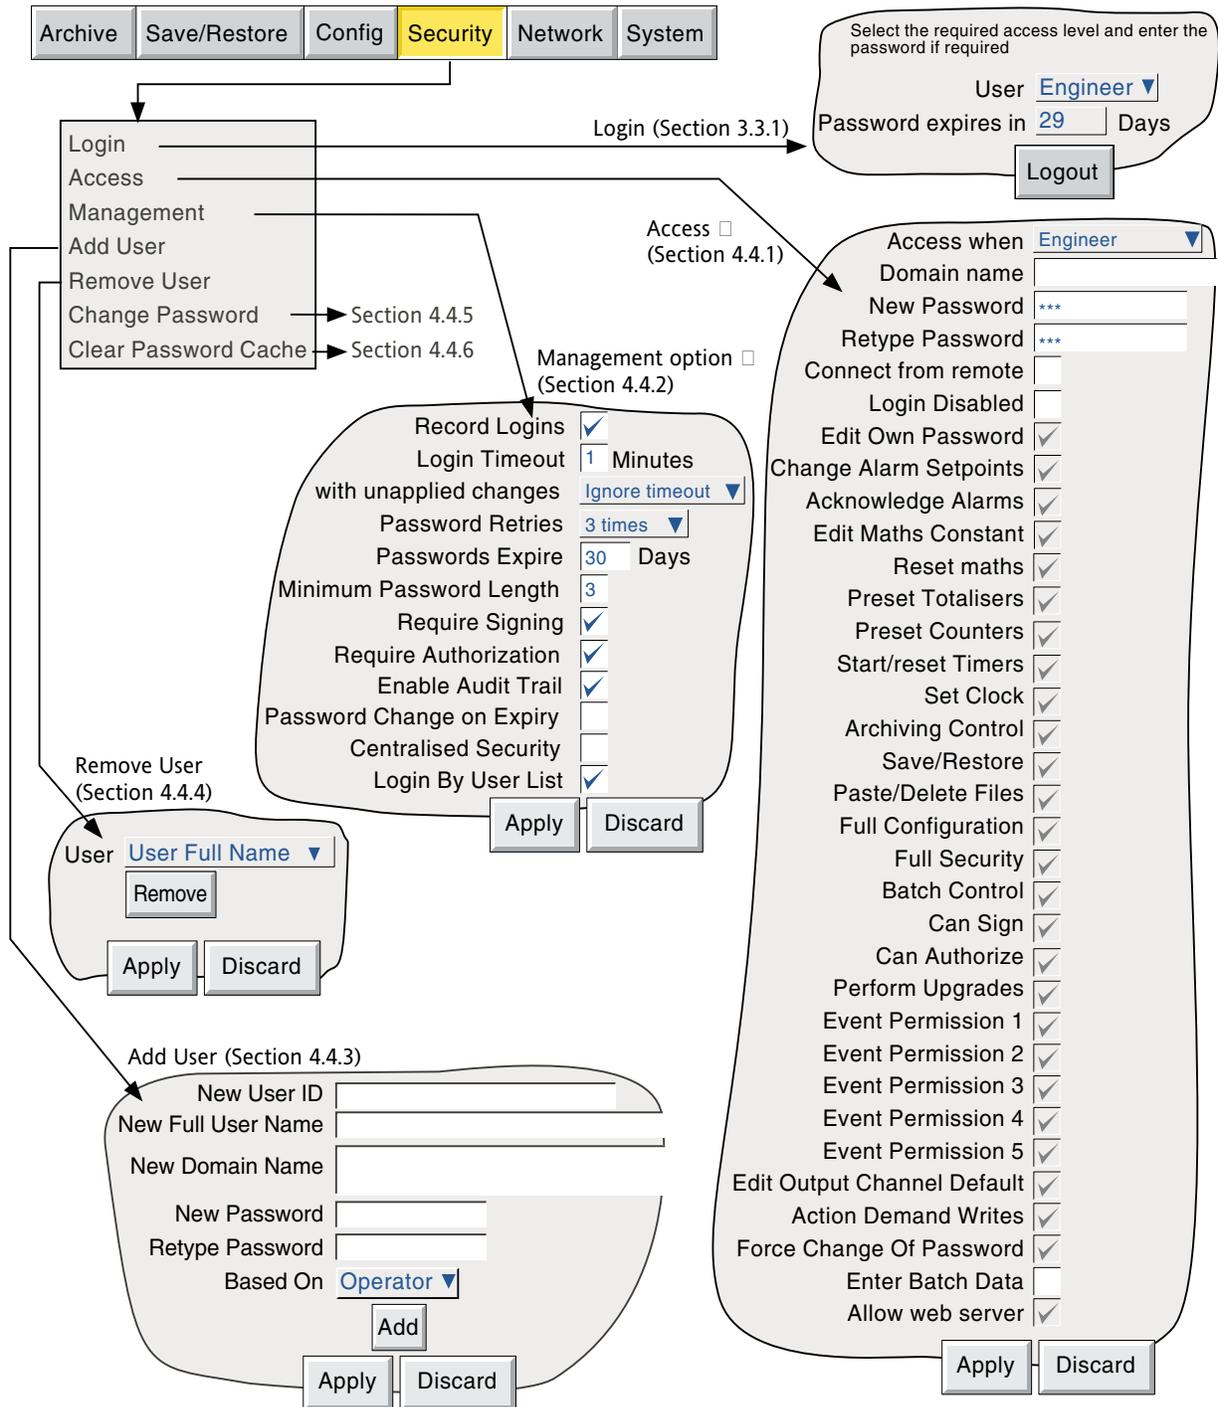


Figure 4.4 Security configuration menus

### 4.4.1 Access levels

There are essentially three levels of security associated with the recorder viz: Engineer, Operator and Logged out. (The fourth level - Service - is available only to service engineers). When logged-in at engineer level, the user can set access permissions for other levels, and can enter or edit passwords for Operator and Engineer levels. The default password for Engineer level access is '100'. The default password for 'Operator' level access is 'blank' (i.e. no password is required), unless the Auditor 21CFR11 option is fitted in which case the default is also 100.

**Note:** To allow free access to the recorder configuration, the password can be set to 'blank'. This allows subsequent access without a password having to be entered (not for recorders with either Auditor option fitted).

Users with Full Security permission can Add (and Delete) users (sections 4.4.3, 4.4.4) and assign them individual passwords and access permissions.

#### SETTING PERMISSIONS

Once logged in at Engineer level, operate the Security key and select Access. A page similar to that shown in figure 4.4.1 appears, allowing the permissions to be set for the various access levels and for individual users. The list of parameters is the same for all access levels except for 'Logged out', for which the password parameters and 'login disabled' items do not appear.

**Note:** If the Security management option is fitted, and 'Centralised Security' is enabled in the Security/Management system (section 4.4.2), permissions are 'Read Only' (i.e., not editable) at the recorder. In such a case permissions can be changed only by using the Security Management software.

The screenshot shows the 'Access permissions' menu with the following fields and options:

- Access when: Frederic
- Domain: [blank]
- New Password: \*\*
- Retype Password: \*\*
- Connect from remote:
- Remote user name: Fred
- Remote password: [blank]
- Retype remote password: [blank]
- Login Disabled:
- Edit own Password:
- Change Alarm Setpoints:
- Acknowledge Alarms:
- Edit Maths Constant:
- Reset Maths:
- Preset Totalisers:
- Preset Counters:
- Start/Reset Timers:
- Set Clock:
- Archiving Control:
- Save/Restore:
- Paste/Delete Files:
- Full Configuration:
- Full Security:
- Batch Control:
- Can Sign:
- Can Authorize:
- Perform Upgrades:
- Event Permission 1:
- Event Permission 2:
- Event Permission 3:
- Event Permission 4:
- Event Permission 5:
- Edit Output Channel Default:
- Action Demand Writes:
- Force Change of Password:
- Enter Batch Data:
- Allow web server:

Buttons: Apply, Discard

Legend:  = Enabled

Callouts:

- 'Domain' field appears only if the Security Manager option is fitted
- Password functions do not appear for 'Logged-out' level of access or if Domain is not left blank.
- Remote user fields appear only if 'Connect from remote' is enabled
- Password functions do not appear for 'Logged-out' level of access.
- These fields appear only if the relevant options are fitted
- These fields appear only if the Auditor 21CFR11 option is enabled.
- Action Demand Writes appears only if the Master Comms option is fitted.

Figure 4.4.1 Access permissions menu

#### 4.4.1 ACCESS LEVELS (Cont.)

##### ACCESS WHEN:

Allows an access level or an individual user name to be selected from a pick list.

##### DOMAIN NAME

For units fitted with Security Manager option only, this allows a security domain name of up to 60 characters to be entered, for the user selected in the 'Access when' field. If the default (blank) is not edited, then the user can gain access using password setup in the 'New password' field described below. If a new domain name is entered here, or if one already appears, the 'New Password' and 'Retype Password' fields are not displayed, and the user must use his or her network login password, as allocated by the user's IT department or Network administrator.

Details of the Active Directory Server are entered in Network/Address configuration ([section 4.5.1](#)). Passwords can be edited as described in 'Change Password' ([section 4.4.5](#))

If 'Centralised security' is enabled in the Security/Management menu ([section 4.4.2](#)) then the Domain name can be configured only using Security Manager software.

---

**Note:** An IP address must not be used as the domain name because to do so will disable the user's ability to log in using Active Directory, even if there is a valid account on the server.

---

##### NEW PASSWORD/RETYPE PASSWORD

These fields do not appear if 'Access when' = 'Logged Out', or if the 'Domain Name' is anything other than left blank.

These fields allow a new password to be entered for the selected access level or User. The password must also be entered in the 'Re-type Password' field. If the two differ, a warning message (Passwords did not match) appears when the APPLY key is operated, and password entry must be repeated. If the password does not comply with the minimum length requirements in Security Management (if fitted) ([section 4.4.2](#)), a warning message (Invalid Password) appears when the 'Apply' key is operated, and password entry must be repeated.

##### CONNECT FROM REMOTE

Enabling this field, causes two further entry boxes: 'Remote user name' and 'Remote password' to appear. These items are used in establishing connection between a host computer and the recorder. The Remote user name is, by default, the Access Level (e.g. 'Engineer') or the User ID.

To make use of the Web server facility ([Annex C](#)), 'Allow web server' (below) must also be enabled.

##### REMOTE USER NAME/REMOTE PASSWORD

These two entry boxes allow user name and password to be entered for use by the remote host operator. The remote user will be able to access the recorder configuration according to the other access permissions enabled in this page. The password must be entered twice to ensure integrity.

To allow unrestricted view-only to the host, 'Logged out' permission level should be selected and then a user name of 'anonymous' entered, and the password field left blank.

---

##### Notes:

1. Remote login will be refused if the user account is disabled for any reason.
  2. For maximum security, it is recommended that the remote password and the 'local' password are non-identical.
  3. Attempts to establish a Bridge connection will fail if the relevant Remote User Name contains characters with ASCII codes greater than 127 (such as é, è, à, ü etc.). Section B6 ([Annex B](#)) shows codes 0 to 127.
-

#### 4.4.1 ACCESS LEVELS (Cont.)

##### LOGIN DISABLED

For all levels except Logged Out, This allows any one or more of the access levels to be removed from the 'Access when' picklist.

---

Note: This feature should be used with discretion, or the situation might arise in which the recorder cannot be logged onto, either at a particular access level or at all. It is recommended that at least one user with Engineer-level access is retained with login enabled, or it may become necessary to return the recorder to the manufacturer, or to arrange for a service visit.

---

Auditor option notes:

1. If the Auditor 21CFR11 option is fitted, and the number of Password Retries is exceeded then the relevant login is disabled. A user with Engineer level access can re-enable the login.
  2. If the Auditor 21CFR11 option is fitted, and the Password Expire time has been exceeded, all logins are disabled. In order to reconfigure the recorder, it is necessary to use the Service password - please contact the recorder supplier or the nearest service centre for advice.
- 

##### EDIT OWN PASSWORD

Allows each user, with this permission enabled, to edit his/her password.

##### CHANGE ALARM SETPOINTS

Allows each user with this permission enabled, to edit alarm parameters under Configuration/Channel

##### ACKNOWLEDGE ALARMS

Allows each user with this permission enabled to acknowledge alarms ([section 3.1.4](#))

##### EDIT MATHS CONSTANT

For recorders fitted with the [Maths option](#) only. If one or more maths channels are configured with function 'Constant', then with this permission set, the user may edit the constant value(s).

##### RESET MATHS

Allows the user to reset applicable maths functions. See [section 4.3.11](#) for further details of maths functions.

##### PRESET TOTALISERS

Allows the user to preset totaliser values (if the option is fitted). See [section 4.3.12](#) for further details of totalisers.

##### PRESET COUNTERS

Allows the user to preset counter values (if the option is fitted). See [section 4.3.13](#) for further details of Counters.

##### START/RESET TIMERS

Allows the user to start and reset the timer value. See [section 4.3.14](#) for further details of timers.

##### SET CLOCK

Allows each user with this permission enabled, to set the recorder time and date functions under [System/Clock](#) (Section 4.6.1)

##### ARCHIVING CONTROL

Allows each user with this permission enabled full access to archive control.

#### 4.4.1 ACCESS LEVELS (Cont.)

##### SAVE/RESTORE

Allows each user with this permission enabled, full access to saving and restoring functions as described in [section 4.2](#), above. Without this permission, the SAVE/RESTORE key does not appear.

##### PASTE/DELETE FILES

Allows each user with this permission enabled, to Paste and Delete files as described in [section 5](#).

##### FULL CONFIGURATION

Allows each user with this permission enabled, full access the recorder configuration.

##### FULL SECURITY

Allows each user with this permission enabled, full access to all recorder security functions.

##### BATCH CONTROL

This field appears only if the Batch Option ([section 4.3.10](#)) is fitted. Allows the user to enter batch data and to start, stop and create new batches. If this access permission is set, 'Enter Batch Data' below, is automatically enabled and cannot be disabled.

##### CAN SIGN

This appears only if the Auditor 21CFR11 option is fitted. If the field is enabled it allows the user to change the configuration of the recorder (according to the other permissions set for the login), providing the security management system 'Require Authorization' is not enabled. If it is, changes can be made only if the correct password for a user with 'Can Authorize' permission is entered. See [section 4.4.2](#) for details

##### CAN AUTHORIZE

This appears only if the Auditor 21CFR11 option is fitted. If the field is enabled it allows the user to change the configuration of the recorder according to the permissions set for the login. See [section 4.4.2](#) for details of the Auditor options.

##### PERFORM UPGRADES

'Upgrade' appears in the system menu only for access levels in which this box is ticked. [Section 4.6.3](#) contains further details. Trial mode ([section 4.3.22](#)) can be enabled/disabled only by users with Perform Upgrades permission.

##### EVENT PERMISSION 1

If this is enabled, then this login will trigger an event source which remains active for as long as the login is active. See [section 4.3.6](#) (Event Sources: User Logged In) for further details.

##### EVENT PERMISSION 2 TO 5

As for Event permission 1, above.

##### EDIT OUTPUT CHANNEL DEFAULT

Appears only if the Master Comms option is fitted.

When enabled, this allows a user with this login to edit the default value of any output channel. Normally the defaults are used only when the source channel is 'In Error'.

#### 4.4.1 ACCESS LEVELS (Cont.)

##### ACTION DEMAND WRITES

Appears only if the Master Comms option is fitted. See [section 4.3.16](#) and [section 4.3.18](#) for further details.

When enabled, this allows a user with this login to write values manually over master comms either directly, by job action or (if the option is fitted), by using the User Screens 'Operator' key. Where Demand Writes are initiated by Job action, the job will be carried out whether or not this login has permission to action Demand Writes.

---

**Note:**

When [Audit trail](#) is enabled, only the newly written value appears in the audit trail messages. This is because the instrument has no way of determining what the value of the parameter was before the write occurred.

The messages are of the form:

12/07/06 10:14:30 Auto Mode wrote 19.37

12/07/06 10:14:29 Demand write Auto Mode, Signed Engineer, No Auth. Reqd., Note

where 'Auto Mode' is the descriptor associated with the demand write, and '19.37' is the value written.

---

##### FORCE CHANGE OF PASSWORD

When this checkbox is enabled for a user, it means that that user will have to change password at his/her next login. At next log in, a pop-up dialogue box requests that a new password be entered. If a new password is not entered, login is denied.

Entering the new password clears the checkbox, so this is a 'one-shot' operation, until the checkbox is enabled again by a user with 'Engineer' level access.



The image shows a 'Change Password' dialog box. It has a blue header with the text 'Change Password'. Below the header, there are two text input fields: 'New Password' and 'Retype Password'. At the bottom of the dialog, there are two buttons: 'Apply' and 'Logout'.

##### ENTER BATCH DATA

If 'Batch Control' is enabled, then this field is automatically enabled, and is 'greyed out' so that it cannot be edited.

If 'Batch Control' is not enabled, then enabling this item allows the user to enter batch data, but not to start, stop or create new batches.

##### ALLOW WEB SERVER

Any user with this permission and 'Connect from remote' permission will be able to view the recorder from a remote PC, using the [Remote user name](#) and [Remote password](#) described above.

---

**Note:** See [Annex C](#) for details of the Web server facility.

---

## 4.4.2 Management (option)

**Note:** Where users are controlled by a domain on the recorder, Security Manager will not manage or reconcile disabled accounts, password changes or password expiry on these recorders.

This menu selection appears only if the Audit Trail option, 21CFR11 option and/or Security Management option is fitted. Which configuration fields appear depends on the option(s) fitted. Figure 4.4.2a, below, shows the configuration menus for the various combinations.

The 21CFR11 option allows the recorder to be set up so that all changes to configuration (with the exceptions listed below) are added to the history files and also allows certain constraints to be placed on the recorder passwords. Once these items of configuration are set up, they apply to all groups. Figure 4.4.2a, below, shows the configuration menu.

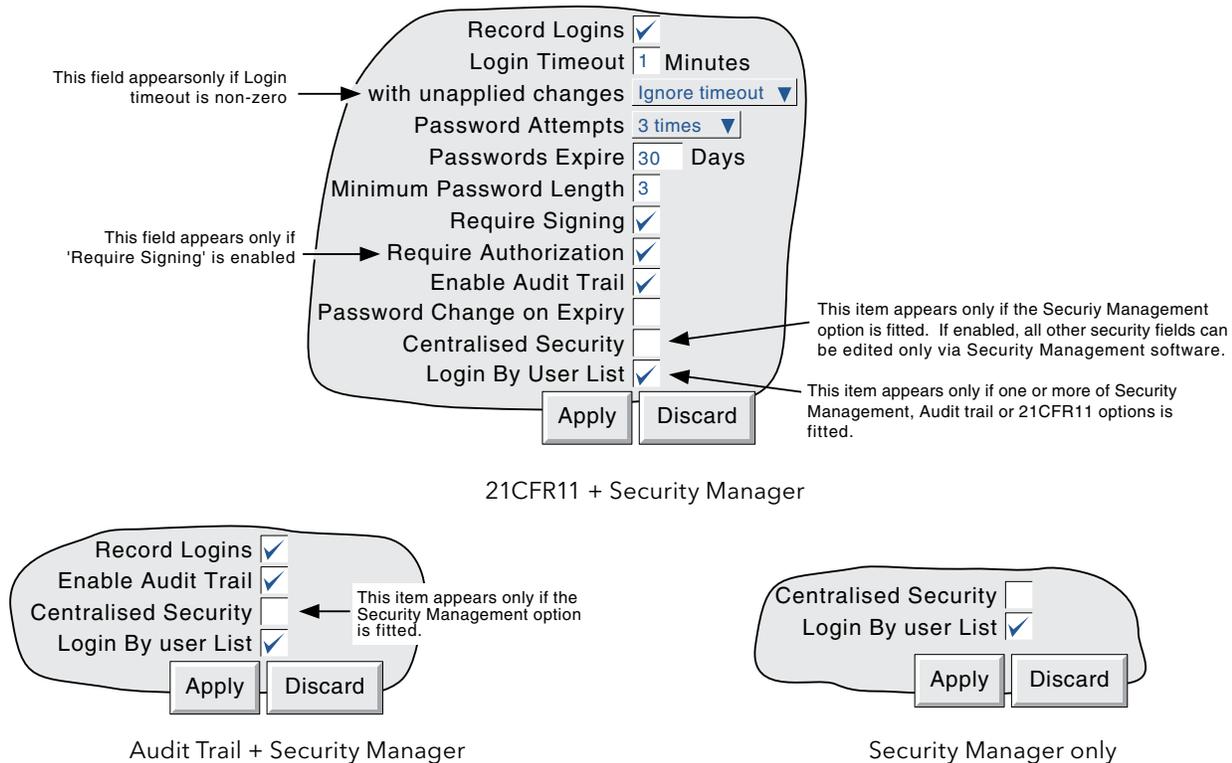


Figure 4.4.2a Management menu structure

### CHANGES NOT RECORDED

Changes to configuration made via MODBUS/TCP are not recorded. It is up to the user to write the identity, time/date, reason for change etc. as text messages, which when sent via MODBUS/TCP, become part of the relevant history file.

### CONFIGURABLE PARAMETERS

#### Notes:

1. Unless otherwise indicated, the following parameters appear only if the Auditor 21CFR11 option is fitted.
2. If Centralised Security is enabled, none of the other parameters in this menu can be edited at the recorder. Changes can be made only using Security Management software.

## 4.4.2 MANAGEMENT (Cont.)

### CONFIGURABLE PARAMETERS (Cont.)

Record logins	For either Auditor option, if this field is enabled, then each time a new login occurs a message appears, giving the date, time and login name. E.G. 12/07/06 15:32:20 Login by Frederick Bloggs Logouts are recorded in a similar way - e.g. 12/07/06 15:49:43 Logout by Frederick Bloggs If the login or logout is via a 'Bridge' session ( <a href="#">section 6</a> ), the IP address of that viewer appears in the login/logout message - e.g. 12/07/06 15:58:03 Login by (149.121.130.126)Engineer
Login Timeout	When set to zero, the login remains valid until changed. For any other value, the user is logged out after the number of minutes entered here has elapsed since the last time the screen was touched.
with unapplied changes	This field does not appear if the Login Timeout has been set to zero. For non-zero time-out values, this allows the user to choose whether a any unapplied changes are lost when the Login Timeout period has elapsed, or b the login timeout is ignored if there are any unapplied configuration changes.
Password Attempts	For Active Directory users, this parameter is configured at the Active Directory and the value set at the instrument is ignored. For other users, this allows the user to limit to three, the number of attempt that can be made to enter a password. The choices are '3 times' and 'unlimited'. When set to 3 times, the user login is disabled after three incorrect attempts to enter the password have been made. A 'System Message' appears on the screen and is also sent to the 'chart': 12/07/06 13:20:42 User Frederick Bloggs, login disabled, invalid password
Passwords expire	In order to re-enable the login, a user with Engineer access level must deselect 'Login Disabled' in the ' <a href="#">Access</a> ' menu described in section 4.4.1, above. For Active Directory users, this parameter is configured at the Active Directory and the value set at the instrument is ignored. For other users, this field allows the user to set an expiry period of up to 999 days which applies to all passwords. The number of days remaining to expiry is shown in the login page. If set to zero, then the expiry period does not apply.

---

**Note:** All required passwords MUST be changed within this number of days or all logins will be disabled. In this situation, the configuration of the recorder will be available only to those with Service Level access and in most cases, a call will have to be made to the recorder supplier or service agency. (But see '[Password Change on Expiry](#)', below)

---

Minimum Password Length	For Active Directory users, this parameter is configured at the Active Directory and the value set at the instrument is ignored. For other users, this allows a minimum length of password to be entered (default = 0; minimum = 3). If an attempt is made to enter a new password with fewer characters than the minimum, a warning message appears on the screen (Invalid Password Length) and the new password is ignored.
Require Signing	If this field is enabled, then changes to the recorder operation, configuration (or any other item included in the history file) can be made only by those users whose 'Can Sign' permission is enabled in the ' <a href="#">Access</a> ' menu described in section 4.4.1 above. When 'Apply' is attempted, a 'signature' page appears which requires the entry of the correct password for the selected user, and of a note which would normally be used to give the reason for the change.

## 4.4.2 MANAGEMENT (Cont.)

### CONFIGURABLE PARAMETERS (Cont.)

**Require Authorization** This field appears only if 'Require Signing' is enabled. If Require Authorization is enabled, then changes to the recorder operation, configuration (or any other item included in the history file) can be made only by those users whose 'Can Authorize' permission is enabled in the 'Access' menu described in section 4.4.1 above. When 'Apply' is attempted, a 'signature' page (figure 4.4.2b) appears which requires the entry of the correct password for the selected user, and a note which would normally be used to give the reason for the change.

**Note:** If neither 'Require Signing' nor 'Require Authorization' is enabled, then any user can make changes to the recorder operation, configuration etc. and the 'signature' page does not appear.

Figure 4.4.2b Signature page

**Enable Audit trail** For either Auditor option, if this field is enabled, then all changes to configuration are displayed on the 'chart' and become part of the history file for each enabled group. The following is an example of how these changes would appear on the screen for an imaginary set up for channel 8. 'New T/C type chan 8' is the note entered in the Signature page, and 'Kiln8 temp' is the channel descriptor.

```
05/06/06 11:53:01 Configuration Revision 486,144 was 486,143
05/06/06 11:52:57 Kiln8 temp Alarm Number 1, Job Number 1 Speed/interval B while Unacknowledged was No action
05/06/06 11:52:57 Kiln8 temp Alarm Number 1 Threshold 530.0 °C was 500
05/06/06 11:52:57 Kiln8 temp Alarm Number 1 Type Absolute Low was Absolute High
05/06/06 11:52:57 Kiln8 temp Cold Junction Type Internal was External
05/06/06 11:52:57 Kiln8 temp Scale High 1000.0°C was 900.0
05/06/06 11:52:57 Kiln8 temp Scale Low 450.0°C was 300.0
05/06/06 11:52:57 Kiln8 temp Lin Type Type K was Type J
05/06/06 11:52:57 Config,Signed:Engineer,Authorized:Engineer,New T/C type chan 8
```

(Please see notes below)

## 4.4.2 MANAGEMENT (Cont.)

### CONFIGURABLE PARAMETERS (Cont.)

#### Notes:

1. The Configuration Revision (and for changes in the Security menus - the Security Revision) are incremented every time the recorder configuration (security configuration) is changed. The current values can be viewed in the System/About menu ([section 4.6.9](#)).
2. All configuration and security changes must be made either at the recorder operator interface, or from a host pc using Bridge 'Full' software. Use of the configuration editor is not permitted if traceability is to be maintained.
3. If fitted, Event buttons ([section 4.3.7](#)) are not included in the Require Signing/Require Authorization regime described above. Instead, each individual button can be configured to require signing or to require both signing and authorization.
4. If a large number of configuration changes are made with Audit trail enabled, then the number of messages produced may result in the total amount of data generated exceeding the amount that can be written to the internal FLASH memory in the time available, particularly if there are a large number of points configured. The recorder responds by reducing the recording speed, and a message 'Recording failed - internal overflow. Slowing recording interval of fastest group(s)' appears, to draw the user's attention to the situation.

#### Password Change on Expiry

If this check box is enabled, then the first time a user tries to login, after his or her password has expired, a dialogue box appears asking the user to enter a new password. Only when this new password has been entered and confirmed, will the user be able to access the recorder configuration.

Security Management Option. The new password is not written to the Security Manager until the next 'deploy', after which the expiry period configured for the user (within Security Management), is restored. The interim expiry period is set to 24 hours, and the 'deploy' must be carried out within this period, or password expiry will recur.

#### Centralised Security

This checkbox occurs only if the Security Management option is fitted. If this checkbox is enabled, none of the other parameters in the Management menu can be edited at the recorder (i.e. they become 'Read Only'). Changes can be made only by means of Security Management software. At the recorder, the following menu items also become 'read only', or do not appear as menu items or are not selectable, even if the checkbox appears:

Access level permissions ([section 4.1.1](#)) (Read Only)

Add User/ Remove User ([section 4.4.3](#)) (Do not appear as menu items)

Restore configuration/Security data ([section 4.2.2](#)) (Not selectable)

New configuration/Security data ([section 4.2.3](#)) (Not selectable)

The Security Revision (previously Security Version) is initially set to -1 when Centralised Security is enabled. It will remain at this value until a successful download has been performed via Security Manager Software. The Security Revision will then take the downloaded value (e.g. 139). Any local security revision changes (e.g. max. number of logins exceeded) cause the value to have a 'local change count', starting at 001 appended to it (e.g. 139.001, 139.002 and so on). The local change count is reset to 000 (and no longer displayed) when the next download occurs (e.g. 140). Downloads can occur automatically when the Security Manager detects that a local change has occurred, or manually, as and when required.

#### 4.4.2 MANAGEMENT (Cont.)

##### CONFIGURABLE PARAMETERS (Cont.)


###### Centralised security (Cont.)

If Centralised Security is enabled, the Domain name can be edited only using 'Security Manager' software.


**Login by User List** This checkbox appears if either of the Auditor options and/or the Security management option is fitted.

When enabled, the normal login window appears, with a pull down list of users. Once a user has been selected the correct password for that user must be entered in order to log in.

When disabled, the user must enter a user name and associated password in order to log in.

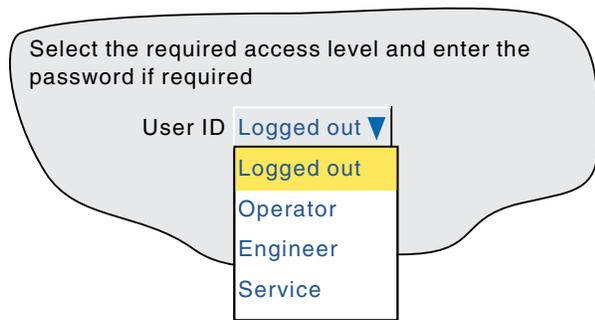

'Login By User List' enabled

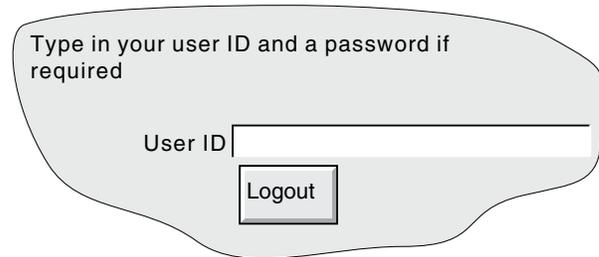

'Login By User List' not enabled

### 4.4.3 Add user

Figure 4.4.3 shows that the selecting of 'Add User' from the SECURITY picklist allows new user IDs to be entered, together with passwords, and a chosen set of access permissions, which can subsequently be edited under Security/Access. The ADD key and the APPLY key must both be used to write the change to the recorder data base. The user must have Full Security access in order to add a new user. If either Auditor option is fitted, the new user's access permission list is printed on the chart.

Adding a new user clears the recorder's password Cache, as described in [section 4.4.6](#), below.

Figure 4.4.3 Add User display page

#### NEW USER ID

This field allows a User ID of up to 20 characters to be entered for a new user. This ID is used when logging in using ID/password entry technique (that is, when 'Login by user list' is disabled, as described in [section 4.4.2](#) above).

#### NEW FULL USER NAME

This field allows a User name of up to 25 characters to be entered. This name appears in the 'current access level' pushbutton at the top left corner of the display screen, in operator notes and so on.

#### NEW DOMAIN NAME

For units fitted with Security Manager only, this allows the entry of a Security Domain name (up to 60 characters in length). If such an entry is made, the Password fields described below do not appear, and the user must use a network login assigned by the IT department or by the network administrator. The domain name appears in the 'Access' menu and can be edited there if required, once the 'Add User' procedure is complete.

If 'Centralised Security' ([section 4.4.2](#)) is enabled this Domain name can be edited only using Security Manager software.

---

**Note:** An IP address must not be used as the domain name because to do so will disable the user's ability to log in using Active Directory, even if there is a valid account on the server.

---

#### NEW PASSWORD/RETYPE PASSWORD

For units fitted with the Security Manager option, if the New Domain Name (above) is anything other than the default (left blank), these Password fields do not appear, as any user with a domain configured must use the password allocated by the Network administrator.

For other users, these fields allow a password to be entered and confirmed. If the password does not comply with the minimum length requirements in Security Management (if fitted) ([section 4.4.2](#)), a warning message (Invalid Password) appears when the 'Apply' key is operated, and password entry must be repeated.

#### BASED ON

This picklist allows another user or access level to be used as a permissions template, to simplify the configuration if several operators are to have identical permissions.

#### 4.4.4 Remove user

Selecting 'Remove User' from the SECURITY picklist allows users to be removed from the user list. The 'Remove' key and the 'Apply' key must both be used to write the change to the recorder data base. Figure 4.4.4 depicts the display page. The User Full Name appears in this page.



Figure 4.4.4 Remove User display page

For Active Directory users:

1. Removing a user clears the recorder's password cache, described in [section 4.4.6](#), below.
2. Removing a user from the Active Directory Domain does not automatically remove that user from the recorder; a 'Remove User' procedure must also be carried out.

#### 4.4.5 Change Password

For units fitted with the Security Manager option, this allows the entry of a new password for the currently logged-in user, providing that the user has 'Edit own password' enabled in the 'Access when' list and is Active Directory authenticated.

##### Notes:

1. This feature should be used with discretion, as it affects Network logins which would normally be under the control of the user's IT department or Network Administrator. Changing the password may cause conflicts within the network thus preventing its efficient operation.
2. If 'Active Directory security' is set to 'None' ([section 4.5.1: Network/Address menu](#)), any attempted changes to the password will be rejected. That is, only passwords on a Transport Layer Security (TLS) secured connection are accepted.
3. The old password remains valid for up to an hour (default) after the change, and during this period, both passwords are valid. The default period can be edited by the Network administrator.

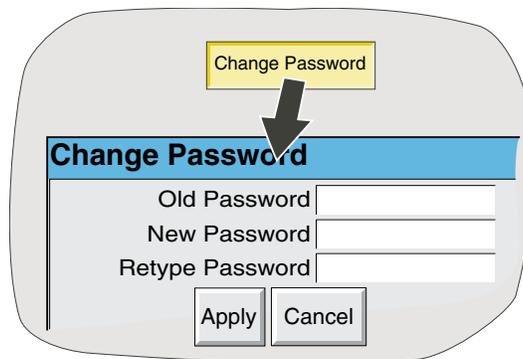


Figure 4.4.5 Change password

## TROUBLE SHOOTING

If the change password procedure fails:

1. Check that the Active Directory server instrument alarm is inactive ([section 3.1.3](#))
2. Check that the connection with the Active Directory server has TLS security enabled ([section 4.5.1](#))
3. Check that the new password's length, complexity, history and minimum password age match the criteria laid down in the Active Directory password policy configuration. password length must also comply with the minimum password length configured in the security menu ([section 4.4.2](#))

#### 4.4.6 Clear Password Cache

This menu item appears only for units fitted with the Security Manager option and only for users with 'Full Security' access ([section 4.4.1](#)).

#### USER PASSWORD AUTHENTICATION

If the user has a domain configured, then when an attempt is made to log in, the password entered by the user is authenticated by the Active Directory server (see Network/Address menu description). In other words, the recorder attempts to do an LDAP\* bind with the configured Active Directory server, and if the 'bind' is successful, the user is logged in.

\* Lightweight Directory Access Protocol

#### PASSWORD CACHE

Once a password has been authenticated, it is added to a list of up to 100 valid passwords (the Password cache) held in the recorder. This means that if the Active Directory server is unavailable the next time the user attempts to log in, then if the password is in the cache, the login will proceed without further authentication.

#### CLEAR PASSWORD CACHE

If necessary the password cache can be cleared by using the Clear Password Cache button (confirmation required). The cache is also cleared whenever a new user is added to the user list ([section 4.4.3](#)), or if the login for an existing user is removed ([section 4.4.4](#)).

#### 4.4.7 Active Directory server setup

For users with Security Manager option only.

It is assumed that the person responsible for operating the Active Directory server is familiar with the basics of setting up a suitable server. The details given below explain the file structure necessary in order that the Security Manager software may communicate with the server. Briefly, a 'User' must be a member of a 'Group', which must be part of an 'Organizational unit' (figure 4.4.7a).

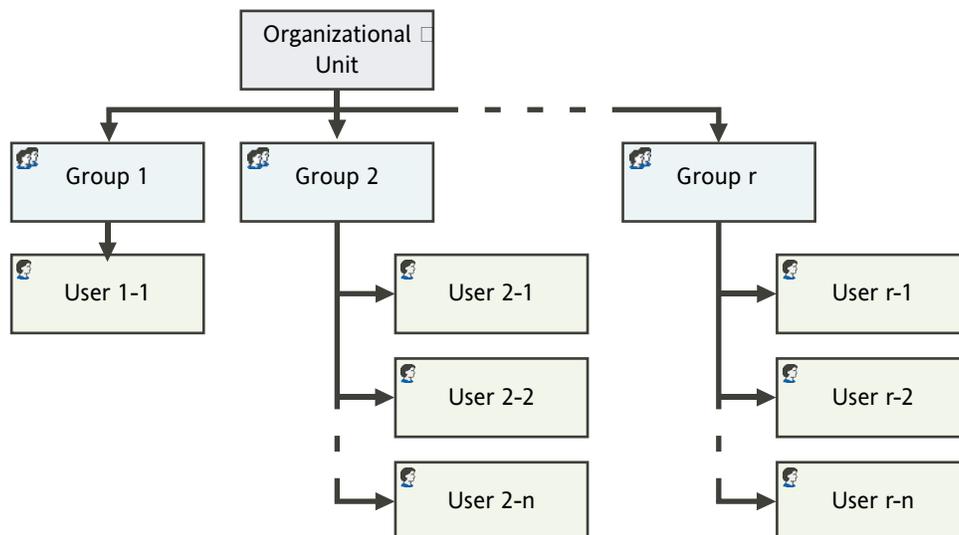


Figure 4.4.7a Structure overview

#### 4.4.7 ACTIVE DIRECTORY SERVER SETUP (Cont.)

1. In the 'Domain Controller (Active Directory)' area of the 'Manage your Server' screen, click on 'Manage users and computers in Active Directory'.

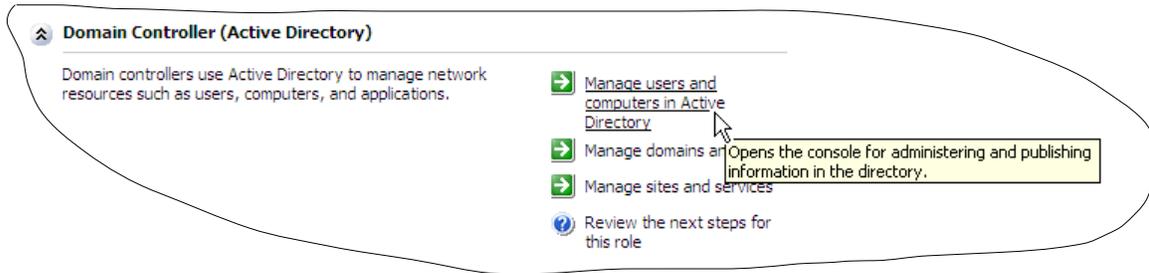


Figure 4.4.7b Manage users....

2. Right click on the relevant Domain name (symbol = ) and select 'New' then 'Organizational Unit'. Enter a name for the Unit and click OK.

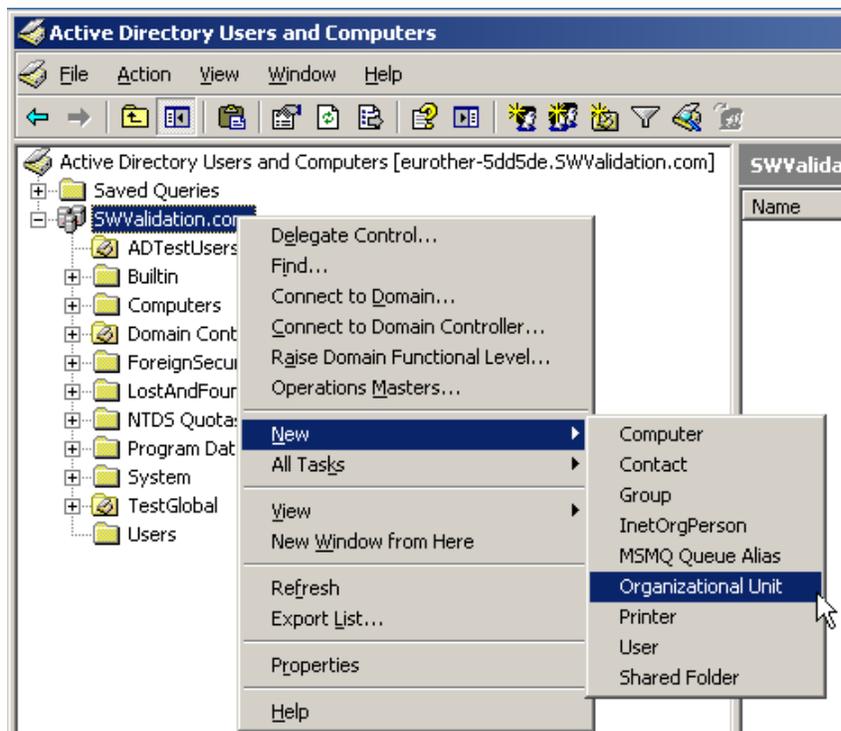


Figure 4.4.7c Create new Organizational Unit

(Continued)

#### 4.4.7 ACTIVE DIRECTORY SERVER SETUP (Cont.)

- Similarly, create a new Group, then a new User, entering the user name and login details (figure 4.4.7d). In the password page, ensure that the various tick boxes are enabled/disabled as required.

Figure 4.4.7d User details screens

- Once the new user has been created, right click anywhere in the screen and select Properties (or double click on the user). When the Properties page opens, click on the 'Member Of' tab (figure 4.4.7e).
- Click on the 'Add' key and enter the new group name Click OK.
- The user is now part of the group, and should be able to log in using the login and password details entered in step 3.

Name	Active Directory Folder
Domain Users	SWValidation.com/Users
testunit1	SWValidation.com/unit1

Figure 4.4.7e 'Member of' screen

## 4.5 NETWORK KEY

Note: This manual does not describe network setup in detail, as each network is different. In most cases, the help of the network administrator or supervisor will be required, for example, in the allocation of valid addresses and passwords.

Touching the Network key calls a selection box to the display, allowing 'Address' or 'Name' to be selected for configuration.

### 4.5.1 Address

Figure 4.5.1 shows the address menu fields.

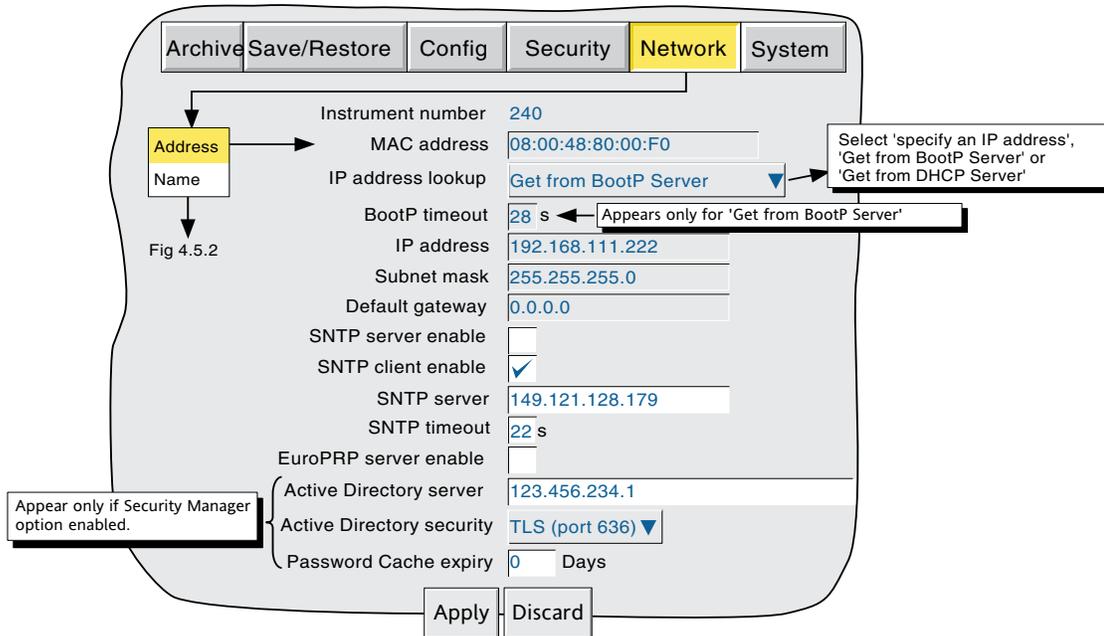


Figure 4.5.1 Network addressing

### INSTRUMENT NUMBER/MAC ADDRESS

Unique numbers set up during manufacture to identify the recorder to a remote host, or to the recorder manufacturer/distributor, in case of query.

### IP ADDRESS LOOKUP

This field allows an address to be entered for the recorder. This can be done either by manually entering an address (IP address field - below), or a network service BootP or DHCP can be used to assign an IP address to the recorder.

### BOOTP TIMEOUT

This 28 second period is the maximum time the recorder will wait, at power-up, for a response from the BootP server. If no response is received within this time, the IP address, Subnet mask and Default gateway are all set to, or remain at 0.0.0.0

#### 4.5.1 NETWORK ADDRESS (Cont.)

##### IP ADDRESS

Allows manual entry of the recorder's internet protocol (IP) address only if 'Specify an IP address' is selected in the 'IP address lookup' picklist above.

---

##### Notes:

1. DHCP attempts to connect to the network continuously, until successful. Only when successful will the network settings be updated and appear at the address page. This can take up to 13 seconds after power up.
  2. It takes 2 to 3 minutes for a DHCP failure to be reported, so an instrument alarm would not be generated for 2 to 3 minutes after power up, should the connection fail to be established.
- 

##### SUBNET MASK

This field is editable only if 'Specify an IP address' is selected in the 'IP address lookup' picklist above. The subnet mask is the network address plus the bits in the host address reserved for sub-network identification. By convention, all the network address bits are set to 1. The subnet mask is used to identify the subnet to which an IP address belongs by performing a bitwise AND on the mask and the IP address.

##### DEFAULT GATEWAY

To deliver traffic from one subnet to another, devices called 'routers' or 'gateways' are placed between segments. The default gateway address informs each network device where to send data if the target station does not reside on the same subnet as the source.

##### SNTP SERVER ENABLE

This tick box allows the recorder to act as an SNTP time server.

##### SNTP CLIENT ENABLE

This tickbox allows time synchronisation from a Simple Network Time Protocol (SNTP) server to be enabled and disabled. When enabled, the instrument time is updated every 15 minutes.

##### SNTP SERVER

If 'Obtain from BootP server' or 'Obtain from DHCP server' is selected as the IP address look-up (see above), then this address appears automatically. Otherwise this area allows an IP address to be entered for the SNTP server.

---

##### Notes:

1. SNTP is a protocol that allows clients on a TCP/IP network to set their times to that of a server - port number 123. The recorder can act both as a client and as a server; when acting as a server, the resolution is 1 msec.
2. SNTP time is based on elapsed seconds since 00:00 hrs on 1st January 1900. The time is not affected by time zones or daylight saving adjustments.
3. If the instrument time differs from the SNTP time by less than 2 seconds, the instrument time is updated gradually (1 msec 8 times a second) to prevent time change events being recorded. If the difference is greater than 2 seconds, this is defined as a 'time change event', the results of which are that the recorder time is immediately updated, and a green line is drawn across the chart (vertical/horizontal trend modes only) to indicate the time change.
4. If more than 5 time change events occur within 24 hours, a 'Time Synchronisation failure' instrument alarm is set 24 hours after the first event. Once synchronisation is re-established, the alarm self-clears within 24 hours.
5. An 'SNTP server failure' instrument alarm is flagged if the configured server cannot be accessed, or if the year received from the server is less than 2001 or more than 2035.

(Continued)

#### 4.5.1 NETWORK ADDRESS (Cont.)

##### SNTP SERVER NOTES (Cont.)

6. When the instrument is acting as a server and a "Clock Failure" instrument alarm is active, the server time is set to 1/1/1900 which is ignored by clients.
  7. Servers such as Microsoft 'TimeServ' cannot be used with this series of instruments because they are not SNTP servers.
  8. If the [Simulation option](#) is enabled and 'SNTP client enable' is enabled, then the recorder synchronises only on power up. If 'SNTP server enable' is enabled, the server output will follow the recorder time.
- 

##### SNTP TIMEOUT

This parameter allows a timeout in seconds, to be configured. The parameter defaults to 20 seconds ensuring that the system continues to behave as before for users who do not change this value.

##### EUROPRP SERVER ENABLE

Enabling this item causes the instrument to 'declare itself' (i.e. to become visible to a network scanning tool running on a PC), thus allowing the pc user to identify all such instruments on a network.

##### ACTIVE DIRECTORY SERVER

This item appears only if the Security Manager option is enabled. It allows an Active Directory server IP address to be entered for use with this application. The IP address would normally be obtained from the user's IT department or Network administrator. Once entered, assuming the recorder is connected to the same network as the server, users with a domain configured will be able to login using their normal network login password.

If 'Domain name Service' is enabled ([section 4.5.2](#)) then a domain name may be entered here instead of an IP address.

##### ACTIVE DIRECTORY SECURITY

This item appears only if the Security Manager option is enabled. If set to None (default), then any attempt to change a password will be rejected because it has not been encrypted. One of the alternative TLS ports must be used if passwords are to be changed at the recorder.

When TLS (port 636) is selected all access to the server is secured using TLS on port 636 using the LDAP\_SERVER\_START\_TLS\_OID method. TLS (port 389) is similar but uses TLS on port 389.

##### PASSWORD CACHE EXPIRY

This applies only if the Active Directory is not available.

Starting from when the server becomes unavailable, once the configured number of days has expired since the last successful log in (by any user), the Password cache is cleared the next time any user attempts to log in. The user's password is 'Invalid' and a pop-up message (Active Directory Password Cache has expired) appears. This means that no Domain users can log in until the Active Directory server becomes available again.

Values of 0 (default) to 30 days can be entered, where a value of 0 disables Cache expiry (i.e. it never expires).

## 4.5.2 Name

Figure 4.5.2 shows the 'Name' fields

The screenshot shows a configuration window with a menu bar at the top containing 'Archive', 'Save/Restore', 'Config', 'Security', 'Network' (highlighted), and 'System'. Below the menu bar, there are two tabs: 'Address' and 'Name' (highlighted in yellow). The 'Name' tab is active, showing the following fields:

- Local Host:
- Domain:
- Domain Name Service:
- Primary DNS Server:
- Secondary DNS Server:

At the bottom of the window are two buttons: 'Apply' and 'Discard'.

Figure 4.5.2 Network name fields

### LOCAL HOST

English language name for the recorder. Non-editable - assigned to the IP Address

### DOMAIN

The name of the Group or area of networked units which contains the recorder. Non editable.

### DOMAIN NAME SERVICE (DNS)

Enables the mapping of host names to IP addresses and *vice-versa*.

### PRIMARY/SECONDARY DNS SERVER

IP addresses supplied by IT department or the Domain manager or Supervisor.

#### Notes:

1. Any one or more of the above items may be overwritten if 'IP address lookup' is set to 'Obtain from BootP Server' or 'Obtain from DHCP server' as described under 'Address' above.
2. If Domain Name Server is enabled, but either no DNS server is connected to the network or neither the DNS Primary nor secondary server can be 'found', it can take up to four minutes for the system to timeout. During this period, the recorder's user interface (touchscreen) will not respond.

4.6 SYSTEM

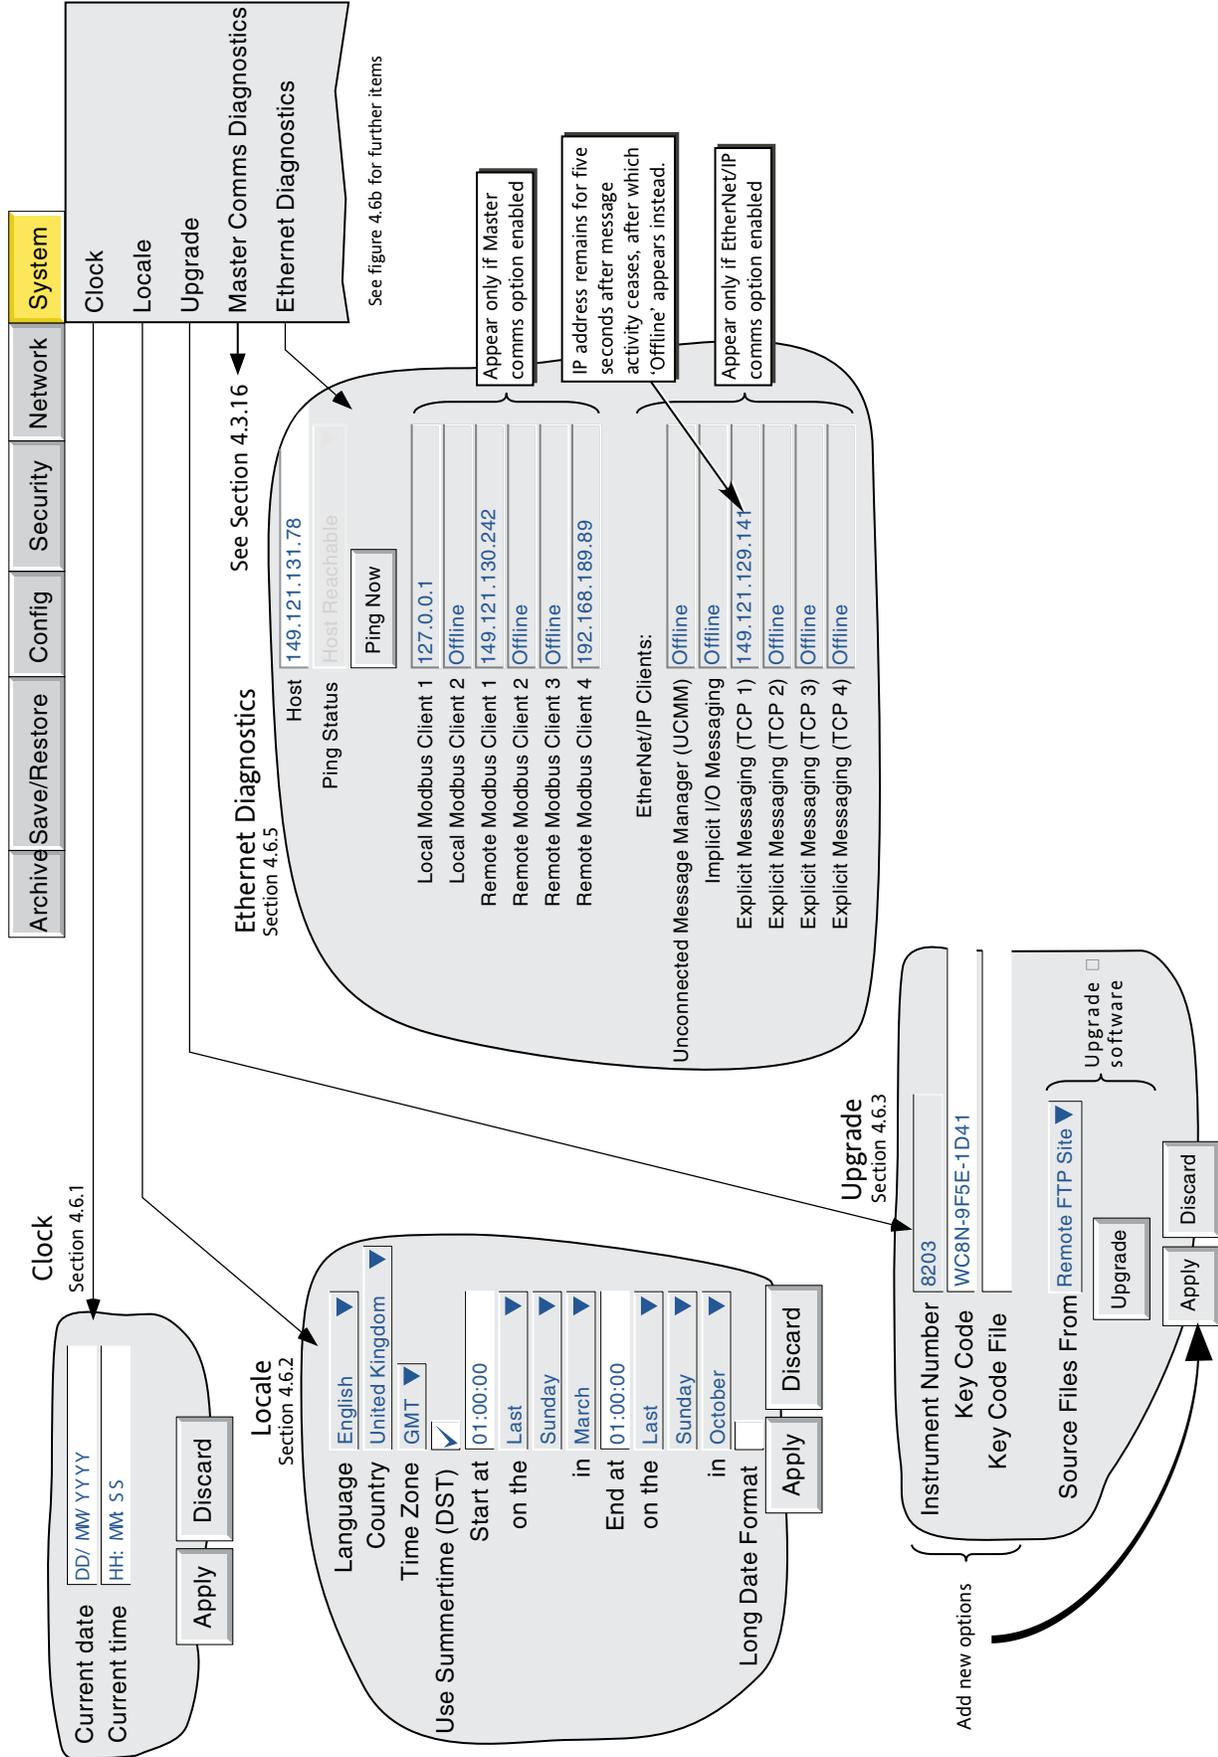


Figure 4.6a System configuration menu layout (sheet 1)

4.6 SYSTEM (Cont.)

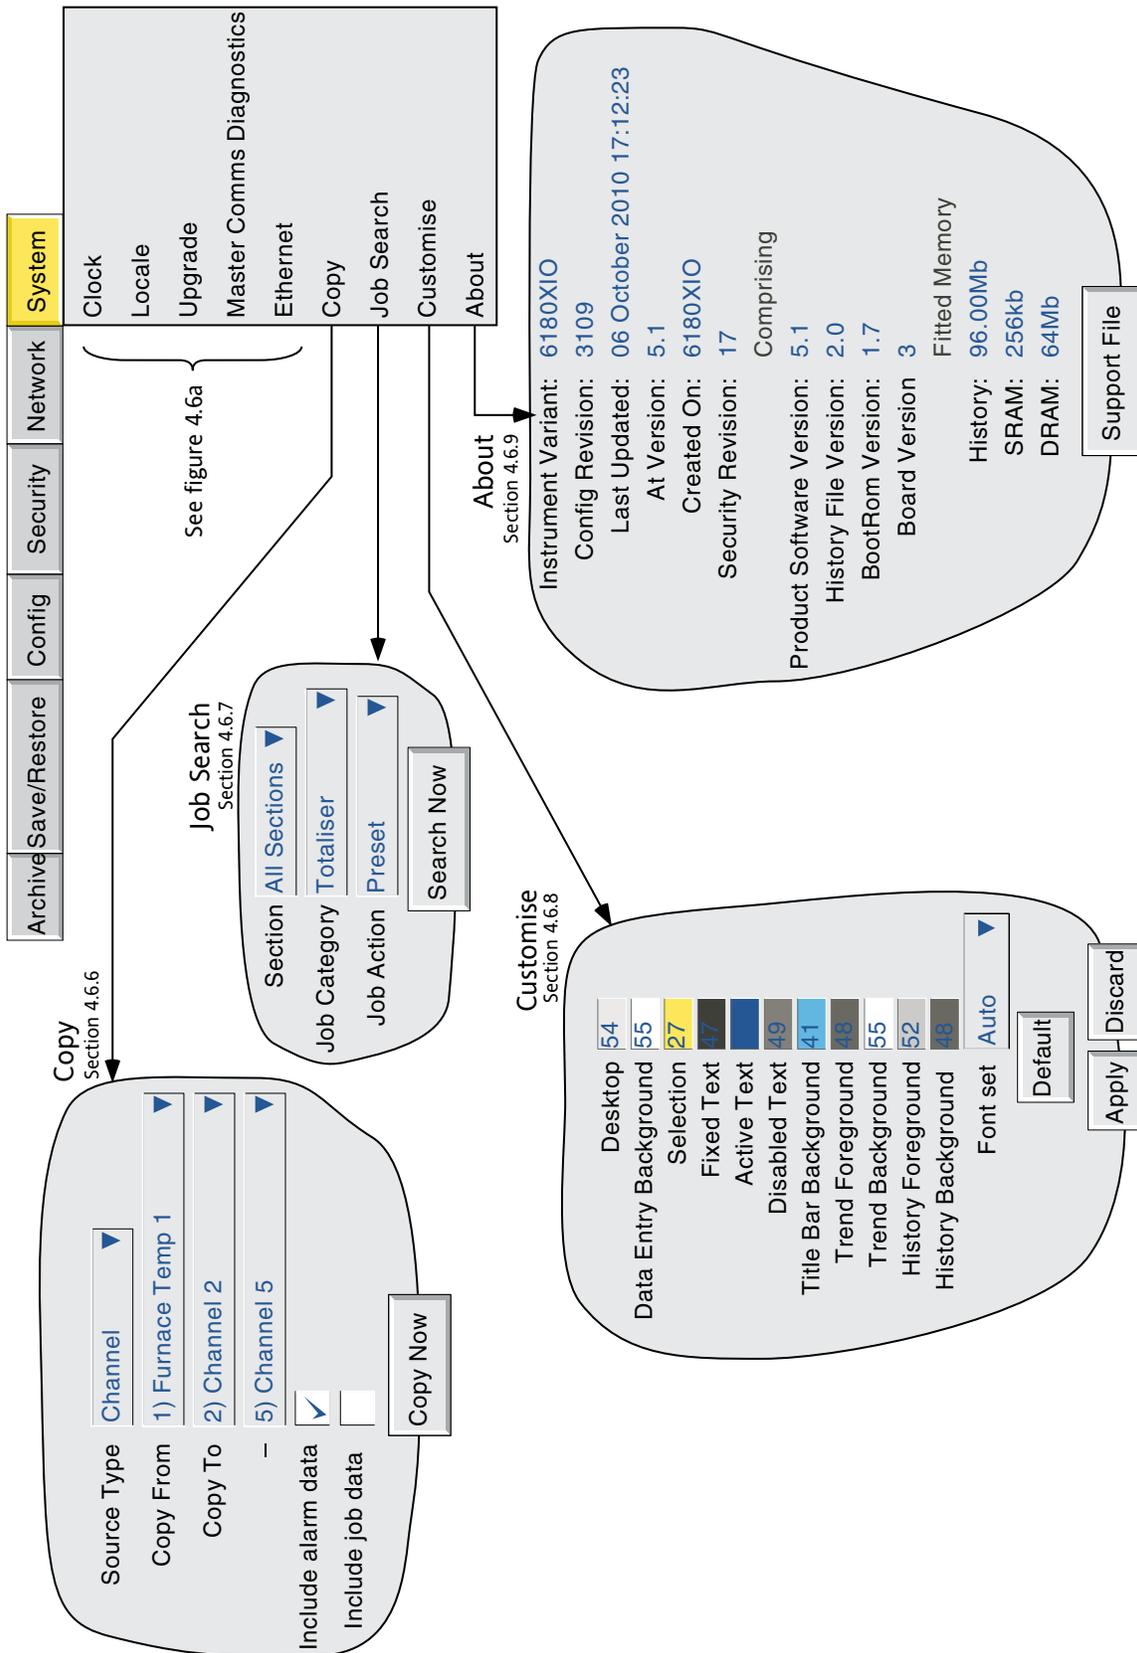


Figure 4.6b System configuration menu layout (sheet 2)

## 4.6 SYSTEM (Cont.)

Touching the System key calls the pick list: Clock, Locale, Upgrade, Input adjust, Master Comms Diagnostics (if option fitted), Ethernet diagnostics, Copy, Job search, About.

Figures 4.6a and 4.6b above, give an overview of the System Menus.

### 4.6.1 Clock

Selecting 'clock' causes the recorder's date and time to be displayed. To edit the date, touch the current date area, to call the keyboard and enter the new numbers. The date is edited in a similar way. The settings apply as soon as the 'Apply settings' button is touched. See also SNTP details in [section 4.5.1](#).

### 4.6.2 Locale

This allows the setting of the following items:

Language	Choose the required language from the picklist
Country	Displays a pick list of countries associated with the selected language
Time zone*	Select required time zone from picklist.
Use Summertime (DST)*	Select box if daylight saving is to be used, If 'Use Summertime (DST)' is selected, the times and dates for the start and end of summertime can be entered using picklists - see <a href="#">figure 4.6a</a> .

#### Notes

- 1 Date format DD/MM/YY or MM/DD/YY is defined by the language and country selected. Time format (e.g. 12/24 hr. clock) is defined by the country selected.
2. When using Bridge software, the host PC's locale information and the recorder locale information should match, or the displayed time will not be correct.

\*Note: For more information, see B7 [Annex B](#) and/or <http://www.timeanddate.com>

## LONG DATE FORMAT

Table 4.6.2 shows some examples of the Standard and Long Format date layouts which are available according to Language and Country selections.

Country (Language)	Date display	
	Standard	Long Format
Argentina	01/05/06	01/05/2006
Australia	1/05/06	1/05/2006
Bolivia	01-05-06	01-05-2006
Canada (Eng)	01/05/06	1-May-06
Canada (Fra)	06-05-01	06-05-01
France	01/05/06	1 mai 06
Germany	01.05.06	01.05.2006
Holland	1-5-06	1-mei-06
Italy	01/05/06	1-Mag-06
Portugal	01-05-2006	1/Mai/06
South Africa	06/05/01	2006/05/01
Spain	1/05/06	01-may-06
Switzerland (Fra)	01.05.06	1 mai 06
Switzerland (Ger)	01.05.06	01.05.2006
Switzerland (Ita)	01.05.06	1-mag-06
United Kingdom	01/05/06	01-May-06
United States	5/1/06	01-May-06
Uruguay	01/05/06	01/05/2006

Table 4.6.2 Date format examples

### 4.6.3 Upgrade

This allows

1. New options to be enabled (by the entering of a 'Key Code') and/or
2. The recorder operating software to be upgraded by reading a file from Compact Flash card or other local or remote source.

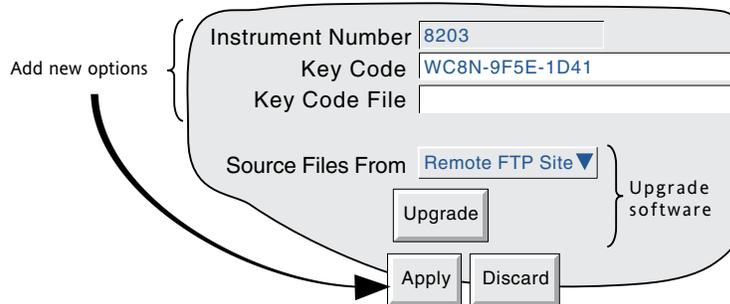


Figure 4.6.3a Upgrade menu

Instrument Number	This number must be quoted when ordering upgrades. It is unique to the instrument and is not user editable.
Key Code	If the relevant key code is known, it can be entered manually using this field
Key Code File	If Key Code File is selected, the first line of the file must be the Key Code. To select the file for reading, the Key Code File field is touched, to display the file list - if necessary, refer to <a href="#">section 5</a> , below, for more details.
Source Files From	Allows the user to select 'Remote FTP site' or 'Local Media'.
Upgrade	Initiates upgrade once the upgrade source has been defined (see figures below).

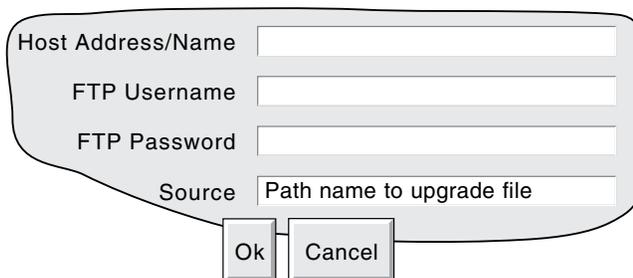


Figure 4.6.3b Remote upgrade details

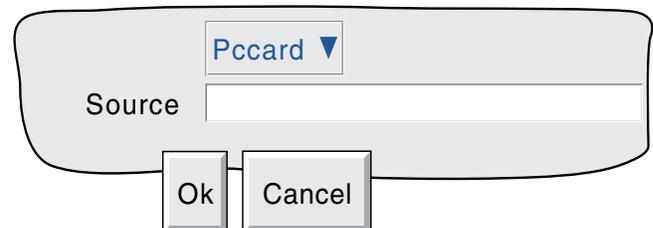


Figure 4.6.3c Local upgrade details

#### CAUTION

Power to the recorder must be maintained during the upgrade process or the recorder might not power up. If such a situation arises, the manufacturer's local service centre should be contacted for advice.

#### Notes:

1. Recording is suspended and the user interface (touchscreen) is disabled whilst the upgrade is in progress.
2. When upgrading from another instrument, using 'Remote Upgrade', the I.P. address (or network name) of the source instrument should be typed into the Host Address/Name field, and 'mediacard' (or usbfront etc. as appropriate) should be entered in the 'Source' field.
3. If 'Audit trail' is enabled (see 'Management' - [section 4.4.2](#)), then system messages are generated, containing date, time, source and status details of the upgrade.
4. 'Upgrade' appears in the System menu only for access levels which have 'Perform Upgrades' enabled in Security/Access configuration ([section 4.4.1](#)).
5. 'Signing/Authorizing' apply to upgrades, if the relevant boxes are ticked in Security/Management configuration. See 'Management' - [section 4.4.2](#) for further details.

### 4.6.4 Master Comms Diagnostics

This menu item is concerned only with Master comms diagnostics, and is fully described in [Section 4.3.16](#).

### 4.6.5 Ethernet Diagnostics

This screen (figure 4.6.5) allows the user to test the status of the connection with a host computer, and if Modbus comms is enabled, the connections with local and remote Modbus slaves. The page is available to any access level with 'Full Configuration' enabled in Security/Access configuration ([section 4.4.1](#)).

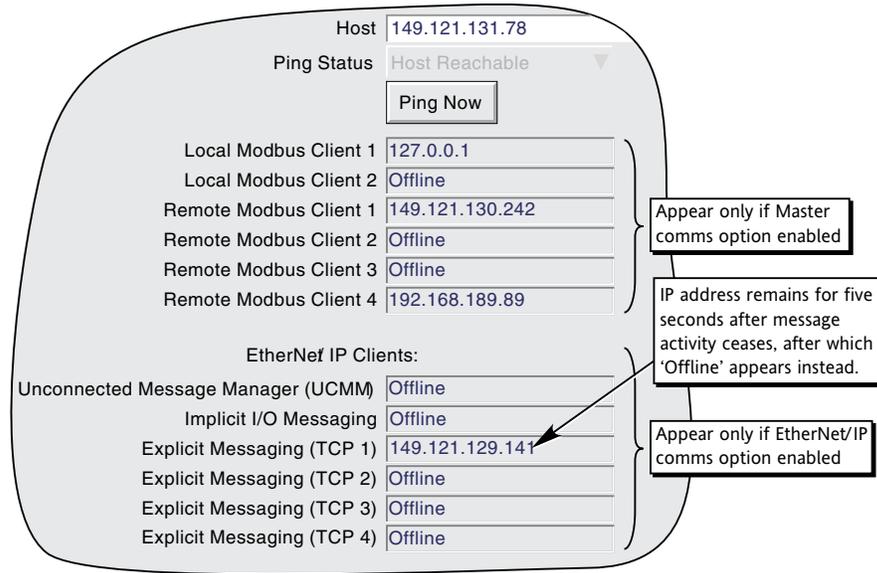


Figure 4.6.5 Ethernet Diagnostics display

**Host** Allows the IP address, or DNS Name of the host to be 'Pinged'.  
**Ping Status** Indicates the latest status returned - see table 4.6.5, below for details.

Displayed Status	Interpretation
Waiting	The default status displayed on power up.
In Progress	Displayed whilst waiting for a response from the host
Host Reachable	A device was found at the specified address.
Ping (Error in value)	Host refused to allow socket connection on the defined Ping Port.
Request Timed Out	Unable to reach a host at the specified network address.
Host Unreachable	Unable to reach a host at the specified network address.
Unknown error	An unknown internal error has occurred.

Table 4.6.5 EtherNet diagnostics display

**Ping Now** Operating this button causes an Internet Control Message Protocol (ICMP) command to be sent to the host. If the host receives the message, it returns a message to the sender within a few seconds.

**Local Modbus Client** Appears only if the 'Master Comms' option is enabled. Indicates that the local Modbus Master is connected.

**Remote Modbus Client** Appears only if the 'Master Comms' option is enabled. Displays the IP address of connected Modbus TCP/IP clients. Otherwise 'Offline' is displayed.

#### 4.6.5 ETHERNET DIAGNOSTICS (Cont.)

EtherNet/IP Clients Appears only if the EtherNet/IP comms option is enabled.

Unconnected Message Manager (UCMM)

Displays the IP address of any client requesting an 'unconnected' message (see [section 4.3.21](#)).

Implicit I/O Messaging

Displays the IP address of the client currently carrying out implicit messaging. Once activity ceases, the address remains on display for five seconds, after which 'Offline' appears instead.

Explicit Messaging (TCPn)

Displays the IP address of each client currently carrying out explicit messaging. Once activity ceases, the address remains on display for five seconds, after which 'Offline' appears instead.

#### 4.6.6 Copy

This facility allows the user to copy a point or group configuration from one point, group etc. to one or more others. The user may choose whether or not to include alarm and (if applicable) job data when copying point configurations. Descriptors and colour selections are not copied.

Figure 4.6.6 shows a typical configuration page for copying the configuration of channel 1 (Furnace Temp1) to channels 2 to 5 inclusive.

Source Type Channel ▾

Copy From 1) Furnace Temp 1 ▾

Copy To 2) Channel 2 ▾

– 5) Channel 5 ▾

Include alarm data

Include job data

Copy Now

Figure 4.6.6 Copy configuration page (typical)

When 'Copy Now' is operated, a confirmatory dialogue box opens, to allow the user to check the source and destination entries.

Copying

From: 1) Furnace Temp 1

To: 2) Channel 2  
– 5) Channel 5

OK Cancel

#### 4.6.6 COPY (Cont.)

##### CONFIGURABLE PARAMETERS

Source Type	Picklist allows selection of Group, Channel, Event, Message, Maths Channel, Totaliser, Counter, Timer, Output or Demand Write, as the type of source to be copied.
Copy From	Allows the user to select a specific point, group etc. to be copied
Copy To	Allows the first destination point to be selected, for the source to be copied to.
-	Allows the final destination point to be selected for the source to be copied to.
Include alarm data	This field appears only for source types which support alarms. If this box is 'selected', then alarm data is included in the copy process.
Include job data	This field appears only for source types which support jobs. If this box is 'selected', then jobs data is included in the copy. For source types that support both alarms and jobs, it is not possible to include job data, without including alarm data as well.

Once the copy is complete, the user should enter the configuration area of the items that have been copied, and edit/apply the changes etc.

##### COPY RULES

1. The first channel on any input card may not be a digital input type.
2. If a destination channel was a digital input, AND the source channel is an analogue input AND 'include alarm data' is not selected, the destination channel alarm settings will be set as:  
Enable = Off; Type = Absolute high; Threshold = 0.0; Dwell = 0.0.
3. If a destination channel was an analogue input, AND the source channel is a digital input AND 'include alarm data' is not selected, the destination channel alarm settings will be set as:  
Enable = Off; Type = Digital; Threshold = Closed; Dwell = 0.0.
4. Descriptors and Colours are never copied.

### 4.6.7 Job search

With multiple job sources, it can sometimes be difficult to discover what the trigger for a particular job is, particularly if the recorder has been configured by more than one operator. The 'Job Search' facility allows the user to define a job type, and the recorder then produces a list of relevant triggers. Figure 4.6.7 shows a typical search page, which will produce a list of all triggers for Preset Totaliser jobs.

The screenshot shows a search interface with three dropdown menus and a button. The first dropdown is labeled 'Section' and has 'All Sections' selected. The second dropdown is labeled 'Job Category' and has 'Totaliser' selected. The third dropdown is labeled 'Job Action' and has 'Preset' selected. Below these is a button labeled 'Search Now'.

Figure 4.6.7a Job search

Section	Allows the user to select a point type for the search. For example, selecting 'Maths', causes the search to be restricted to Maths channels. 'All Sections' causes all enabled point types to be included in the search.
Job Category	Allows a job category (e.g. 'Totaliser') to be selected for the search.
Job Action	This depends on the job category. For example, for 'Totalisers', 'Preset', 'Disable', 'Preset Group' or 'Disable Group' to be selected. <a href="#">Section 4.7</a> gives details of all job types and their associated actions.
Search Now	Operation of this button initiates the search, after confirmation.

### SEARCH RESULTS

The search results in one of two displays, one 'No Match was found' if no jobs are found which match the search criteria, or a list of triggers is produced. A typical example is given in figure 4.6.7b.

The screenshot shows a dialog box titled 'Search Results'. It contains a list of triggers: 'Channels (1), Alarm (1), Job (3)', 'Channels (3), Alarm (3), Job (1)', 'Channels (6), Alarm (4), Job (1)', and 'Maths (1), Alarm (2), Job (3)'. Below the list is an 'Ok' button.

Figure 4.6.7b Search results (typical)

### 4.6.8 Customise

'Customise' allows:

1. the background and foreground colours for various screen items to be selected
2. the size of the text font to be varied.

Figure 4.6.8a shows the display page with the settings used for most of the screen drawings in this manual.

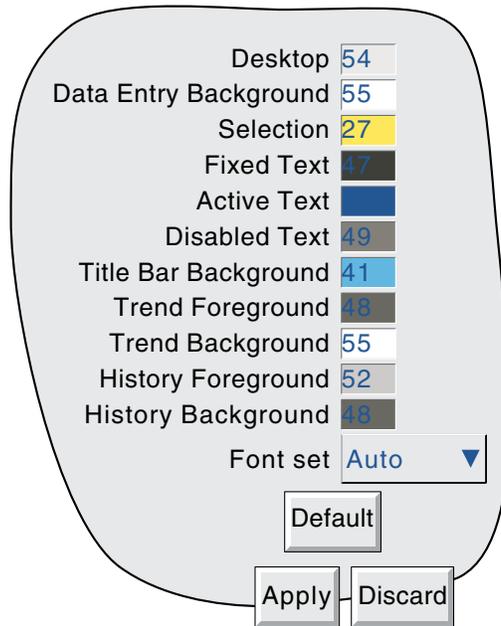


Figure 4.6.8a Customise menu

Desktop	This defines the background colour for the display screens, including keytops.
Data Entry Background	This is the background colour for drop-down menus and text entry areas.
Selection	The colour that keytops and menu items adopt when selected.
Fixed Text	This defines the colour of all fixed text items including key top text, menu text, scale data, title bar legends etc.
Active Text	The colour of all non-fixed text, such as selectable menu items.
Disabled Text	This allows the user to choose a colour for the text associated with disabled items. For example: key top legends on the Goto Group menu, for groups that are not display enabled.
Title Bar background	The colour of the title bar block at the top of the display screen. Note that the text colour for the title block is that defined in 'Fixed Text', above.
Trend Foreground	The colour of the grid lines, timestamps and messages on the real-time trend display.
Trend Background	The colour of the 'chart' in the real-time trend display.
History Foreground	The colour of the grid lines, timestamps and messages on the trend history display.
History Background	The colour of the 'chart' in the trend history display.
Font set	Allows the user to select a size for the display font. This also affects the size of the 'containing item' i.e. push button keys etc. also change size. See 'FONT SIZE EXAMPLES', below.
Default	Allows the user to return to the factory default settings.

#### 4.6.8 CUSTOMISE (Cont.)

##### FONT SIZE EXAMPLES

The following figures give examples, drawn to the same scale, for all of the different font sizes available, except 'Auto' which picks a font size considered appropriate for the size of screen.

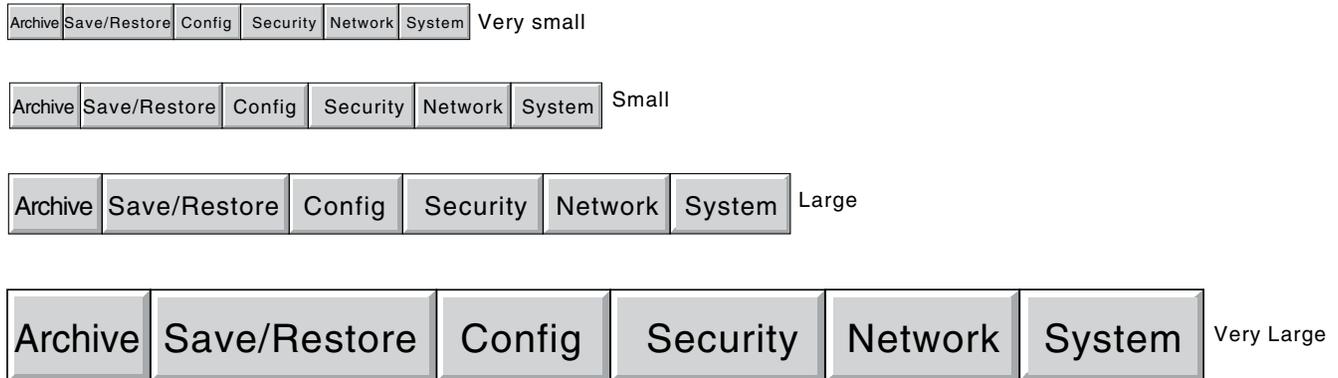


Figure 4.6.8b Font sizes

### 4.6.9 About

Selecting 'About' from the System key menu gives details of the version numbers of different aspects of the recorder, and details of the amount of memory fitted. Figure 4.6.9 shows a typical 'About' display page.

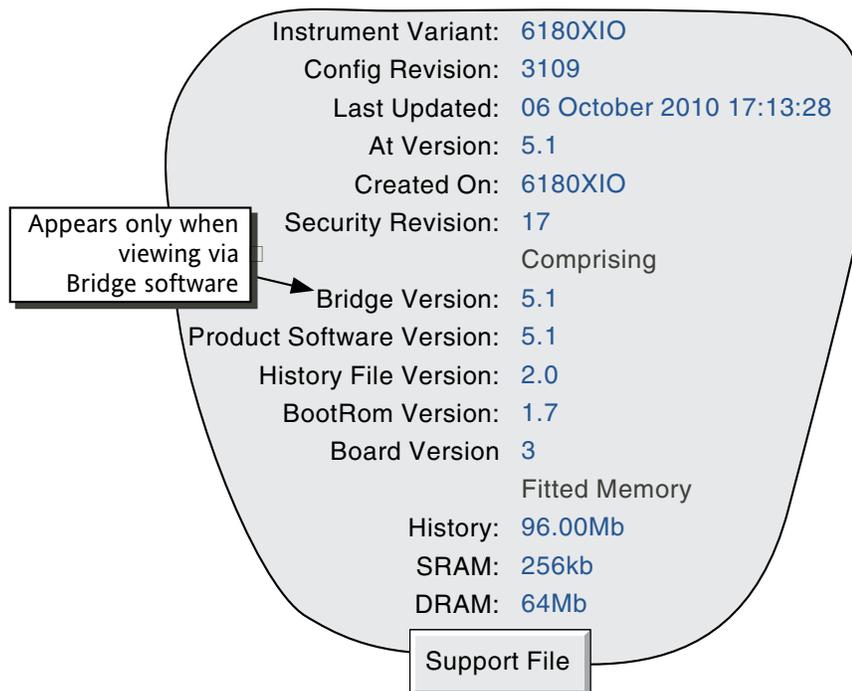


Figure 4.6.9 About display (typical).

#### INSTRUMENT VARIANT

Displays the instrument type.

#### CONFIG REVISION

Whenever a change to the Configuration of the recorder is applied the 'Config Revision' is incremented. For these purposes, Configuration is defined as including all items within the menu structures of the Config and Network keys, and includes User Screens. It does not include those items associated with the Security key. Config Revision is printed on the 'chart' at power up, and if either Auditor option or if the Batch option is fitted, Config Revision is included in the messages associated with these options.

#### Notes:

1. Config Revision can be used as an input to one or more maths channels. If such a maths channel is included in one or more groups, the revision number can be determined for any time/date, when Trend History mode is invoked for the group(s) in question. See section 4.3.11 for maths function details.
2. Config Revision can be embedded in one or more messages, as described in section 4.3.8.

#### LAST UPDATED

The time and date at which the configuration was last edited.

#### AT VERSION

The version number at the time of the last configuration update.

#### CREATED ON

Shows the type of instrument that the configuration was created on. Normally, this will be the same as 'Instrument Variant', and will be different only if the configuration has been downloaded from a different instrument model.

#### 4.6.9 ABOUT (Cont.)

##### SECURITY REVISION

Whenever a change is made to an item within the Security menus, the Security revision is incremented. Security Revision is printed on the 'chart' at power up, and if either of the Auditor options or if the Batch option is fitted, Security Revision is included in the messages associated with these options. See notes 1 and 2, below.

---

##### Notes:

- 1 Security Revision can be used as an input to one or more maths channels. If such a maths channel is included in one or more groups, the revision number can be determined for any time/date, when **Trend History** mode is invoked for the group(s) in question. See [section 4.3.11](#) for maths option details.
  2. If 'Centralised Security' is enabled, the Security Revision is in a different format (e.g. 15.001) see [section 4.4.2](#).
- 

##### SUPPORT FILE

If the unit is not performing as it should (e.g. it resets itself unexpectedly), the Support File key allows the user to save 'critical system files' into a single file (SupportInfo.uhq\*), for despatch to the manufacturer for analysis. This file may be saved to the instrument's Compact Flash card or, using Bridge 'Full' software, to a remote PC. For security reasons, this file cannot be viewed by anyone other than the manufacturer or his agents.

Once the save operation is complete, a 'Support' message appears on the screen giving details of where to send the file. More information is held in the file 'SupportInfo.txt' which is also saved to the disk. This file can be opened, and the information within it read, by inserting the disk into a PC, clicking on the floppy disk icon (A drive) in 'My Computer' and then double clicking on the file icon when it appears.

\* 'SupportInfo' is the default name. This name may be edited by the user before saving to disk or pc. The .uhq suffix is automatically appended to the new name.

## 4.7 JOBS

A number of sources (e.g. channel, event, totaliser) can be set up to trigger one or more jobs. The following description includes all possible job categories, but which jobs are available on any particular recorder depends on the options fitted to that recorder. Many job categories require the relevant access level permission to be set, as described in [section 4.4.1](#), above.

The type of action (continuous or 'single-shot'), available for selection, depends on the type of trigger source. Continuous actions are selected from: While active, While inactive or While unacknowledged. The available single-shot actions are: On becoming active, On becoming inactive, On acknowledgement.

### 4.7.1 No Action

This means that no job action is configured for the trigger source.

### 4.7.2 Totaliser category

If the Totaliser option is fitted ([section 4.3.12](#)), the following jobs become available:

Preset	Loads the selected totaliser with the value set up in 'Preset' in the totaliser's configuration menu.
Preset Group	Loads all the totalisers in the specified group with their 'Preset' values.
Disable	Stops the specified totaliser accumulating.
Disable Group	Stops all totalisers in the specified group.

**Note:** If more than one job is set up to disable a particular totaliser, then any of these jobs going active will disable the totaliser.

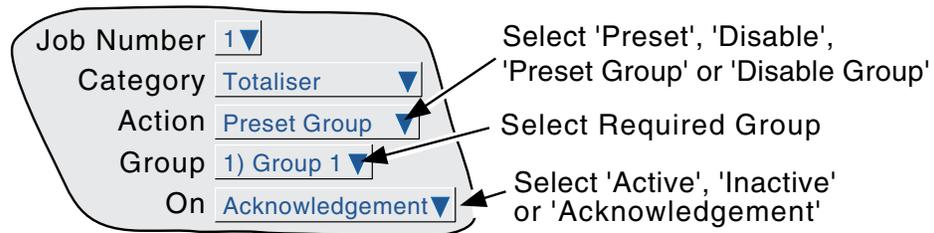


Figure 4.7.2 Totaliser job menu layout (group action)

### 4.7.3 Message category

One or more messages ([section 4.3.8](#)) can be directed to the display, to 'All groups' or to a 'Specified Group'. The messages must be contiguous - e.g. messages 2, 3 and 4 may be sent, but messages 1, 3 and 4 cannot be sent, without message 2 as well.

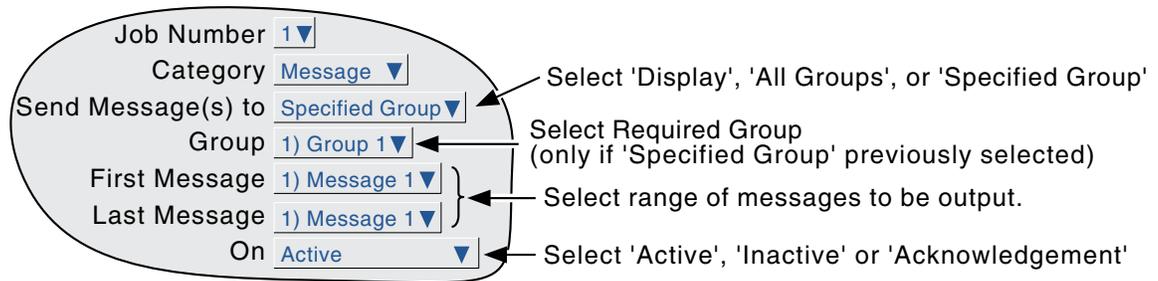


Figure 4.7.3 Message job menu layout

### 4.7.4 Maths category

If Maths channels ([section 4.3.11](#)) are enabled, the following jobs become available to applicable functions:

Reset	Sets the selected maths channel value to zero.
Disable	Stops historical functions such as Fvalue, Stopwatch and Rolling Average from accumulating further values. When the function is subsequently re-enabled, the function re-starts from its pre-disabled value. 'Disable' has no effect on other functions.
Switch to B	Causes the relevant maths channel to copy source B instead of its normal source A - see <a href="#">section 4.3.11</a> for further details.
Trigger	Used to initiate a 'Sample and hold' function - see <a href="#">section 4.3.11</a> for further details.

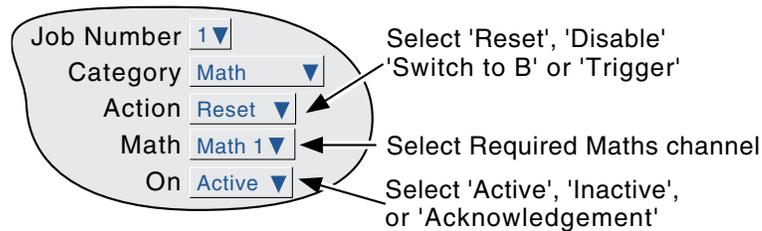


Figure 4.7.4 Maths job menu layout

## 4.7.5 Clock category

This job causes the System Clock to be Preset to the value entered in Instrument Configuration (Preset Hour, Preset Minute) (Section 4.3.1). This job can be used to synchronise a number of recorders as follows:

a. For each recorder, set up one input channel as

Input Type..... Digital  
 Closed String.... Synch (for example)  
 Enable..... Trigger  
 Active when ..... Synch  
 Job 1 category. Clock  
 Job 1 action ..... Preset  
 Job 1 On ..... Active

b. For each recorder, set the same preset hour and minute in Instrument Configuration.

c. For each recorder provide a simultaneous pulse or contact closure to the digital input previously set up.

The recorders will all be automatically set to the preset time on receipt of the input.

An alternative way of synchronising recorders is via an SNTP time server as described in section 4.5.1.

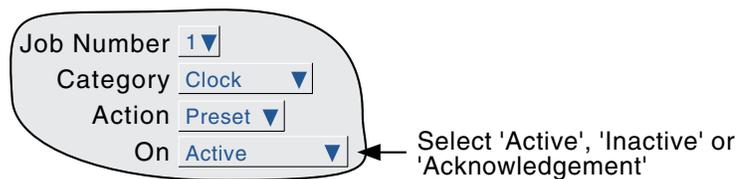


Figure 4.7.5 Clock job menu layout

### Notes

- 1 Whenever a time change occurs, a green line is drawn across the chart in vertical trend mode.
- 2 The clock presets to the 'Preset Hour' value set in [Config/Instrument](#) menu. If, however, 'Use Summertime (DST)' is enabled in [System/Locale](#) configuration, then an hour is added whilst daylight saving time is in operation.

## 4.7.6 Counter category

If Counters (section 4.3.13) are enabled, the following jobs become available:

Preset counter	Loads the selected counter with the preset value set in the configuration for that counter.
Disable counter	Stops the selected counter.
Increment	Adds 1 to the selected counter's value.
Decrement	Subtracts 1 from the selected counter's value.
Preset group	Loads all the counters in the specified group with their 'Preset' values.
Disable group	Stops all counters in the specified group.

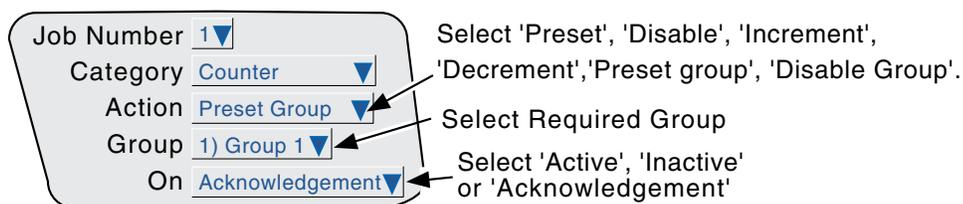


Figure 4.7.6 Counter job menu layout (group action)

### 4.7.7 Timer category

The following jobs are available:

1. Reset timer - sets the timer to zero
2. Start timer - causes the timer to start.
3. Disable timer - stops the timer.

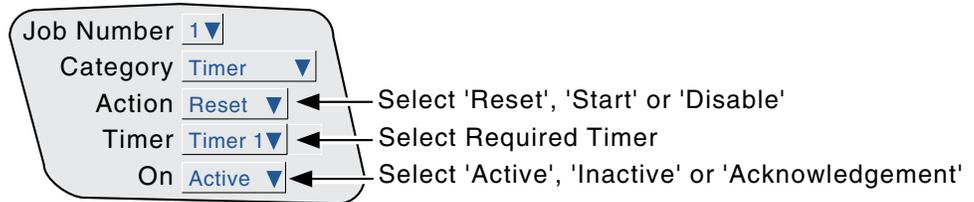


Figure 4.7.7 Timer job menu layout

### 4.7.8 Batch category

If the Batch option ([section 4.3.10](#)) is fitted, a previously 'Stored' batch can be started by job action or by a Batch Start command sent via MODBUS/TCP ([section 8](#)). If a batch is already running, it will be restarted. In Batch configuration, if Scope = Group, then a specific group can be selected for the batch job to act on; if Scope = Instrument, the Group selection field does not appear.

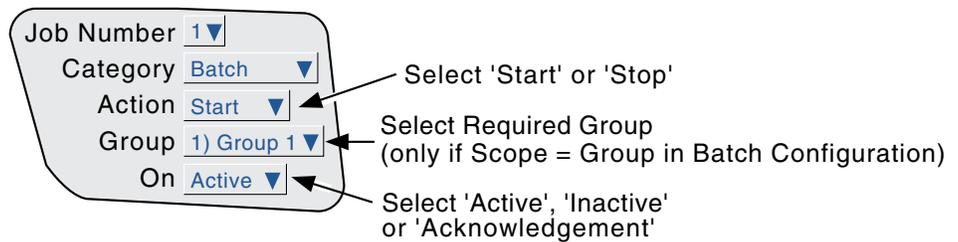


Figure 4.7.8 Batch job menu layout

### 4.7.9 Recording category

The following 'Recording jobs' are available:

- Enable** This enables recording to the group's history file, 'while active', 'while inactive' or 'while unacknowledged'. This allows, for example, recording to be enabled (job 2) only whilst a Trend Freeze job (job 1) is inactive (i.e recording is disabled for the duration of a Trend Freeze job). Trend freeze is described in section 4.7.10, below.
- Speed/Interval B** Recording speed/interval B is selected for use, for the duration of the job. See 'Group configuration for A/B switching details.
- Erase all History** All recorder history is erased (only if Simulation option - [section 4.3.22](#) - is enabled), but see also note four.

#### Notes:

- 1 The group in question will be recorded only if Recording Enable selected in group Configuration ([section 4.3.2](#)) and the job is active.
2. If Audit Trail ([section 4.4.2](#)) is enabled, then in order to preserve the audit trail, messages will be saved in the group's history files even when recording is not enabled by job.
3. A blue line is drawn across the 'chart' whenever a recording job is used to disable/enable recording.
4. If the 21CFR11 option is enabled, 'Erase All History' jobs can be triggered, but are ignored, leaving the recording history unaffected.

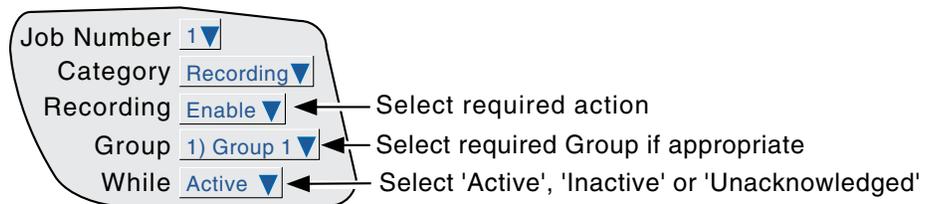


Figure 4.7.9 Recording job menu layout

### 4.7.10 Trend category

Trend jobs allow the following actions to occur:

Span B	Switches the point being configured to span B and zone B, for as long as the job is active.
Span B Group	Switches all the points in the selected group to their individual spans and zones B, for as long as the job is active.
Colour B	Switches the point being configured to colour B, for as long as the job is active.
Colour B Group	Switches all the points in the selected group to their individual colours B, for as long as the job is active.
Speed/Interval B	Switches Trend Speed/Interval for the selected group to Speed/Interval B, for as long as the job is active.

---

Note: If a 'B' value has not been set, the default 'A' value will be used instead

---

If the Simulation option ([section 4.3.22](#)) is enabled the following additional Trend jobs become available:

Freeze	Freezes process variables and trend displays and stops the recorder clock (see note). When the job deactivates, the process values are updated to their current values and the clock restarts from its frozen value. No blue line is drawn across the chart.
Clear	Clears the trend displays from the screen.
Saver Display	Sets the recorder display brightness to the value set up in 'Saver display' in Instrument configuration ( <a href="#">section 4.3.1</a> ). Overrides the 'Save after' value.

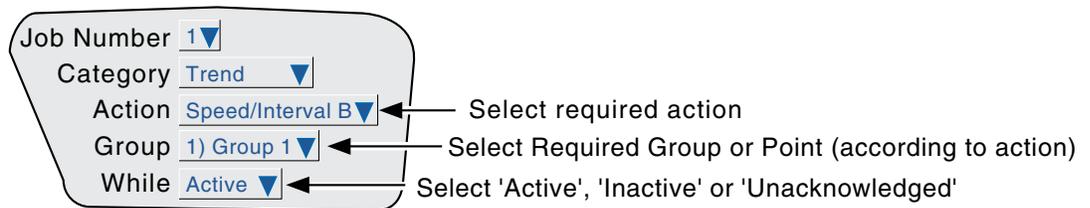


Figure 4.7.10 Trend job menu layout

---

Note: in order to ensure that no further data is written to the recorder's history files, it is recommended that recording be disabled by setting a second, 'Recording', job to be initiated by the same trigger as initiates the Freeze job. This Recording job should be set to 'Enable', 'while Inactive'. Recording jobs are described in [section 4.7.9](#), above.

---

### 4.7.11 Output category

Applies only to recorders with Modbus master option fitted. As described in [section 4.3.16](#), when Modbus Master is enabled, a number of 'Output channels' become available for configuration. This feature allows any specified recorder point to be copied to a destination instrument's input channel, if this is set to Input Type = Slave comms.

An output job allows a specific output channel write to be disabled when the recorder is acting as a modbus master.

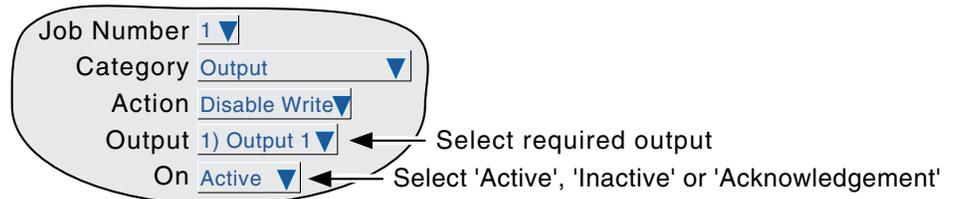


Figure 4.7.11 Output Job menu layout

### 4.7.12 Demand Writes category

Applies only to recorders with Modbus master option fitted.

Demand Writes jobs allow the user to set up the recorder so that, when the job is triggered, it initiates the selected Demand Write. The write action is performed to the remote device as defined in Demand Write Configuration described in [section 4.3.18](#).

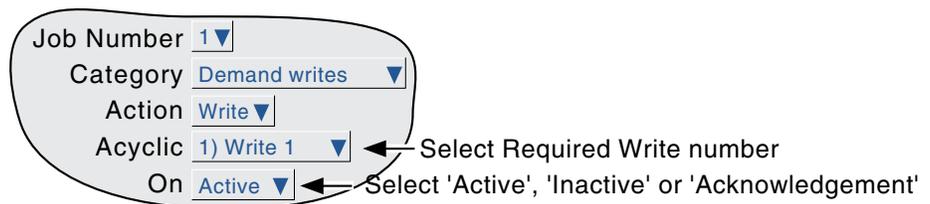


Figure 4.7.12 Demand write jobs menu layout

### 4.7.13 Alarm category

This allows the user to set up a job to acknowledge or disable point alarms as follows:

Acknowledge All Alarms	Acknowledges all alarms
Acknowledge Alarms on Group	Acknowledges all alarms in the specified group
Acknowledge Alarms on Point	Acknowledges all alarms associated with the specified point
Acknowledge Alarm	Acknowledges specific alarm
Disable All Alarms	Disables all alarms
Disable Alarms on Group	Disables all alarms in the specified group
Disable Alarms on Point	Disables all alarms associated with the specified point
Disable Alarm	Disables a specific alarm

Further selection boxes allow a group or point, respectively, to be defined.

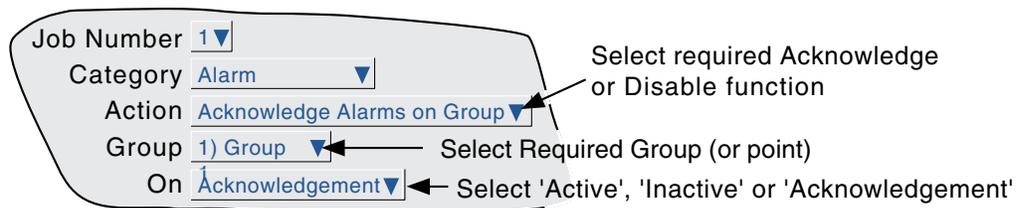


Figure 4.7.13 Alarm job menu layout

### 4.7.14 Archive category

Archive jobs allow a job to be used to trigger an archive to the instrument's mass storage medium or to a host computer using FTP transfer. The following jobs are available:

Archive Last Hour, Last Day, Last 7 Days or Last 31 days to FTP  
 Bring FTP archive up to date  
 Cancel Archive to FTP  
 Archive Last Hour, Last Day, Last 7 Days or Last 31 days to Local device  
 Bring Media Archive up to date  
 Suspend Archive to Media  
 Cancel Archive to Media

These jobs copy the archiving functions available from the 'Archive' key described in section 4.1 of this document. For 'FTP' items see [Remote archiving](#); for 'Media' see [Local Archive](#).


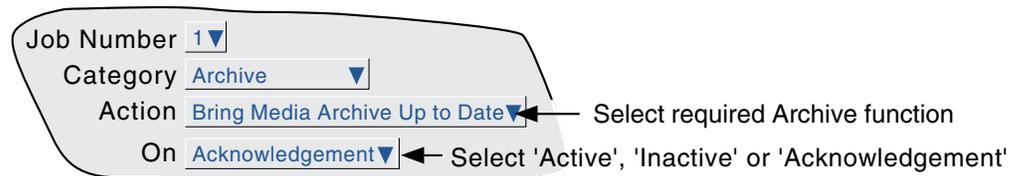


Figure 4.7.14 Archive jobs menu layout

### 4.7.15 Email category

Allows the user to send a specified e-mail to the recipients set up in e-mail configuration (see [section 4.3.19](#)). A system message is generated, and displayed in all recording groups whenever an e-mail is sent.

### 4.7.16 Report category

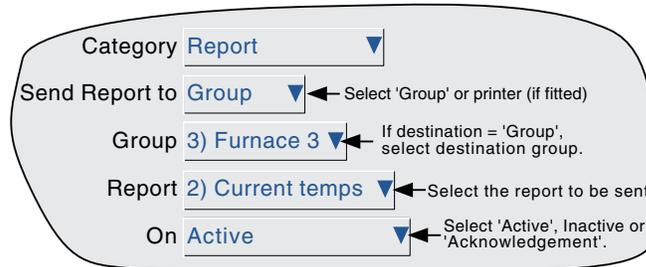

The screenshot shows a job menu for the Report category. It contains five dropdown menus with the following values and annotations:

- Category: Report
- Send Report to: Group (Annotation: ← Select 'Group' or printer (if fitted))
- Group: 3) Furnace 3 (Annotation: ← If destination = 'Group', select destination group.)
- Report: 2) Current temps (Annotation: ← Select the report to be sent)
- On: Active (Annotation: ← Select 'Active', Inactive or 'Acknowledgement'.)

Figure 4.7.16 Report category job menu

#### SEND REPORT TO

'Group' is the only report destination.

#### GROUP

Allows the destination group to be defined. If a [group descriptor](#) has been entered ('Furnace 3' in the figure above), then this descriptor appears in the field.

#### REPORT

This defines which of the reports is to be sent when the job is triggered. If a Report descriptor has been entered, then this appears in the field ('Current temps' in the figure above).

## 5 FILE

Figure 5, below, gives an overview of the File Menus. The area is entered by touching the 'File' key of the [root](#) menu, and can be used to display the contents of directories stored both in the user area of flash memory and on any bulk storage device inserted or connected.

The first display page shows the 'volume' or 'device' names associated with the various areas of memory available to the user. If one of these volume names is selected (touched), and the 'open-folder' key\* operated, the contents of the selected volume is displayed. This would typically consist of a list of folders. Similarly, if a folder name is selected and the 'open folder' key\* is touched, the contents of the folder is displayed and so on.

To return to higher levels, the 'close-folder' key\* is used.

The path name of the current window is shown at the top of the window.

---

\*Note: The open-folder and close-folder key functions are the same as the down arrow and up arrow key functions respectively.

---

### 5.1 FILER OPTION MENU KEYS

These keys appear in a pop-up menu when the option key is pressed. This menu appears only when an actual file has been selected (i.e. it does not appear if a directory (folder) or volume is selected.) Cut and paste functions are available only to users with the relevant access permissions ([section 4.4.1](#)).

Cut	Removes a file from the list, ready for 'pasting' to another destination.
Copy	Copies a file from the list, ready for 'pasting' to another destination.
Delete	Removes a file from the memory.
New	Allows a new directory (folder) to be created
Paste	Places a 'cut' or 'copy' file into the new destination.
Refresh	Refreshes the display.

A key's legend is hidden\* if at any time its function is not applicable.

---

\* i.e. displayed in the colour selected for 'Disabled Text' in the System key 'Customise' menu ([section 4.6.8](#)).

---

### 5.2 THE HIDE KEY

The Hide key at the top right corner of the display screen is used to hide (show) Type, Date and Bytes information, allowing the full filename text string to appear.

5 FILE (Cont.)

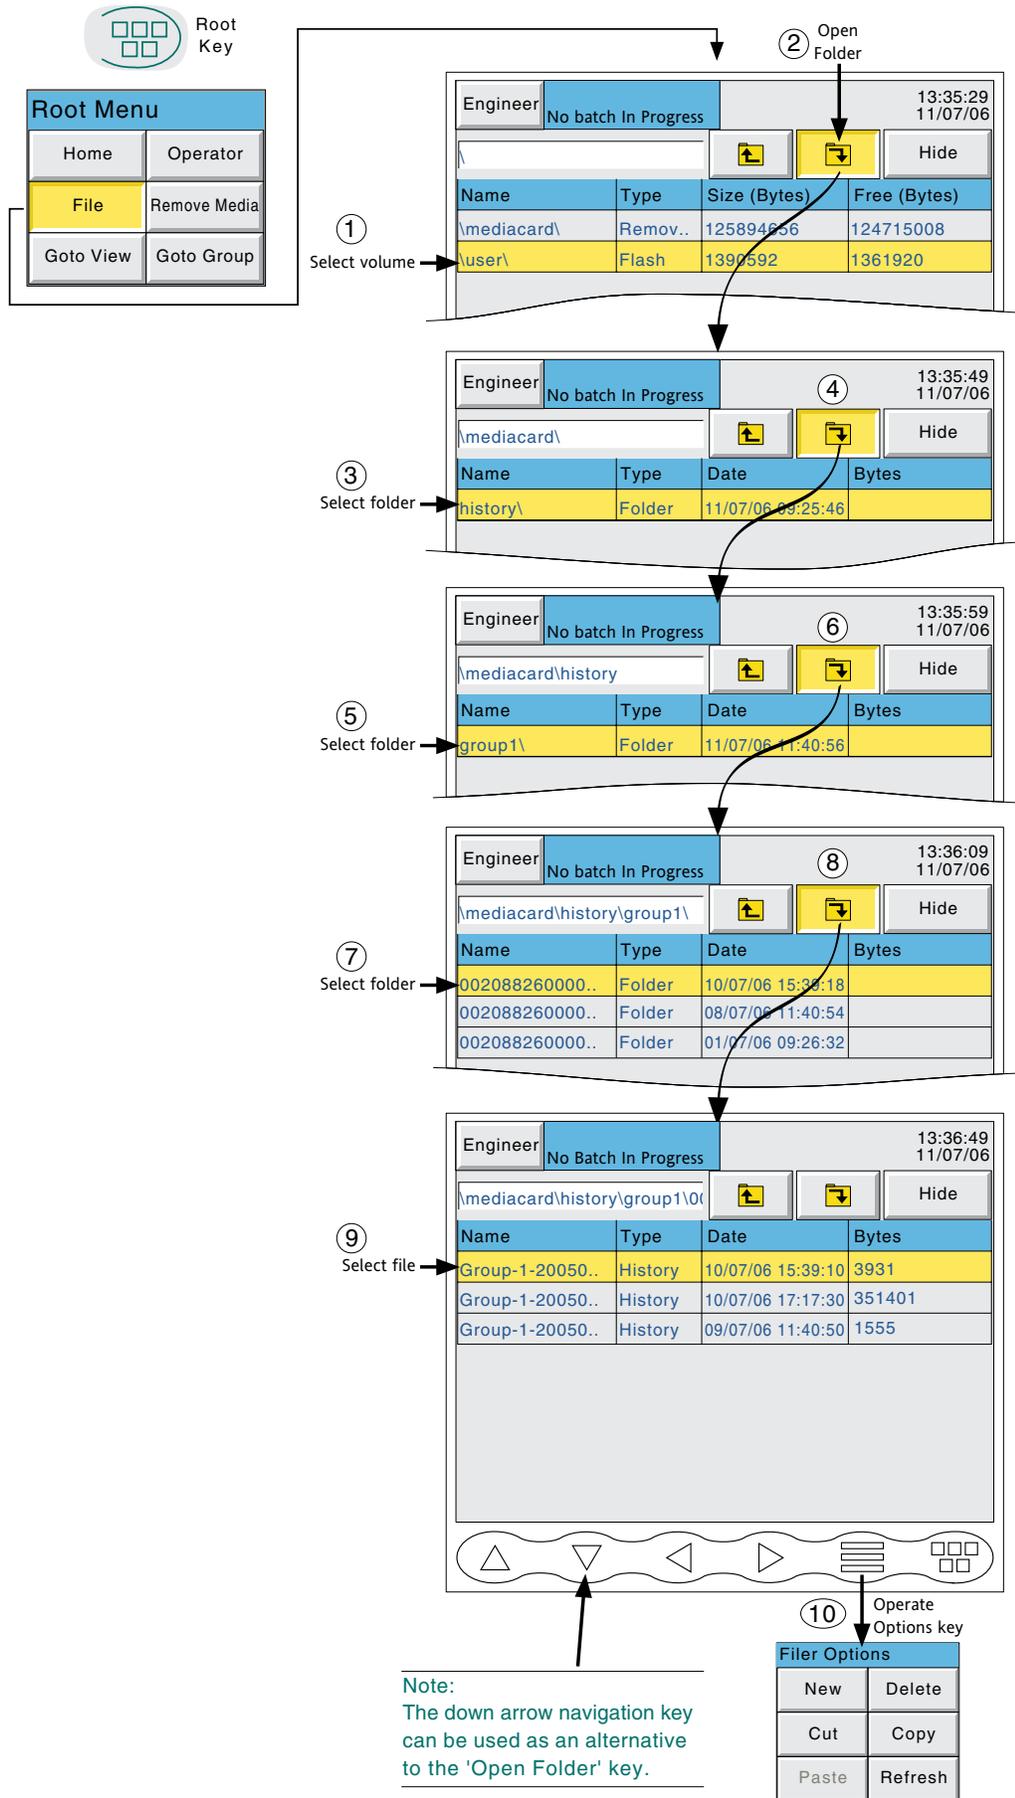


Figure 5 File system overview

### 5.3 FILE STRUCTURE

The file structure on the archive medium, is as depicted below in figure 5.3 for a six-group instrument. Each subdirectory contains a maximum of 32 files, there being sufficient subdirectories created, to contain all the group's history files.

The subfolder names are the numerical part of the first history file that they contain.

For example if the first file name is Furnace1 Temp~20051012 80155F2601000120.uhh, then the subdirectory name will be 20051012 80155F2601000120.

If there are more than 32 files, the next subdirectory name is 20051012 80155F2601000140 (assuming the file names are contiguous).

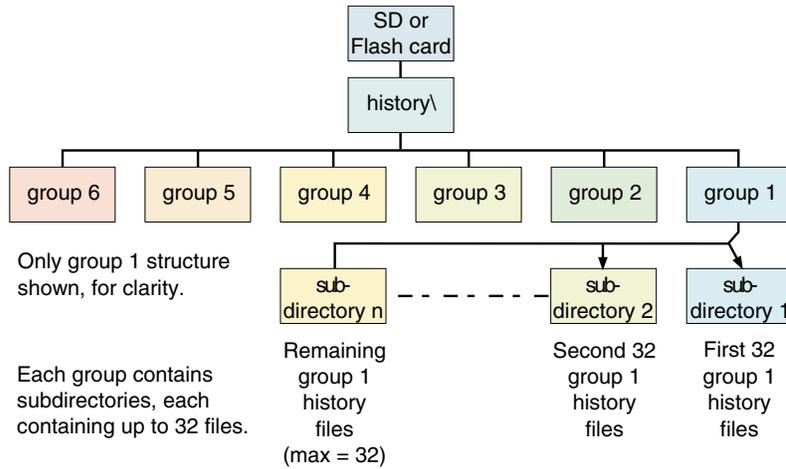


Figure 5.3 File structure (archive)

This page is deliberately left blank

## 6 BRIDGE (REMOTE VIEWER)

### 6.1 INTRODUCTION

This feature comes in two levels, called 'Full' (option) and 'Lite' (supplied as standard).

The 'Full' option allows full operation and configuration of the recorder, simultaneously, from up to ten PCs which meet or exceed the minimum requirements listed below. When a change is being made to the configuration of the recorder by one Bridge user ('client'), the message:

```
Feature Locked
Another client (IP ADDRESS) has locked this feature.
Wait for lock to be released and try again
```

appears on the screen of any other user who attempts to change the configuration. When changes are complete, the message:

```
Feature changed
Synchronising data
```

appears on the screens of all clients (except that of the one making the change).

Bridge 'Lite' allows the user to view recorder standard screens, dynamically, on-line, from up to 10 PCs which meet or exceed the minimum requirements listed below.

The software is supplied on a CD ROM, which also includes PC Review, PC Configuration and Acrobat reader software and various manuals relevant to the recorder.

The Bridge software is suitable for any physical hardware configurations, some common examples being:

1. A single PC connected directly to a recorder.
2. Multiple PCs connected via a network to one or more recorders. (Each recorder can be accessed, simultaneously, by a maximum of 10 PCs, but one PC can look at only 'N' recorders where 'N' depends on how much memory is available at the PC. For example, a minimum specification computer (section 6.1.1) running Windows NT can 'look at' up to three recorders simultaneously.
3. A single PC connected via a telephone line to a remote recorder.

This manual does not describe network setup in detail, as each network is different. In most cases, the help of the network administrator or supervisor will be required, for example, in the allocation of valid addresses and passwords.

---

#### Notes:

- 1 When logging in via 'Bridge', only users with 'Connect from Remote' enabled appear in the user list. See [section 4.4.1](#) for details.
  - 2 Full Bridge requires some small amount of space on the PC disk. The message 'There appears to be no free disk space on the client. Create some space and run again.' appears if there is insufficient space.
  - 3 If an attempt is made to establish more than one Full Bridge connection between a PC and an instrument, the message "You are already running a Full Bridge session with this instrument. The new session will run as Bridge Lite." appears.
  - 4 If an attempt is made to establish a Full Bridge connection using the 'anonymous' user name, the following message appears:  
'You are authenticating Full Bridge using the "anonymous" user name. This provides guest read only access. To establish Full Bridge connection you must use a different user name. Please change and try again.'
  5. The maximum number of Bridge sessions that can be run simultaneously on one recorder is 10.
-

### **6.1.1 Minimum PC requirements**

1. P90 running Windows NT/2000/XP Home/XP Pro/Server 2003.
2. 32MB RAM
3. 50MB free hard disk space
4. Graphics drive capable of displaying > 256 colours (recommended)
5. Sound card required for audible alarms feature ([section 6.5](#))

### **SUPPORTED PDA CONFIGURATION**

PDA not supported this issue of software

## 6.2 CONNECTION DETAILS

The connection to the recorder is terminated at the RJ45 connector located as shown in figures 2.1a, and 2.1b). The other end of the cable may be terminated, for example, at a hub, a dial-up router or a PC, and it is up to the user to obtain a suitable cable (normally available from a computer supplier or electronic component distributor.)

---

**Note:** For direct connection between a PC and the recorder, a crossover cable is required. For all other connections, a 'straight-through' connection is required.

---

### 6.2.1 Direct PC connection

The RJ45 connector at the rear of the recorder is connected via a crossover cable to the PC network card connector.

### 6.2.2 PC To remote recorder

As shown in figure 6.2.2, one or more recorders' Ethernet connector can be connected to a Dial Up Router, plugged into a telephone socket. The PC must similarly be connected to a telephone socket via a modem (shown externally in the figure, but often built-in with modern computers.)

The dial-up router (available from computer suppliers etc.) has an associated telephone number, and can also have a security password system. Both the telephone number and any password(s) must be known to the PC user before any attempt at communication is made.

The PC can be set up to dial the number automatically, or the number may be dialled manually. Reference should be made to the computer documentation or help pages if necessary.

Once communication has been established, the software can be run.

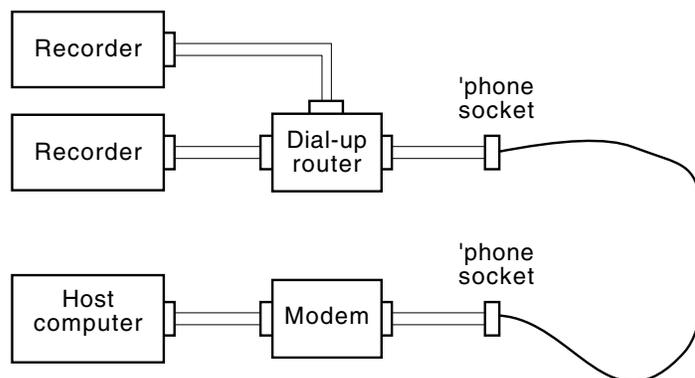


Figure 6.2.2 Remote connection example

### 6.2.3 Networked systems

For PCs and recorders connected into an internal network, it is necessary only to obtain an IP address (or name) and the required passwords in order to establish connections between the PC(s) and the recorder(s).

For PCs remote from a networked system which is permanently connected to the internet, it is necessary to obtain an IP address (or name) and the required passwords in order to establish connections between the PC and the recorder(s). In many cases it is also necessary that the internal network and 'firewall' (if such exists) be configured to allow access.

For PCs remote from a networked system which is not connected to the internet, a system similar to that shown in figure 6.2.2 is needed.

## 6.3 SOFTWARE INSTALLATION

Please refer to the CD box insert for details of software installation.

## 6.4 RECORDER CONFIGURATION

The recorder configuration is in three areas: Network, Options and Access,

### 6.4.1 Network

The Network key fields are fully described in [section 4.5](#).

### 6.4.2 Options

In order to make the 'Full' option accessible, it must first be correctly entered in the Options Menu.

If the Bridge level displayed does not match the 'currently' value (if displayed), operation of the 'Autoconfigure' key will add the option to the database.

If all options are correctly entered, the 'Currently' fields and the Autoconfigure key do not appear.

Trial Mode	Disabled
Trial Time Remaining	30 day(s)
Fitted channels	0
Virtual channels	36
Maths	12
Totalisers	12
Counters	7
Groups	12
Batch	Enabled
Security Manager	Disabled
Auditor	21CFR11
Screen Builder	Full
Bridge Level	Full (currently Lite)
Master Comms Devices	32
Simulation	Enabled (currently disabled)

Buttons: Apply, Discard, Autoconfigure

Callout: Check that the Bridge level is correct. If not press Autoconfigure.


Figure 6.4.2 Options menu

### 6.4.3 Access

Each of the access levels and user IDs can have 'Connect from Remote' access enabled. When this box is checked, password entry fields appear as shown in figure 6.4.3. Initially, the Remote User Name is the same as the login name or access level. Enter the required User name and password, then re-type the password to ensure it was entered correctly. This name and password are required when establishing connection with the host computer.

#### Notes:

1. If the Auditor 21CFR11 option is fitted, the minimum password length is that set in the Security/Management menu described in [section 4.4.2](#). For all recorders, the maximum password length is 20 characters.
2. For maximum security, it is recommended that the remote password and the local password be non-identical.

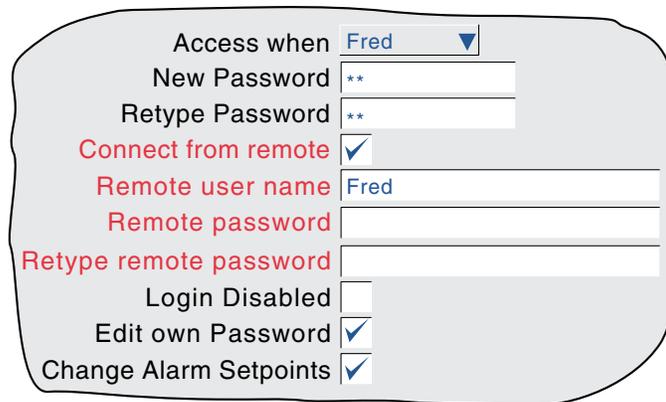

The screenshot shows a configuration window for remote user access. It contains the following fields and controls:

- Access when:** A dropdown menu with 'Fred' selected.
- New Password:** A text input field containing two asterisks (\*\*).
- Retype Password:** A text input field containing two asterisks (\*\*).
- Connect from remote:** A checkbox that is checked.
- Remote user name:** A text input field containing 'Fred'.
- Remote password:** A text input field.
- Retype remote password:** A text input field.
- Login Disabled:** A checkbox that is unchecked.
- Edit own Password:** A checkbox that is checked.
- Change Alarm Setpoints:** A checkbox that is checked.

Figure 6.4.3 Remote user access fields

## 6.5 RUNNING THE PROGRAM

Initiate the program using the START button in the normal way.

Once the program starts, a Host name and User name will be requested as depicted in figure 6.5a.

Enter the Local host name (e.g. Andy136-4) found in the recorder Network/Name area, followed by a dot (full stop, period) followed by the domain name (e.g. FishesRus.co.uk) (also in the Network/Name area). These examples would result in an entry of Andy136-4.FishesRus.co.uk

### Notes

- 1 If frequent use is to be made of this option, it is recommended that a 'short-cut' be created, and placed on the computer desktop. To create a new Bridge link: right click on the desktop, left click 'New' in the pop up menu which appears, then left click on the Bridge icon. When naming Bridge files, the extension .uhv must be used.
- 2 If there is no DNS server associated with the system, the IP address (found in the recorder Network/Address area) should be used instead.
3. The PC locale setting (e.g. Daylight Saving Time) must match that set in the recorder (System/Locale) or the displayed time will be incorrect.
4. If an attempt is made to start the program whilst another user is configuring the recorder, a 'Feature Locked' message appears: 'Another client (instrument) has locked this feature. Retrying until successful' appears. As soon as the other client 'Saves' the new recorder configuration, this message disappears and the program continues its startup.

Enter the user name as entered in the recorder's Security/Access/Remote user name field ([section 6.4.3](#)).

If password entry is not required, disable the tick box (goes blank), then press 'Start' to start running the program

If a password entry is required, ensure that the password required tick box is enabled (tick visible). Press 'Start', then enter the password (as entered in the Security/Access/Remote User Name/Remote password field), followed by carriage return to start running the program.

Clicking 'Start as Lite', allows the user to select the 'View only' version of Bridge. This has the advantage of faster operation.

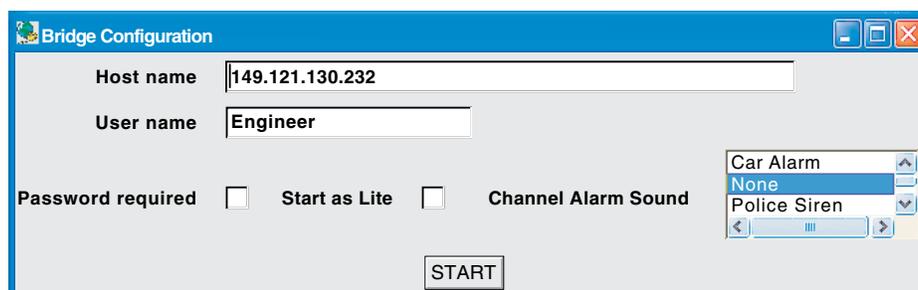


Figure 6.5a Profile (uhv file)



Figure 6.5b Bridge icon (approximation)

## 6.5 RUNNING THE PROGRAM (Cont.)

### CHANNEL ALARM SOUND

If the host PC is fitted with a sound card (enabled), bridge can cause sounds to be played on point alarm (not system alarms). The sound is selected on a connection-by-connection basis via the profile (uhv) file (see figure 6.5a). This allows each user to choose a sound (including none) suited to the local environment.

The sound runs for as long as any point alarm is active and unacknowledged.

Bridge software supplies a range of sounds as listed below. In addition, eight-bit, mono,  $\mu$ Law-format .AU sound files can be imported to "<install location>\Series6000\startup\sounds". Once a sound has been imported, create or edit the profile (UHV) file. The new file should appear in the list. Select it and start.

The default sounds are:

1. Buzzer
2. Car Alarm
3. None
4. Police Siren
5. Siren, Fast
6. Siren, Slow
7. Something wrong
8. Train bell

## 6.6 OPERATION

### 6.6.1 Display Modes

When the program starts, the Home page, as set up in Configuration\Views ([section 4.3.4](#)) is displayed on the computer screen. By click-dragging on the bottom right hand corner of the display, the page size can be edited as required. It is thus possible for the computer to log on to, say four, different recorders and to display their values simultaneously in different parts of the screen.

The up/down arrow keys allow the enabled display modes to be cycled through and the root menu 'Goto View' menu allows a specific display mode to be chosen for the current group. The Home display page can be returned-to at any time, by operating the Root Menu key followed by the Home key.

---

**Note:** Any changes to the recorder's group configuration are reflected immediately at the Host PC's screen.

---

### 6.6.2 Alarm acknowledgement

The alarm acknowledgement/read messages function are as described in [section 3.1.4](#).

### 6.6.3 Status line

The status line at the top of the screen reflects the status of the instrument to which the recorder is connected - e.g. system messages, global alarm, FTP, clock etc.

#### **6.6.4 Error messages**

A number of error conditions may occur to prevent Bridge from 'viewing' the recorder. Such conditions result in the appearance of one of the pop-up messages listed below:

##### **NETWORK CONNECTION HAS TIMED OUT**

This message appears when no connection can be established between the host pc and the instrument. This might be caused by, for example, cable failure, the instrument's not being powered, network hardware failure etc.

##### **UNABLE TO CONNECT TO HOST ...**

Similar to the timeout message above, but with the additional cause: incorrect host address.

##### **UNABLE TO RESOLVE HOSTNAME**

Caused by an incorrect host address, or network failure.

##### **FAILED TO AUTHENTICATE THE USER NAME ...**

Caused by incorrect user name or password.

##### **MAXIMUM NUMBER OF BRIDGE SESSIONS ALREADY RUNNING ON ...**

An attempt is being made to establish more than the maximum number of Bridge sessions to the specified instrument.

##### **THERE APPEARS TO BE NO FREE DISK SPACE ON ...**

Appears if there is insufficient space on the PC hard disk.

##### **YOU ARE ALREADY RUNNING A FULL BRIDGE SESSION ...**

Appears if the pc is already connected to the recorder and running a Full Bridge session.

##### **YOU ARE AUTHENTICATING FULL BRIDGE ...**

Only Bridge 'Lite' is accessible to users using 'Anonymous'.

## 7 SCREEN BUILDER

### 7.1 INTRODUCTION

This option allows the user to create screen layouts using recorder data, simple drawing tools, text and/or imported image files.

24 user screens are editable directly from the operator interface. A further 100 extra screens (25 to 124) which can be created/edited etc. only via Bridge software are also available. Once created, such screens can be copied or moved to one or more of screens 1 to 24, thus becoming accessible at the instrument's operator interface.

Each enabled user screen appears as a selection key in the 'Goto View' menu. It is therefore recommended that the number of 'Bridge Screens' is set to the number actually needed, in order to reduce the number of 'More...' operations.

---

**Notes:**

1. User screens are not supported from a PDA.
  2. As a result of the way in which the screen is refreshed, unexpected results may be obtained if any component is superimposed upon an active component, such as a bargraph or trend display.
  3. The hash (#) character may not be used in text strings.
-

### 7.1.1 Display Access

As shown in figure 7.1.1, the user screens can be included in the display modes, described in [section 3.4](#), and a User screen can be selected as the 'Home page'.

**Note:** Circular Trend option displays are not supported in User screens with this release of software.

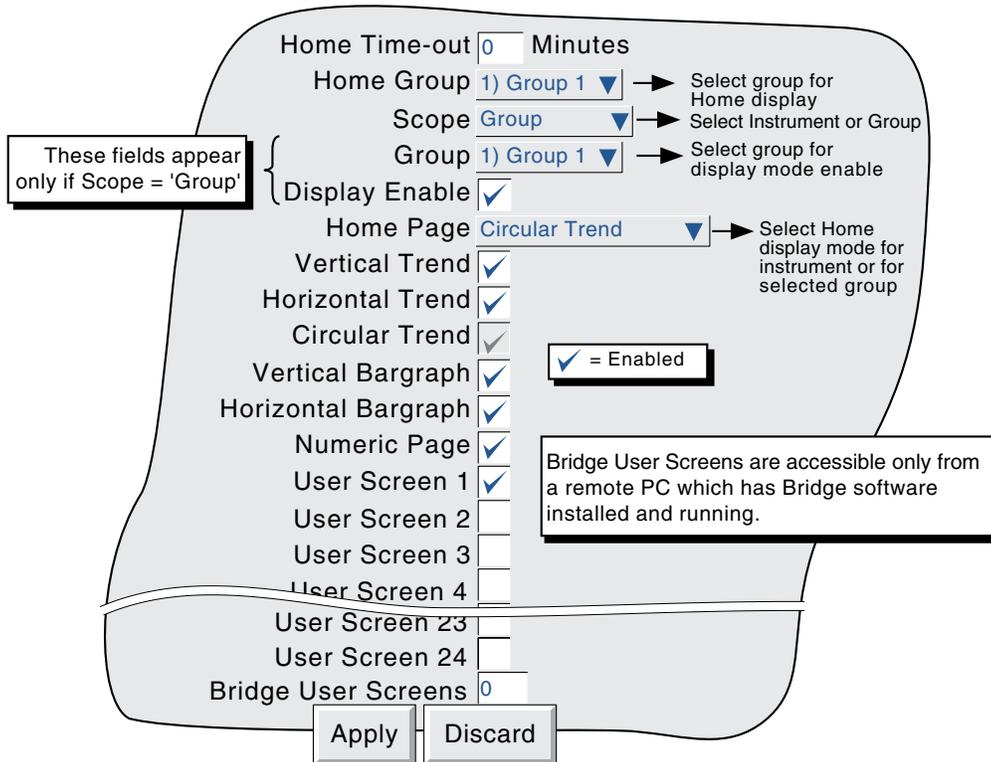


Figure 7.1 .1 Views configuration menu

### 7.1.2 Importing/Exporting screens

The Save/Restore screen (figure 7.1.2) includes the categories 'Import screen' and 'Export screen'.

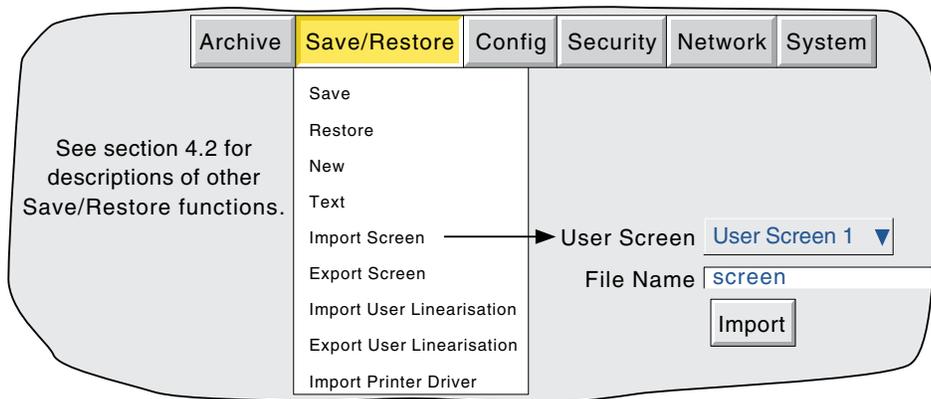


Figure 7.1.2 Save/Restore menu (Import screen)

## 7.1.2 IMPORTING/EXPORTING SCREENS (Cont.)

### IMPORTING SCREENS

Touching the filename area, allows a previously created user screen to be selected either from the Flash memory or from disk to be imported. The User Screen picklist allows the user to define which User screen is to be 'replaced' by the imported file.

### EXPORTING SCREENS

Allows user screens to be exported to Flash memory, or disk, The operator can assign a suitable filename before exporting.

## 7.2 DISPLAY CREATION

The following description is an attempt to show how to create a simple screen layout. The technique used is to define an object, then to specify its size, and where its top left corner is to be located on the screen.

The option offers two levels of sophistication - basic and advanced. The basic system defines size, position, fill colour etc. for components ([section 7.3.1](#)). [Advanced parameters](#) allow a more sophisticated fine-tuning of the appearance of the components

---

**Note:** X is horizontal, increasing rightwards. Y is vertical, increasing downwards. (Top left corner is 0,0)

---

As implied in figure 7.2.3a, screen component position and dimensions can be specified as percentage, absolute pixels or relative pixels. Percentage is 'percentage of screen size'. Absolute pixels allow position and/or dimensions to be defined as an absolute number of pixels. Relative pixels are the same as absolute pixels, except that if the display is rescaled on, say, a pc screen, the absolute pixel object will remain unchanged, whereas the relative pixel object will scale appropriately. Similarly, for transfer from an XGA screen recorder to a 1/4VGA recorder or vice-versa.

### 7.2.1 Before starting

Before starting to lay the screen out:

1. The user must have 'full configuration' access permission.
2. One or more user screens must be enabled in Views Configuration ([section 7.1.1](#))
3. A layout plan is produced, with all the required screen's components listed with their top left corner co-ordinates, their widths and heights, and where appropriate background and foreground colours.

## 7.2.2 Screen components

Table 7.2.2 shows the selectable screen components, their default top-left corner positions, widths/heights and draw order. All these components are described in [section 7.4](#) below.

Component	X	Y	Width	Height	Draw Order
Arc	0	0	10	10	10
Channel data	0	0	10	10	20
Channel horizontal bargraph	0	0	50	30	20
Channel numeric	0	0	50	20	20
Channel vertical bargraph	0	0	10	40	20
Dialogue action	0	0	10	10	10
Event Button	0	0	10	10	10
Group horizontal bargraph	0	0	50	50	30
Group horizontal trend	0	0	50	50	30
Group numeric	0	0	50	50	30
Group vertical bargraph	0	0	50	50	30
Group vertical trend	0	0	50	50	30
Image	0	0	10	10	10
Line	0	0	10	10	10
Main	0	0	100	100	1
Navigation action	0	0	10	10	10
Operator Button	0	0	10	10	10
Oval	0	0	10	10	10
Polygon	0	0	N/A	N/A	10
Polyline	0	0	N/A	N/A	10
Rectangle	0	0	10	10	10
Round rectangle	0	0	10	10	10
Text	0	0	0	0	20

Table 7.2.2 User screen selectable item default values

### 7.2.3 The properties page

1. Ensure that one or more user screens is enabled in views Configuration ([section 7.1.1](#)). If necessary, call the required User screen to the display using the Root menu 'Goto View' menu.
2. Press the Option key to call the Option Menu.
3. Press 'Edit Screen' to call the 'Component Property Editor' page to the display. This display contains the basic properties of the 'Main' (background) screen onto which the required components are to be overlaid.

**Note:** This may take some seconds, according to the complexity of the configuration

4. A further press of the Option key calls the user screen Options display page.
5. Use the Option key again to return to the Component Properties display

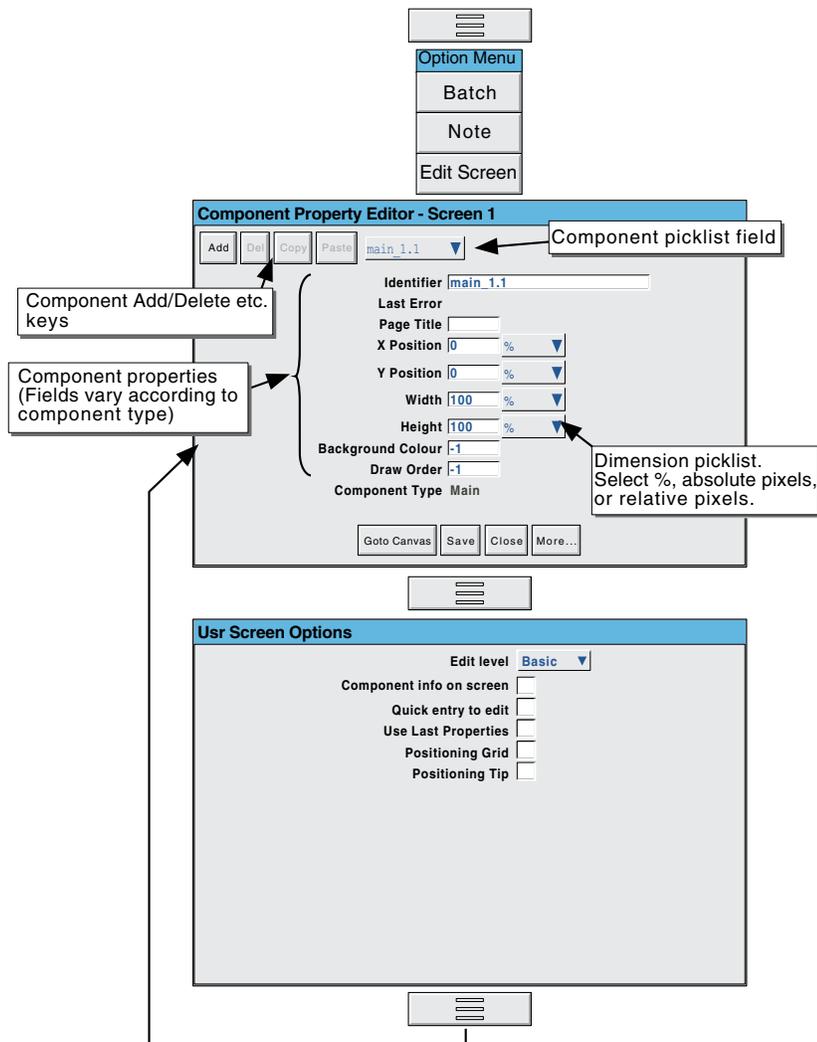


Figure 7.2.3a Component properties and User screen options pages

#### KEY DESCRIPTIONS (UPPER KEYS)

- Add Calls the Component selection list
- Del Deletes (after confirmation) the component in the Identifier field (except the Main pane which cannot be deleted).
- Copy Used to copy the current component to the pasteboard. 'Greyed' for 'Main' as this cannot be Copied.
- Paste Used to 'paste' the copied component to the screen. The copied item is placed 1% to the right of, and 1% below, the source component. 'Greyed' until a component Copy action has taken place.

### 7.2.3 THE PROPERTIES PAGE (Cont.)

#### KEY DESCRIPTIONS (LOWER KEYS)

Which keys appear at the bottom of the properties page depends on whether the user screen is being viewed at the recorder's user interface, or via Bridge software. Figure 7.2.3b show the recorder key arrangement; figure 7.2.3c the Bridge keys. The key descriptions below are in alphabetical order, rather than in left-right appearance order.



Figure 7.2.3b Recorder key arrangement

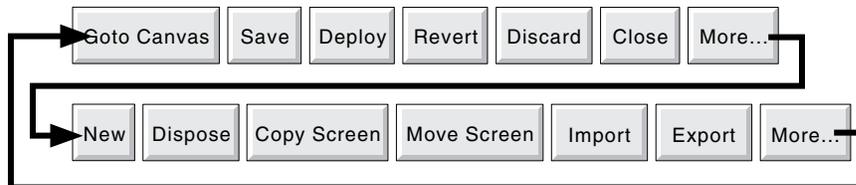


Figure 7.2.3c Key arrangement via Bridge

Close	Causes the screen to quit edit mode. If there are unsaved changes the user is asked for confirmation.
Copy Screen	Copies the contents of the current screen to another specified screen, leaving the current screen unchanged. If the destination screen is already in use, confirmation is required before the screen is overwritten.
Discard	Causes all changes made since the last 'Save' to be 'undone'
Dispose	This key appears only for users accessing user pages using Bridge software. When operated, it deletes the local version of the screen, so that the display reverts to the deployed version.
Deploy	This key appears only for users accessing user pages using Bridge software. It causes the screen to be saved to the PC database, and sent to the recorder.
Export	This key appears only for users accessing user pages using Bridge software. Calls a browser screen, allowing the user to select a path name to which to Export the current screen.
Goto Canvas	The Component Property Editor page disappears, and the screen is shown with the current component highlighted. Click and Drag techniques on the highlight 'handles' allow the component to be re-sized and its aspect ratio to be edited. Clicking and dragging within the highlighted area allows the component to be moved to any position on the screen. Selecting a component and touching the option key 'Goto Editor' key returns the user to the Component Property Editor with the selected component as the current component. (Using the Goto editor key without first highlighting a component re-opens the Component Property Editor with 'Main' as the current component.) When editing via Bridge, double clicking on a component returns to the Component Property Editor with that component as the current component.
Import	This key appears only for users accessing user pages using Bridge software. Calls a browser screen, allowing the user to select a User Screen for import.
More...	Calls next keyset.
Move Screen	Moves the contents of the current screen to another specified screen, leaving the current screen empty. If the destination screen is already in use, confirmation is required before the screen is overwritten.
New	Allows the creation of a new (blank) screen. Current screen components are deleted (after confirmation) leaving a blank screen. Items can be retrieved using the Revert key (above) prior to the next 'Save', 'Deploy' or 'Goto canvas'.
Revert	Causes all changes made since the last 'Goto canvas' operation to be 'undone'.
Save	Causes the current screen to be saved to flash or, for Bridge operation, to the PC database.

### 7.2.3 THE PROPERTIES PAGE (Cont.)

#### OPTIONS PAGE ITEMS

Edit level	Allows Basic or Advanced edit level to be selected for further use.
Component info on screen	Enabling this box causes a component description to appear at the top left corner of each component. This description is in the form: Identifier(X,Y)+[∂X,∂Y], where X and Y define the top left corner position in pixels, and ∂X and ∂Y are the width and height of the component in pixels. The identifier is the component name as appears in the Identifier field of the Component Property Editor page.
Quick entry to edit	If selected, this function allows direct entry from the user screen being edited to the Component Property editor page, without the options menu first appearing offering the choice of 'Batch' or 'Edit Screen'. If Quick entry is selected, the option menu does not appear when the option key is touched. The Batch status page can be called by touching the 'Page Name' area at the top of the screen, as an alternative to the option menu. Quick entry has no effect on screens other than user screens.
Use Last properties	If selected, then all the common attributes (e.g. position, size, colours etc.) of the most recently edited object are applied to the next component to be added.
Positioning Grid	Causes a grid to appear on the 'Goto canvas' screen to help in component layout
Positioning tip	If enabled, then hovering over the highlighted item in a 'goto Canvas' screen causes the coordinates of the top left corner of the component to appear, in whatever units (% , pixels etc.) are selected for the component. The first number gives the 'X' (left-right) co-ordinate; the second gives the 'Y' (up-down) position. Clicking the left mouse key within a component causes the coordinates of the top left corner of the component to appear, in whatever units (% , pixels etc.) are selected for the component. Clicking the left mouse key outside a component, shows the co-ordinates of the mouse cursor tip. To see these co-ordinates within a component, the mouse must be click-dragged from outside the component.




## 7.2.4 Screen creation example

To produce a new display screen with channels one to four inclusive each displayed as an independent bar graph across the width of the screen, with Group 1 vertical trend display below. To achieve the above, the following items will be required:

1. Bar1: Horizontal bargraph with X = 0, Y = 0, Width = 100, Height = 10, channel = Channel 1
2. Bar2: Horizontal bargraph with X = 0, Y = 12, Width = 100, Height = 10, channel = Channel 2
3. Bar3: Horizontal bargraph with X = 0, Y = 24, Width = 100, Height = 10, channel = Channel 3
4. Bar4: Horizontal bargraph with X = 0, Y = 36, Width = 100, Height = 10, channel = Channel 4
5. Group 1: Vertical trend group with X = 25, Y = 48, Width = 50, Height = 50. Group name to appear above display.

### PROCEDURE

1. Operate the 'Add' key to call the Component selection list.
2. Touch Channel Horizontal Bargraph to highlight it, then press 'Add'.
3. Repeat step 2 three times then
4. Touch 'Group Vertical Trend', then 'Add', then 'Close'
5. The Component property editor page reappears with the default values for the most recently added component displayed.
6. Touch the Identifier field, then enter the name 'Group 1' 'Ok' using the pop-up keyboard which appears.
7. In Group Number, select: 1) Group 1
8. Title bar is selected on (yes), as required
9. Enter the X (25%) and Y (48%) co-ordinates, using the same technique as was used for the Identifier field in step 6. The default dimensions (50 x 50%) are as required.
10. The Draw order is as required.
11. Press 'Save'

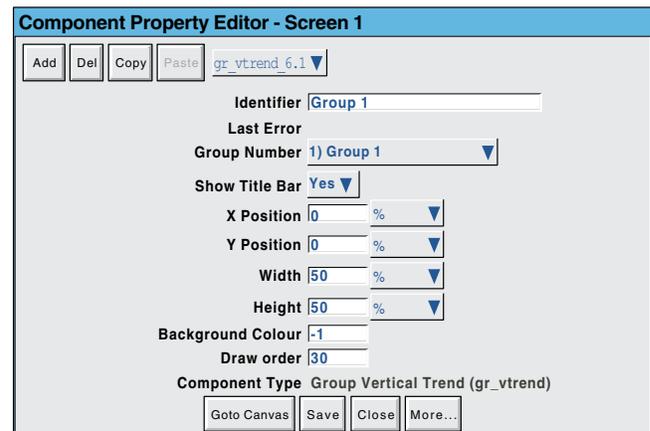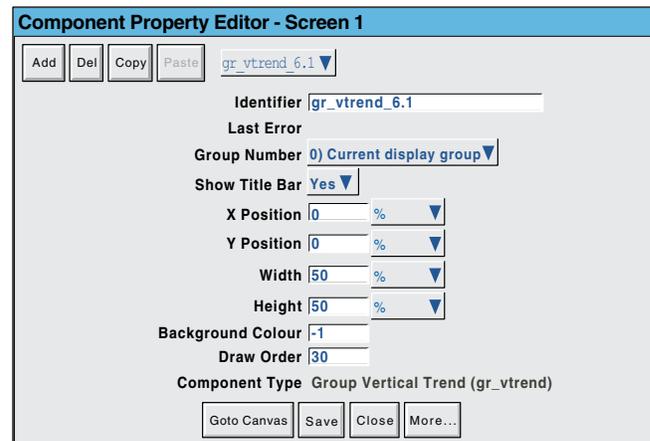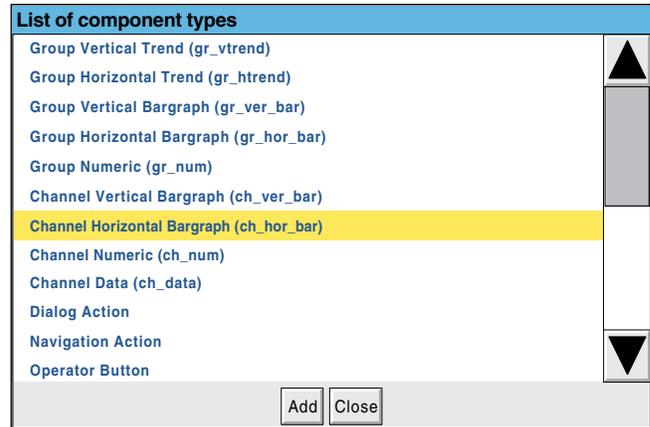

## 7.2.4 SCREEN CREATION EXAMPLE (Cont.)

12. Touch the component picklist field, and highlight the topmost ch\_hor\_bar... field.
13. In the Identifier field, enter the name 'Bar 1' using the pop-up keyboard. (To enter numbers, touch the 'Numeric' tab under the keyboard, then touch the required number.)
14. The channel number is as required
15. Touch the width field and enter a value of 100.
16. Touch the height field and enter '10'
17. Press 'Save'
18. Touch the component picklist field and select another bargraph.
19. In a similar way to that described for Bar 1
  - a) enter the identifier 'Bar 2'
  - b) select Channel 2 from the picklist
  - c) enter a Y value of 12
  - d) enter width = 100%; height = 10%.
20. Similarly configure Bar 3 and Bar 4, using the appropriate Y values (24 and 36) and Channel selection (3 and 4).
21. Finally, press 'Save', then 'Close', to reveal the display page.

**Component Property Editor - Screen 1**

Add Del Copy Paste ch\_hor\_bar\_2.2

Identifier

Last Error

Channel

X Position  %

Y Position  %

Width  %

Height  %

Background Colour

Foreground Colour

Draw Order

Component Type Channel Horizontal Bargraph (ch\_hor\_bar)

Goto Canvas Save Close More...

**Component Property Editor - Screen 1**

Add Del Copy Paste ch\_hor\_bar\_4.2

Identifier

Last Error

Channel

X Position  %

Y Position  %

Width  %

Height  %

Background Colour

Foreground Colour

Draw Order

Component Type Channel Horizontal Bargraph (ch\_hor\_bar)

Goto Canvas Save Close More...



Figure 7.2.3d Complete user screen

7.2.4 SCREEN CREATION PROCEDURE (Cont.)

In order to provide a degree of contrast, the background colour of the 'Main' page can be changed to a darker colour as shown for colour 22 in figure 7.2.3e, below. Figure 7.2.3f on the next page, shows the relevant component property pages.

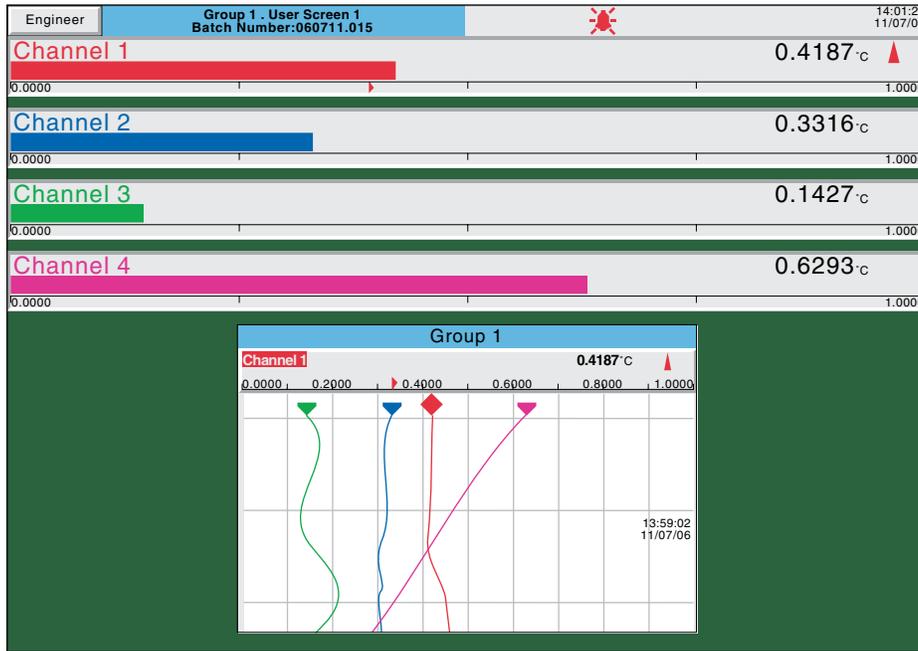


Figure 7.2.3e User screen example with coloured background

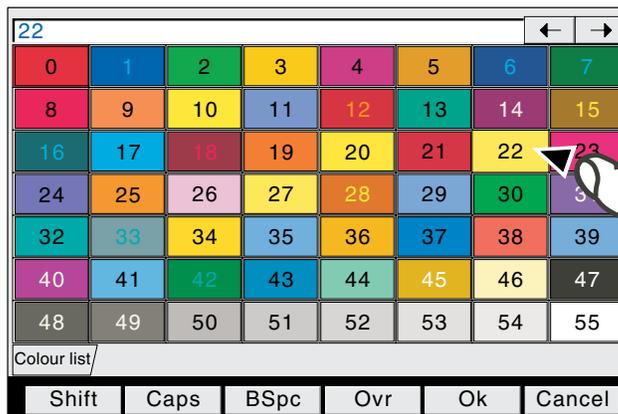
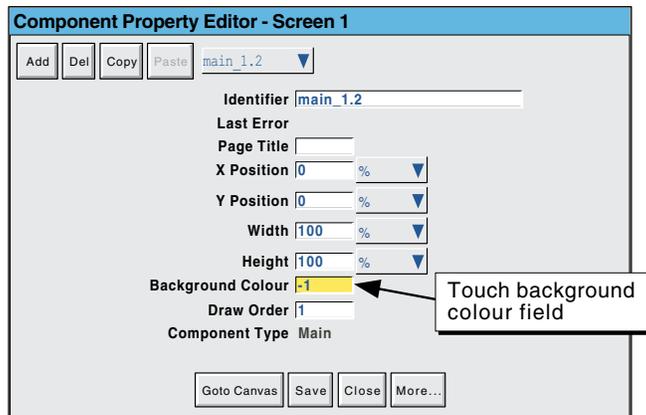


Figure 7.2.3f background colour selection pages

## 7.3 PARAMETER DEFINITIONS

The following parameters are associated with the components listed in [table 7.2.2](#), above. The list is divided into basic and advanced.

### 7.3.1 Basic parameters

Notes:

- 1 Not all components have all the following parameters associated with them. The component definitions in [section 7.4](#) define each component's parameters.
- 2 The generic term 'solid objects' as used in this description includes rectangles, lines, arcs, rounded rectangles, ovals, polygons and polylines. Lines and arcs do not have a background colour as they cannot be filled.
3. Default parameter units are in 'percentage of screen width/height'. The picklist next to each dimension field allows pixels to be used instead.

Parameter	Description
Arc Angle	For Arcs only, the number of degrees of arc drawn anti-clockwise (counter-clockwise) from the Start Angle. Negative angles draw clockwise. See <a href="#">figure 7.4.20a</a> for definitions.
Arc Height	For Rounded Rectangles only, this is double the vertical distance from the corner of the (unrounded) rectangle at which the curve is to start. To draw 'circular' corners, this value must be 3/2 times the Arc Width. The Arc height value must be less than half the Rectangle height. Percent units are relative to the rectangle height, not the screen height.
Arc Width	For Rounded Rectangles only, this is double the horizontal distance from the corner of the (unrounded) rectangle at which the curve is to start. To draw 'circular' corners, this value must be 2/3 the Arc Height. The Arc width value must be less than half the Rectangle width. Percent units are relative to the rectangle width, not the screen width.
Background colour	The fill colour of solid objects; the background colour for the main page, trend charts, text messages etc. For Bargraphs, the colour 'behind' the bar.
Button Text	For operator buttons, Dialogue Action and Navigation Action. Allows button text to be entered. Event button text is defined in Event Button Configuration, described in <a href="#">section 4.3.7</a> .
Channel	Allows a channel to be selected for bargraph, numeric, value etc. display.
Draw edge	If set to 'Yes', this causes the outline shape of a solid object to be drawn in the foreground colour. If set to 'No', the object's outline is not drawn.
Draw Order	Allows a layer scheme to be introduced. Items with higher draw order values are overlaid on components with lower draw order values. The Draw Order feature is included specifically to allow a dynamic element (such as a bargraph) to be placed 'on top of' a background, static image. A dynamic element is always drawn on top all other elements at update time. When one or more dynamic elements are placed on top of one another, the results are unpredictable.
Edit Parameter	For operator buttons, allows the user to select the parameter type (e.g Channel N Alarm 1) to be edited when the button is operated. The parameter number (N) is entered in the 'N value' field.
Event Button	For Event buttons, this allows the user to assign an Event button to the User Screen Button to be displayed.
Feature	For 'Channel data' only, allows the type of data to be displayed (e.g. Current value), to be selected from a pick-list.
Fill Area	If set to 'Yes', this causes a solid object to be filled with the background colour. If set to 'No', the inside of the object is transparent. If 'draw edge' is also set to 'No', the object is invisible.
Foreground Colour	The line colour of solid objects. The bar colour of bargraphs (default = normal point colour). The colour of Text and of numeric values. Where applicable, this overrides channel colour.

Table 7.3.1 Basic level parameters (sheet 1 of 2)

**7.3.1 BASIC PARAMETERS (Cont.)**

Parameter	Description
Group number	Allows a group to be selected for group trend, bargraph and numeric displays, and for Dialogue action buttons. Select specific group, or '0' to follow current display group.
Height	Height of a component, measured downwards from the component's 'Y position'. Negative values measure upwards.
Identifier	Component name. Initially as in the Add Component list, but editable by the user.
Image File	Allows a file name to be entered when importing GIF or JPG images.
Last error	A text message describing the last error to occur for this component. The component must be re-edited in order to clear the problem.
N Value	See 'Edit parameter' above.
Page Title	Allows a name for the current user screen to be entered in 'Main'. This name appears at the top of the screen, and in the Screen number picklist for navigation action buttons.
Screen Number	For navigation action buttons, allows a screen to be selected. When the button is operated, the instrument will switch to the selected display screen.
Show Title Bar	When set to 'Yes', group displays (e.g. Group Vertical Trend) display a title bar across the top of the component, giving the selected group's descriptor. Selecting 'Show Title Bar' to 'No', removes the title bar from the display
Start Angle	For Arcs only, defines a start point for 'Arc Angle' above. See <a href="#">figure 7.4.20a</a> for definitions.
Text	Allows a text string to be entered for display at the screen. The hash (#) character may not be used in text strings.
Width	The width of a component measured rightwards from the component's "X position". Negative values measure leftwards.
X points	Defines the X co-ordinates for polylines and polygons. Must match the number of Y-points for correct interpretation
X position	Distance between the left edge of the screen and the left edge of the component.
Y points	Defines the Y co-ordinates for polylines and polygons. Must match the number of X-points for correct interpretation
Y position	Distance between the top edge of the screen and the top edge of the component.

Table 7.3.1 Basic level parameters (sheet 2 of 2)

### 7.3.2 Advanced parameters

The selection of the Advanced properties set, is carried out from the Properties Options page as described in [section 7.2.3](#), above. Advanced properties are in addition to the basic properties described above, not a replacement for them.

Parameter	Pick list content	Description
3D effect	Enable/Disable	For Channel numeric display only, adds an embossed boxed surround to the display. Applies only if 'Custom' selected as Faceplate style.
Alarm marks colour	None	Allows a colour to be selected for alarm marks on trend scales. Default is colour 0 (red).
Bargraph style	Single Line...  Faceplate below bar  Just bar  Bar and scale  Default  Default Vertical Bargraph System Vertical Bargraph Horizontal Bargraph	For horizontal bargraphs only. 'Plain' produces a bargraph with descriptor to the left of the bar, digital value to the right of the bar, and alarm indication to the right of the decimal value. 'With units' adds units after the digital value. '3D' adds an embossed boxed surround. 'Scale' adds a scale below the bar, with end-point values and tick points. Scale style (described below) may be used to modify the appearance of the scale. Produces coloured bar above channel descriptor, digital value and alarm indication. No scale is printed Produces a colour bar with no textual information, or just the low and high scale values, according to component. Produces a colour bar with a scale, but no digital value or alarm indication Produces a colour bar with scale, with descriptor, digital value and alarm indication above. Produces a colour bar with a scale Produces a colour bar with a scale Produces a colour bar with scale, with descriptor, digital value and alarm indication above.
Best Fit Font	Enabled/Disabled	For Channel numeric only. Applies only if 'Custom' selected as Faceplate style. If enabled, the display fonts for descriptor, value and units are selected by the instrument to suit the screen scale. The fonts will thus vary in size according to the size of the Channel Numeric display. Overridden by any settings for Value Font, Descriptor Font or Units Font other than 'Default'.
Channel cycle time	10	For group trend displays, allows a time period, in seconds, to be entered for channel scroll rate. 0= no scroll.
Colour Alarms	None	Used only when Colour style = 'Channel alarms'. A semicolon-separated list of (Colour channel) alarms, used to change the colour of the component being configured according to alarm status. Colours are defined in 'Colour Backgrounds' and 'Colour Foregrounds', described below.
Colour Backgrounds	None	Used only if Colour style = 'Channel Alarms' or 'Channel thresholds'. A semicolon-separated list of background colours for the component being configured. The number of colours entered must match the number of alarms or threshold values as appropriate. Overrides any entry in 'Background Colour'. Colours are entered by touching each required selection in turn. The semicolon separators are entered automatically, in front of each selection (apart from the first).
Colour channel	All channels	Allows a channel to be defined to be used in percentile or quartile filling or as a source of channel thresholds or channel alarms, as selected in 'Colour style', below.

Table 7.3.2 Advanced edit level parameters (sheet 1 of 6)

## 7.3.2 ADVANCED PARAMETERS (Cont.)

Parameter	Pick list content	Description
Colour foregrounds	None	Used only if Colour style = 'Channel Alarms' or 'Channel thresholds'. A semicolon-separated list of foreground colours for the component being configured. The number of colours entered must match the number of alarms or threshold values as appropriate. Overrides any entry in 'Foreground Colour'. Colours are entered by touching each required selection in turn. The semicolon separators are entered automatically, in front of each selection (apart from the first).
Colour style	Channel thresholds	Allows a number of semicolon-separated values to be entered, to act as colour change triggers for the component being configured. The values are those of the source channel selected in 'Colour Channel' described above. The number of threshold values entered must match the number of colour values entered in Colour Foregrounds and Colour Backgrounds.
	Channel Alarms	Allows a number of semicolon-separated values (1 to 4) to be entered, to act as colour change triggers for the component being configured. These values represent alarms 1 to 4 of the source channel selected in 'Colour Channel' described above. The number of alarms entered must match the number of colour values entered in Colour Foregrounds and Colour Backgrounds. Point is displayed in the colour of the latest active alarm. For example: Alarms configured 1,2. Foreground colours configured 3;0 (amber and red). When alarm 1 goes active, the component goes amber. When alarm 2 goes active the component goes red. When alarm two clears, component reverts to Amber and so on.
	Background quartile	Background colour represents the value of the colour channel. Colour 0 appears for values below 25%, colour 1 for values between 25 and 50 %, colour 3 for values between 50 and 75% and colour 4 for values above 75 %. Foreground colour is default (-1).
	Foreground quartile	As background quartile but for the foreground colour. Background colour is default (-1).
	Background decimal	Background colour represents the value of the colour channel. Colour 0 appears for values below 10%, colour 1 for values between 10 and 20 %, colour 2 for values between 20 and 30% and so on up to colour 9. Foreground colour is default (-1).
	Foreground decimal	As background decimal but for the foreground colour. Background colour is default (-1).
Colour Thresholds	None	Used only when Colour style = 'Channel thresholds'. A semicolon-separated list of (Colour channel) values, used to change the colour of the component being configured according to the process value of the point selected in 'Colour Channel' described above. The number of threshold values entered must match the number of colours defined in 'Colour Backgrounds' and 'Colour Foregrounds', described above.
Decimal places	Default	Number of decimal places in Channel data display.
Descriptor Font	Default	For Channel Numeric displays only, if Faceplate Style is set to 'Custom', then Descriptor Font allows the Channel Descriptor font to be selected from a picklist.
Display Alarms	Enable/Disable	For Channel Numeric displays only, if Faceplate Style is set to 'Custom', this selection determines whether or not alarm symbols are displayed in the top right hand corner of the display.

Table 7.3.2 Advanced edit level parameters (sheet 2 of 6)

**7.3.2 ADVANCED PARAMETERS (Cont.)**

Parameter	Pick list content	Description
Display Bargraph	None	If selected, a vertical bargraph is drawn at the right hand edge of Horizontal Trend displays.
Display Descriptor	Enable/Disable	For Channel Numeric displays only, if Faceplate Style is set to 'Custom', this selection determines whether or not the channel descriptor appears at the top of the display.
Display messages	Enable/Disable	If selected, displays a message bar for Horizontal Trend displays.
Display Pens	Enable/Disable	If selected, pen representations appear at the top or right edge of a trend chart.
Display Units	Enable/Disable	For Channel Numeric displays only, if Faceplate Style is set to 'Custom', this selection determines whether or not the channel's units appear at the right edge of the display.
Faceplate Style	Default Just value No alarms Value and Units Single line Faceplate Custom	Produces a channel display with the descriptor and alarm indicators on the top line and with the digital value, and units on the bottom line. Shows only the channel value As default, but without alarm display Produces a larger digital display of the channel value, with units. As default, but all on a single line. The 'Display Descriptor', 'Display units' and 'Display Alarms' checkbox settings, and the font selections for Value, Units and Descriptor become active only if 'Custom' is selected as Faceplate style.
Faceplates Location	Dynamic, N, S, E, W	(Not available for group horizontal bargraph displays.) Allows the position of the faceplates to be 'dynamic' (appears at best position for the number of channels), or to be located above (North), below (South), to the right (East) or to the left (West) of the bargraphs. Also allows faceplates to be turned off altogether. For group trend displays, these faceplates are in addition to the current-channel faceplate, which always appears above the 'chart' across the full width of the display, unless turned off using Horizontal Faceplate disable.
Font style	List of fonts	Picklist holds a number of sizes, plain, bold and underlined bold.
Grid Line colour	Default	Allows a colour to be selected for trend chart gridlines
Horizontal Alignment	Left/centred/right	Allows text to be justified relative to its width setting
Horizontal Faceplate	Enable/Disable	For vertical trend displays, allows the current-channel faceplate to be selected on or off.
Horizontal Grid total	Default	Number of vertical divisions of a trend chart. If left at default uses the value entered in Group Configuration ( <a href="#">section 4.3.2</a> ). Any other setting overrides Group Configuration entry.
Horizontal Minor Divs	Default	Allows the user to enter a number of minor grid divisions. If left at default uses the value entered in Group Configuration ( <a href="#">section 4.3.2</a> ). Any other setting overrides Group Configuration entry
Line thickness	1	Allows a pixel value to be entered for the line thickness of some components. It should be noted that the nature of the screen and of the drawing method means that curved lines of multi-pixel thickness can suffer from Moiré fringe, or interference effects.

Table 7.3.2 Advanced edit level parameters (sheet 3 of 6)

**7.3.2 ADVANCED PARAMETERS (Cont.)**

Parameter	Pick list content	Description
Message Colour	Default	Allows a colour to be selected for messages on a trend chart
Minimum Height	Default	For individual channels within a group horizontal bargraph display
Minimum Width	Default	For individual channels within a group vertical bargraph display
Minor grid line colour	Default	Allows a colour to be selected for trend chart minor gridlines
Nominal height	None	653 (503) = height of large frame (small frame) display area in pixels
Nominal width	None	1024 (934) = width of large frame (small frame) display area in pixels
Notes	None	Allows a note to be entered for the users convenience.
Number of Columns	None	Lays out group displays (other than trend) in the specified number of columns.
Number of Rows	None	Lays out group displays in the specified number of rows.
Numeric width	None	Number of characters in channel data display including decimal point.
On visibility change	Paint Background	Repaint the area of the component, including any text, in its background colour. If no background colour has been defined, the default (silver/grey) colour is used.
	Paint All	Repaints the component area in the screen background colour thus rendering the component invisible.
PV Error Colour Background	Default	Allows a colour to be selected for background use when the relevant PV is in an error state. Overrides other selections.
PV Error Colour Foreground	Default	Allows a colour to be selected for foreground use when the relevant PV is in an error state. Overrides other selections
Reversed colour	None	Allows text to be displayed in the background colour against a background of foreground colour.
Scale Digits	None	For Horizontal trend displays. Allows the chart area to be maximised, by reducing the width of the vertical bar to the right of the chart. Scales will be presented in scientific format, or in 'N.?', 'N?' format etc. depending on the number of digits specified. The number of digits is in addition to the decimal point.
Scale Divisions - Major	None	For channel bargraphs, allows the number of major scale divisions to be specified for the channel. Overwrites the Scale Divisions-Major setting in the Channel's configuration.
Scale Divisions - Minor	None	For channel bargraphs, allows the number of minor scale divisions to be specified for the channel. Overwrites the Scale Divisions-Minor setting in the Channel's configuration.

Table 7.3.2 Advanced edit level parameters (sheet 4 of 6)

## 7.3.2 ADVANCED PARAMETERS (Cont.)

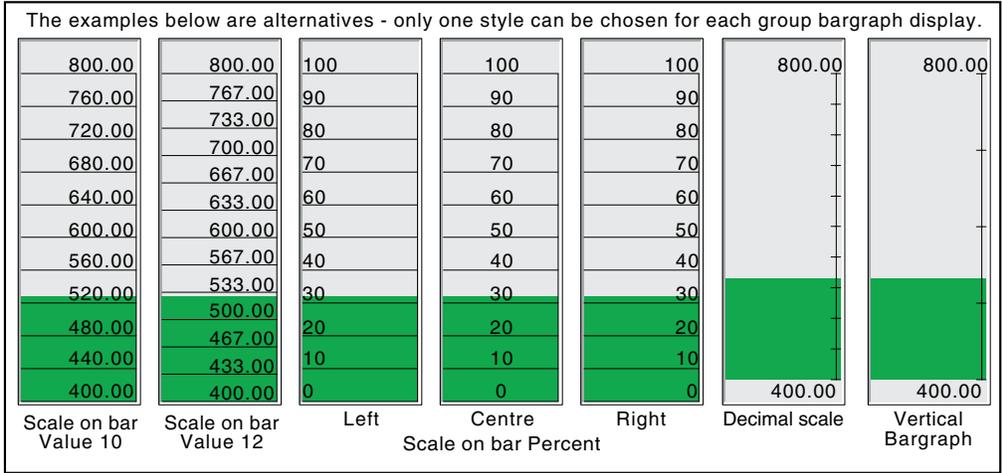
Parameter	Pick list content	Description
Scale style	Scale on bar.--- No Text Decimal scale  Default Horizontal Bargraph Horizontal Faceplate  Vertical bargraph	See the figure below for clarification. For vertical bargraphs only. Produces scale tick marks, but without values For bargraphs, produces scale with 9 divisions (0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100% of scale width). Zero and full scale values printed. For Horizontal bargraphs, each scale division has 4 minor divisions (0, 20, 40, 60, 80, 100 % of major division). Uses scale information from each point's scale configuration As default for horizontal bargraphs Produces faceplate display with scale end points, descriptor, digital value and alarm indicator As default for vertical bargraphs.
Show Alarm Marks	Yes/No	Allows channel scale alarm marks to be displayed (yes) or not (no). Alarm Marks Colour, described above, allows the user to select a colour for the alarm marks.
Time Marker colour	Default	Allows a colour to be selected for time/date printing on a trend chart
<p>The examples below are alternatives - only one style can be chosen for each group bargraph display.</p>  <p>The figure displays seven different scale styles for a bargraph. Each style shows a vertical scale from 0 to 800.00 with a green bar representing a value of 400.00. The styles are: 1. 'Scale on bar Value 10': Numerical values from 400.00 to 800.00 in increments of 40.00. 2. 'Scale on bar Value 12': Numerical values from 400.00 to 800.00 in increments of 33.33. 3. 'Left': Numerical values from 0 to 100 in increments of 10. 4. 'Centre': Numerical values from 0 to 100 in increments of 10. 5. 'Right': Numerical values from 0 to 100 in increments of 10. 6. 'Decimal scale': Numerical values 400.00 at the bottom and 800.00 at the top. 7. 'Vertical Bargraph': Numerical values 400.00 at the bottom and 800.00 at the top.</p>		
Time Marker interval	Default	Number of horizontal grid lines between successive time markers.
Trend Padding	Default	For group trend only. Normal trends are 1 pixel wide. Setting a padding value of N, adds N pixels on each side of the central pixel. For example, a padding value of 2 would produce traces 5 pixels wide. Applies to all channels in the group.
Units Font	List of fonts	For Channel Numeric displays only, if Faceplate Style is set to 'Custom', then Units Font allows the Channel Units font to be selected from a picklist.
Update when	Value changes Always	Action is taken when the value associated with the component changes The component is redrawn, continuously, at the display update rate.
Vertical alignment	Centred/bottom/top	Allows text to be positioned relative to its height setting
Value Font	List of fonts	For Channel Numeric displays only, if Faceplate Style is set to 'Custom', then Value Font allows the Channel Value font to be selected from a picklist.
Vertical Grid Total	Default	Number of vertical divisions for trend chart. If left at default uses the value entered in Group Configuration ( <a href="#">section 4.3.2</a> ). Any other setting overrides Group Configuration entry
Vertical Minor Divs	Default	Allows the user to enter a number of minor grid divisions. If left at de-

Table 7.3.2 Advanced edit level parameters (sheet 5 of 6)

**7.3.2 ADVANCED PARAMETERS (Cont.)**

Parameter	Pick list content	Description
		fault, the value entered in Group Configuration ( <a href="#">section 4.3.2</a> ) is used. Any other setting overrides Group Configuration entry
Visible Alarm	Default	For 'When Visible' (below) is selected as 'In alarm or error' or 'not in alarm or error'. 'Visible Alarm' allows an alarm number to be entered, for use in determining whether a component be visible or invisible.
Visible Channel	All points	For use 'When Visible' (below) is selected as 'Channel Value', 'In alarm or error' or 'not in alarm or error'. 'Visible Channel' allows a point number to be selected from a pick list. See also Visible Operator, and Visible Value, below.
Visible Operator	List of operators	For 'When Visible' (below) is selected as 'Channel Value'. 'Visible Operator' allows a comparison operator to be selected from a picklist. The picklist contains the following items: Greater than, Less than, Greater than or equal to, Less than or equal to, Equal to, Not equal to. The comparison is made between the instantaneous value of the point selected in 'Visible Channel' and the value entered in 'Visible Value' (below). For example, when using the 'Greater than' operator, the component is visible whenever the Visible Channel's value is greater than the Visible Value.
Visible Value	Default	For 'When Visible' (below) is selected as 'Channel Value'. 'Visible Value' allows a value to be entered to be used in the 'Visible Operator' comparison described above.
When visible	Always Never Channel value  In alarm or error  Not in alarm or error	Component is always visible Component is never visible Component is visible or not, depending on the relationship between the current value of a selected channel and a specified constant value. See 'Visible channel', above, for details. Component is visible if a specified alarm on a specified point is active, or if the point is in an 'Error' state. See 'Visible Alarm', above, for details. Component is visible if a specified alarm on a specified point is not active, or the point is not in an 'Error' state. See 'Visible Alarm', above, for details.

Table 7.3.2 Advanced edit level parameters (sheet 6 of 6)

## 7.4 COMPONENT DEFINITIONS

This section defines all the available components listed in [table 7.2.2](#) in terms of their parameters. The components occur in the order in which they appear in the list.

### 7.4.1 Group Vertical/Horizontal Trend

This produces a display which mimics a recorder chart, for a selected group. All the functions (e.g. trend history) described in sections [3.4](#), [3.4.1](#) and [3.4.2](#) are included. The following unique parameters (fully described in [table 7.3.2](#)) are available for configuration:

Background colour	Allows the 'chart' to be drawn in the selected colour.
Message Colour	The colour of messages printed on the 'Chart'.
Time Marker Colour	The colour of time/date printed on the 'Chart'.
Grid Line Colour	The colour of the 'Chart' grid lines.
Faceplates location	Allows 'group' faceplates to be enabled/disabled, and when enabled allows the position of the faceplates to be defined. These 'group' faceplates are additional to the current-channel faceplate which always appears above the chart, unless it has been disabled under 'Horizontal faceplate' (below).
Time Marker Interval	Selects the number of horizontal chart lines between successive time markers
Vertical Grid Total	Total number of vertical chart divisions.
Horizontal Grid Total	Total number of horizontal chart divisions.
Trend Padding	Sets thickness of traces.
Channel cycle time	Allows a number to be entered for the scrolling period between channels. 0 = Channel hold.
Display Messages	Allows message printing to be enabled/disabled.
Display Bargraph	For Horizontal trending only, allows the vertical bargraph display to be switched on and off.
Display Pens	Allows the pen icons at the edge of the chart to be switched on and off.
Horizontal Faceplate	Allows the current-channel faceplate to be switched on and off.

### 7.4.2 Group vertical bargraph

Produces a vertical bargraph for a selected group in a format defined by 'Bargraph Style' and 'Scale style' described in [table 7.3.2](#). The number of rows of bars can also be defined by the user, according to the overall size of the display, number of channels etc. The default value of zero means that the recorder will display what it 'believes' to be the most ergonomic number of rows.

The recorder attempts to fit as many channel bars as possible into the width of the display. The default minimum width of a column is 6 mm. If there are more channels than can be fitted into the display, a scroll bar device appears at the bottom edge to allow 'hidden' bars to be accessed.

The recorder attempts to fit as many faceplates as possible into the height of the display. If there are more faceplates than can be fitted into the display, a scroll bar device appears to allow 'hidden' faceplates to be accessed.

### 7.4.3 Group horizontal bargraph

Produces a group horizontal bargraph, for a selected group, in a format defined by 'Bargraph Style' and 'Scale style' described in [table 7.3.2](#). The number of columns can also be defined by the user, according to the overall size of the display, minimum width, number of channels etc.

The recorder attempts to fit as many channels as possible into the height of the display, according to the specified minimum height (default = 12mm). If there are more channels than can be fitted into the display, a scroll bar appears at the right edge to allow 'hidden' channels to be accessed.

#### 7.4.4 Group numeric display

This produces a display of a selected group's numeric values, in one of a number of formats, as described in 'Faceplate Style' in [table 7.3.2](#) above. The number of columns can also be defined by the user, according to the overall size of the display, number of channels etc. The default value of zero means that the recorder will display what it 'believes' to be the most ergonomic number of columns.

The recorder attempts to fit as many channels as possible into the height of the display, according to the specified minimum height (default = 12mm.). If there are more channels than can be fitted into the display, a scroll bar appears at the right edge to allow 'hidden' channels to be accessed.

#### 7.4.5 Channel vertical/horizontal bargraph

For a specified channel, this produces a dynamic horizontal or vertical bargraph display of channel value, in a format defined by 'Bargraph Style' and 'Scale style' described in [table 7.3.2](#)

#### 7.4.6 Channel Numeric

For a specified channel, allows the channel faceplate to be displayed in one of a number of formats, as described in 'Faceplate Style' in [table 7.3.2](#) above.

#### 7.4.7 Channel data

For a specified channel, allows one of : Current value, Descriptor, Units, Span low or Span high to be selected for display.

#### 7.4.8 Dialogue Action

This displays a pushbutton which can have one of three actions assigned to it:

1. Call the Login page.
2. Call the Batch Status page
3. Call the Operator Note dialogue box.

For Batch and Operator Note use, a Group number can be selected.

#### 7.4.9 Navigation Action

This displays a pushbutton, the purpose of which is to call a different display screen. A Group and a screen can both be specified, so this button provides a shortcut version of the 'Goto group' and 'Goto View' keys of the root menu.

### 7.4.10 Operator button

This displays a user pushbutton. The legend on the pushbutton, and the task it is to carry out, are defined in the button configuration. If the text is too long for the width of the button, the text is truncated (e.g. Reset Ave...). Possible tasks are as follows (assuming that the relevant options are fitted):

- 1 Edit the threshold (setpoint) setting for alarms 1 to 4 for point N
- 2 Reset Maths channel N
- 3 Edit Maths constant N
- 4 Preset Totaliser N
- 5 Preset Counter N
- 6 Start/Stop Timer N
- 7 Initiate Demand Write N
- 8 Set output channel N to default values.



Figure 7.4.10  
Typical operator button

In all the above, N represents any number between 1 and the maximum number available for the relevant type of point. (Point is an umbrella term for input channel, a maths channel, a totaliser, etc.)

When the button is operated a 'confirmation' page appears allowing, for example, the value of a constant to be edited before the 'Apply' button is operated.

---

#### Notes:

- 1 If the point being accessed is not suitably configured, the 'confirmation' page is blank. For example, if the Operator button is configured to change, say, the threshold (SP) of Alarm 2 on Channel 6, and either Channel 6 is Configured 'Off', or alarm 2 is 'Off', then the Confirmation page will not have a configurable area allowing the user to enter the required new value.
  2. Any signing or authorizing that normally applies to the item being edited, also applies when changes are being made by means of the Operator button.
- 

### 7.4.11 Event Button

This displays a pushbutton, to be used as a source for an event. The button name, its action (latching or unlatching), and whether or not the operation of the button needs signing or authorizing are set up in Event Button configuration, described in [section 4.3.7](#). The actions taken when the button is operated are set up in Event configuration, described in [section 4.3.6](#). Signing and Authorizing are as described in [section 4.4.2](#) (Management).



Figure 7.4.11 Typical Event Button

### 7.4.12 Image

This allows a GIF (Gif87a format only) or JPG image file to be loaded from (e.g.) a Compact Flash card. Once this has been done, bargraphs, text messages etc. can be superimposed on the image.

---

#### Notes:

- 1 Only user screens 1 to 6, may have images embedded in them, and the size of each image may not exceed 250kB (see also note 3). Does not apply to Bridge-only screens (25 to 124).
  2. It is recommended that 'abs\_pxl' be selected as width and height units, before an image is loaded. The use of any other units significantly increases the time taken for the loading process to complete.
  3. For user screens 1 to 6, the physical size of the image may not exceed 1024 pixels wide or 768 high. Any attempt to load an image larger than this results in a 'User Screen Image Error' message asking that the image size be reduced. The size constraint does not apply to Bridge-only screens (25 to 124).
-

### 7.4.13 Text

If width and height are left with the default values of zero, the text will start at the specified start point and fit in the space between there and the right edge of the screen, in a single line (left justified (ranged) as a default). If the text string is too long, it is truncated. The text appears in the specified foreground colour, superimposed on a 'box' of background colour which is the same width of the text string.

If width and height are defined, then the text will fill the defined width and any remaining text is truncated. The text appears in the foreground colour (default black), over a field of background colour (default grey).

Advanced properties allow the text to be set to range left, range right or be centred, at the top, bottom or centre of the field, and for the foreground and background colours to be swapped.

### 7.4.14 Round rectangle

Similar to a rectangle described in section 7.4.15, but offers the user the opportunity to draw rectangles with curved corners. The horizontal and vertical curve angles are specified separately, and the aspect ratio of the screen should be taken into account when working in percentage units.

---

**Note:** The rounded rectangle will draw incorrectly if either of the arc height/width settings is greater than half the rectangle height/width settings.

---

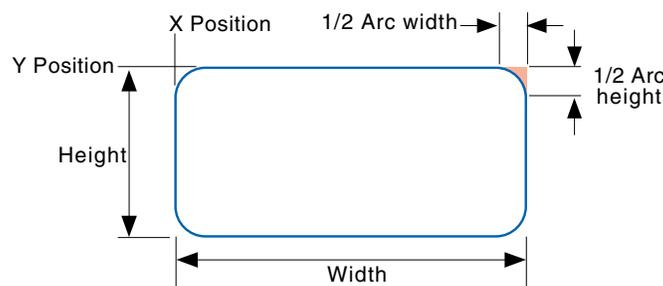


Figure 7.4.14 Round rectangle definitions

### 7.4.15 Rectangle

This draws a rectangle on the display page. If the height and width of the rectangle are defined in the default 'percentage units', then entering equal values for height and width will result in a rectangle with the same aspect ratio as that of the screen, not a square as might be expected. Because the screen height is approximately 2/3 the width, the rectangle height should be 3/2 the rectangle width to produce a square. (The actual height/width ratio is  $535/800 = 0.669$  for large frame units or  $214/320 = 0.669$  for small frame units).

Using pixels as the measuring units obviates this problem as pixels are square.

### 7.4.16 Polyline - series of points

Similar to closed polygons, described in section 7.4.17 below, but the first and last points are not automatically joined, and the drawn item cannot be filled and the line width cannot be specified - it is always one pixel.

**Note:** When working in percentage units, it should be remembered that vertical percentage units are only 2/3 the size of horizontal percentage units - this affecting the appearance of the drawn item.

Example: To draw an (old fashioned) electronic resistor icon (Units = Absolute pixels)

X position = 400, Y position = 236,

Foreground colour = 0

X points = 0,10,15,25,35,45,55,65,75,85,90,100

Y points = 0,0,-10,10,-10,10,-10,10,-10,10,0,0

Press 'Apply', then 'Close' to produce a red 'sawtooth' outline, as depicted in figure 7.4.16 below.

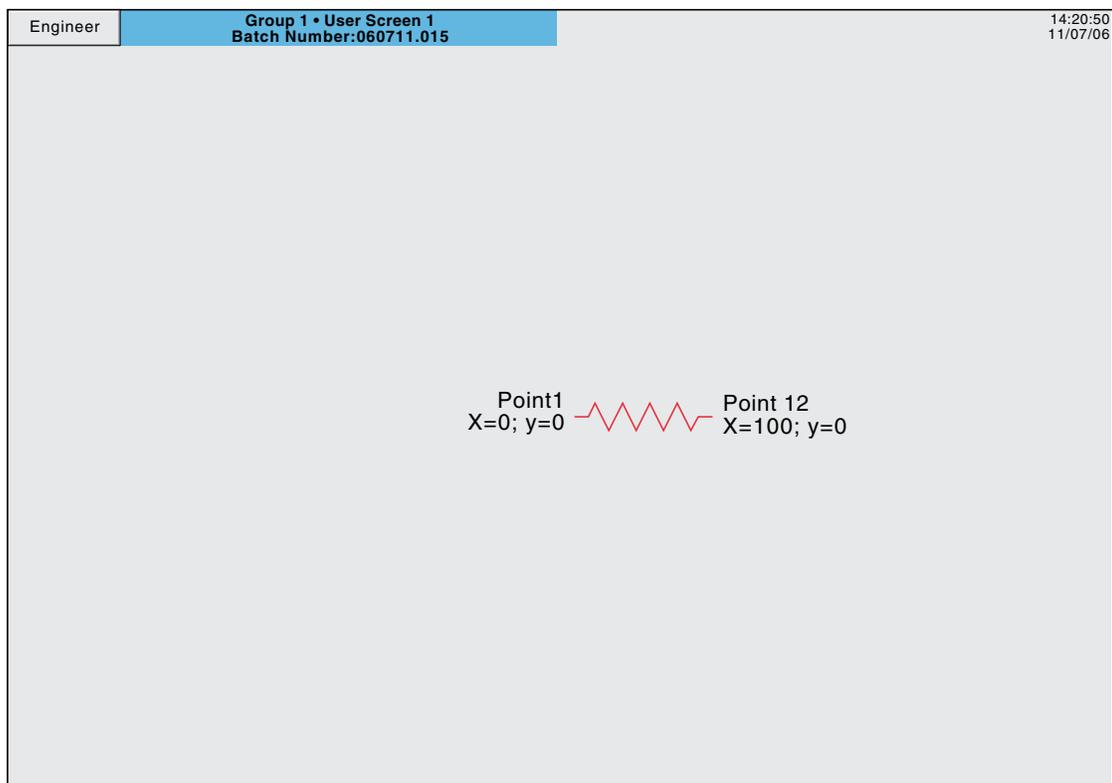


Figure 7.4.16 Polyline example

### 7.4.17 Polygon- closed area

This allows a number of pairs of points to be entered, which, if valid, will then be joined by straight lines. The first and last points are automatically joined, by the recorder. The shape, drawn in the specified foreground colour, with the specified line width, can be filled with the specified background colour.

**Note:** When working in percentage units, it should be remembered that vertical percentage units are only 2/3 the size of horizontal percentage units - this affecting the appearance of the drawn item

Example: To draw a left pointing solid arrow, positioned with its point at the centre of the screen.

Access the component page as described in [section 7.2.3](#), select 'polygon - closed area' and press Ok. In the properties page, carry out the following configuration (units = %):

X position = 50, Y position = 50,

Background colour = 22, Foreground colour = 30

Draw edge = Yes, Fill area = Yes

X points = 0,10,10,30,30,10,10

Y points = 0, -15, -5, -5, 5, 5, 15

Press Apply, then Close to produce a dark green arrow, with pale green outline, as depicted in figure 7.4.17 below.

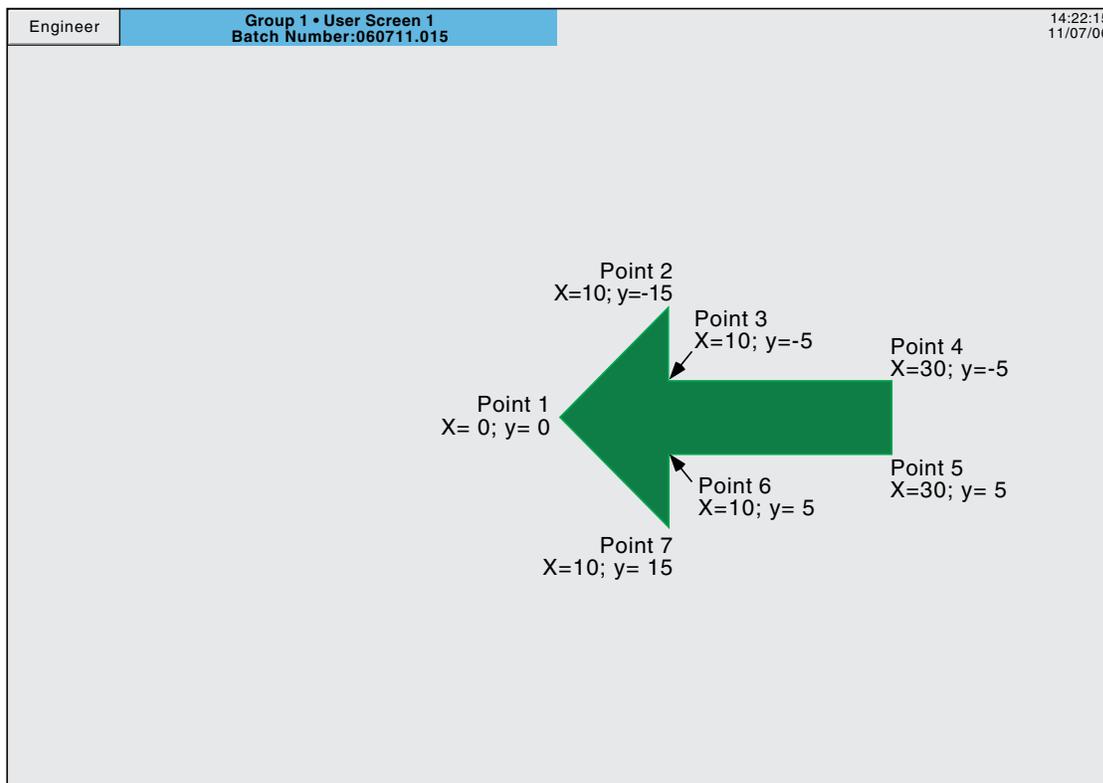


Figure 7.4.17 Polygon example

### 7.4.18 Oval

Similar to an arc ([section 7.4.20](#)) with an arc angle of 360 degrees, but arcs cannot be filled,

If the height and width of the oval are defined in the default 'percentage units', then entering equal values for height and width will result in an oval with the same aspect ratio as that of the screen, not a circle as might be expected. Because the screen height is approximately 2/3 the width, the oval height should be 3/2 its width to produce a circle. (The actual height/width ratio = 0.669).

### 7.4.19 Line

This causes a straight line of user-definable thickness to be drawn between the points (X position; Y position) and (X position + width; Y position + height)

#### Notes:

- 1 Y increases downwards; X increases rightwards
- 2 Height = 2/3 width if measuring in percent

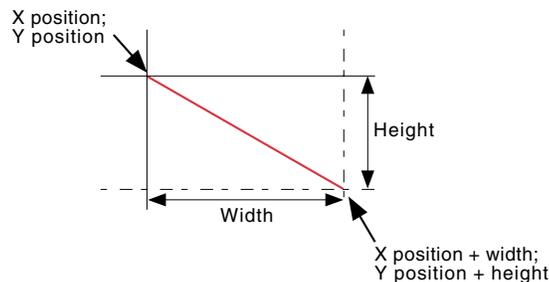


Figure 7.4.19a Line definitions

### EXAMPLE

To draw an approximation to a St. Andrew's cross (saltire):

Access the component property editor page as described in [section 7.2.3](#):

Select **Advanced Edit level**, then in the component property editor page

1. touch the 'Add' key at the top of the screen. In the 'List of Component types' page, press 'Line', 'Add', 'Line', 'Add', then 'Close'
2. In 'main\_1.2' - set background colour to 6
4. In 'line\_2.3' Set Width to 100, Height to 100. Set Foreground colour to 55 and Line thickness to 35
5. In 'line\_3.4' - Set X position to 100, Width to -100, Height to 100. Set Foreground colour to 55 and Line thickness to 35
6. Press 'Save', then 'Close'.

**Note:** because of the thickness of the lines takes the corners beyond the display area, an error message may appear in the 'Last error' field for the lines : position maybe out of bounds. This should not prevent the screen being drawn correctly.



Figure 7.4.19b Example

### 7.4.20 Arc

This causes a curved line of user-definable thickness to be drawn anti-clockwise between start angle and (start angle + arc angle). The origin ('centre') of the arc is (X position + 1/2 Width) ; (Y position + 1/2 Height). Arcs cannot be filled.

#### Notes:

- 1 Angle increases anticlockwise
- 2 Height = 2/3 width if measuring in percent
- 3 Arcs cannot be filled - the shading in the figure is included for clarity only.

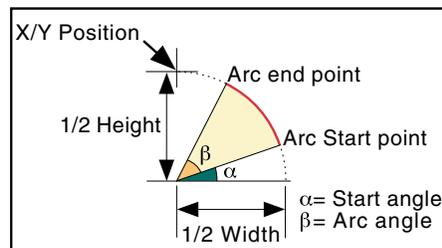


Figure 7.4.20a Arc dimension definitions

### EXAMPLE

An arc definition of:

X position = 50%, Y position = 50%, Width = 50%, Height = 50%, Start angle = 0; Arc angle 270 would produce the curve depicted in figure 7.4.20b, below.

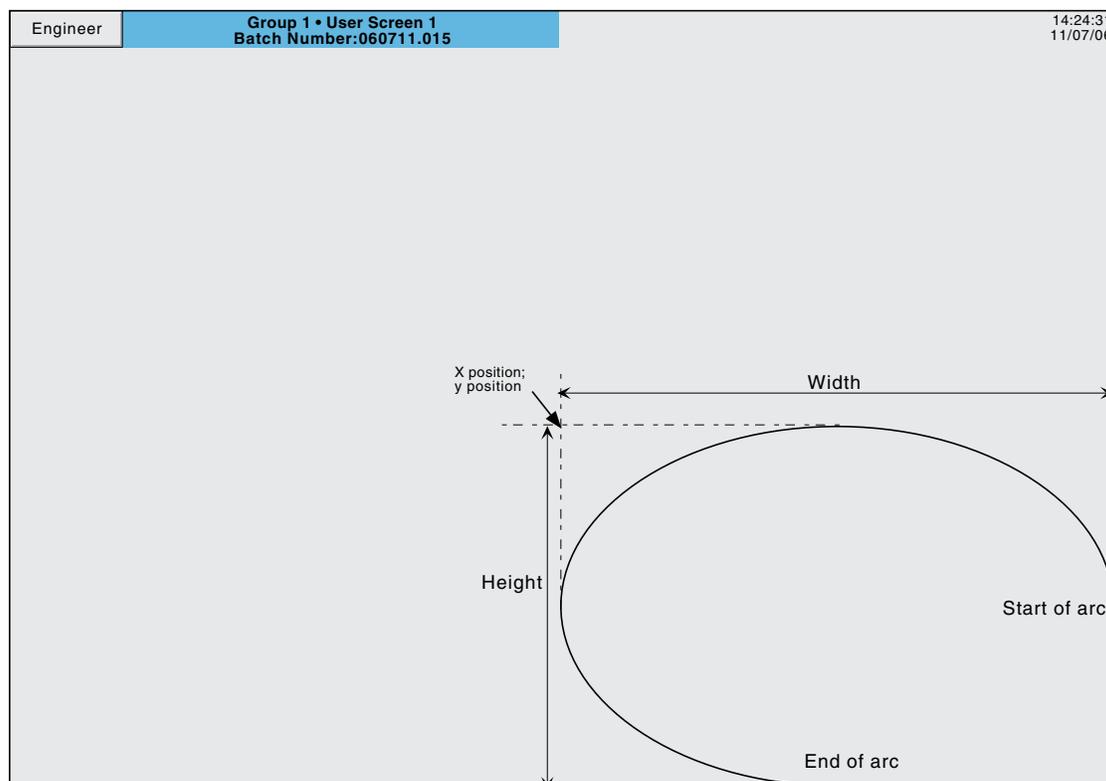


Figure 7.4.20b Sample arc

## 7.5 MEASURING UNIT COMPARISONS

Note: All the following figures are approximate.

### 7.5.1 XGA screen

The physical display screen area available for user screens is approximately 245 mm across and 164 mm high. This area can be divided into a 100 x 100 array for percentage measurement or into a pixel array, 1024 across by 700 vertically.

Thus, horizontally,

10 mm = 4% = 42 pixels  
 or 1% = 2.45 mm = 10.24 pixels  
 or 10 pixels = 2.45 mm

and Vertically,

10 mm = 6% = 43 pixels  
 or 1% = 1.64 mm = 7 pixels  
 or 10 pixels = 2.3 mm

Centre of screen is given by X = 50%; Y = 50% or by X = 512 pixels; Y = 350 pixels

### 7.5.2 QVGA screen

The physical display screen area available for user screens is approximately 100 mm across and 72 mm high. This area can be divided into a 100 x 100 array for percentage measurement or into a pixel array, 320 across by 210 vertically.

Thus, horizontally,

10 mm = 10% = 32 pixels  
 or 1% = 1 mm = 3.2 pixels  
 or 10 pixels = 3.2 mm

and Vertically,

10 mm = 13% = 29 pixels  
 or 1% = .72 mm = 2.4 pixels  
 or 10 pixels = 3.4 mm

Centre of screen is given by X = 50%; Y = 50% or by X = 160 pixels; Y = 105 pixels

## 7.6 ERROR CODES

Error codes 1 to F may appear at the top left corner of the screen. The following codes are currently implemented, and if more than one occurs at the same time, the code numbers are added. For example, Error code 6 would mean that codes 4 and 2 had both occurred.

- 1 Component error e.g. image does not exist.
- 2 Error loading the Property.uhr file
- 4 Error loading the Style.uhr file
- 8 Error loading the usrscrn.uhu file

## 8 MODBUS TCP SLAVE COMMS

### 8.1 INSTALLATION

The installation of the Modbus link consists of connecting a standard Ethernet cable between the RJ45 connector at the rear of the recorder either:

1. Directly to a host computer, using a crossover cable
2. To a host computer via a network, using a 'straight through' cable.

### 8.2 INTRODUCTION

MODBUS TCP allows one or more recorders to act as 'slave' devices to one or more host computers connected via the RJ45 connector at the rear of the recorder. Each recorder must have a unique Internet Protocol (IP) address, set up as described in [Section 4.5](#).

MODBUS TCP (Transmission Control Protocol) is a variant of the MODBUS family of communications protocols intended for supervision and control of automated equipment specifically covering the use of MODBUS messaging in an intranet or internet environment, using TCP/IP protocols. Much of the MODBUS detail in this manual is derived from the document openmbus.doc, available at <http://www.modbus.org/default.htm>. The above mentioned document also includes implementation guidelines for users.

#### 8.2.1 Function Codes

MODBUS function codes 3, 4, 6, 8 and 16, defined in table 8.2.1a below, are supported and are fully described in [section 8.5](#), below.

Code	MODBUS definition	Description
03	Read holding registers	Reads the binary contents of holding registers. In this implementation, code 03 is identical with code 04.
04	Read input registers	Reads the binary contents of input registers. In this implementation, code 04 is identical with code 03.
06	Pre-set single register	Writes a single value to a single register.
08	Diagnostics	Obtains communications diagnostics information
16	Pre-set multiple Registers	Writes values to multiple holding registers

Table 8.2.1a MODBUS Function code definition

#### DIAGNOSTIC CODES

Function code 08, subfunction 00 (Return query data) echoes the query (Loop back).

## 8.2.1 FUNCTION CODES (Cont.)

### EXCEPTION CODES

MODBUS TCP provides reserved codes used for exceptions. These codes provide error information relating to failed requests. Exceptions are signalled by hex 80 being added to the function code of the request, followed by one of the codes listed in table 8.2.1b, below.

Code Dec   Hex		MODBUS definition	Description (see Modbus specification for full details)
01	01	Illegal Function	An invalid function code was received
02	02	Illegal Data Address	An invalid data address was received
03	03	Illegal Data Value	An invalid data value was received
04	04	Slave Device Failure	An unrecoverable error occurred in the recorder
09	09	Illegal Sub Function	An invalid sub function was received.
10	0A	Gateway path unavailable	Gateway misconfigured or overloaded.
11	0B	Gateway target device failed to respond	Device not present on the network

Table 8.2.1b Exception codes

## 8.2.2 Data types

The following data types are supported:

- 1 2's complement signed 16-bit analogue values with implied decimal point. The decimal point position must be configured in both the recorder and the host computer.
- 2 2's complement, 16, 32 and 64 bit signed integers.
- 3 16-bit unsigned integer values.
- 4 32 bit IEEE Floating point values.
- 5 Strings of limited size, can be transferred across Modbus TCP in ASCII format using a single non-multiplexed set of consecutive registers.

### DATA ENCODING

MODBUS uses what is called a 'Big endian' representation for addresses and data items. This means that when a numerical quantity larger than a single byte is transmitted, the most significant byte is sent first. For example a 32-bit hex value of 12345678 would be transmitted as 12, followed by 34, followed by 56 and finally 78.

## 8.2.3 Invalid multiple register writes

When a recorder receives a multi-register write request, it is possible that one or more requests will be rejected. Under such a circumstance, the recorder will accept all valid write requests and ignore any invalid writes. No error response is produced.

## 8.2.4 Security

The recorder has a local file in which are stored all users' login information, as set up in Security/Access configuration ([section 4.4](#)) it must then supply the correct Username and Password. Should a host fail to login after three attempts, the recorder will terminate the connection.

This MODBUS security function can be enabled/disabled in the Operator/Config/Instrument menu ([section 4.3.1](#)).

---

**Note:** Modbus Security must be disabled in order for Modbus communications to be established. Once the Master is communicating with the Slave, Modbus security can be re-enabled, providing that the master has the correct remote user name and password data for the relevant slave. If this information is missing, all read/write requests will be ignored by the slave.

---

**8.2.4 SECURITY (Cont.)**

The following C++ code is intended for use in creating a suitable 16-bit encrypted register using an IP address and password:

```

/*-----
    FUNCTION : MB_Driver::encrypt
    DESCRIPTION : Create an encrypted value from a password string
    ARGUMENTS : pswd : Pointer to password from network file
                eKey : Pointer to eKey, usually I.P. address (must be 4 bytes)
    RETURN : result : A 16 bit value representing the encryption result
    NOTES : None
-----*/
Ushort MB_Driver::encrypt(cchar *pswd, cchar *ipAddr)
{
    Uchar key1;
    Uchar key2;
    Ushort dataLen;
    Uchar  ibyte;
    Ushort byteResult = 0;
    Uchar *encryptedData = NULL;
    Uchar  eKeys[4];
    Ulong  ipAddress;
    /* Convert ip address to an unsigned long value so that we can manipulate
       each of the 4 bytes, to be used as our private keys */
    ipAddress = inet_addr(ipAddr);
    // Now split the bytes up by copying the IP address into a byte array
    memcpy(eKeys, &ipAddress, sizeof(Ulong));
    // From the 4 bytes of the IP address create two exclusive keys
    key1 = eKeys[0] ^ eKeys[3];
    key2 = eKeys[1] ^ eKeys[2];
    // Calculate the length of the string to be encrypted
    dataLen = strlen(pswd);
    // Create some memory to store the new encrypted password
    encryptedData = (Uchar*) malloc(sizeof(Uchar)*dataLen);
    /* Copy the unencrypted password into a byte array, so we can use the
       character code as each byte value */
    memcpy(encryptedData, pswd, dataLen);
    /* Perform EXOR comparison between keys and raw data.
       Perform the operation on each byte using alternate key values
       starting at byte 1 with key 1 */
    for(ibyte=0; ibyte < dataLen;)

```

(Continued)

**8.2.4 SECURITY (Cont.)**

```
{
  // EXOR with the key1
  encryptedData[ibyte++] ^= key1;
  // Compare the next byte with key2
  if(ibyte < dataLen)
  {
    encryptedData[ibyte++] ^= key2;
  }
}
/* Now EXOR each byte to the next byte until no more are available
   if all goes well the last byte in the array should never change */
for(ibyte=0; ibyte < (dataLen-1); ibyte++)
{
  encryptedData[ibyte] = (encryptedData[ibyte] ^ encryptedData[ibyte+1]);
}
// Now add all the bytes together to get a 16 bit value result
for(ibyte=0; ibyte < dataLen; ibyte++)
{
  byteResult += encryptedData[ibyte];
}
// Return the encrypted string as a 16 bit value
return(byteResult);
}
```

---

**Notes:**

1. If login is accepted, a standard response is sent to the master
  2. If three invalid logins are sent, by the master, then an 'illegal address' exception code (2) is sent to the master.
-

**8.2.4 SECURITY (Cont.)**

**TO SEND A LOGIN REQUEST**

Request

Figure 8.2.4a shows data transmission sequence for sending a login request to a recorder with Modbus address 1, using the Ethernet network connection. Figure 8.2.4b is the same message for use with serial communications

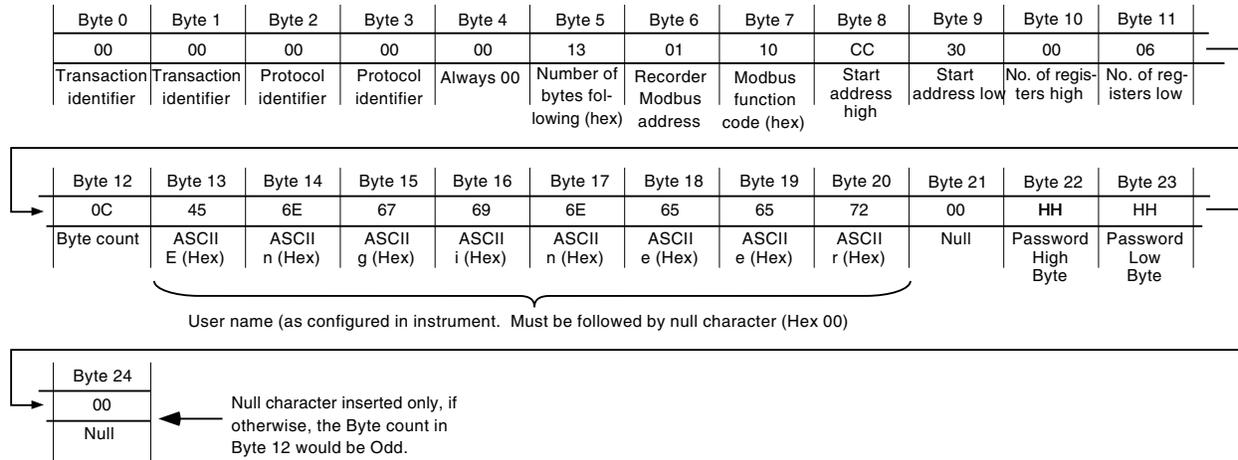


Figure 8.2.4a Login request via Ethernet (Modbus TCP)

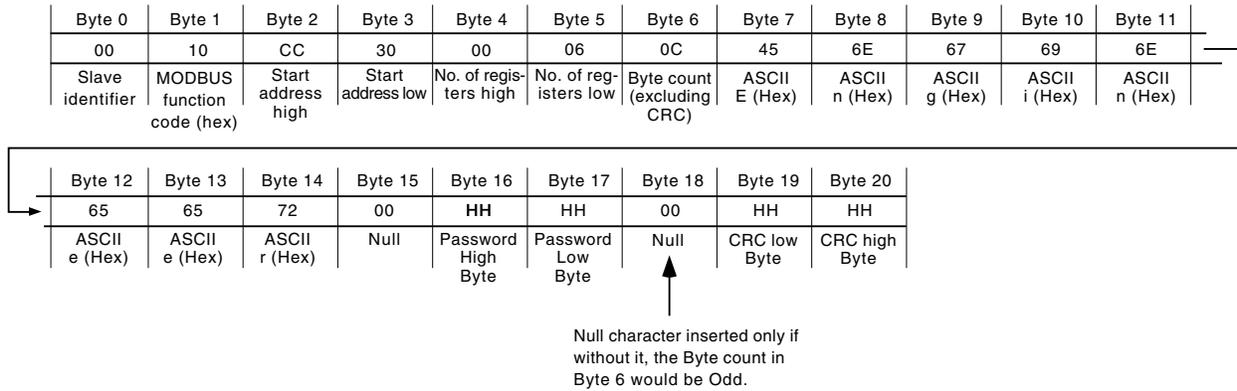


Figure 8.2.4b Login Request using a serial transmission line.

**Notes:**

- 1 The high and low password bytes are entered using the result of the encryption program above. If the password is blank, both High and Low Bytes must be 00 (null).
- 2 For successful login, the 'Connect from remote' item must be enabled (ref. 'Access levels in section 4.4.1).

**8.2.4 SECURITY (Cont.)****TO SEND A LOGIN REQUEST (Cont.)**

Response

Figures 8.2.4c and 8.2.4d show response messages for successful and non-successful login attempts.

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
00	00	00	00	00	06	01	10	CC	30	00	05
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following (hex)	Recorder Modbus address	Modbus function code (hex)	Start Address high	Start Address low	No. of registers high	No. of registers low

Figure 8.2.4c Response to a successful login attempt

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
00	00	00	00	00	04	01	90	02
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following (hex)	Recorder Modbus address	Modbus function code+ MSB set (hex)	Exception code

Figure 8.2.4d Response after an unsuccessful login attempt

---

**Note:** MSB = Most Significant Bit

---





### 8.3 ADDRESS MAP

Figure 8.3 shows the range of addresses allocated to various recorder functions. Each of these functions is described in detail in later sections.

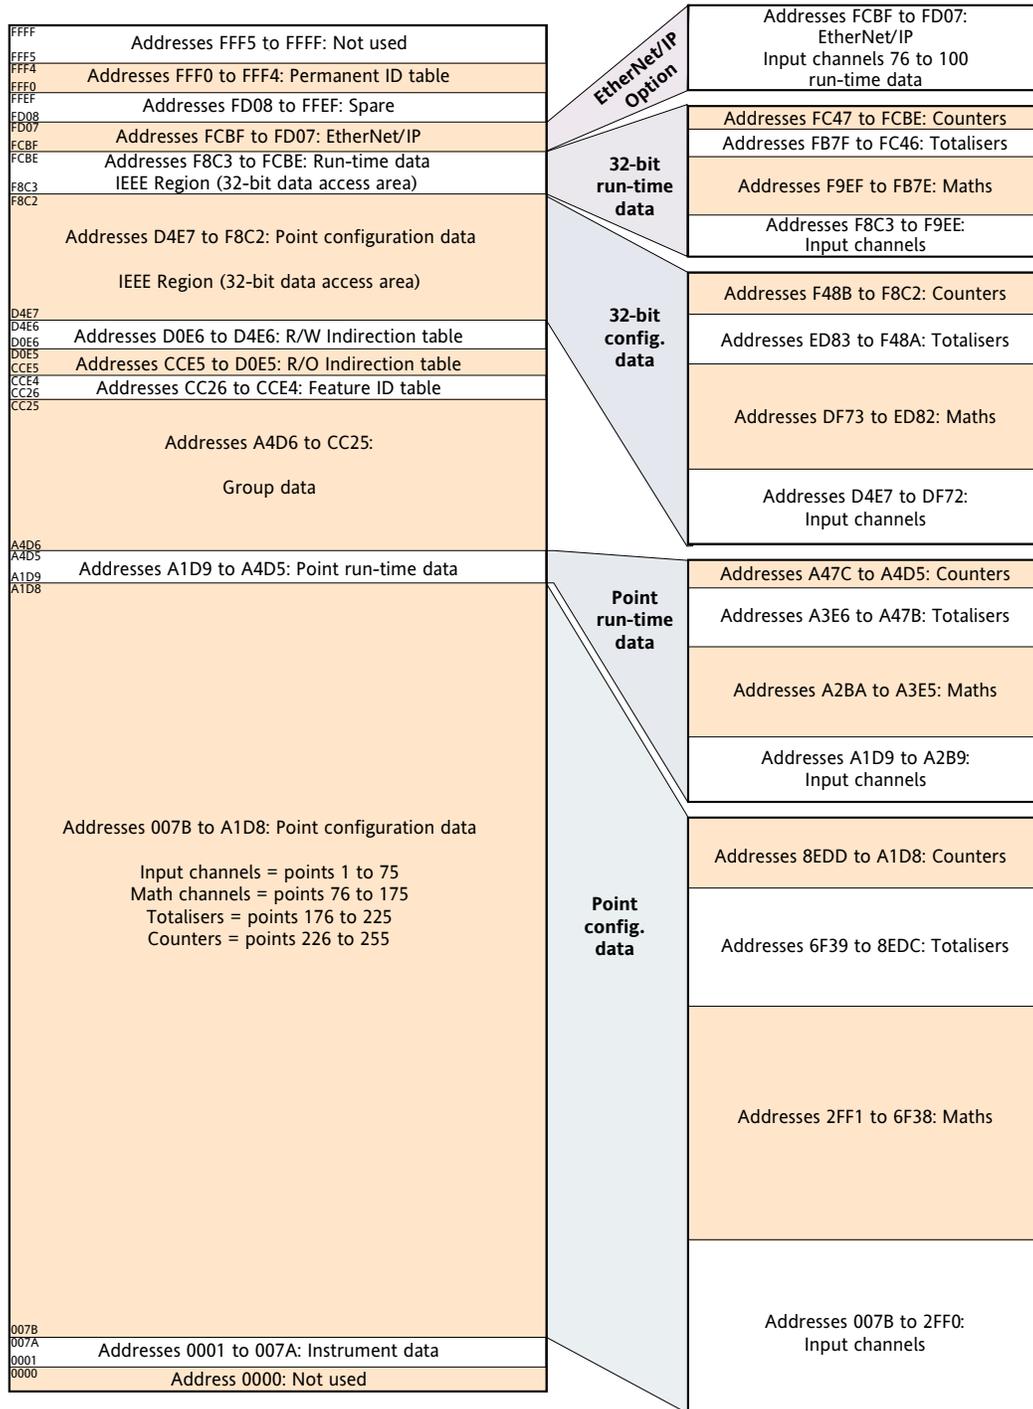


Figure 8.3 Address map representation

**Notes:**

- 1 All addresses in hexadecimal
- 2 Areas represent relative sizes, but are not to scale

**8.3 ADDRESS MAP (Cont.)**

The contents of each group can be determined by reading the relevant register number, as shown in [section 8.4.4](#), below. The table below is a decoder for the results.

For example, if a group has channels 1 to 6, maths channel 1 and totaliser three fitted, the results would be:

Register 1 = 63 (32 + 16 + 8 + 4 + 2 + 1) (channels 1 to 6)

Register 5 = 2048 (maths channel 1)

Register 12 = 2 (Totaliser 1)

All other register values = 0

		Value if bit set →															
		1	2	4	8	16	32	64	128	256	512	1024	2048	4096	8192	16384	32768
		Bit number →															
Register Number	1	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	2	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	3	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	4	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64
	5	65	66	67	68	69	70	71	72	73	74	75	M1	M2	M3	M4	M5
	6	M6	M7	M8	M9	M10	M11	M12	M13	M14	M15	M16	M17	M18	M19	M20	M21
	7	M22	M23	M24	M25	M26	M27	M28	M29	M30	M31	M32	M33	M34	M35	M36	M37
	8	M38	M39	M40	M41	M42	M43	M44	M45	M46	M47	M48	M49	M50	M51	M52	M53
	9	M54	M55	M56	M57	M58	M59	M60	M61	M62	M63	M64	M65	M66	M67	M68	M69
	10	M70	M71	M72	M73	M74	M75	M76	M77	M78	M79	M80	M81	M82	M83	M84	M85
	11	M86	M87	M88	M89	M90	M91	M92	M93	M94	M95	M96	M97	M98	M99	M100	T1
	12	T2	T3	T4	T5	T6	T7	T8	T9	T10	T11	T12	T13	T14	T15	T16	T17
	13	T18	T19	T20	T21	T22	T23	T24	T25	T26	T27	T28	T29	T30	T31	T32	T33
	14	T34	T35	T36	T37	T38	T39	T40	T41	T42	T43	T44	T45	T46	T47	T48	T49
	15	T50	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	C15
	16	C16	C17	C18	C19	C20	C21	C22	C23	C24	C25	C26	C27	C28	C29	C30	

Table 8.3 'Channels in group' interpretation



## 8.4.2 Channel configuration data

The following tables give hex addresses for channels 1 to 12, inclusive.

Generally: channel N parameter address = channel 1 parameter address + 162 (N-1) (decimal).

Note: A/B Switching:  
B values are not accessible via modbus for this software version. Span, Zone, Colour etc. are therefore all setting A

### CHANNEL 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch1 Span high	Upper span value (display full scale)	Scaled	Read only	007B (123)	1
Ch1 Span low	Lower span value (display 'zero')	Scaled	Read only	007C (124)	1
Ch1 Zone high	Zone high value (two decimal places)	Scaled	Read only	007D (125)	1
Ch1 Zone low	Zone low value (two decimal places)	Scaled	Read only	007E (126)	1
Ch1 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	007F (127)	1
Ch1 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	UInt16	Read only	0080 (128)	1
Ch1 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0081 (129)	1
Ch1 Units	Units string (up to five characters)	String_5	Read only	0082 (130)	3
Spare				0085 (133)	2
Ch1 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	0087 (135)	4
Spare				008B (139)	4
Ch1 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	008F (143)	4
Spare				0093 (147)	4
Ch1 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	0097 (151)	10
Spare				00A1 (161)	10
Ch1 No of alarms	Number of alarms on this channel	UInt16	Read only	00AB (171)	1
Ch1 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	00AC (172)	1
Spare				00AD (173)	60
Ch1 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                  3 = Trigger	Enum	Read only	00E9 (233)	1
Ch1 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	00EA (234)	1
Ch1 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	00EB (235)	1
Spare				00EC (236)	10
Ch1 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable above)	Enum	Read only	00F6 (246)	1
Ch1 Alarm 2 type	Alarm 2 type (As alarm 1 type above)	Enum	Read only	00F7 (247)	1
Ch1 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	00F8 (248)	1
Spare				00F9 (249)	10
Ch1 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	0103 (259)	1
Ch1 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	0104 (260)	1
Ch1 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0105 (261)	1
Spare				0106 (262)	10
Ch1 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	0110 (272)	1
Ch1 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	0111 (273)	1
Ch1 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0112 (274)	1
Spare				0113 (275)	10

#### Notes

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

## 8.4.2 CHANNEL CONFIGURATION DATA (Cont.)

## CHANNEL 2

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch2 Span high	Upper span value (display full scale)	Scaled	Read only	011D (285)	1
Ch2 Span low	Lower span value (display 'zero')	Scaled	Read only	011E (286)	1
Ch2 Zone high	Zone high value (two decimal places)	Scaled	Read only	011F (287)	1
Ch2 Zone low	Zone low value (two decimal places)	Scaled	Read only	0120 (288)	1
Ch2 PV type	Input type 1 = Analogue input      3 = Totaliser 2 = Maths                    4 = Counter	Enum	Read only	0121 (289)	1
Ch2 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	UInt16	Read only	0122 (290)	1
Ch2 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0123 (291)	1
Ch2 Units	Units string (up to five characters)	String_5	Read only	0124 (292)	3
Spare				0127 (295)	2
Ch2 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	0129 (297)	4
Spare				012D (301)	4
Ch2 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	0131 (305)	4
Spare				0135 (309)	4
Ch2 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	0139 (313)	10
Spare				0143 (323)	10
Ch2 No of alarms	Number of alarms on this channel (0 to 2)	UInt16	Read only	014D (333)	1
Ch2 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	014E (334)	1
Spare				014F (335)	60
Ch2 Alarm 1 enable	Alarm 1 enable 0 = Off                      2 = Latched 1 = Unlatched              3 = Trigger	Enum	Read only	018B (395)	1
Ch2 Alarm 1 type	Alarm 1 type 0 = Absolute low            1 = Absolute high 2 = Deviation in            3 = Deviation out 4 = Rate of change rise    5 = Rate of change fall	Enum	Read only	018C (396)	1
Ch2 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	018D (397)	1
Spare				018E (398)	10
Ch2 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	0198 (408)	1
Ch2 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	0199 (409)	1
Ch2 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	019A (410)	1
Spare				019B (411)	10
Ch2 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	01A5 (421)	1
Ch2 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	01A6 (422)	1
Ch2 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	01A7 (423)	1
Spare				01A8 (424)	10
Ch2 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	01B2 (434)	1
Ch2 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	01B3 (435)	1
Ch2 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	01B4 (436)	1
Spare				01B5 (437)	10

## Notes

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 3**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch3 Span high	Upper span value (display full scale)	Scaled	Read only	01BF (447)	1
Ch3 Span low	Lower span value (display 'zero')	Scaled	Read only	01C0 (448)	1
Ch3 Zone high	Zone high value (two decimal places)	Scaled	Read only	01C1 (449)	1
Ch3 Zone low	Zone low value (two decimal places)	Scaled	Read only	01C2 (450)	1
Ch3 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	01C3 (451)	1
Ch3 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	01C4 (452)	1
Ch3 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	01C5 (453)	1
Ch3 Units	Units string (up to five characters)	String_5	Read only	01C6 (454)	3
Spare				01C9 (457)	2
Ch3 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	01CB (459)	4
Spare				01CF (463)	4
Ch3 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	01D3 (467)	4
Spare				01D7 (471)	4
Ch3 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	01DB (475)	10
Spare				01E5 (485)	10
Ch3 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	01EF (495)	1
Ch3 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	01F0 (496)	1
Spare				01F1 (497)	60
Ch3 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	022D (557)	1
Ch3 Alarm 1 type	Alarm 1 type 0 = Absolute low               1 = Absolute high 2 = Deviation in               3 = Deviation out 4 = Rate of change rise      5 = Rate of change fall	Enum	Read only	022E (558)	1
Ch3 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	022F (559)	1
Spare				0230 (560)	10
Ch3 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	023A (570)	1
Ch3 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	023B (571)	1
Ch3 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	023C (572)	1
Spare				023D (573)	10
Ch3 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	0247 (583)	1
Ch3 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	0248 (584)	1
Ch3 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0249 (585)	1
Spare				024A (586)	10
Ch3 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	0254 (596)	1
Ch3 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	0255 (597)	1
Ch3 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0256 (598)	1
Spare				0257 (599)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 4**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch4 Span high	Upper span value (display full scale)	Scaled	Read only	0261 (609)	1
Ch4 Span low	Lower span value (display 'zero')	Scaled	Read only	0262 (610)	1
Ch4 Zone high	Zone high value (two decimal places)	Scaled	Read only	0263 (611)	1
Ch4 Zone low	Zone low value (two decimal places)	Scaled	Read only	0264 (612)	1
Ch4 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	0265 (613)	1
Ch4 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	0266 (614)	1
Ch4 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0267 (615)	1
Ch4 Units	Units string (up to five characters)	String_5	Read only	0268 (616)	3
Spare				026B (619)	2
Ch4 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	026D (621)	4
Spare				0271 (625)	4
Ch4 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	0275 (629)	4
Spare				0279 (633)	4
Ch4 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	027D (637)	10
Spare				0287 (647)	10
Ch4 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	0291 (657)	1
Ch4 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	0292 (658)	1
Spare				0293 (659)	60
Ch4 Alarm 1 enable	Alarm 1 enable            Enum 0 = Off                        2 = Latched 1 = Unlatched               3 = Trigger	Enum	Read only	02CF (719)	1
Ch4 Alarm 1 type	Alarm 1 type 0 = Absolute low            1 = Absolute high 2 = Deviation in            3 = Deviation out 4 = Rate of change rise    5 = Rate of change fall	Enum	Read only	02D0 (720)	1
Ch4 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	02D1 (721)	1
Spare				02D2 (722)	10
Ch4 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	02DC (732)	1
Ch4 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	02DD (733)	1
Ch4 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	02DE (734)	1
Spare				02DF (735)	10
Ch4 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	02E9 (745)	1
Ch4 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	02EA (746)	1
Ch4 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	02EB (747)	1
Spare				02EC (748)	10
Ch4 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	02F6 (758)	1
Ch4 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	02F7 (759)	1
Ch4 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	02F8 (760)	1
Spare				02F9 (761)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 5**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch5 Span high	Upper span value (display full scale)	Scaled	Read only	0303 (771)	1
Ch5 Span low	Lower span value (display 'zero')	Scaled	Read only	0304 (772)	1
Ch5 Zone high	Zone high value (two decimal places)	Scaled	Read only	0305 (773)	1
Ch5 Zone low	Zone low value (two decimal places)	Scaled	Read only	0306 (774)	1
Ch5 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	0307 (775)	1
Ch5 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	0308 (776)	1
Ch5 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0309 (777)	1
Ch5 Units	Units string (up to five characters)	String_5	Read only	030A (778)	3
Spare				030D (781)	2
Ch5 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	030F (783)	4
Spare				0313 (787)	4
Ch5 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	0317 (791)	4
Spare				031B (795)	4
Ch5 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	031F (799)	10
Spare				0329 (809)	10
Ch5 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	0333 (819)	1
Ch5 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	0334 (820)	1
Spare				0335 (821)	60
Ch5 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                  3 = Trigger	Enum	Read only	0371 (881)	1
Ch5 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	0372 (882)	1
Ch5 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0373 (883)	1
Spare				0374 (884)	10
Ch5 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	037E (894)	1
Ch5 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	037F (895)	1
Ch5 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0380 (896)	1
Spare				0381 (897)	10
Ch5 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	02E9 (907)	1
Ch5 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	02EA (908)	1
Ch5 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	02EB (909)	1
Spare				02EC (910)	10
Ch5 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	02F6 (920)	1
Ch5 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	02F7 (921)	1
Ch5 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	02F8 (922)	1
Spare				02F9 (923)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 6**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch6 Span high	Upper span value (display full scale)	Scaled	Read only	03A5 (933)	1
Ch6 Span low	Lower span value (display 'zero')	Scaled	Read only	03A6 (934)	1
Ch6 Zone high	Zone high value (two decimal places)	Scaled	Read only	03A7 (935)	1
Ch6 Zone low	Zone low value (two decimal places)	Scaled	Read only	03A8 (936)	1
Ch6 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	03A9 (937)	1
Ch6 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	03AA (938)	1
Ch6 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	03AB (939)	1
Ch6 Units	Units string (up to five characters)	String_5	Read only	03AC (940)	3
Spare				03AF (943)	2
Ch6 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	03B1 (945)	4
Spare				03B5 (949)	4
Ch6 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	03B9 (953)	4
Spare				03BD (957)	4
Ch6 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	03C1 (961)	10
Spare				03CB (971)	10
Ch6 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	03D5 (981)	1
Ch6 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	03D6 (982)	1
Spare				03D7 (983)	60
Ch6 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	0413 (1043)	1
Ch6 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	0414 (1044)	1
Ch6 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0415 (1045)	1
Spare				0416 (1046)	10
Ch6 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	0420 (1056)	1
Ch6 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	0421 (1057)	1
Ch6 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0422 (1058)	1
Spare				0423 (1059)	10
Ch6 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	042D (1069)	1
Ch6 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	042E (1070)	1
Ch6 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	042F (1071)	1
Spare				0430 (1072)	10
Ch6 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	043A (1082)	1
Ch6 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	043B (1083)	1
Ch6 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	043C (1084)	1
Spare				043D (1085)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 7**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch7 Span high	Upper span value (display full scale)	Scaled	Read only	0447 (1095)	1
Ch7 Span low	Lower span value (display 'zero')	Scaled	Read only	0448 (1096)	1
Ch7 Zone high	Zone high value (two decimal places)	Scaled	Read only	0449 (1097)	1
Ch7 Zone low	Zone low value (two decimal places)	Scaled	Read only	044A (1098)	1
Ch7 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	044B (1099)	1
Ch7 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	044C (1100)	1
Ch7 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	044D (1101)	1
Ch7 Units	Units string (up to five characters)	String_5	Read only	044E (1102)	3
Spare				0451 (1105)	2
Ch7 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	0453 (1107)	4
Spare				0457 (1111)	4
Ch7 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	045B (1115)	4
Spare				045F (1119)	4
Ch7 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	0463 (1123)	10
Spare				046D (1133)	10
Ch7 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	0477 (1143)	1
Ch7 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	0478 (1144)	1
Spare				0479 (1145)	60
Ch7 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	04B5 (1205)	1
Ch7 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	04B6 (1206)	1
Ch7 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	04B7 (1207)	1
Spare				04B8 (1208)	10
Ch7 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	04C2 (1218)	1
Ch7 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	04C3 (1219)	1
Ch7 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	04C4 (1220)	1
Spare				04C5 (1221)	10
Ch7 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	04CF (1231)	1
Ch7 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	04D0 (1232)	1
Ch7 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	04D1 (1233)	1
Spare				04D2 (1234)	10
Ch7 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	04DC (1244)	1
Ch7 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	04DD (1245)	1
Ch7 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	04DE (1246)	1
Spare				04DF (1247)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 8**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch8 Span high	Upper span value (display full scale)	Scaled	Read only	04E9 (1257)	1
Ch8 Span low	Lower span value (display 'zero')	Scaled	Read only	04EA (1258)	1
Ch8 Zone high	Zone high value (two decimal places)	Scaled	Read only	04EB (1259)	1
Ch8 Zone low	Zone low value (two decimal places)	Scaled	Read only	04EC (1260)	1
Ch8 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	04ED (1261)	1
Ch8 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	04EE (1262)	1
Ch8 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	04EF (1263)	1
Ch8 Units	Units string (up to five characters)	String_5	Read only	04F0 (1264)	3
Spare				04F3 (1267)	2
Ch8 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	04F5 (1269)	4
Spare				04F9 (1273)	4
Ch8 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	04FD (1277)	4
Spare				0501 (1281)	4
Ch8 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	0505 (1285)	10
Spare				050F (1295)	10
Ch8 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	0519 (1305)	1
Ch8 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	051A (1306)	1
Spare				051B (1307)	60
Ch8 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	0557 (1367)	1
Ch8 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	0558 (1368)	1
Ch8 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0559 (1369)	1
Spare				055A (1370)	10
Ch8 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	0564 (1380)	1
Ch8 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	0565 (1381)	1
Ch8 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0566 (1382)	1
Spare				0567 (1383)	10
Ch8 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	0571(1393)	1
Ch8 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	0572 (1394)	1
Ch8 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0573 (1395)	1
Spare				0574 (1396)	10
Ch8 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	057E (1406)	1
Ch8 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	057F (1407)	1
Ch8 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0580 (1408)	1
Spare				0581 (1409)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

## 8.4.2 CHANNEL CONFIGURATION DATA (Cont.)

## CHANNEL 9

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch9 Span high	Upper span value (display full scale)	Scaled	Read only	058B (1419)	1
Ch9 Span low	Lower span value (display 'zero')	Scaled	Read only	058C (1420)	1
Ch9 Zone high	Zone high value (two decimal places)	Scaled	Read only	058D (1421)	1
Ch9 Zone low	Zone low value (two decimal places)	Scaled	Read only	058E (1422)	1
Ch9 PV type	Input type 1 = Analogue input      3 = Totaliser 2 = Maths                    4 = Counter	Enum	Read only	058F (1423)	1
Ch9 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	UInt16	Read only	0590 (1424)	1
Ch9 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0591 (1425)	1
Ch9 Units	Units string (up to five characters)	String_5	Read only	0592 (1426)	3
Spare				0595 (1429)	2
Ch9 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	0597 (1431)	4
Spare				059B (1435)	4
Ch9 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	059F (1439)	4
Spare				05A3 (1443)	4
Ch9 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	05A7 (1447)	10
Spare				05B1 (1457)	10
Ch9 No of alarms	Number of alarms on this channel (0 to 2)	UInt16	Read only	05BB (1467)	1
Ch9 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	05BC (1468)	1
Spare				05BD (1469)	60
Ch9 Alarm 1 enable	Alarm 1 enable 0 = Off                      2 = Latched 1 = Unlatched              3 = Trigger	Enum	Read only	05F9 (1529)	1
Ch9 Alarm 1 type	Alarm 1 type 0 = Absolute low            1 = Absolute high 2 = Deviation in            3 = Deviation out 4 = Rate of change rise    5 = Rate of change fall	Enum	Read only	05FA (1530)	1
Ch9 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	05FB (1531)	1
Spare				05FC (1532)	10
Ch9 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	0606 (1542)	1
Ch9 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	0607 (1543)	1
Ch9 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0608 (1544)	1
Spare				0609 (1545)	10
Ch9 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	0613(1555)	1
Ch9 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	0614 (1556)	1
Ch9 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0615 (1557)	1
Spare				0616 (1558)	10
Ch9 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	0620 (1568)	1
Ch9 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	0621 (1569)	1
Ch9 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0622 (1570)	1
Spare				0623 (1571)	10

## Notes

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 10**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch10 Span high	Upper span value (display full scale)	Scaled	Read only	062D (1581)	1
Ch10 Span low	Lower span value (display 'zero')	Scaled	Read only	062E (1582)	1
Ch10 Zone high	Zone high value (two decimal places)	Scaled	Read only	062F (1583)	1
Ch10 Zone low	Zone low value (two decimal places)	Scaled	Read only	0630 (1584)	1
Ch10 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	0631 (1585)	1
Ch10 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	0632 (1586)	1
Ch10 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0633 (1587)	1
Ch10 Units	Units string (up to five characters)	String_5	Read only	0634 (1588)	3
Spare				0637 (1591)	2
Ch10 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	0639 (1593)	4
Spare				063D (1597)	4
Ch10 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	0641 (1601)	4
Spare				0645 (1605)	4
Ch10 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	0649 (1609)	10
Spare				0653 (1619)	10
Ch10 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	065D (1629)	1
Ch10 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	065E (1630)	1
Spare				065F (1631)	60
Ch10 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	069B (1691)	1
Ch10 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	069C (1692)	1
Ch10 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	069D (1693)	1
Spare				069E (1694)	10
Ch10 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	06A8 (1704)	1
Ch10 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	06A9 (1705)	1
Ch10 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	06AA (1706)	1
Spare				06AB (1707)	10
Ch10 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	06B5(1717)	1
Ch10 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	06B6(1718)	1
Ch10 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	06B7 (1719)	1
Spare				06B8 (1720)	10
Ch10 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	06C2 (1730)	1
Ch10 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	06C3 (1731)	1
Ch10 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	06C4 (1732)	1
Spare				06C5 (1733)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 11**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch11 Span high	Upper span value (display full scale)	Scaled	Read only	06CF (1743)	1
Ch11 Span low	Lower span value (display 'zero')	Scaled	Read only	06D0 (1744)	1
Ch11 Zone high	Zone high value (two decimal places)	Scaled	Read only	06D1 (1745)	1
Ch11 Zone low	Zone low value (two decimal places)	Scaled	Read only	06D2 (1746)	1
Ch11 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	06D3 (1747)	1
Ch11 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	06D4 (1748)	1
Ch11 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	06D5 (1749)	1
Ch11 Units	Units string (up to five characters)	String_5	Read only	06D6 (1750)	3
Spare				06D9 (1753)	2
Ch11 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	06DB (1755)	4
Spare				06DF (1759)	4
Ch11 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	06E3 (1763)	4
Spare				06E7 (1767)	4
Ch11 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	06EB (1771)	10
Spare				06F5 (1781)	10
Ch11 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	06FF (1791)	1
Ch11 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	0700 (1792)	1
Spare				0701 (1793)	60
Ch11 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	073D (1853)	1
Ch11 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	073E (1854)	1
Ch11 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	073F (1855)	1
Spare				0740 (1856)	10
Ch11 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	074A (1866)	1
Ch11 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	074B (1867)	1
Ch11 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	074C (1868)	1
Spare				074D (1869)	10
Ch11 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	0757(1879)	1
Ch11 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	0758 (1880)	1
Ch11 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0759 (1881)	1
Spare				075A (1882)	10
Ch11 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	0764 (1892)	1
Ch11 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	0765 (1893)	1
Ch11 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0766 (1894)	1
Spare				0767 (1895)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.2 CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 12**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch12 Span high	Upper span value (display full scale)	Scaled	Read only	0771 (1905)	1
Ch12 Span low	Lower span value (display 'zero')	Scaled	Read only	0772 (1906)	1
Ch12 Zone high	Zone high value (two decimal places)	Scaled	Read only	0773 (1907)	1
Ch12 Zone low	Zone low value (two decimal places)	Scaled	Read only	0774 (1908)	1
Ch12 PV type	Input type 1 = Analogue input            3 = Totaliser 2 = Maths                        4 = Counter	Enum	Read only	0775 (1909)	1
Ch12 Decimal places	Number of decimal places (0 to 9) (used by all scaled parameters except where stated)	Uint16	Read only	0776 (1910)	1
Ch12 Colour	Channel colour (0 to 55) (See <a href="#">Annex B</a> for definitions)	Enum	Read only	0777 (1911)	1
Ch12 Units	Units string (up to five characters)	String_5	Read only	0778 (1912)	3
Spare				077B (1915)	2
Ch12 Open string	Open Digital Input string (up to eight characters)	String_8	Read only	077D (1917)	4
Spare				0781 (1921)	4
Ch12 Close string	Closed Digital Input string (up to eight characters)	String_8	Read only	0785 (1925)	4
Spare				0789 (1929)	4
Ch12 Descriptor	Channel descriptor (up to 20 characters)	String_20	Read only	078D (1933)	10
Spare				0797 (1943)	10
Ch12 No of alarms	Number of alarms on this channel (0 to 2)	Uint16	Read only	07A1 (1953)	1
Ch12 PV format	0 = Numeric 1 = Digital strings	Enum	Read only	07A2 (1954)	1
Spare				07A3 (1955)	60
Ch12 Alarm 1 enable	Alarm 1 enable 0 = Off                            2 = Latched 1 = Unlatched                 3 = Trigger	Enum	Read only	07DF (2015)	1
Ch12 Alarm 1 type	Alarm 1 type 0 = Absolute low                1 = Absolute high 2 = Deviation in                3 = Deviation out 4 = Rate of change rise       5 = Rate of change fall	Enum	Read only	07E0 (2016)	1
Ch12 Alarm 1 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	07E1 (2017)	1
Spare				07E2 (2018)	10
Ch12 Alarm 2 enable	Alarm 2 enable (As alarm 1 enable, above)	Enum	Read only	07EC (2028)	1
Ch12 Alarm 2 type	Alarm 2 type (As alarm 1 type, above)	Enum	Read only	07ED (2029)	1
Ch12 Alarm 2 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	07EE (2030)	1
Spare				07EF (2031)	10
Ch12 Alarm 3 enable	Alarm 3 enable (As alarm 1 enable above)	Enum	Read only	07F9 (2041)	1
Ch12 Alarm 3 type	Alarm 3 type (As alarm 1 type above)	Enum	Read only	07FA (2042)	1
Ch12 Alarm 3 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	07FB (2043)	1
Spare				07FC (2044)	10
Ch12 Alarm 4 enable	Alarm 4 enable (As alarm 1 enable above)	Enum	Read only	0806 (2054)	1
Ch12 Alarm 4 type	Alarm 4 type (As alarm 1 type above)	Enum	Read only	0807 (2055)	1
Ch12 Alarm 4 setpoint	Trigger setpoint (Note 2)	Scaled	Read/Write	0808 (2056)	1
Spare				0809 (2057)	10

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source ([section 4.3.3](#)) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

### 8.4.3 Channel Run-Time data

These tables show addresses for channel input values for channels 1 to 12 inclusive.

Generally: channel N address = channel 1 address + 3(N-1) (decimal). For channels 75 to 100 (EtherNet/IP option only), see [table 4.3.21](#).

#### CHANNEL 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch1 value	Current process value (PV)	Scaled	See note	A1D9 (41433)	1
Ch1 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	A1DA (41434)	1
Ch1 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1DB (41435)	1

#### CHANNEL 2

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch2 value	Current process value (PV)	Scaled	See note	A1DC (41436)	1
Ch2 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	A1DD (41437)	1
Ch2 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1DE (41438)	1

**Note:** PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.3 CHANNEL RUN TIME DATA (Cont.)****CHANNEL 3**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch3 value	Current process value (PV)	Scaled	See note	A1DF (41439)	1
Ch3 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	A1E0 (41440)	1
Ch3 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1E1 (41441)	1

**CHANNEL 4**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch4 value	Current process value (PV)	Scaled	See note	A1E2 (41442)	1
Ch4 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	A1E3 (41443)	1
Ch4 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1E4 (41444)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.3 CHANNEL RUN TIME DATA (Cont.)****CHANNEL 5**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch5 value	Current process value (PV)	Scaled	See note	A1E5 (41445)	1
Ch5 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	A1E6 (41446)	1
Ch5 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1E7 (41447)	1

**CHANNEL 6**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch6 value	Current process value (PV)	Scaled	See note	A1E8 (41448)	1
Ch6 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	A1E9 (41449)	1
Ch6 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1EA (41450)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.3 CHANNEL RUN TIME DATA (Cont.)****CHANNEL 7**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch7 value	Current process value (PV)	Scaled	See note	A1EB (41451)	1
Ch7 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	A1EC (41452)	1
Ch7 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1ED (41453)	1

**CHANNEL 8**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch8 value	Current process value (PV)	Scaled	See note	A1EE (41454)	1
Ch8 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	A1EF (41455)	1
Ch8 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1F0 (41456)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.3 CHANNEL RUN TIME DATA (Cont.)****CHANNEL 9**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch9 value	Current process value (PV)	Scaled	See note	A1F1 (41457)	1
Ch9 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	A1F2 (41458)	1
Ch9 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1F3 (41459)	1

**CHANNEL 10**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch10 value	Current process value (PV)	Scaled	See note	A1F4 (41460)	1
Ch10 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	A1F5 (41461)	1
Ch10 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	A1F6 (41462)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.3 CHANNEL RUN TIME DATA (Cont.)****CHANNEL 11**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch11 value	Current process value (PV)	Scaled	See note	A1F7 (41463)	1
Ch11 status	Channel status	Enum	Read only	A1F8 (41464)	1
	0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error				
Ch11 Alarms	Alarm information	Uint16	-	A1F9 (41465)	1
	Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare		Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write		

**CHANNEL 12**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch12 value	Current process value (PV)	Scaled	See note	A1FA (41466)	1
Ch12 status	Channel status	Enum	Read only	A1FB (41467)	1
	0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error				
Ch12 Alarms	Alarm information	Uint16	-	A1FC (41468)	1
	Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare		Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write		

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

### 8.4.4 Group data

Generally: Parameter address for group N = Parameter address for group 1 + 629(N-1) (decimal)

#### GROUP 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Grp1 Trend type	Trend enhancements 0 = Interpolation enabled 1 = Adaptive recording enabled	Enum	Read only	A4D6 (42198)	1
Grp1 Trend rate	Trend update rate in milliseconds	Uint32	Read only	A4D7 (42199)	2
Grp1 Archive rate	Archive (to flash) rate in milliseconds	Uint 32	Read only	A4D9 (42201)	2
Grp1 Descriptor	Group descriptor (20 characters max.)	String_20	Read only	A4DB (42203)	10
Spare				A4E5 (42213)	10
Grp1 Channels in group	16 Registers holding the group contents, as follows: Register 1 Bit 0: 0 = Point 1 not in group; 1 = Point 1 is in group Bit 1: 0 = Point 2 not in group; 1 = Point 2 is in group Bit 2: 0 = Point 3 not in group; 1 = Point 3 is in group Etc. Bit 15: 0 = Point 16 not in group; 1 = Point 16 is in group	Uint16	Read only	A4EF (42223)	1 (16)
See <a href="#">table 8.3</a> for point types	Register 2 - as register 1, but for points 17 to 32	Uint16	Read only	A4F0 (42224)	1
	Register 3 - as register 1, but for points 33 to 48	Uint16	Read only	A4F1 (42225)	1
	Register 4 - as register 1, but for points 49 to 64	Uint16	Read only	A4F2 (42226)	1
	Register 5 - as register 1, but for points 65 to 80	Uint16	Read only	A4F3 (42227)	1
	Register 6 - as register 1, but for points 81 to 96	Uint16	Read only	A4F4 (42228)	1
	Register 7 - as register 1, but for points 97 to 112	Uint16	Read only	A4F5 (42229)	1
	Register 8 - as register 1, but for points 113 to 128	Uint16	Read only	A4F6 (42230)	1
	Register 9 - as register 1, but for points 129 to 144	Uint16	Read only	A4F7 (42231)	1
	Register 10 - as register 1, but for points 145 to 160	Uint16	Read only	A4F8 (42232)	1
	Register 11 - as register 1, but for points 161 to 176	Uint16	Read only	A4F9 (42233)	1
	Register 12 - as register 1, but for points 177 to 192	Uint16	Read only	A4FA (42234)	1
	Register 13 - as register 1, but for points 193 to 208	Uint16	Read only	A4FB (42235)	1
	Register 14 - as register 1, but for points 209 to 224	Uint16	Read only	A4FC (42236)	1
	Register 15 - as register 1, but for points 225 to 240	Uint16	Read only	A4FD (42237)	1
	Register 16 - as register 1, but for points 241 to 256	Uint16	Read only	A4FE (42238)	1
	Grp1 Text length	Identifies the length of a text message to be read	Uint16	Read/Write	A4FF (42239)
Grp1 Text time stamp	Time stamp of the text message to be read (UTC format)	Double	Read only	A500 (42240)	4
Grp1 Read text	Read text string from instrument display	String_60	Read only	A504 (42244)	30
Reserved				A522 (42274)	30
Grp1 Write text	Write a text string to instrument display	String_60	Write only	A540 (42304)	30
Reserved				A55E (42334)	30
Grp1 Batch start	Boolean Flag. Value 0001 starts new batch	Boolean	Write only	A57C (42364)	1
Grp1 Batch stop	Boolean Flag. Value 0001 stops current batch	Boolean	Write only	A57D (42365)	1
Grp1 Batch running	Batch status flag: 1 = Running; 0 = Not running	Boolean	Read only	A57E (42366)	1
Grp1 Text field 1	Batch field 1 text string (max. 60 characters)	String_60	Read/Write	A57F (42367)	30
Reserved				A59D (42397)	30
Grp1 Text field 2	Batch field 2 text string (max. 60 characters)	String_60	Read/Write	A5BB (42427)	30
Reserved				A5D9 (42457)	30
Grp1 Text field 3	Batch field 3 text string (max. 60 characters)	String_60	Read/Write	A5F7 (42487)	30
Reserved				A615 (42517)	30
Grp1 Text field 4	Batch field 4 text string (max. 60 characters)	String_60	Read/Write	A633 (42547)	30
Reserved				A651 (42577)	30
Grp1 Text field 5	Batch field 5 text string (max. 60 characters)	String_60	Read/Write	A66F (42607)	30
Reserved				A68D (42637)	30
Grp1 Text field 6	Batch field 6 text string (max. 60 characters)	String_60	Read/Write	A6AB (42667)	30
Reserved				A6C9 (42697)	30
Spare				A6E7 (42727)	100

## 8.4.4 GROUP DATA (Cont.)

## GROUP 2

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Grp2 Trend type	Trend enhancements 0 = Interpolation enabled 1 = Adaptive recording enabled	Enum	Read only	A74B (42827)	1
Grp2 Trend rate	Trend update rate in milliseconds	UInt32	Read only	A74C (42828)	2
Grp2 Archive rate	Archive (to flash) rate in milliseconds	UInt 32	Read only	A74E (42830)	2
Grp2 Descriptor	Group descriptor (20 characters max.)	String_20	Read only	A750 (42832)	10
Spare				A75A (42842)	10
Grp2 Channels in group	16 Registers holding the group contents, as follows: Register 1 Bit 0: 0 = Point 1 not in group; 1 = Point 1 is in group Bit 1: 0 = Point 2 not in group; 1 = Point 2 is in group Bit 2: 0 = Point 3 not in group; 1 = Point 3 is in group Etc. Bit 15: 0 = Point 16 not in group; 1 = Point 16 is in group	UInt16	Read only	A764 (42852)	(16) 1
See <a href="#">table 8.3</a> for point types	Register 2 - as register 1, but for points 17 to 32	UInt16	Read only	A765 (42853)	1
	Register 3 - as register 1, but for points 33 to 48	UInt16	Read only	A766 (42854)	1
	Register 4 - as register 1, but for points 49 to 64	UInt16	Read only	A767 (42855)	1
	Register 5 - as register 1, but for points 65 to 80	UInt16	Read only	A768 (42856)	1
	Register 6 - as register 1, but for points 81 to 96	UInt16	Read only	A769 (42857)	1
	Register 7 - as register 1, but for points 97 to 112	UInt16	Read only	A76A(42858)	1
	Register 8 - as register 1, but for points 113 to 128	UInt16	Read only	A76B (42859)	1
	Register 9 - as register 1, but for points 129 to 144	UInt16	Read only	A76C (42860)	1
	Register 10 - as register 1, but for points 145 to 160	UInt16	Read only	A76D (42861)	1
	Register 11 - as register 1, but for points 161 to 176	UInt16	Read only	A76E (42862)	1
	Register 12 - as register 1, but for points 177 to 192	UInt16	Read only	A76F (42863)	1
	Register 13 - as register 1, but for points 193 to 208	UInt16	Read only	A770 (42864)	1
	Register 14 - as register 1, but for points 209 to 224	UInt16	Read only	A771 (42865)	1
	Register 15 - as register 1, but for points 225 to 240	UInt16	Read only	A772 (42866)	1
	Register 16 - as register 1, but for points 241 to 256	UInt16	Read only	A773 (42867)	1
	Grp2 Text length	Identifies the length of a text message to be read	UInt16	Read/Write	A774 (42868)
Grp2 Text time stamp	Time stamp of the text message to be read (UTC format)	Double	Read only	A775 (42869)	4
Grp2 Read text	Read text string from instrument display	String_60	Read only	A779 (42873)	30
Reserved				A797 (42903)	30
Grp2 Write text	Write a text string to instrument display	String_60	Write only	A7B5 (42933)	30
Reserved				A7D3 (42963)	30
Grp2 Batch start	Boolean Flag. Value 0001 starts new batch	Boolean	Write only	A7F1 (42993)	1
Grp2 Batch stop	Boolean Flag. Value 0001 stops current batch	Boolean	Write only	A7F2 (42994)	1
Grp2 Batch running	Batch status flag: 1 = Running; 0 = Not running	Boolean	Read only	A7F3 (42995)	1
Grp2 Text field 1	Batch field 1 text string (max. 60 characters)	String_60	Read/Write	A7F4 (42996)	30
Reserved				A812 (43026)	30
Grp2 Text field 2	Batch field 2 text string (max. 60 characters)	String_60	Read/Write	A830 (43056)	30
Reserved				A84E (43086)	30
Grp2 Text field 3	Batch field 3 text string (max. 60 characters)	String_60	Read/Write	A86C (43116)	30
Reserved				A88A (43146)	30
Grp2 Text field 4	Batch field 4 text string (max. 60 characters)	String_60	Read/Write	A8A8 (43176)	30
Reserved				A8C6 (43206)	30
Grp2 Text field 5	Batch field 5 text string (max. 60 characters)	String_60	Read/Write	A8E4 (43236)	30
Reserved				A902 (43266)	30
Grp2 Text field 6	Batch field 6 text string (max. 60 characters)	String_60	Read/Write	A920 (43296)	30
Reserved				A93E (43326)	30
Spare				A95C (43356)	100

## 8.4.4 GROUP DATA (Cont.)

## GROUP 3

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Grp3 Trend type	Trend enhancements 0 = Interpolation enabled 1 = Adaptive recording enabled	Enum	Read only	A9C0 (43456)	1
Grp3 Trend rate	Trend update rate in milliseconds	UInt32	Read only	A9C1 (43457)	2
Grp3 Archive rate	Archive (to flash) rate in milliseconds	UInt 32	Read only	A9C3 (43459)	2
Grp3 Descriptor	Group descriptor (20 characters max.)	String_20	Read only	A9C5 (43461)	10
Spare				A9CF (43471)	10
Grp3 Channels in group	16 Registers holding the group contents, as follows: Register 1 Bit 0: 0 = Point 1 not in group; 1 = Point 1 is in group Bit 1: 0 = Point 2 not in group; 1 = Point 2 is in group Bit 2: 0 = Point 3 not in group; 1 = Point 3 is in group Etc. Bit 15: 0 = Point 16 not in group; 1 = Point 16 is in group	UInt16	Read only	A9D9 (43481)	(16) 1
See <a href="#">table 8.3</a> for point types	Register 2 - as register 1, but for points 17 to 32	UInt16	Read only	A9DA (42482)	1
	Register 3 - as register 1, but for points 33 to 48	UInt16	Read only	A9DB (42483)	1
	Register 4 - as register 1, but for points 49 to 64	UInt16	Read only	A9DC (42484)	1
	Register 5 - as register 1, but for points 65 to 80	UInt16	Read only	A9DD (42485)	1
	Register 6 - as register 1, but for points 81 to 96	UInt16	Read only	A9DE (42486)	1
	Register 7 - as register 1, but for points 97 to 112	UInt16	Read only	A9DF (42487)	1
	Register 8 - as register 1, but for points 113 to 128	UInt16	Read only	A9E0 (42488)	1
	Register 9 - as register 1, but for points 129 to 144	UInt16	Read only	A9E1 (42489)	1
	Register 10 - as register 1, but for points 145 to 160	UInt16	Read only	A9E2 (42490)	1
	Register 11 - as register 1, but for points 161 to 176	UInt16	Read only	A9E3 (42491)	1
	Register 12 - as register 1, but for points 177 to 192	UInt16	Read only	A9E4 (42492)	1
	Register 13 - as register 1, but for points 193 to 208	UInt16	Read only	A9E5 (42493)	1
	Register 14 - as register 1, but for points 209 to 224	UInt16	Read only	A9E6 (42494)	1
	Register 15 - as register 1, but for points 225 to 240	UInt16	Read only	A9E7 (42495)	1
	Register 16 - as register 1, but for points 241 to 256	UInt16	Read only	A9E8 (43496)	1
	Grp3 Text length	Identifies the length of a text message to be read	UInt16	Read/Write	A9E9 (43497)
Grp3 Text time stamp	Time stamp of the text message to be read (UTC format)	Double	Read only	A9EA (43498)	4
Grp3 Read text	Read text string from instrument display	String_60	Read only	A9EE (43502)	30
Reserved				AA0C (43532)	30
Grp3 Write text	Write a text string to instrument display	String_120	Write only	AA2A (43562)	60
Reserved				AA48 (43592)	30
Grp3 Batch start	Boolean Flag. Value 0001 starts new batch	Boolean	Write only	AA66 (43622)	1
Grp3 Batch stop	Boolean Flag. Value 0001 stops current batch	Boolean	Write only	AA67 (43623)	1
Grp3 Batch running	Batch status flag: 1 = Running; 0 = Not running	Boolean	Read only	AA68 (43624)	1
Grp3 Text field 1	Batch field 1 text string (max. 60 characters)	String_60	Read/Write	AA69 (43625)	30
Reserved				AA87 (43655)	30
Grp3 Text field 2	Batch field 2 text string (max. 60 characters)	String_60	Read/Write	AAA5 (43685)	30
Reserved				AAC3 (43715)	30
Grp3 Text field 3	Batch field 3 text string (max. 60 characters)	String_60	Read/Write	AAE1 (43745)	30
Reserved				AAFF (43775)	30
Grp3 Text field 4	Batch field 4 text string (max. 60 characters)	String_60	Read/Write	AB1D (43805)	30
Reserved				AB3B (43835)	30
Grp3 Text field 5	Batch field 5 text string (max. 60 characters)	String_60	Read/Write	AB59 (43865)	30
Reserved				AB77 (43895)	30
Grp3 Text field 6	Batch field 6 text string (max. 60 characters)	String_60	Read/Write	AB95 (43925)	30
Reserved				ABB3 (43955)	30
Spare				ABD1 (43985)	100

## 8.4.4 GROUP DATA (Cont.)

## GROUP 4

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Grp4 Trend type	Trend enhancements 0 = Interpolation enabled 1 = Adaptive recording enabled	Enum	Read only	AC35 (44085)	1
Grp4 Trend rate	Trend update rate in milliseconds	UInt32	Read only	AC36 (44086)	2
Grp4 Archive rate	Archive (to flash) rate in milliseconds	UInt 32	Read only	AC38 (44088)	2
Grp4 Descriptor	Group descriptor (20 characters max.)	String_20	Read only	AC3A (44090)	10
Spare				AC44 (44100)	10
Grp4 Channels in group	16 Registers holding the group contents, as follows: Register 1 Bit 0: 0 = Point 1 not in group; 1 = Point 1 is in group Bit 1: 0 = Point 2 not in group; 1 = Point 2 is in group Bit 2: 0 = Point 3 not in group; 1 = Point 3 is in group Etc. Bit 15: 0 = Point 16 not in group; 1 = Point 16 is in group	UInt16	Read only	AC4E (44110)	(16) 1
See <a href="#">table 8.3</a> for point types	Register 2 - as register 1, but for points 17 to 32	UInt16	Read only	AC4F (44111)	1
	Register 3 - as register 1, but for points 33 to 48	UInt16	Read only	AC50 (44112)	1
	Register 4 - as register 1, but for points 49 to 64	UInt16	Read only	AC51 (44113)	1
	Register 5 - as register 1, but for points 65 to 80	UInt16	Read only	AC52 (44114)	1
	Register 6 - as register 1, but for points 81 to 96	UInt16	Read only	AC53 (44115)	1
	Register 7 - as register 1, but for points 97 to 112	UInt16	Read only	AC54 (44116)	1
	Register 8 - as register 1, but for points 113 to 128	UInt16	Read only	AC55 (44117)	1
	Register 9 - as register 1, but for points 129 to 144	UInt16	Read only	AC56 (44118)	1
	Register 10 - as register 1, but for points 145 to 160	UInt16	Read only	AC57 (44119)	1
	Register 11 - as register 1, but for points 161 to 176	UInt16	Read only	AC58 (44120)	1
	Register 12 - as register 1, but for points 177 to 192	UInt16	Read only	AC59 (44121)	1
	Register 13 - as register 1, but for points 193 to 208	UInt16	Read only	AC5A (44122)	1
	Register 14 - as register 1, but for points 209 to 224	UInt16	Read only	AC5B (44123)	1
	Register 15 - as register 1, but for points 225 to 240	UInt16	Read only	AC5C (44124)	1
	Register 16 - as register 1, but for points 241 to 256	UInt16	Read only	AC5D (44125)	1
	Grp4 Text length	Identifies the length of a text message to be read	UInt16	Read/Write	AC5E (44126)
Grp4 Text time stamp	Time stamp of the text message to be read (UTC format)	Double	Read only	AC5F (44127)	4
Grp4 Read text	Read text string from instrument display	String_60	Read only	AC63 (44131)	30
Reserved				AC81 (44161)	30
Grp4 Write text	Write a text string to instrument display	String_60	Write only	AC9F (44191)	30
Reserved				ACBD (44221)	30
Grp4 Batch start	Boolean Flag. Value 0001 starts new batch	Boolean	Write only	ACDB (44251)	1
Grp4 Batch stop	Boolean Flag. Value 0001 stops current batch	Boolean	Write only	ACDC (44252)	1
Grp4 Batch running	Batch status flag: 1 = Running; 0 = Not running	Boolean	Read only	ACDD (44253)	1
Grp4 Text field 1	Batch field 1 text string (max. 60 characters)	String_60	Read/Write	ACDE (44254)	30
Reserved				ACFC (44284)	30
Grp4 Text field 2	Batch field 2 text string (max. 60 characters)	String_60	Read/Write	AD1A (44314)	30
Reserved				AD38 (44344)	30
Grp4 Text field 3	Batch field 3 text string (max. 60 characters)	String_60	Read/Write	AD56 (44374)	30
Reserved				AD74 (44404)	30
Grp4 Text field 4	Batch field 4 text string (max. 60 characters)	String_60	Read/Write	AD92 (44434)	30
Reserved				ADB0 (44464)	30
Grp4 Text field 5	Batch field 5 text string (max. 60 characters)	String_60	Read/Write	ADCE (44494)	30
Reserved				ADEC (44524)	30
Grp4 Text field 6	Batch field 6 text string (max. 60 characters)	String_60	Read/Write	AE0A (44554)	30
Reserved				AE28 (44584)	30
Spare				AE46 (44614)	100

## 8.4.4 GROUP DATA (Cont.)

## GROUP 5

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Grp5 Trend type	Trend enhancements 0 = Interpolation enabled 1 = Adaptive recording enabled	Enum	Read only	AEEA (44714)	1
Grp5 Trend rate	Trend update rate in milliseconds	UInt32	Read only	AEAB (44715)	2
Grp5 Archive rate	Archive (to flash) rate in milliseconds	UInt 32	Read only	AEDD (44717)	2
Grp5 Descriptor	Group descriptor (20 characters max.)	String_20	Read only	AEAF (44719)	10
Spare				AEB9 (44729)	10
Grp5 Channels in group	16 Registers holding the group contents, as follows: Register 1 Bit 0: 0 = Point 1 not in group; 1 = Point 1 is in group Bit 1: 0 = Point 2 not in group; 1 = Point 2 is in group Bit 2: 0 = Point 3 not in group; 1 = Point 3 is in group Etc. Bit 15: 0 = Point 16 not in group; 1 = Point 16 is in group	UInt16	Read only	AEC3 (44739)	1 (16)
See <a href="#">table 8.3</a> for point types	Register 2 - as register 1, but for points 17 to 32	UInt16	Read only	AEC4 (44740)	1
	Register 3 - as register 1, but for points 33 to 48	UInt16	Read only	AEC5 (44741)	1
	Register 4 - as register 1, but for points 49 to 64	UInt16	Read only	AEC6 (44742)	1
	Register 5 - as register 1, but for points 65 to 80	UInt16	Read only	AEC7 (44743)	1
	Register 6 - as register 1, but for points 81 to 96	UInt16	Read only	AEC8 (44744)	1
	Register 7 - as register 1, but for points 97 to 112	UInt16	Read only	AEC9 (44745)	1
	Register 8 - as register 1, but for points 113 to 128	UInt16	Read only	AECA (44746)	1
	Register 9 - as register 1, but for points 129 to 144	UInt16	Read only	AECB (44747)	1
	Register 10 - as register 1, but for points 145 to 160	UInt16	Read only	AECC (44748)	1
	Register 11 - as register 1, but for points 161 to 176	UInt16	Read only	AECD (44749)	1
	Register 12 - as register 1, but for points 177 to 192	UInt16	Read only	AECE (44750)	1
	Register 13 - as register 1, but for points 193 to 208	UInt16	Read only	AECF (44751)	1
	Register 14 - as register 1, but for points 209 to 224	UInt16	Read only	AED0 (44752)	1
	Register 15 - as register 1, but for points 225 to 240	UInt16	Read only	AED1 (42253)	1
	Register 16 - as register 1, but for points 241 to 256	UInt16	Read only	AED2 (44754)	1
	Grp5 Text length	Identifies the length of a text message to be read	UInt16	Read/Write	AED3 (44755)
Grp5 Text time stamp	Time stamp of the text message to be read (UTC format)	Double	Read only	AED4 (44756)	4
Grp5 Read text	Read text string from instrument display	String_60	Read only	AED8 (44760)	30
Reserved				AEF6 (44790)	30
Grp5 Write text	Write a text string to instrument display	String_60	Write only	AF14 (44820)	30
Reserved				AF32 (44850)	30
Grp5 Batch start	Boolean Flag. Value 0001 starts new batch	Boolean	Write only	AF50 (44880)	1
Grp5 Batch stop	Boolean Flag. Value 0001 stops current batch	Boolean	Write only	AF51 (44881)	1
Grp5 Batch running	Batch status flag: 1 = Running; 0 = Not running	Boolean	Read only	AF52 (44882)	1
Grp5 Text field 1	Batch field 1 text string (max. 60 characters)	String_60	Read/Write	AF53 (44883)	30
Reserved				AF71 (44913)	30
Grp5 Text field 2	Batch field 2 text string (max. 60 characters)	String_60	Read/Write	AF8F (44943)	30
Reserved				AFAD (44973)	30
Grp5 Text field 3	Batch field 3 text string (max. 60 characters)	String_60	Read/Write	AFCB (45003)	30
Reserved				AFE9 (45033)	30
Grp5 Text field 4	Batch field 4 text string (max. 60 characters)	String_60	Read/Write	B007 (45063)	30
Reserved				B025 (45093)	30
Grp5 Text field 5	Batch field 5 text string (max. 60 characters)	String_60	Read/Write	B043 (45123)	30
Reserved				B061 (45153)	30
Grp5 Text field 6	Batch field 6 text string (max. 60 characters)	String_60	Read/Write	B08F (45183)	30
Reserved				B09D (45213)	30
Spare				B0BB (45243)	100

## 8.4.4 GROUP DATA (Cont.)

## GROUP 6

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Grp6 Trend type	Trend enhancements 0 = Interpolation enabled 1 = Adaptive recording enabled	Enum	Read only	B11F (45343)	1
Grp6 Trend rate	Trend update rate in milliseconds	UInt32	Read only	B120 (45344)	2
Grp6 Archive rate	Archive (to flash) rate in milliseconds	UInt 32	Read only	B122 (45346)	2
Grp6 Descriptor	Group descriptor (20 characters max.)	String_20	Read only	B124 (45348)	10
Spare				B12E (45358)	10
Grp6 Channels in group	16 Registers holding the group contents, as follows: Register 1 Bit 0: 0 = Point 1 not in group; 1 = Point 1 is in group Bit 1: 0 = Point 2 not in group; 1 = Point 2 is in group Bit 2: 0 = Point 3 not in group; 1 = Point 3 is in group Etc. Bit 15: 0 = Point 16 not in group; 1 = Point 16 is in group	UInt16	Read only	B138 (45368)	1 (16)
See <a href="#">table 8.3</a> for point types	Register 2 - as register 1, but for points 17 to 32	UInt16	Read only	B139 (45369)	1
	Register 3 - as register 1, but for points 33 to 48	UInt16	Read only	B13A (45370)	1
	Register 4 - as register 1, but for points 49 to 64	UInt16	Read only	B13B (45371)	1
	Register 5 - as register 1, but for points 65 to 80	UInt16	Read only	B13C (45372)	1
	Register 6 - as register 1, but for points 81 to 96	UInt16	Read only	B13D (45373)	1
	Register 7 - as register 1, but for points 97 to 112	UInt16	Read only	B13E (45374)	1
	Register 8 - as register 1, but for points 113 to 128	UInt16	Read only	B13F (45375)	1
	Register 9 - as register 1, but for points 129 to 144	UInt16	Read only	B140 (45376)	1
	Register 10 - as register 1, but for points 145 to 160	UInt16	Read only	B141 (45377)	1
	Register 11 - as register 1, but for points 161 to 176	UInt16	Read only	B142 (45378)	1
	Register 12 - as register 1, but for points 177 to 192	UInt16	Read only	B143 (45379)	1
	Register 13 - as register 1, but for points 193 to 208	UInt16	Read only	B144 (45380)	1
	Register 14 - as register 1, but for points 209 to 224	UInt16	Read only	B145 (45381)	1
	Register 15 - as register 1, but for points 225 to 240	UInt16	Read only	B146 (45382)	1
	Register 16 - as register 1, but for points 241 to 256	UInt16	Read only	B147 (45383)	1
	Grp6 Text length	Identifies the length of a text message to be read	UInt16	Read/Write	B148 (45384)
Grp6 Text time stamp	Time stamp of the text message to be read (UTC format)	Double	Read only	B149 (45385)	4
Grp6 Read text	Read text string from instrument display	String_60	Read only	B14D (45389)	30
Reserved				B16B (45419)	30
Grp6 Write text	Write a text string to instrument display	String_60	Write only	B189 (45449)	30
Reserved				B1A7 (45479)	30
Grp6 Batch start	Boolean Flag. Value 0001 starts new batch	Boolean	Write only	B1C5 (45509)	1
Grp6 Batch stop	Boolean Flag. Value 0001 stops current batch	Boolean	Write only	B1C6 (45510)	1
Grp6 Batch running	Batch status flag: 1 = Running; 0 = Not running	Boolean	Read only	B1C7 (45511)	1
Grp6 Text field 1	Batch field 1 text string (max. 60 characters)	String_60	Read/Write	B1C8 (45512)	30
Reserved				B1E6 (45542)	30
Grp6 Text field 2	Batch field 2 text string (max. 60 characters)	String_60	Read/Write	B204 (45572)	30
Reserved				B222 (45602)	30
Grp6 Text field 3	Batch field 3 text string (max. 60 characters)	String_60	Read/Write	B240 (45632)	30
Reserved				B25E (45662)	30
Grp6 Text field 4	Batch field 4 text string (max. 60 characters)	String_60	Read/Write	B27C (45692)	30
Reserved				B29A (45722)	30
Grp6 Text field 5	Batch field 5 text string (max. 60 characters)	String_60	Read/Write	B2B8 (45752)	30
Reserved				B2D6 (45782)	30
Grp6 Text field 6	Batch field 6 text string (max. 60 characters)	String_60	Read/Write	B2F4 (45812)	30
Reserved				B312 (45842)	30
Spare				B330 (45872)	100

### 8.4.5 Feature identification table (FIT)

This table allows the host to identify which features are available at the recorder.

Parameter name	Description	Value	Access	Start Addr Hex (Dec)	Register Length
Number of features	Number of supported features	3	Read only	CC26 (52262)	1
	Feature 1	Indirection Table	Read only	CC27 (52263)	1
	Read only indirection table start address (R/O vector)	CD89	Read only	CC28 (52264)	1
	Read/Write indirection table start address (R/W vector)	D18A	Read only	CC29 (52265)	1
Feature 2	Spare			CC2A (52266)	1
	Function codes supported (FC I.D.)	4	Read only	CC2B (52267)	1
	Bit map of supported MODBUS function codes	32940	Read only	CC2C (52268)	1
	Bit 0: 0 = code 1 not supported; 1 = code 1 supported Bit 1: 0 = code 2 not supported; 1 = code 2 supported Bit 2: 0 = code 3 not supported; 1 = code 3 supported Bit 3: 0 = code 4 not supported; 1 = code 4 supported Etc. Bit 15: 0 = code 16 not supported; 1 = code 16 supported				
Feature 3	Reserved			CC2D (52269)	1
	Reserved			CC2E (52270)	1
	Security ID (MODBUS login security feature)	9	Read only	CC2F (52271)	1
	User name (52272)	40		Write only	CC30
Feature N	Password (52312)	40		Write only	CC58
	Reserved (52352)	1			CC80
	100 Spare addresses for further features			CC81 (52353)	100

### 8.4.6 Indirection tables

The standard MODBUS protocol allows block register reads and writes. This is efficient only if data is grouped contiguously, or nearly so. Indirection tables are a means by which widely spaced register addresses can (in effect) be grouped, offering the host the ability to access a block of user defined data in one single read/write request.

Two configurable tables are available, one for read only parameters, the other for read/write. Each table is in two halves - the lower address half contains the addresses of the registers to be accessed; the higher address half contains the values which have been read or which are to be written.

#### Notes:

1. For Ethernet connections, indirection table entries are lost at power off, as the result of a brown-out or if the connection with the host is broken.
2. Parameters in IEEE format can be accessed by configuring two successive entries in the table. Parameters which occupy more than one register can be loaded into the indirection area by using function code 16 (pre-set multiple registers) and the parameter's base address (i.e. the parameter's 1st register).
3. Separate indirection table entries are held for each host - the recorder automatically switches each host to its own indirection table without user intervention.
4. Indirection table addresses (CCE5 to D4E7) cannot be entered in the indirection tables. Any attempt to do so will be ignored.

**8.4.6 INDIRECTION TABLES (CONT.)**

Table 8.4.6a shows the overall arrangement of the indirection table area. Figures 8.4.6b and 8.4.6c show simple examples of Read only and Read/Write addressing for tables with 6 entries.

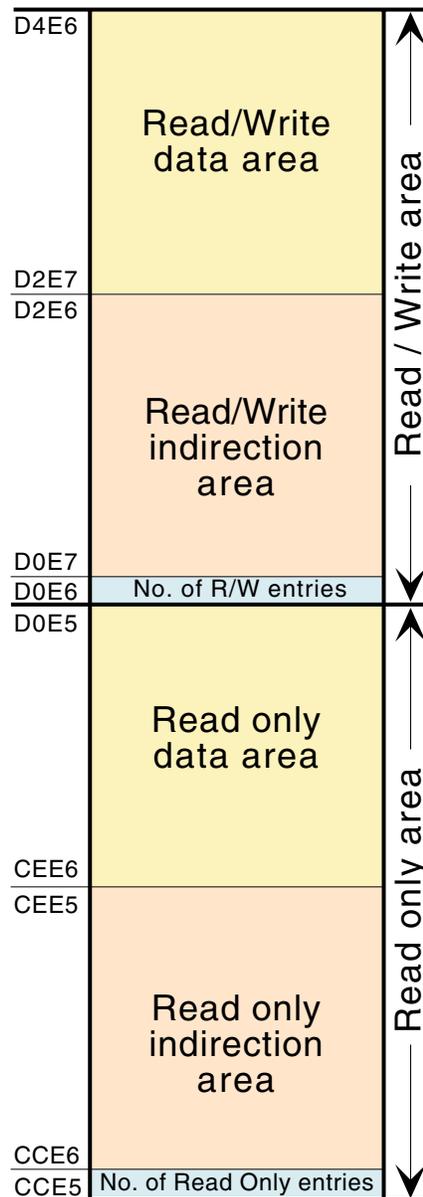


Table 8.4.6a Indirection table areas

8.4.6 INDIRECTION TABLES (CONT.)

Read values from here (address + hex 200)	CEEB	Alarms chan 1	
	CEEA	PV chan 1	
	CEE9	PV chan 1	
	CEE8	Archive rate	
	CEE7	Trend rate	
	CEE6	Instrument type	
//			
Enter required data addresses here	CCEB	A1DB	Channel 1 Alarm status
	CCEA	F8C4	Channel 1 PV (bits 16 to 31)
	CCE9	F8C3	Channel 1 PV (bits 0 to 15)
	CCE8	A4D9	Group 1 archive rate
	CCE7	A4D7	Group 1 trend rate
	CCE6	0001	Instrument type number
	CCE5	0006	Number of Read only entries

Table 8.4.6b Read only indirection example

Write values to, or read values from this area (address + hex 200)	D2EC	Ch6 Alarm1 Sp	
	D2EB	Ch5 Alarm1 Sp	
	D2EA	Ch4 Alarm1 Sp	
	D2E9	Ch3 Alarm1 Sp	
	D2E8	Ch2 Alarm1 Sp	
	D2E7	Ch1 Alarm1 Sp	
//			
Enter required data addresses here	D0EC	0415	Chan 6 Alarm 1 setpoint
	D0EB	0373	Chan 5 Alarm 1 setpoint
	D0EA	02D1	Chan 4 Alarm 1 setpoint
	D0E9	022F	Chan 3 Alarm 1 setpoint
	D0E8	018D	Chan 2 Alarm 1 setpoint
	D0E7	00EB	Chan 1 Alarm 1 setpoint
	D0E6	0006	Number of Read/Write entries

Table 8.4.6c Read/Write indirection example

### 8.4.7 IEEE 32-bit channel configuration data

The following tables show the hexadecimal addresses for the specified 32-bit floating-point values, for channels 1 to 12.

Note: A/B Switching:

B values are not accessible via modbus for this software version. Span, Zone, Colour etc. are therefore all setting A

Generally, Parameter address for channel N = Parameter address for channel 1 + 36(N-1) (decimal). The word channel is used as an umbrella term for input channels, maths channels, totalisers etc.

#### CHANNEL 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch1 span high	Upper span value (Display full scale)	Float	Read only	D4E7 (54503)	2
Ch1 span low	Lower span value (display 'zero')	Float	Read only	D4E9 (54505)	2
Ch1 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D4EB (54507)	2
Ch1 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D4ED (54509)	2
Ch1 Alarm 1 setpoint	Trigger setpoint (Note 2) for alarm 1 (Note 2)	Float	Read/Write	D4EF (54511)	2
Ch1 Alarm 2 setpoint	Trigger setpoint (Note 2) for alarm 2 (Note 2)	Float	Read/Write	D4F1 (54513)	2
Ch1 Alarm 3 setpoint	Trigger setpoint (Note 2) for alarm 3 (Note 2)	Float	Read/Write	D4F3 (54515)	2
Ch1 Alarm 4 setpoint	Trigger setpoint (Note 2) for alarm 4 (Note 2)	Float	Read/Write	D4F5 (54517)	2
Spare				D4F7 (54519)	20

#### CHANNEL 2

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch2 span high	Upper span value (display full scale)	Float	Read only	D50B (54539)	2
Ch2 span low	Lower span value (display 'zero')	Float	Read only	D50D (54541)	2
Ch2 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D50F (54543)	2
Ch2 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D511 (54545)	2
Ch2 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D513 (54547)	2
Ch2 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D515 (54549)	2
Ch2 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D517 (54551)	2
Ch2 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D519 (54553)	2
Spare				D51B (54555)	20

#### CHANNEL 3

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch3 span high	Upper span value (display full scale)	Float	Read only	D52F (54575)	2
Ch3 span low	Lower span value (display 'zero')	Float	Read only	D531 (54577)	2
Ch3 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D533 (54579)	2
Ch3 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D535 (54581)	2
Ch3 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D537 (54583)	2
Ch3 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D539 (54585)	2
Ch3 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D53B (54587)	2
Ch3 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D53D (54589)	2
Spare				D53F (54591)	20

#### Notes

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.7 IEEE 32-BIT CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 4**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch4 span high	Upper span value (display full scale)	Float	Read only	D553 (54611)	2
Ch4 span low	Lower span value (display 'zero')	Float	Read only	D555 (54613)	2
Ch4 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D557 (54615)	2
Ch4 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D559 (54617)	2
Ch4 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D55B (54619)	2
Ch4 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D55D (54621)	2
Ch4 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D55F (54623)	2
Ch4 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D561 (54625)	2
Spare				D563 (54627)	20

**CHANNEL 5**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch5 span high	Upper span value (display full scale)	Float	Read only	D577 (54647)	2
Ch5 span low	Lower span value (display 'zero')	Float	Read only	D569 (54649)	2
Ch5 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D57B (54651)	2
Ch5 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D57D (54653)	2
Ch5 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D57F (54655)	2
Ch5 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D581 (54657)	2
Ch5 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D583 (54659)	2
Ch5 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D585 (54661)	2
Spare				D587 (54663)	20

**CHANNEL 6**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch6 span high	Upper span value (display full scale)	Float	Read only	D59B (54683)	2
Ch6 span low	Lower span value (display 'zero')	Float	Read only	D59D (54685)	2
Ch6 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D59F (54687)	2
Ch6 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D5A1 (54689)	2
Ch6 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D5A3 (54691)	2
Ch6 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D5A5 (54693)	2
Ch6 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D5A7 (54695)	2
Ch6 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D5A9 (54697)	2
Spare				D5AB (54699)	20

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.7 IEEE 32-BIT CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 7**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch7 span high	Upper span value (display full scale)	Float	Read only	D5BF (54719)	2
Ch7 span low	Lower span value (display 'zero')	Float	Read only	D5C1 (54721)	2
Ch7 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D5C3 (54723)	2
Ch7 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D5C5 (54725)	2
Ch7 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D5C7 (54727)	2
Ch7 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D5C9 (54729)	2
Ch7 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D5CB (54731)	2
Ch7 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D5CD (54733)	2
Spare				D5CF (54735)	20

**CHANNEL 8**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch8 span high	Upper span value (display full scale)	Float	Read only	D5E3 (54755)	2
Ch8 span low	Lower span value (display 'zero')	Float	Read only	D5E5 (54757)	2
Ch8 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D5E7 (54759)	2
Ch8 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D5E9 (54761)	2
Ch8 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D5EB (54763)	2
Ch8 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D5ED (54765)	2
Ch8 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D5EF (54767)	2
Ch8 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D5F1 (54769)	2
Spare				D5F3 (54771)	20

**CHANNEL 9**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch9 span high	Upper span value (display full scale)	Float	Read only	D607 (54791)	2
Ch9 span low	Lower span value (display 'zero')	Float	Read only	D609 (54793)	2
Ch9 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D60B (54795)	2
Ch9 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D60D (54797)	2
Ch9 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D60F (54799)	2
Ch9 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D611 (54801)	2
Ch9 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D613 (54803)	2
Ch9 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D615 (54805)	2
Spare				D617 (54807)	20

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

**8.4.7 IEEE 32-BIT CHANNEL CONFIGURATION DATA (Cont.)****CHANNEL 10**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch10 span high	Upper span value (display full scale)	Float	Read only	D62B (54827)	2
Ch10 span low	Lower span value (display 'zero')	Float	Read only	D62D (54829)	2
Ch10 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D62F (54831)	2
Ch10 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D631 (54833)	2
Ch10 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D633 (54835)	2
Ch10 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D635 (54837)	2
Ch10 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D637 (54839)	2
Ch10 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D639 (54841)	2
Spare				D63B (54843)	20

**CHANNEL 11**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch11 span high	Upper span value (display full scale)	Float	Read only	D64F (54863)	2
Ch11 span low	Lower span value (display 'zero')	Float	Read only	D651 (54865)	2
Ch11 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D653 (54867)	2
Ch11 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D655 (54869)	2
Ch11 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D657 (54871)	2
Ch11 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D659 (54873)	2
Ch11 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D65B (54875)	2
Ch11 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D65D (54877)	2
Spare				D65F (54879)	20

**CHANNEL 12**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Ch12 span high	Upper span value (display full scale)	Float	Read only	D673 (54899)	2
Ch12 span low	Lower span value (display 'zero')	Float	Read only	D675 (54901)	2
Ch12 Zone high	Zone upper value (% of 'chart' width)	Float	Read only	D677 (54903)	2
Ch12 Zone low	Zone lower value (% of 'chart' width)	Float	Read only	D679 (54905)	2
Ch12 Alarm 1 setpoint	Trigger setpoint for alarm 1 (Note 2)	Float	Read/Write	D67B (54907)	2
Ch12 Alarm 2 setpoint	Trigger setpoint for alarm 2 (Note 2)	Float	Read/Write	D67D (54909)	2
Ch12 Alarm 3 setpoint	Trigger setpoint for alarm 3 (Note 2)	Float	Read/Write	D67F (54911)	2
Ch12 Alarm 4 setpoint	Trigger setpoint for alarm 4 (Note 2)	Float	Read/Write	D681 (54913)	2
Spare				D683 (54915)	20

**Notes**

1. For maths, totalisers and counters, see the relevant option description.
2. If an alarm's Setpoint Source (section 4.3.3) is set to anything other than 'Constant' the value returned will be the previously configured constant value.

### 8.4.8 IEEE Area Channel run-time data

The following tables show the hexadecimal addresses for the specified 32-bit floating-point values, for channels 1 to 12. Generally, Parameter address for channel N = Parameter address for channel 1 + 4(N-1) (decimal).

#### CHANNEL 1

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 1 value	Current process value (PV)	Float	See note	F8C3 (63683)	2
Channel 1 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	F8C5 (63685)	1
Channel 1 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8C6 (63686)	1

#### CHANNEL 2

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 2 value	Current process value (PV)	Float	See note	F8C7 (63687)	2
Channel 2 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                      6 = Overflow 2 = Over range                      7 = Bad PV 3 = Under range                      8 = No data 4 = Hardware error	Enum	Read only	F8C9 (63689)	1
Channel 2 alarms	Alarm information Bit 0:0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1:0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2:1 = Acknowledge alarm 1 Bit 3:Spare Bit 4:0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5:0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6:1 = Acknowledge alarm 2 Bit 7:Spare Bit 8:0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9:0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10:1 = Acknowledge alarm 3 Bit 11:Spare Bit 12:0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13:0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14:1 = Acknowledge alarm 4 Bit 15:Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8CA (63690)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.8 IEEE AREA CHANNEL RUN-TIME DATA (Cont.)****CHANNEL 3**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 3 value	Current process value (PV)	Float	See note	F8CB (63691)	2
Channel 3 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	F8CD (63693)	1
Channel 3 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8CE (63694)	1

**CHANNEL 4**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 4 value	Current process value (PV)	Float	See note	F8CF (63695)	2
Channel 4 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	F8D1 (63697)	1
Channel 4 alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8D2 (63698)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.8 IEEE AREA CHANNEL RUN-TIME DATA (Cont.)****CHANNEL 5**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 5 value	Current process value (PV)	Float	See note	F8D3 (63699)	2
Channel 5 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F8D5 (63701)	1
Channel 5 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8D6 (63702)	1

**CHANNEL 6**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 6 value	Current process value (PV)	Float	See note	F8D7 (63703)	2
Channel 6 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F8D9 (63705)	1
Channel 6 alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8DA (63706)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.8 IEEE AREA CHANNEL RUN-TIME DATA (Cont.)****CHANNEL 7**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 7 value	Current process value (PV)	Float	See note	F8DB (63707)	2
Channel 7 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	F8DD (63709)	1
Channel 7 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8DE (63710)	1

**CHANNEL 8**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 8 value	Current process value (PV)	Float	See note	F8DF (63711)	2
Channel 8 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                 8 = No data 4 = Hardware error	Enum	Read only	F8E1 (63713)	1
Channel 8 alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8E2 (63714)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.8 IEEE AREA CHANNEL RUN-TIME DATA (Cont.)****CHANNEL 9**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 9 value	Current process value (PV)	Float	See note	F8E3 (63715)	2
Channel 9 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F8E5 (63717)	1
Channel 9 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8E6 (63718)	1

**CHANNEL 10**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 10 value	Current process value (PV)	Float	See note	F8E7 (63719)	2
Channel 10 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                 6 = Overflow 2 = Over range                 7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F8E9 (63721)	1
Channel 10 alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8EA (63722)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

**8.4.8 IEEE AREA CHANNEL RUN-TIME DATA (Cont.)****CHANNEL 11**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 11 value	Current process value (PV)	Float	See note	F8EB (63723)	2
Channel 11 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F8ED (63725)	1
Channel 11 Alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8EE (63726)	1

**CHANNEL 12**

Parameter name	Description	Type	Access	Start Addr Hex (Dec)	Register Length
Channel 12 value	Current process value (PV)	Float	See note	F8EF (63727)	2
Channel 12 status	Channel status 0 = Good PV                      5 = Ranging error 1 = Channel off                  6 = Overflow 2 = Over range                  7 = Bad PV 3 = Under range                8 = No data 4 = Hardware error	Enum	Read only	F8F1 (63729)	1
Channel 12 alarms	Alarm information Bit 0: 0 = Alarm 1 inactive; 1 = Alarm 1 active Bit 1: 0 = No alarm 1 Ack. required; 1 = Ack. required Bit 2: 1 = Acknowledge alarm 1 Bit 3: Spare Bit 4: 0 = Alarm 2 inactive; 1 = Alarm 2 active Bit 5: 0 = No Alarm 2 Ack. required; 1 = Ack. required Bit 6: 1 = Acknowledge alarm 2 Bit 7: Spare Bit 8: 0 = Alarm 3 inactive; 1 = Alarm 3 active Bit 9: 0 = No alarm 3 Ack. required; 1 = Ack. required Bit 10: 1 = Acknowledge alarm 3 Bit 11: Spare Bit 12: 0 = Alarm 4 inactive; 1 = Alarm 4 active Bit 13: 0 = No Alarm 4 Ack. required; 1 = Ack. required Bit 14: 1 = Acknowledge alarm 4 Bit 15: Spare	Uint16	- Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write  Read only Read only Read/Write	F8F2 (63730)	1

Note: PV access is Read/Write for any point configured with 'Slave Comms' as its Type or Function. Otherwise PV access is Read only.

### 8.4.9 Permanent ID table

This table contains information relating to the recorder, and also gives the start address of the feature identification table (FIT).

FFF4	HHHH	Checksum
FFF3	CC26	FIT start address
FFF2	0001	Version ID
FFF1	6100 or 6180	Product ID
FFF0	0500	Company ID

Table 8.4.9 Permanent ID table

## 8.5 DATA TRANSMISSION

Each message (request or response) is packaged in the (MODBUS) frame shown below. The messages consist of a 7 byte prefix, followed by the function code (in hex), followed by the relevant data bytes, the number and content of which depend on the function code, as described in subsequent sections.

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Bytes 8 onwards
Transaction identifier (usually 00)	Transaction identifier (usually 00)	Protocol identifier (00)	Protocol identifier (00)	Always 00	Number of bytes following	Recorder Modbus address	Modbus function code (hex)	Data (Depends on function code)

Figure 8.5 MODBUS package

#### Notes:

1. The transaction identifier has no active function - the recorder just copies the bytes from the request message to the response message.
2. The protocol identifier bytes are always zero.

### FUNCTION CODES AND EXCEPTION CODES

Refer to [section 8.2.1](#) for lists of function codes and exception codes supported.

### TEXT STRINGS

When sending text strings, such as Batch fields, the final character must be followed by one or two 'Null' characters. The number of bytes in the text string (including the null) must be even, even if this means adding two nulls at the end of the message instead of one.

For example, the text string: "Batch Number" should be sent as

```
BatchSpace Number NullNull, or BatchSpace Number SpaceNull
```

where each pair of characters occupies on 16-bit word. Similarly, the text string 'Batch Number:' would be sent as

```
BatchSpace Numb er :null,
```

but only one Null character is required to provide an even number of bytes.

### 8.5.1 Function code 03

#### REQUEST

The bytes after the 7-byte prefix described above are:

Function code (03) (1 byte)

Register start address (2 bytes)

Word count (Total number of registers) (1 to 125 decimal; 1 to 7D hex) (2 bytes)

Thus to read Channel 5 descriptor (start address 031F - 10 registers altogether) the following request (as described in figure 8.5.1a) would be transmitted for a recorder with a Modbus address of 1:

0000000000060103031F000A

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
00	00	00	00	00	06	01	03	03	1F	00	0A
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following	Recorder Modbus address	Modbus function code (hex)	Register start address high byte	Register start address low byte	Word count high byte	Word count low byte

Figure 8.5.1a Function code 03 request example

#### RESPONSE

As a response to a request, the recorder returns a similar message, but the function code (03) is followed by:

Byte count (= 2 x the number of register values requested) in hex (1 byte)

Value of register at start address (2 bytes)

Value of register at start address + 1 (2 bytes)

etc.

etc.

Value of final register (2 bytes)

Thus as a response to the above request for channel 5 descriptor, the following message (as expanded in figure 8.5.1b) would be returned to the host (assuming channel descriptor to be: Channel 5 Descriptor and Modbus address = 1):

000000000170103144368616E6E656C20352044657363726970746F72

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
00	00	00	00	00	17	01	03	14	43	68	61
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following (hex)	Recorder Modbus address	Modbus function code (hex)	Byte count (No of registers x 2) (Hex)	ASCII C (Hex)	ASCII h (Hex)	ASCII a (Hex)

Byte 12	Byte 13	Byte 14	Byte 15	Byte 16	Byte 17	Byte 18	Byte 19	Byte 20	Byte 21	Byte 22	Byte 23
6E	6E	65	6C	20	35	20	44	65	73	63	72
ASCII n (Hex)	ASCII n (Hex)	ASCII e (Hex)	ASCII l (Hex)	ASCII space (Hex)	ASCII 5 (Hex)	ASCII space (Hex)	ASCII D (Hex)	ASCII e (Hex)	ASCII s (Hex)	ASCII c (Hex)	ASCII r (Hex)

Byte 24	Byte 25	Byte 26	Byte 27	Byte 28
69	70	74	6F	72
ASCII i (Hex)	ASCII p (Hex)	ASCII t (Hex)	ASCII o (Hex)	ASCII r (Hex)

Figure 8.5.1b Function code 03 response example

#### EXCEPTION RESPONSES

Byte 0 = Function code 83 (hex) (i.e. Hex (80 + function code))

Byte 1 = Exception code 01 (Illegal function) or 02 (Invalid data address)

### 8.5.2 Function code 04

This is identical with function code 03, except that 04 must be used as the function code and the exception response Function code is 84 (hex) not 83.

### 8.5.3 Function code 06

#### REQUEST

This is used to write a value to a single register. The bytes after the 7-byte prefix described in [section 8.5](#), above are:

Function code (06) (1 byte)

Register address (2 bytes)

Value to be written (2 bytes)

Thus to write a value of 80 degrees as Alarm 1 setpoint for channel 3 (register address 022F), the following request (as detailed in figure 8.5.3) would be transmitted to the recorder:

```
0000000000060106022F0050
```

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
00	00	00	00	00	06	01	06	02	2F	00	50
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following	Recorder Modbus address	Modbus function code (hex)	Register start address high byte	Register start address low byte	Value high byte (hex)	Value low byte (hex)

Figure 8.5.3 Function code 06 request/response example

#### RESPONSE

As a response to a request, the recorder returns a message identical with the request message.

#### EXCEPTION RESPONSES

Byte 0 = Function code 86 (hex) (i.e. Hex (80 + function code))

Byte 1 = Exception code 01 (Illegal function) or 02 (Invalid data address)

### 8.5.4 Function code 08

This is used to initiate a loop-back test. The bytes after the 7-byte prefix described in [section 8.5](#), above are:

Function code (08) (1 byte)

Subfunction code (00 00) (2 bytes)

Query data (loopback value) (HH HH) (2 bytes)

Thus to initiate a loopback test (using, as an example, 'P' 'Q' as the query data), the following request (as detailed in figure 8.5.4) is transmitted to the recorder:

```
000000000006010800005051
```

The response to the receipt of such a message should be to 'echo' the request back to the host.

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
00	00	00	00	00	06	01	08	00	00	50	51
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following	Recorder Modbus address	Modbus function code (hex)	Subfunction code high byte	Subfunction code low byte	Query data high byte (ASCII 'P') (Hex)	Query data low byte (ASCII 'Q') (Hex)

Figure 8.5.4 Function code 08 (loopback test) example

## 8.5.5 Function code 16 (Hex 10)

### REQUEST

This is used to write values to multiple registers. The bytes after the 7-byte prefix described in [section 8.5](#), above are:

Function code (10) (1 byte)

Register Start address (2 bytes)

Word count (Total number of registers to be written) (1 to 100 decimal; 1 to 64 hex) (2 bytes)

Byte count (B) ( 2 x word count) (1 byte)

Values to be written (2B bytes).

Thus to write "Batch Number" as batch field 1 for group 1 (start address A57F), the following message (expanded in figure 8.5.5a) would be transmitted to the recorder:

```
0000000000150110A57F00070E4261746368204E756D6265720000
```

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11	Byte 12	
00	00	00	00	00	15	01	10	A5	7F	00	07	0E	
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes to follow (hex)	Recorder Modbus address	Modbus function code (hex)	Base address High byte	Base address Low byte	Word count High byte	Word count Low byte	Byte count	

Byte 13	Byte 14	Byte 15	Byte 16	Byte 17	Byte 18	Byte 19	Byte 20	Byte 21	Byte 22	Byte 23	Byte 24	Byte 25	Byte 26	
42	61	74	63	68	20	4E	75	6D	62	65	72	00	00	
ASCII B (Hex)	ASCII a (Hex)	ASCII t (Hex)	ASCII c (Hex)	ASCII h (Hex)	ASCII space (Hex)	ASCII N (Hex)	ASCII u (Hex)	ASCII m (Hex)	ASCII b (Hex)	ASCII e (Hex)	ASCII r (Hex)	ASCII Null	ASCII Null	

Figure 8.5.5a Function code 16 request example

### RESPONSE

The response message (detailed in figure 8.5.5b) after the 7-byte prefix described in [section 8.5](#), above is:

Function code 10 (1 byte)

Start address (2 bytes)

Word count (2 bytes)

Thus, the response to the above batch field request would be:

```
0000000000060110A57F0007
```

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11	
00	00	00	00	00	06	01	10	A5	7F	00	07	
Transaction identifier	Transaction identifier	Protocol identifier	Protocol identifier	Always 00	Number of bytes following (hex)	Recorder Modbus address	Modbus function code (hex)	Base address High byte	Base address Low byte	Word count High byte	Word count Low byte	

Figure 8.5.5b Function code 16 response example

### EXCEPTION RESPONSES

Byte 0 = Function code 90 (hex) (i.e. Hex (80 + function code))

Byte 1 = Exception code 01 (Illegal function) or 02 (Invalid data address)

**Note:** Function code 16 can be used to write multiple registers into the indirection table area, for example, by writing the base register address of a 32-bit channel value (e.g. channel 3 - start address: F994) into location D18B.

## 9 ASCII PRINTER OUTPUT OPTION

### 9.1 INTRODUCTION

If the Serial Communications option is fitted, this allows the printing of messages, as and when they occur, or the printing of configurable reports as a result of job action. The recorder is set up to drive a number of recommended printers. As more printers become available, printer drivers can be imported as described in [section 9.4](#), below. For printer specification, refer to the documentation supplied with the printer.

### 9.2 WIRING

#### 9.2.1 Serial communications ports

The printer is connected to one of the Serial communications ports, configured for EIA232 standard, using the Rx, Tx and common signal lines. Printer Tx must be connected to recorder Rx. Printer Rx must be connected to recorder Tx. Figure 9.2.1 shows the location of, and user connections for, the recorder ports. See also [section 2.2](#).


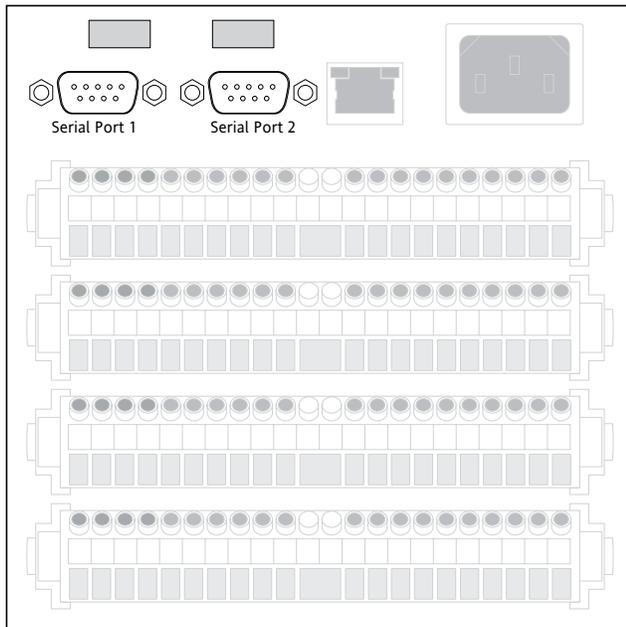


Figure 9.2.1a Serial port locations (small frame)

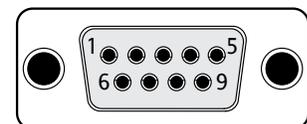

View on solder-bucket face of user socket

EIA232C	
Pin	Signal
1	NC
2	Rx
3	Tx
4	DTR
5	Signal ground
6	NC
7	NC
8	NC
9	5V via 1500Ω

Figure 9.2.1b Serial port pinout

#### 9.2.2 DC connection

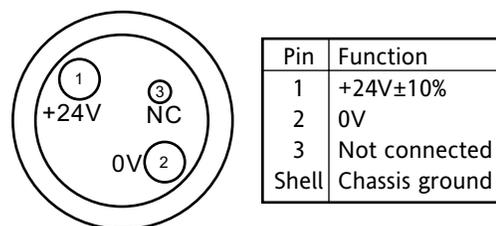


Figure 9.2.2 DC connector pinout (solder side of user connector)

## 9.3 CONFIGURATION

Configuration takes place in two areas viz: 'Connections' and 'Reports' ([section 9.3.2](#)).

### 9.3.1 Connections

Figure 9.3.1a shows the default configuration page for ASCII printer protocol. See [section 4.3.15](#) for other protocols.

Figure 9.3.1a Serial communications configuration menu

#### PORT

This allows serial port 1 or serial port 2 to be selected for printer configuration. Separate, independently configurable printers can be connected to the two ports, or, if only one printer is to be connected, any of the other available protocols can be selected for the non-printer port.

#### LINK ERROR COUNT

The counter is incremented every time there is a framing error, a parity error or a Cyclic redundancy check (CRC) error whilst communicating with the printer. The 'Reset Error Count' key is used to reset the count to zero.

---

**Note:** For instruments fitted with two printers, the count relates to the currently selected printer.

---

### 9.3.1 SERIAL COMMUNICATIONS CONFIGURATION (Cont.)

#### PROTOCOL

Select ASCII Printer.

#### BAUD RATE

Select Baud Rate setting to match that set at the Printer.

#### STOP BITS

Selectable as 1 or 2.

#### PARITY

Allows Parity to be chosen from a pick list of: None, Odd, Even. For reliable communications with the printer, it is recommended that the default parity be used.

#### PRINTER TYPE

Allows a printer driver to be selected for the printer connected to this port.

#### PRINTER NAME

Allows a name to be entered for the printer.

#### PRINTER STATUS

Not Responding	Printer is not communicating - check wiring
OK	Printer is connected and working correctly
Paper Low	The printer paper is getting low. The roll should be replaced as soon as possible
Paper Out	The printer paper roll is exhausted.
Unknown error	Printer is not working correctly - perhaps an unknown type of printer has been attached.

#### PRINTER TEST

Operating this button causes a test printout to appear at the printer, as shown in figure 9.3.1b.

#### PRINT MESSAGES FROM

The user can select a group for message printing. These messages are printed as they occur, and are not dependent on job action. Only those messages in the enabled categories (see 'Messages to Print' below) are printed.

#### MESSAGES TO PRINT

This set of enable boxes allows the user to select which, if any, messages will be printed. Enable boxes appear even if the relevant option is not fitted.

Messages are printed as they arise, but reports take precedence. For example, if a report is to be printed when channel one goes into alarm, and 'Alarms' is enabled in the 'Messages To Print' area, then the Report is printed before the alarm message.

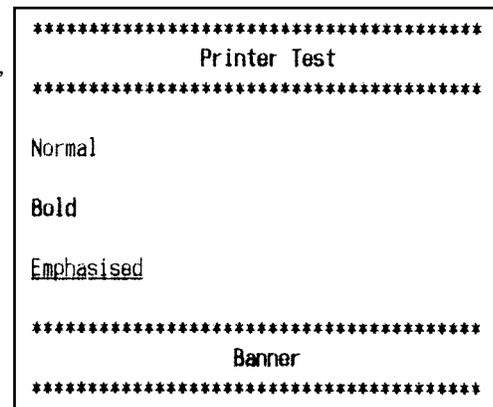


Figure 9.3.1b Test printout

**Note:** Messages will be printed only if they are enabled in the relevant part of the recorder's configuration. For example: 'Logins' messages will be printed only if 'Record Logins' is enabled in the unit's 'Security' configuration (section 4.4), and 'Alarms' messages will be printed only if 'Alarm Message' and/or 'Ack Message' are enabled in the relevant group's configuration (section 4.3.2).

### 9.3.2 Reports configuration

This allows the user to configure up to 10 'reports' for printing by the ASCII printer as a result of job action. Figure 9.3.2a shows a typical configuration page, accessed from the CONFIG button 'Reports' item.

Report 1) Report 1 ▼

Descriptor Report 1

Number of Fields 6 ▼

Field 1 Type Date & Time ▼

Style Normal ▼

Field 2 Type Text ▼

Text

Style Bold ▼

Field 3 Type Process Value ▼

Point Channel 1 ▼

Style Emphasised ▼

Field 4 Type Batch Field 1 ▼

Style Banner ▼

Field 5 Type 1) Message ▼

Style Normal ▼

Field 6 Type Line Feed ▼

Line Feed 1 ▼

Apply Discard

Figure 9.3.2a Reports Configuration

#### REPORT

Allows the user to select the required report number for configuration.

#### DESCRIPTOR

A name for the Report can be entered here.

#### NUMBER OF FIELDS

Select 0 to 10 for the number of items to be included in the report.

#### FIELD N TYPE

N = 1 to the number of fields selected in the previous item.

Date & Time	Causes the time and date of report generation to be included in the report
Text	Allows the user to enter a text message of up to 60 characters.
Process value	Allows a specified point's process value (including descriptor and units) to be included in the report
Batch Field 1	Batch field 1 can be included in the report. See <a href="#">section 4.3.10</a> for Batch details.
Message	A message can be selected for inclusion in the report. See <a href="#">section 4.3.8</a> for details of message configuration.
Line Feed	Allows one or more blank lines to be left. This can be useful at the end of a report.

### 9.3.2 REPORTS CONFIGURATION (Cont.)

#### STYLE

See figure 9.3.2b for examples of 'Normal', 'Bold', 'Emphasised' and 'Banner' print styles. For all styles, if the text is too long to fit on one line it 'wraps round' as shown (for normal style) in figure 9.3.2b, below.

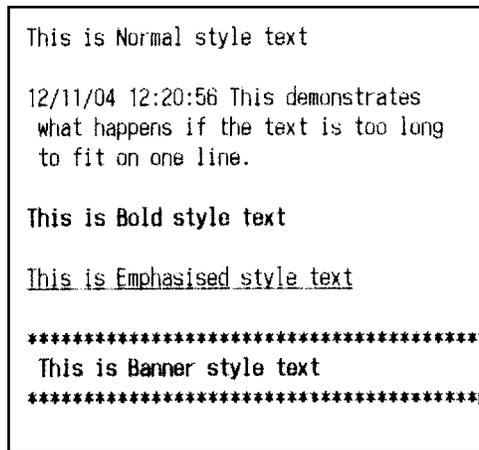


Figure 9.3.2b Text style examples

#### POINT

Allows a point to be chosen when 'Process value' has been selected as Field Type. The point is selected from a pick-list containing all the input channels, derived channels, totalisers etc. in the instrument.

#### LINE FEED

Appears only when 'Line Feed' has been chosen as Field Type. Allows the user to enter the required number of blank lines (up to 10) which are to be inserted.

### 9.3.3 ASCII Input Filtering


An enhancement has been added to the ASCII input feature in instruments with software versions 5.4 upwards. This feature provides a number of text filters, each with their own timeouts, to be applied to the ASCII input so that only specific text strings are recognised. The feature has been designed for use, in particular, with GPS systems to allow only relevant data to be logged.

#### TEXT FILTERS

Three text filters are provided each up to 20 characters long. Only messages containing configured patterns will be processed i.e patterns that are not blank strings. Each of these has a timeout of up to 9999 seconds, only allowing filtered messages through at this rate. If this is set to 0 all the messages for the filter will be processed.

#### CONFIGURATION

In configuration level set the 'Protocol' parameter to ASCII (input) as shown in the screen view on the next page. Select the serial port and communications parameters as described in the previous sections.

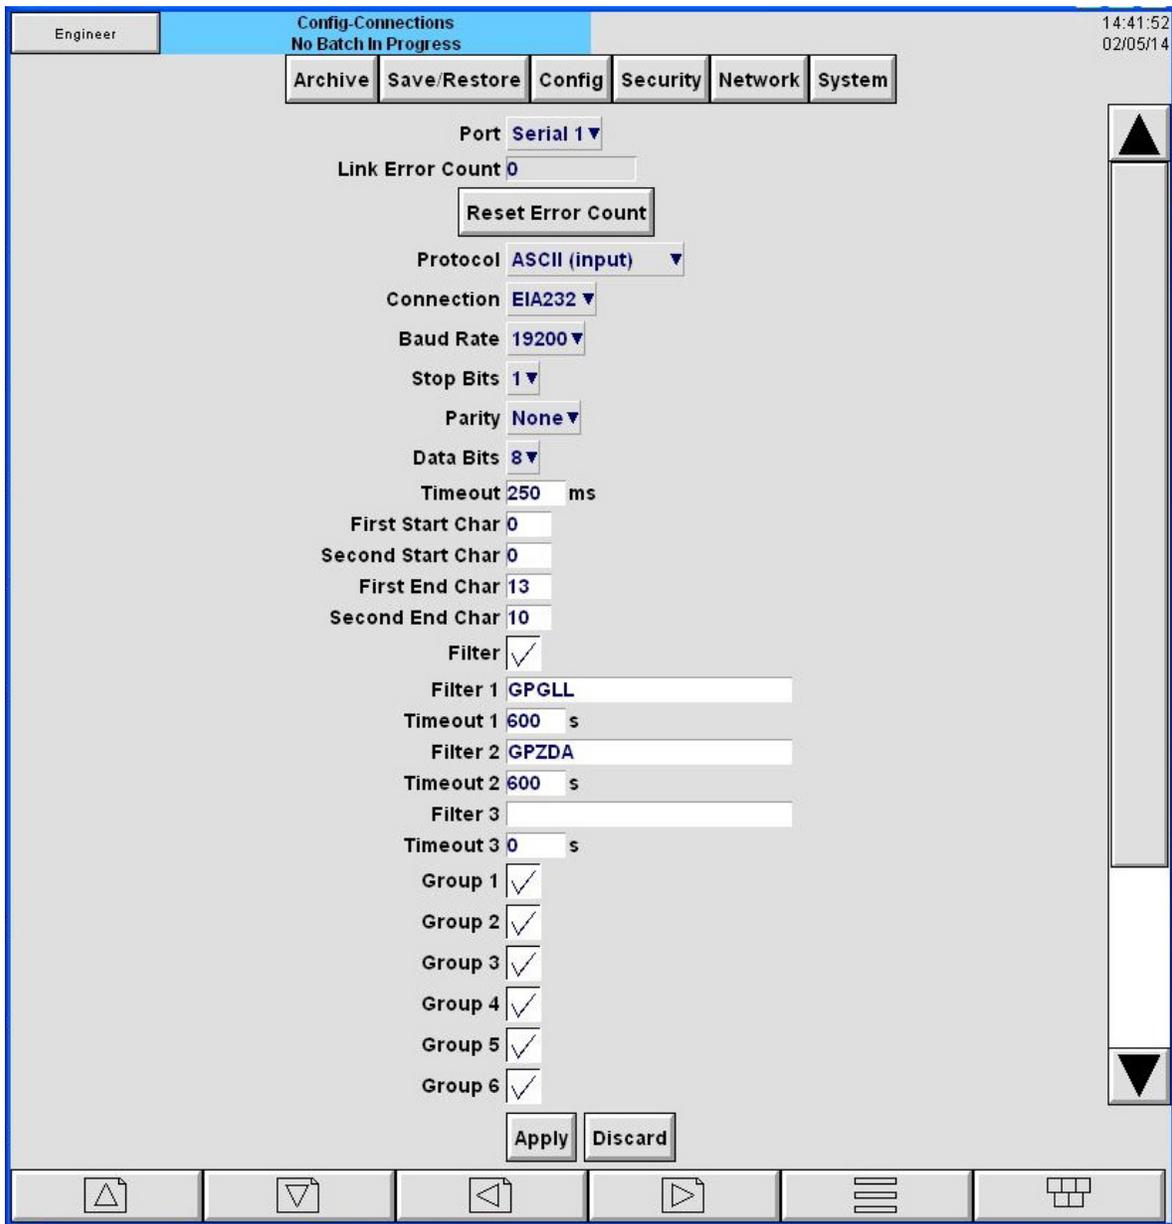

To enable the feature the 'Filter' parameter must be ticked. The filter parameters (1 to 3) will then appear. This is the default.

In the example shown above:

The instrument will respond to incoming messages which contain the characters 'GPGLL' as set in Filter 1 and 'GPZDA' as set in Filter 2.

Filter 3 is not being used as it is a blank string.

---

**Note:** The supported characters for filter strings are ASCII 0x20 to 0x7F excluding the \ and , characters.

---

When used with an unprogrammable receiver which is generating GPS messages typically every second, the 'Timeout' parameter will typically be set to 600 seconds to record required messages every 10 minutes.

When used with a programmable receiver which is configured to generate GPS messages typically every 10 minutes, the 'Timeout' parameter can be set to 0 to disable it, so as to record required messages every 10 minutes.

'Timeout' can be set to different rates for each filter in which case the data will be recorded at the rates set for each filter.

When the instrument reboots the filter timeouts will reset, so the first message received will be recorded (in a new history file), the timeouts will then come into effect.

Filter timeouts will also be reset when the instrument is reconfigured or the clock is changed as per existing "ASCII input" parameters.

## 9.4 IMPORTING PRINTER DRIVERS

The importing of new printer drivers is carried out from the SAVE/RESTORE button menu, fully described in [section 4.2](#). Before a printer driver can be 'imported', it must be available from the recorder's Flash memory, from an SD or Flash card, from a USB memory stick or, for Bridge users, from the host PC. Printer driver files have the suffix .uhi.

Figure 9.4 depicts the process for a recorder.

When using a PC as the operator interface, the detailed appearance of the Host PC browse window depends on the Windows version in use.

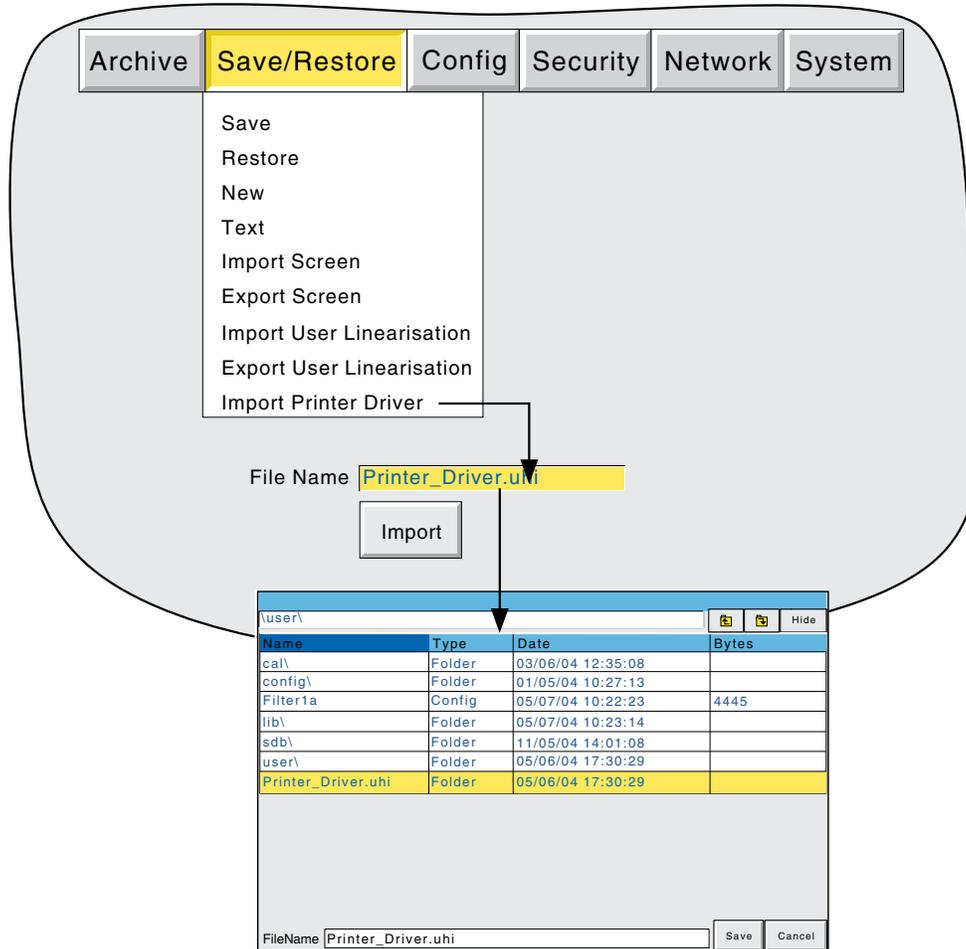


Figure 9.4 Importing a printer driver

## 9.5 REPORT EXAMPLE

This example shows how to configure a report to be printed if any of channel 1 to channel 4 go into alarm. It is assumed that the Serial comms link with the printer has been successfully established.

The report is to include the process values of channels 1 to 4 and the time and date.

---

**Note:** The example assumes that the channels being configured are in their factory default state. Configuration items not mentioned in the example (e.g. Scale Low) should be left at their default values.

---

### 9.5.1 Group Configuration

Refer to [section 4.3.2](#), as necessary.

#### GROUP NUMBER 1

Descriptor = Colour mix.

Alarm message = Disable

Deselect all points except Channels 1 to 4.

### 9.5.2 Channel configuration

Refer to [section 4.3.3](#) as necessary

#### CHANNEL 1

Input Type = Test

Scale High =100

Units = %

Descriptor = Red

#### Alarm 1

Enable = Unlatched

Type = Absolute low

Threshold = 10

#### CHANNEL 2

As channel 1, except

Descriptor = Blue

#### CHANNEL 3

As channel 1, except

Descriptor = Green

#### CHANNEL 4

As channel 1, except

Waveform = Sine 4 minutes

Descriptor = Orange

### 9.5.3 Event Configuration

Refer to [section 4.3.6](#) as necessary

#### EVENT NUMBER 1

Source 1 = Unack'd Alarm on Group

Descriptor = Paint low

Job number 1

Category = Report

Send Report to = Select required printer

Report = 1) report 1

On = Active

### 9.5.4 Report Configuration

Descriptor = Paint Low

Number of fields = 8

Field 1 Type = Text

Text = 'Paint Low Warning'

Style = Banner

Field 2 Type = Line Feed

Line Feed = 2

Field 3 Type = Date & Time

Style = Normal

Field 4 Type = Process Value

Point = Red

Style = Normal

Field 5 Type = Process Value

Point = Blue

Style = Normal

Field 6 Type = Process Value

Point = Green

Style = Normal

Field 7 Type = Process Value

Point = Orange

Style = Normal

Field 8 Type = Line feed

Line Feed = 5

### 9.5.5 Serial Communications Configuration

Enable 'Alarms' in the 'Messages To Print' area.

Press 'Apply'.

A sample Printout is shown in figure 9.5.5, in which it can be seen that it was the Orange channel which triggered the warning.

---

**Note:** In the example above the event trigger is 'Unacknowledged alarm'. This means that once the first channel alarm becomes active and the relevant report printed, then no further reports will be initiated until the alarm is acknowledged, no matter how many other channel alarms go active. If, however, an unlatched alarm becomes inactive, this is the equivalent of its being acknowledged as far as report printing is concerned. For latched alarms, each alarm must be acknowledged before further reports can be triggered.

---

```
*****  
Paint Low Warning  
*****  
  
03/11/04 13:58:03  
Red 73.0625%  
Blue 22.9688%  
Green 20.3125%  
Orange 9.8397%  
  
03/11/04 13:58:03 Alarm(s) on 4(1)
```

Figure 9.5.5 Example printout

## 9.6 TSP600 SWITCH SETTINGS

This section applies only to the Star TSP600 Printer.

The DIP switches are revealed by removing the access panel located on the underside of the printer. The two switches appear as shown in figure 9.6a, and their elements should be configured as shown in figure 9.6b. See SW1/SW2 details in the TSP600 'User's guide' for details.

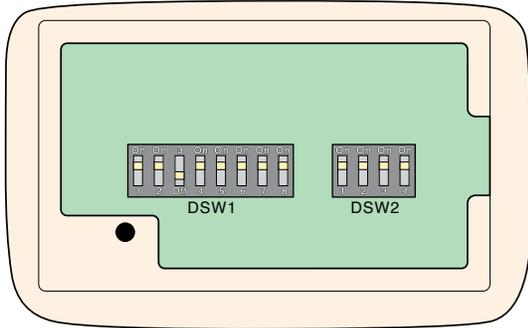


Figure 9.6a DIP switch access

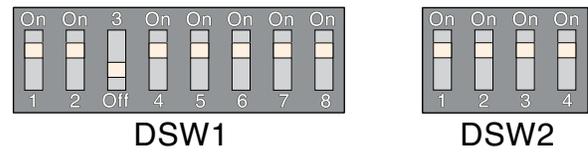


Figure 9.6b DIP switch element configuration

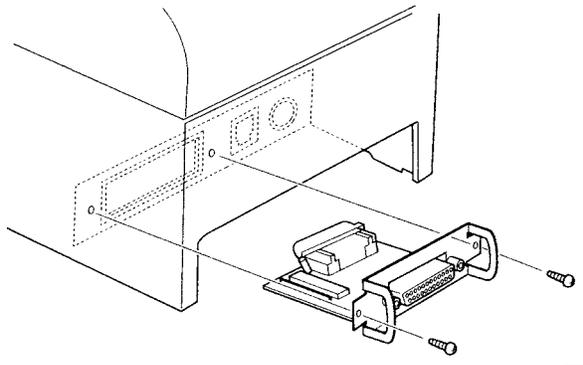


Figure 9.6c SW3 location

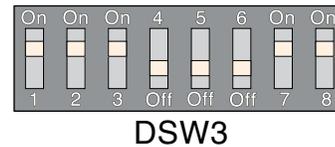


Figure 9.6d SW3 settings

The illustrated switch settings (segments 4, 5 and 6 'Off'; all other segments 'On') give the following parameter values: Baud Rate = 9600, Data bits = 8, Parity = Even, Handshake = Xon/Xoff.

Settings other than these may result in no communications or unreliable communications with the printer. See the TSP600 'User's guide' for more details of SW3.

## **ANNEX A: SPECIFICATION**

### **INSTALLATION CATEGORY AND POLLUTION DEGREE**

This product has been designed to conform to BS EN61010 installation category II and pollution degree 2. These are defined as follows:

#### **Installation category II**

The rated impulse voltage for equipment on nominal 230V ac mains is 2500V.

#### **Pollution degree 2**

Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation shall be expected.

## A1 TECHNICAL SPECIFICATION (Recorder)

### Standard features

Bridge 'Lite'  
 Configuration Copy  
 CSV Archive file format  
 E-mail  
 File transfer protocol (FTP)  
 6 Groups  
 Job search  
 Log scales  
 MODBUS TCP  
 Master communications (16 slaves)  
 Messages  
 Timers  
 USB port  
 Web server

### Options

Software: Audit trail  
 21CFR11Audit  
 Batch Recording  
 Bridge 'Full' version  
 EtherNet/IP Server (adapter)  
 Event Buttons (supplied as a part of the Screen Builder option)  
 Master communications (32 slaves)  
 Maths/Totalisers/Counters  
 Multiple groups (six additional groups)  
 Screen Builder (User screens)  
 Security Manager  
 Simulation  
 History Maintenance

### Environmental Performance

Temperature limits	Operation:	0 to 50°C.
	Storage:	- 20 to +60°C
Humidity limits	Operation:	5% to 80% RH non - condensing
	Storage:	5% to 90% RH non - condensing
Altitude (maximum)		<2000 metres
Protection	Bbezel/display:	IP65 for a recorder mounted in a panel.
	Sleeve:	IP20
Shock		BS EN61010
Vibration (10 Hz to 150Hz)		1g peak

### Physical

Panel mounting		DIN 43700
Bezel size	Small frame:	144mm x 144mm
	Large frame:	288mm x 288mm
Panel cutout	Small frame:	138mm x 138mm (-0.0 + 1.0) mm
	Large frame:	282mm x 282mm (-0.0 + 1.0) mm
Depth behind bezel	Small frame:	87.7mm
	Large frame:	70.4mm
Weight	Small frame:	1.5 kg
	Large frame:	3.7 kg
Mounting angle		Vertical

### Electromagnetic compatibility (EMC)

Emissions and immunity: BS EN61326

### Electrical safety

BS EN61010. [Installation category II, Pollution degree 2](#)

## A1 TECHNICAL SPECIFICATION (Cont.)

### Power requirements

Voltage range:	19.2 to 28.8V dc. (24V dc $\pm$ 20%)
Ripple:	1 V max.
Max. power requirement (at 24V):	Small frame = 20 W; Large frame 24 W
Operating current (at 24V):	Small frame = 0.8 A; Large frame = 1Amp
Inrush current:	10 A max.
User termination:	4-way connector
Internal fusing:	No user replaceable fuses.

### Back-up battery

Type	Poly-carbonmonofluoride/lithium (BR2330). Part Number PA261095. See also <a href="#">section B2.2</a> .
Support time	A new battery supports the Real-Time Clock for a minimum of 1 year with the recorder unpowered
Replacement period	3-years
Stored data	Time; date; values for totalisers, counters and timers; batch data; values for those maths functions with history, such as Fvalue, Rolling average, Stopwatch etc.

### Clock (RTC) data

Temperature stability	0 to 50°C:	$\pm$ 20 ppm
Ageing		$\pm$ 5 ppm per year

### Touch screen

Colour TFT LCD with cold-cathode backlighting, fitted with resistive, analogue, touch panel	
Screen specification	Small frame: 1/4 VGA Resolution = 320 x 240 pixels
	Large frame: XGA Resolution= 1024 x 768 pixels

### Update information

Input sample rate:	8 Hz.
Display update:	8 Hz,
Archive sample value:	Latest value at archive time
Trended/displayed value:	Latest value at display update time

### Ethernet Communications

Type	10/100 base T (IEEE802.3)
Protocols	TCP/IP, FTP, DHCP, BootP, Modbus, ICMP.
Cable	Type: CAT5
	Maximum length: 100 metres
	Termination: RJ45
Isolation	IEEE802.3
RJ45 LED indicators	Green: Indicates a 100MB link
	Yellow: Indicates Ethernet activity

### Serial communications option

Number of ports	Two, at the rear of the recorder, on the underside
Protocol	ASCII input, Modbus master, Modbus slave. (Master/slave selected by switch settings as described in <a href="#">section 2.2.2</a> )
Transmission standards	EIA485 (3-wire or 5-wire selected by switch settings as described in <a href="#">section 2.2.2</a> )
Isolation	Functional
RJ45 LED indicators	Green: Indicates 5-wire working
	Yellow: Indicates recorder transmit activity

**TECHNICAL SPECIFICATION (RECORDER) (Cont.)**

---

**USB ports**

Number of ports	1 at the rear of the recorder, on the underside USB1.1
Transmission speeds	12Mbits/sec (full speed devices) or 1.5Mbits/sec (low speed devices)
Maximum current available	500 mA
Peripherals supported	Floppy disk drive, Keyboard, Bar code reader, Mouse, memory stick.

---

Note: The recorder meets the industrial EMC requirements of BS EN61326. Typically, USB peripherals are tested to domestic information technology standards (BS EN55022) with category C performance. Some USB peripherals, designed for use in domestic or office environments, can be susceptible to 'lock up' in environments containing high electromagnetic field strengths. In order to recover from such 'lock up' situations, the peripheral must be disconnected and then reconnected. Recorder operation is not affected.

---

**Other items**

---

Virus susceptibility	The 6000 series VxWorks operating system is immune to viruses targeted at Windows based operating systems. As at July 2006, there are no known viruses that target VxWorks.
Calibration coefficients	Instrument configuration is held in FLASH memory and has no effect on calibration coefficients.

## ANNEX B: REFERENCE

### B1 DIAGNOSTICS DISPLAY

#### B1.1 MAIN DIAGNOSTIC DISPLAY

At power-up, continuously hold a finger in contact with the screen until the main diagnostic display appears as shown in figure B1.1

Special Modes	Display Test
Touch Calibration	System Summary
Diag Summary	Quit

Figure B1.1b Top-level diagnostic display

## B1.2 SPECIAL MODES

For factory use only, selecting 'Special Modes' allows the enabling and disabling of the Sales Demo mode of operation.



An 'S' symbol is displayed at the top of the screen whilst the recorder is in sales demo mode.

## B1.3 DISPLAY TEST

Selecting this option, allows the user to check the display by flooding the screen with single colours. Repeatedly touching the screen, scrolls through the following colour sequence: Black, White, Red, Green, Blue, Cyan, Magenta, Yellow. A further operation of the touch screen returns the main diagnostic screen.

## B1.4 TOUCH CALIBRATION

Touching this key calls a selection screen as shown below:

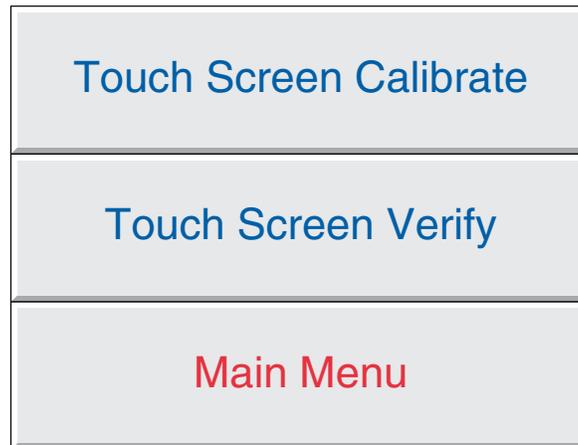


Figure B1.4 Touch screen selections

### B1.4.1 Touch screen calibrate

This key initiates the display calibration (offset correction) procedure. This procedure ensures that the display screen image is positioned correctly compared with the touch screen (so that 'what you touch is what you get'). The procedure, is necessary only rarely, if at all, and is included here only for the sake of completeness.

1. Operate the 'Touch Screen Calibrate' key to call the first calibration screen, as depicted in figure B1.4.1
2. Using the stylus, touch the intersection of the upper set of crosshairs, as requested by the display and keep touching it until the next target appears.
3. Continue the process, according to the directions appearing on the screen. Once all the 'targets' have been accepted, the recorder returns to the diagnostic display.



Figure B1.4.1 Initial calibration display

### B1.4.2 Touch screen verify

This allows the user to check the accuracy of the touch screen without having to carry out the calibration procedure described above.

Touching the screen with the stylus produces a crosshair at the position the recorder believes the screen to have been touched. It is up to the user to decide if the response is good enough for recorder operation. After a few seconds of non-operation, the recorder returns to the top level touch screen display (figure 1.4).

### B1.4.3 Main menu

Touching this returns the user to the top level diagnostics screen ([Figure B1.1](#))

## B1.5 SYSTEM SUMMARY

This key calls a system summary display, as shown for a typical small-frame recorder, in figure B1.5.

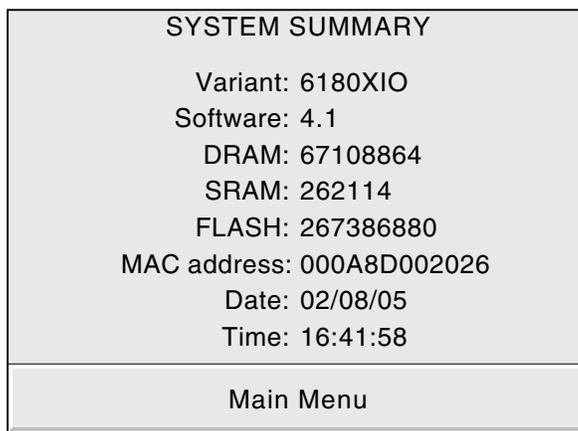


Figure B1.5 System summary display

## B1.6 DIAG SUMMARY

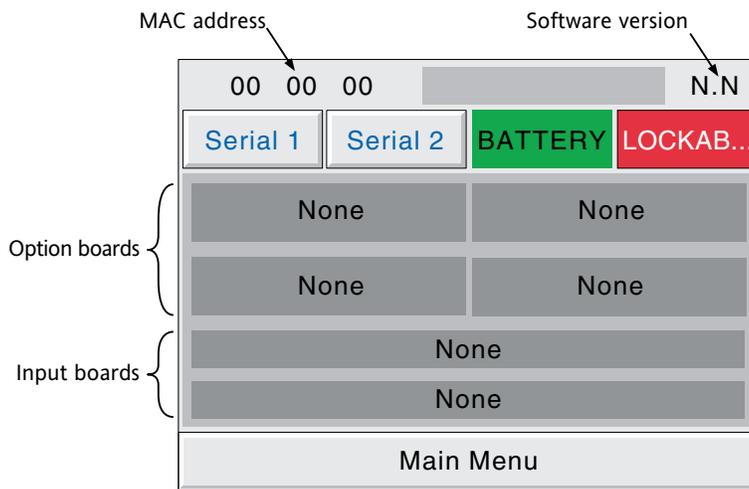


Figure B1.6 Diag Summary (small frame recorder - large frame similar)

### B1.6.1 MAC Address

Each instrument is allocated a unique hex address as a part of the manufacturing process. The display at the top left of the display screen shows the final 6 characters of this address. The full address can be found in the System Summary display, described above, or in the Network\Name display described in [section 4.5.1](#).

### B1.6.2 Software version number

This shows the version number of the software fitted to the recorder.

### **B1.6.3 Serial 1/Serial 2**

Touching one of these keys performs a loopback test on the relevant Serial port. In order for the test to be successful, the port under test must be set to 5-wire working ([section 2.2.2](#)), and an RJ45 connector with pins 1 and 7 shorted together, and pins 2 and 8 shorted together must be inserted into the relevant serial port.

The test will result in the legend 'S1(2) Passed' or 'S1(2) Failed' replacing 'Serial 1' or 'Serial 2' on the appropriate key.

### **B1.6.4 Battery**

This area, normally green, flashes red/white when the battery needs to be replaced ([section B2](#)). Battery status is checked once every 15 minutes.

### **B1.6.5 Lockable**

Not applicable to this recorder model.

### **B1.6.6 Option boards**

Always shows 'None'.

### **B1.6.7 Input boards**

Always shows 'None'.

### **B1.6.8 Main menu**

To return to the main diagnostics display, touch the 'Main Menu' key.

## **B1.7 QUIT**

Allows the user to quit diagnostics (after confirmation). The recorder restarts in normal operating mode.

## **B2 PREVENTIVE MAINTENANCE**

### **B2.1 TOUCH SCREEN CLEANING**

---

#### **CAUTION**

The touch-sensitive screen used in this product is designed for use by hand or by the stylus supplied only. The use of sharp or pointed implements such as pens, keys and fingernails to operate the instrument must be avoided, or irreparable damage will be done to the surface material. When cleaning the touch-screen, a moist cloth should be used, if necessary with a minimal amount of mild soap solution.

**ALCOHOLS SUCH AS ISOPROPYL ALCOHOL MUST NEVER BE USED ON THE SCREEN.**

---

### **B2.2 MAINTENANCE SCHEDULE**

Battery replacement - Every three years

## B2.2.1 BATTERY REPLACEMENT PROCEDURE



### CAUTION

The user must be at the same electrical potential as the instrument housing when accessing the battery.

Note: All battery backed RAM data is lost during battery change unless power to the unit is maintained during the change (see Annex A for details of stored data).

The battery is of poly-carbonmonofluoride/lithium construction and should be disposed of according to local regulations covering this type of battery.

1. Remove the screw securing the access cover to the rear of the instrument, and carefully remove the cover.
2. The battery can now be replaced,

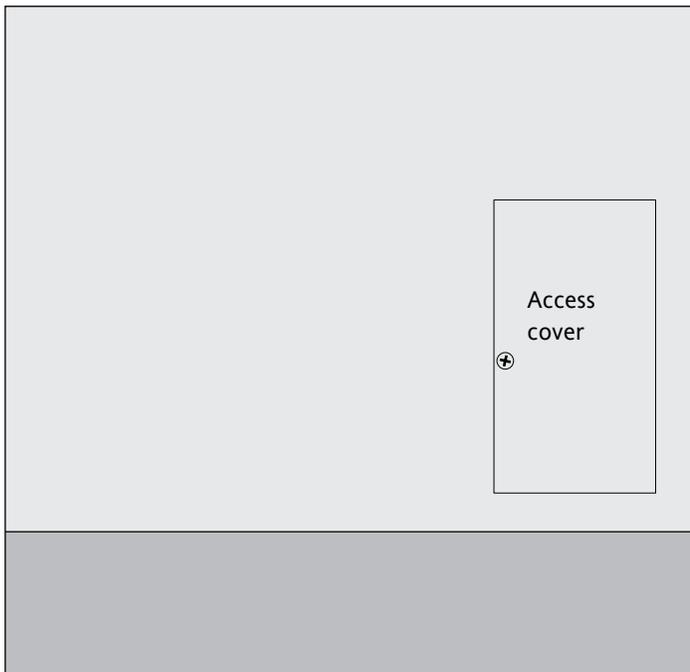


Figure B2.2.1a Access cover location - large frame unit


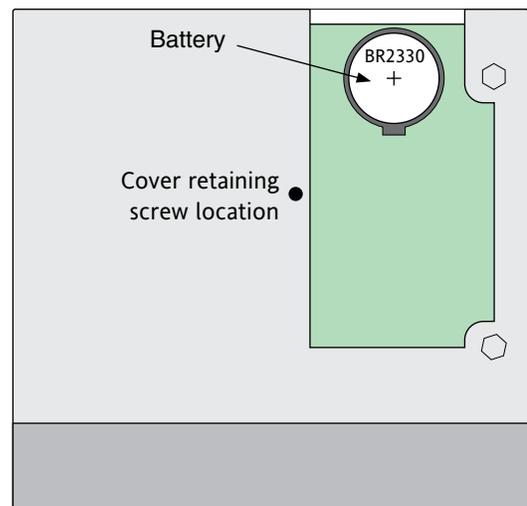


Figure B2.2.1b Battery location - small frame unit  
(Access cover removed)

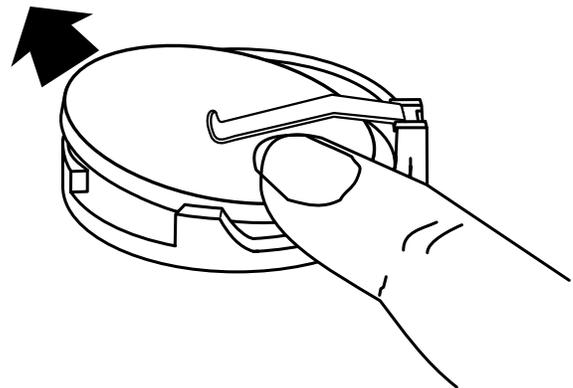

### Notes:

1. Battery type is BR2330 Poly-carbonmonofluoride/lithium. Available from the recorder manufacturer under part number PA261095.
2. Dispose of exhausted batteries in accordance with local regulations regarding this battery type.

### B3 OPTION ENABLING

See 'Upgrade' in [section 4.6.3](#).

### B4 COLOUR SELECTION

The following table, gives RGB values and decimal and hex numbers for the available channel colours. Normally, this table is necessary only when communicating over the Modbus link.

---

Note: Colour representation varies from screen to screen. For this reason, it is unlikely that the colour on a PC will match those on these pages or those on the recorder display.

---

## B4 COLOUR SELECTION (Cont.)

 
	Colour	Red	Green	Blue	Decimal	Hex
	Red	255	0	0	0	00
	Blue	0	0	255	1	01
	Green	0	255	0	2	02
	Honey	255	191	0	3	03
	Violet	170	321	153	4	04
	Russet	170	95	0	5	05
	Dark Blue	0	0	102	6	06
	Jade	0	95	0	7	07
	Magenta	255	0	102	8	08
	Dusky Rose	255	95	51	9	09
	Yellow	255	255	255	10	0A
	Powder Blue	85	63	255	11	0B
	Dark Red	170	0	0	12	0C
	Avocado	0	233	102	13	0D
	Indigo	85	0	102	14	0E
	Dark Brown	85	63	0	15	0F
	Ægean	0	63	51	16	10
	Cyan	0	255	255	17	11
	Aubergine	85	0	51	18	12
	Dark Orange	255	63	0	19	13
	Pale Yellow	255	255	51	20	14
	Hyacinth	170	0	51	21	15
	Dark Green	0	63	0	22	16
	Sugar Pink	255	31	204	23	17
	Bluebell	85	31	255	24	18
	Orange	255	95	0	25	19
	Pink	255	159	255	26	1A
	Buttermilk	255	255	102	27	1B

Table B4, sheet 1: Colour definitions 0 to 27

## B4 COLOUR SELECTION (Cont.)

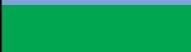
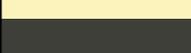
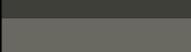
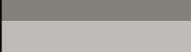
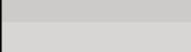
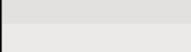
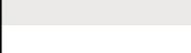
	Colour	Red	Green	Blue	Decimal	Hex
	Terracotta	170	63	0	28	1C
	Blue Babe	85	95	255	29	1D
	Lime	0	223	0	30	1E
	Blue Jive	85	31	204	31	1F
	Cucumber	0	255	153	32	20
	EuroGreen	67	107	103	33	21
	Wheatgerm	255	223	51	34	22
	Sea Blue	85	159	255	35	23
	Ginger	255	159	0	36	24
	Aqua Pool	0	63	255	37	25
	Pale Red	255	63	51	38	26
	Pale Blue	85	127	255	39	27
	Lilac	170	0	255	40	28
	Sky Blue	85	191	255	41	29
	Wild Moss	0	127	0	42	2A
	Turquoise	0	127	153	43	2B
	Pale Green	85	255	153	44	2C
	Coffee	170	127	0	45	2D
	Wicker	255	255	191	46	2E
	Black	0	0	0	47	2F
	Dark Dark Grey	48	48	48	48	30
	Dark Grey	64	64	64	49	31
	Grey	128	128	128	50	32
	Light Light Dark Grey	154	154	154	51	33
	Light Dark Grey	172	172	172	52	34
	Light Grey	192	192	192	53	35
	Light Light Grey	212	212	212	54	36
	White	255	255	255	55	37

Table B4, sheet 2: Colour definitions 28 to 55

## B5 TCP PORT NUMBERS

The following TCP ports are made use of by the recorder. (This information would be needed by anyone involved in setting up 'firewalls', which may be used selectively to block incoming or outgoing access to specific ports.)

PORT	Usage
20	File Transfer Protocol - data and Bridge communications
21	File Transfer Protocol - control and Bridge communications
25	E-mail; SMTP
80	Web access
123	SNTP server
502	Modbus/TCPIP communications
1264	Bridge communications - general
2222	EtherNet/IP communications
44818	EtherNet/IP communications
50010	Bridge communications - trend review

## B6 ASCII CHARACTERS FOR SERIAL COMMS

This section contains details of the ASCII characters that may be used with the Serial Comms option. All the ASCII characters listed can be used as Start or End-of-message characters, but only characters with decimal codes 32 to 127 can be used in messages, as decimal codes 0 to 31 are replaced by Question marks in messages.

Character	Decimal	Hex	Character	Decimal	Hex	Character	Decimal	Hex	Character	Decimal	Hex
NUL	0	00	Space	32	20	@	64	40	'	96	60
SOH	1	01	!	33	21	A	65	41	a	97	61
STX	2	02	"	34	22	B	66	42	b	98	62
ETX	3	03	#	35	23	C	67	43	c	99	63
EOT	4	04	\$	36	24	D	68	44	d	100	64
ENQ	5	05	%	37	25	E	69	45	e	101	65
ACK	6	06	&	38	26	F	70	46	f	102	66
BEL	7	07	'	39	27	G	71	47	g	103	67
BS	8	08	(	40	28	H	72	48	h	104	68
HT	9	09	)	41	29	I	73	49	i	105	69
LF	10	0A	*	42	2A	J	74	4A	j	106	6A
VT	11	0B	+	43	2B	K	75	4B	k	107	6B
FF	12	0C	,	44	2C	L	76	4C	l	108	6C
CR	13	0D	-	45	2D	M	77	4D	m	109	6D
SO	14	0E	.	46	2E	N	78	4E	n	110	6E
SI	15	0F	/	47	2F	O	79	4F	o	111	6F
DLE	16	10	0	48	30	P	80	50	p	112	70
DC1	17	11	1	49	31	Q	81	51	q	113	71
DC2	18	12	2	50	32	R	82	52	r	114	72
DC3	19	13	3	51	33	S	83	53	s	115	73
DC4	20	14	4	52	34	T	84	54	t	116	74
NAK	21	15	5	53	35	U	85	55	u	117	75
SYN	22	16	6	54	36	V	86	56	v	118	76
ETB	23	17	7	55	37	W	87	57	w	119	77
CAN	24	18	8	56	38	X	88	58	x	120	78
EM	25	19	9	57	39	Y	89	59	y	121	79
SUB	26	1A	:	58	3A	Z	90	5A	z	122	7A
ESC	27	1B	;	59	3B	[	91	5B	{	123	7B
FS	28	1C	<	60	3C	\	92	5C		124	7C
GS	29	1D	=	61	3D	]	93	5D	}	125	7D
RS	30	1E	>	62	3E	^	94	5E	~	126	7E
US	31	1F	?	63	3F	_	95	5F	Not printed	127	7F

### Notes:

- 1 All the above characters can be used as Start or End-of-message characters (entered in decimal)
- 2 If characters 0 to 31 ( 00 to 1F) are used as message characters, they will be replaced by question marks on the screen.

## B7 TIME ZONE INFORMATION

This section gives an explanation of the time zone abbreviations listed in the System/Locale/Time Zone pick list. The list starts at GMT, travelling Eastwards round the world.

Abbreviation	Full title	Time at noon GMT	Hours of difference
GMT	Greenwich mean time .....	12:00	0
UTC	Co-ordinated Universal time .....	12:00	0
ECT	Central European time .....	13:00	+1
EET	Eastern European time .....	13:00	+1
ART	Arabic standard time .....	14:00	+2
EAT	Eastern African time .....	15:00	+3
MET	Middle East time .....	15:30	+3.5
NET	Near East time .....	16:00	+4
PLT	Pakistan Lahore time .....	17:00	+5
IST	India standard time .....	17:30	+5.5
BST	Bangladesh standard time .....	18:00	+6
VST	Vietnam standard time .....	19:00	+7
CTT	China Taiwan time .....	20:00	+8
JST	Japan standard time .....	21:00	+9
ACT	Australia Central time .....	21:30	+9.5
AET	Australia Eastern time .....	22:00	+10
SST	Solomon standard time .....	23:00	+11
NST	New Zealand standard time .....	24:00	+12
MIT	Midway Islands time .....	01:00	-11
HST	Hawaii standard time .....	02:00	-10
AST	Alaska standard time .....	03:00	-9
PST	Pacific standard time .....	04:00	-8
PNT	Phoenix standard time .....	05:00	-7
MST	Mountain standard time .....	05:00	-7
CST	Central standard time .....	06:00	-6
EST	Eastern standard time .....	07:00	-5
IET	Indiana Eastern standard time .....	07:00	-5
PRT	Puerto Rico and US Virgin Islands time	08:00	-4
CNT	Canada Newfoundland time .....	08:30	-3.5
AGT	Argentina standard time .....	09:00	-3
BET	Brazil Eastern time .....	09:00	-3
CAT	Central African time .....	11:00	-1

## B8 HISTORY MAINTENANCE OPTION

This option, which must be specified at time of order, is intended for use by hire companies etc. who have a requirement to remove all customer data from recorders which are not fitted with the 'Simulator' option (which includes an 'Erase all history' job). See [section 4.3.22](#) for a description of the Simulator option.

The erase history procedure consists of entering a special keycode into the System\Upgrade\Key Code area ([section 4.6.3](#)) and operating the 'Apply' button.

### CAUTION

The option should be used with discretion, as once the history has been erased, it can never be regained.

### B8.1 KEYCODE EXTRACTION

#### Notes:

1. This operation can be carried out only from the recorder's operator interface. It is not possible to extract the keycode or to erase history from a remote pc.
  2. To be able to carry out the procedure below, users must have 'Paste/Delete Files' permission enabled in the 'Security' menu ([section 4.4.1](#)).
  3. The keycode displayed in the System/Upgrade menu returns to its previous value after a history erase operation.
  4. This option is not enabled during Trial Mode ([section 4.3.22](#))
- 
1. Recorders fitted with this option come complete with a file called 'HMT.TXT' in the 'user/' area of the filing system, accessed as described in [section 5](#).
  2. Highlight this file, and copy it using the Filer Options menu 'Copy' key.
  3. With a memory device (e.g. Memory stick) inserted, use the Filer Options menu 'Paste' key to save the file into the removable media area.
  4. Move the storage device from the recorder to a pc, and open the file in an appropriate program (e.g. 'Notebook') to reveal a key code.
  5. This keycode can be kept in a secure area for re-use in subsequent erase operations for this recorder.

Filer Options	
New	Delete
Cut	Copy
Paste	Refresh

Figure B8.1  
Filer option menu

## B8.2 ERASING HISTORY

1. Enter the key code into the recorder's System\Upgrade\Key Code area and operate the 'Apply' button.
2. Operate the 'Ok' button in the dialogue box (figure B8.2). This initiates the erasure of the recorder's history files, after which the recorder restarts.

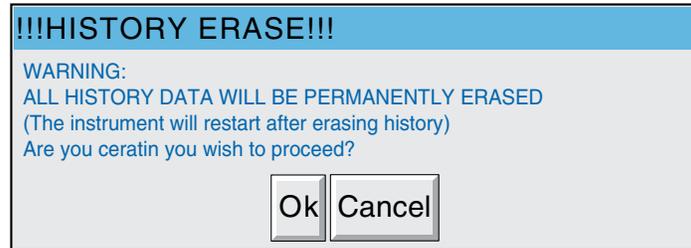


Figure B8.2 Confirmation dialogue box

---

Note: This operation erases only the recorder's history files; the recorder's configuration remains unchanged. The Save/Restore 'New' selection ([section 4.2](#)), with all tickboxes ticked must be used to reset the configuration to default values (if required).

---

B9 MENU STRUCTURE

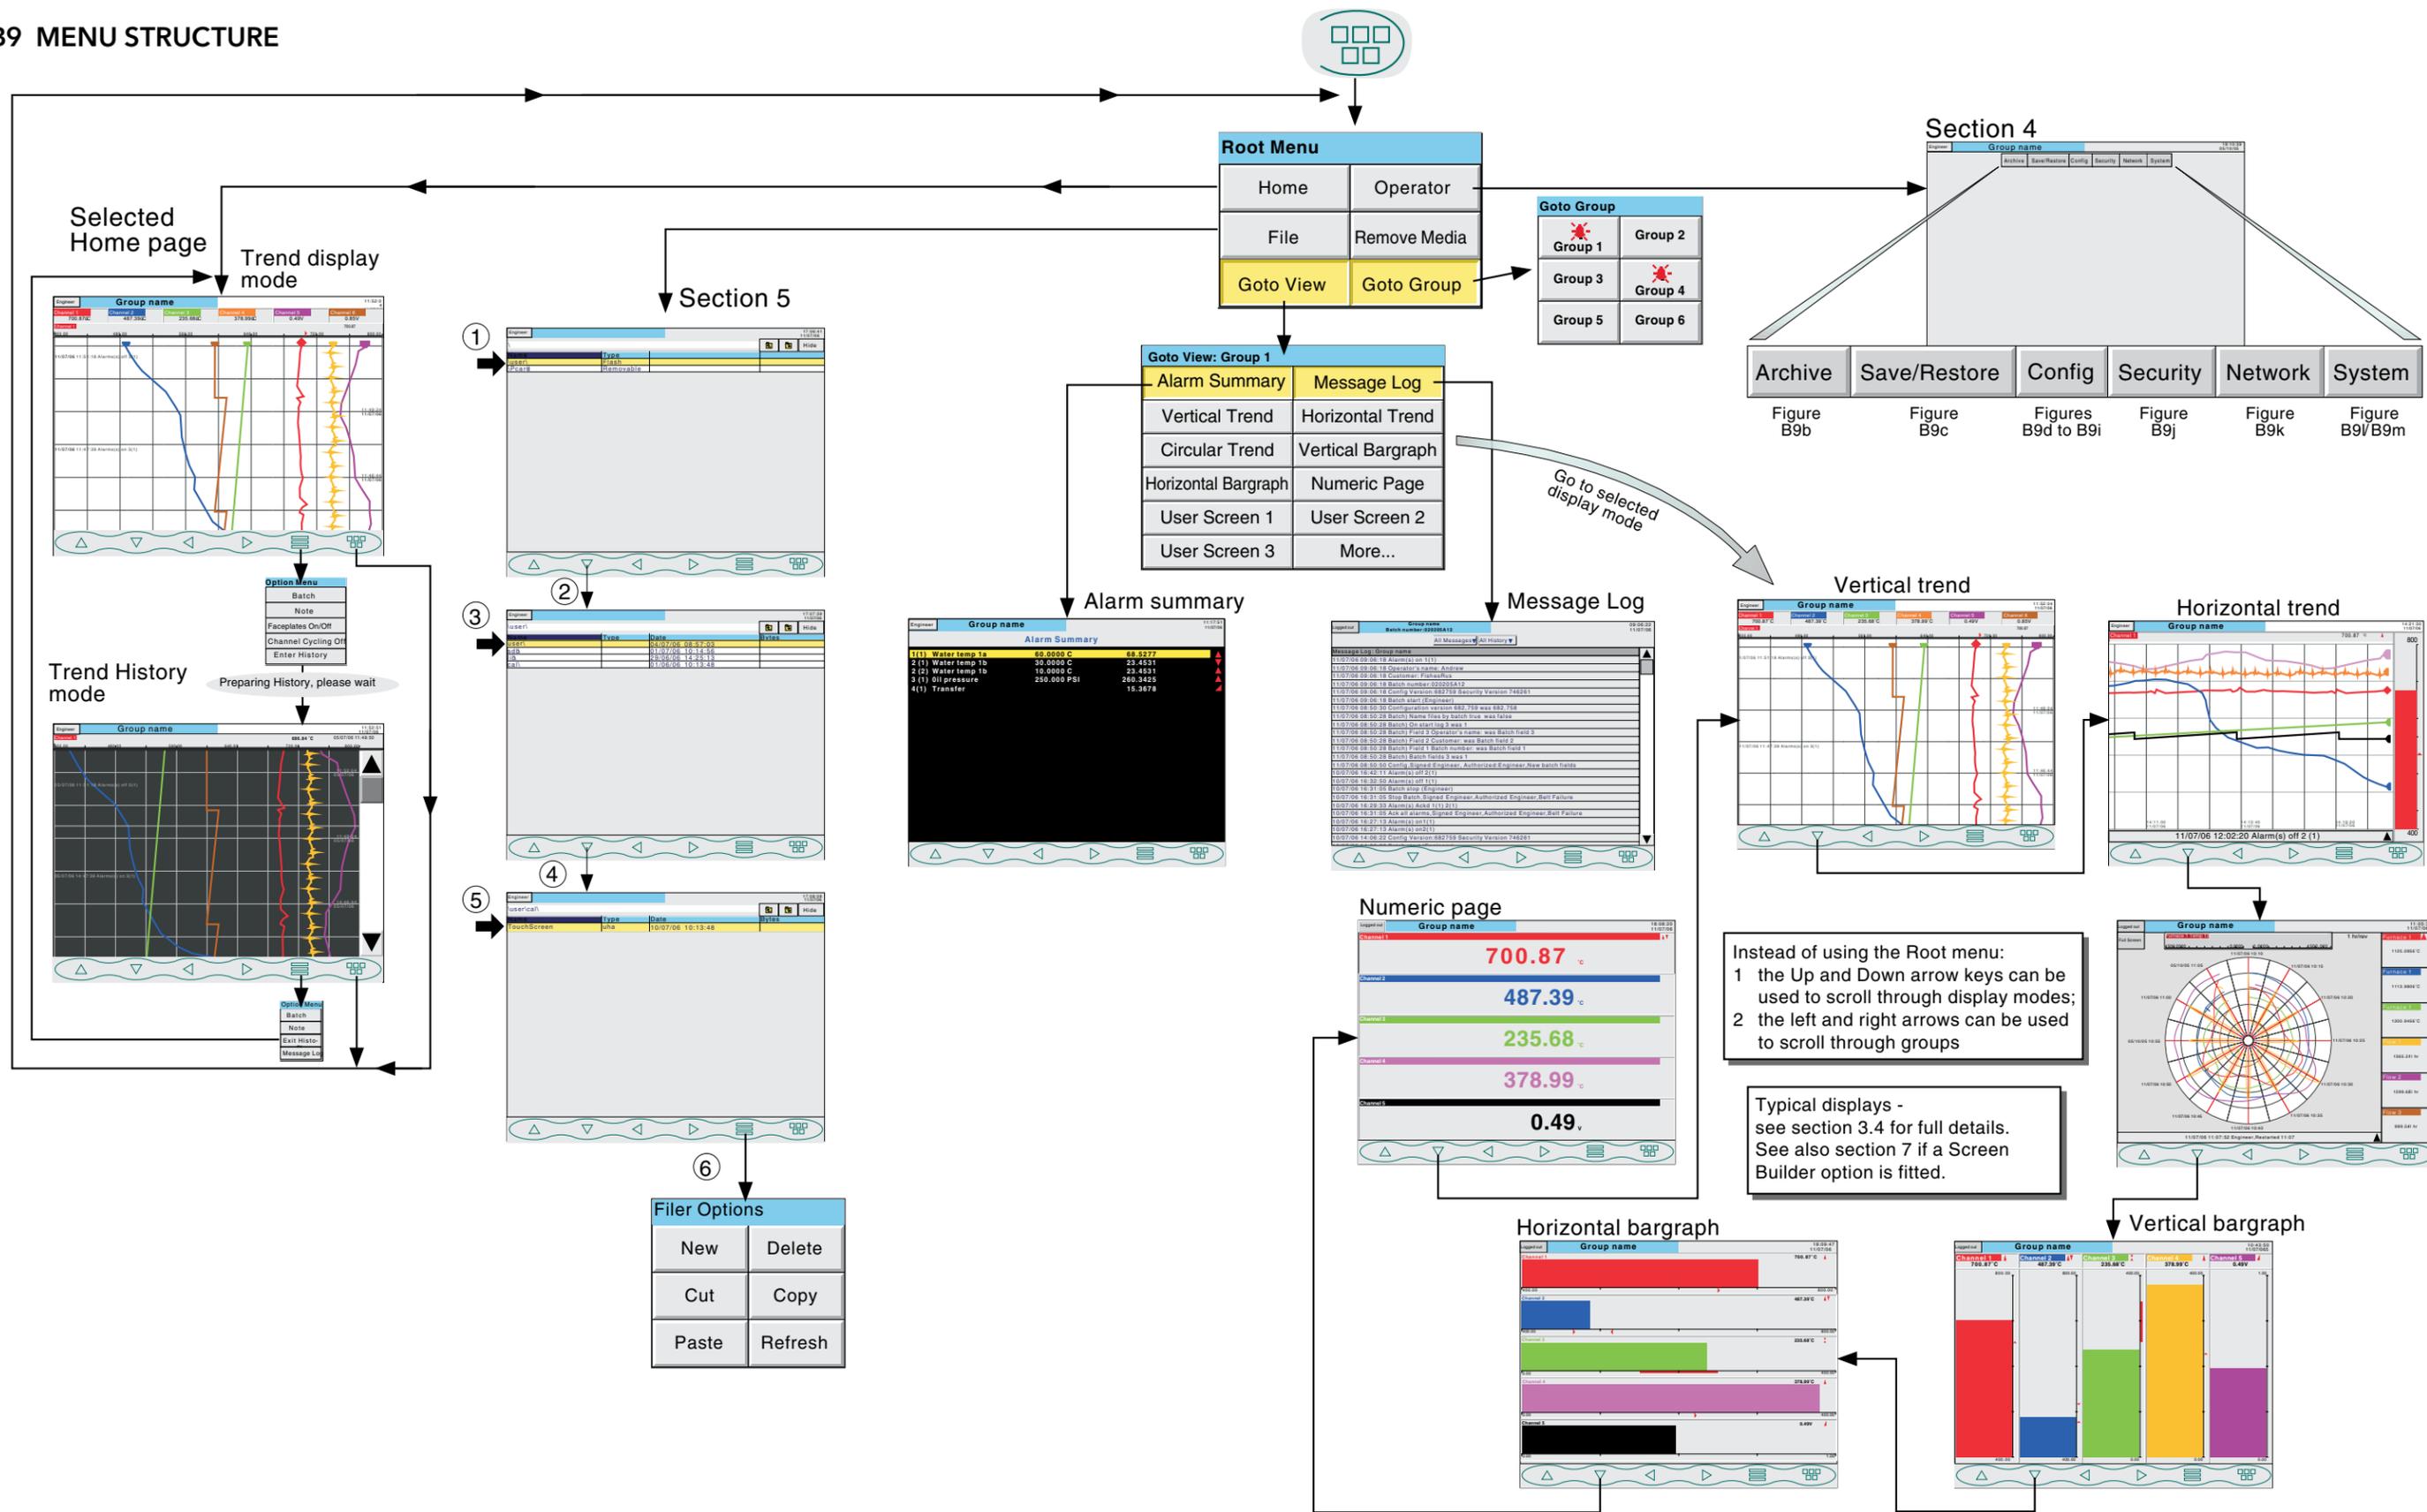


Figure B9a Root key menu structure

B9 MENU STRUCTURE (Cont.)


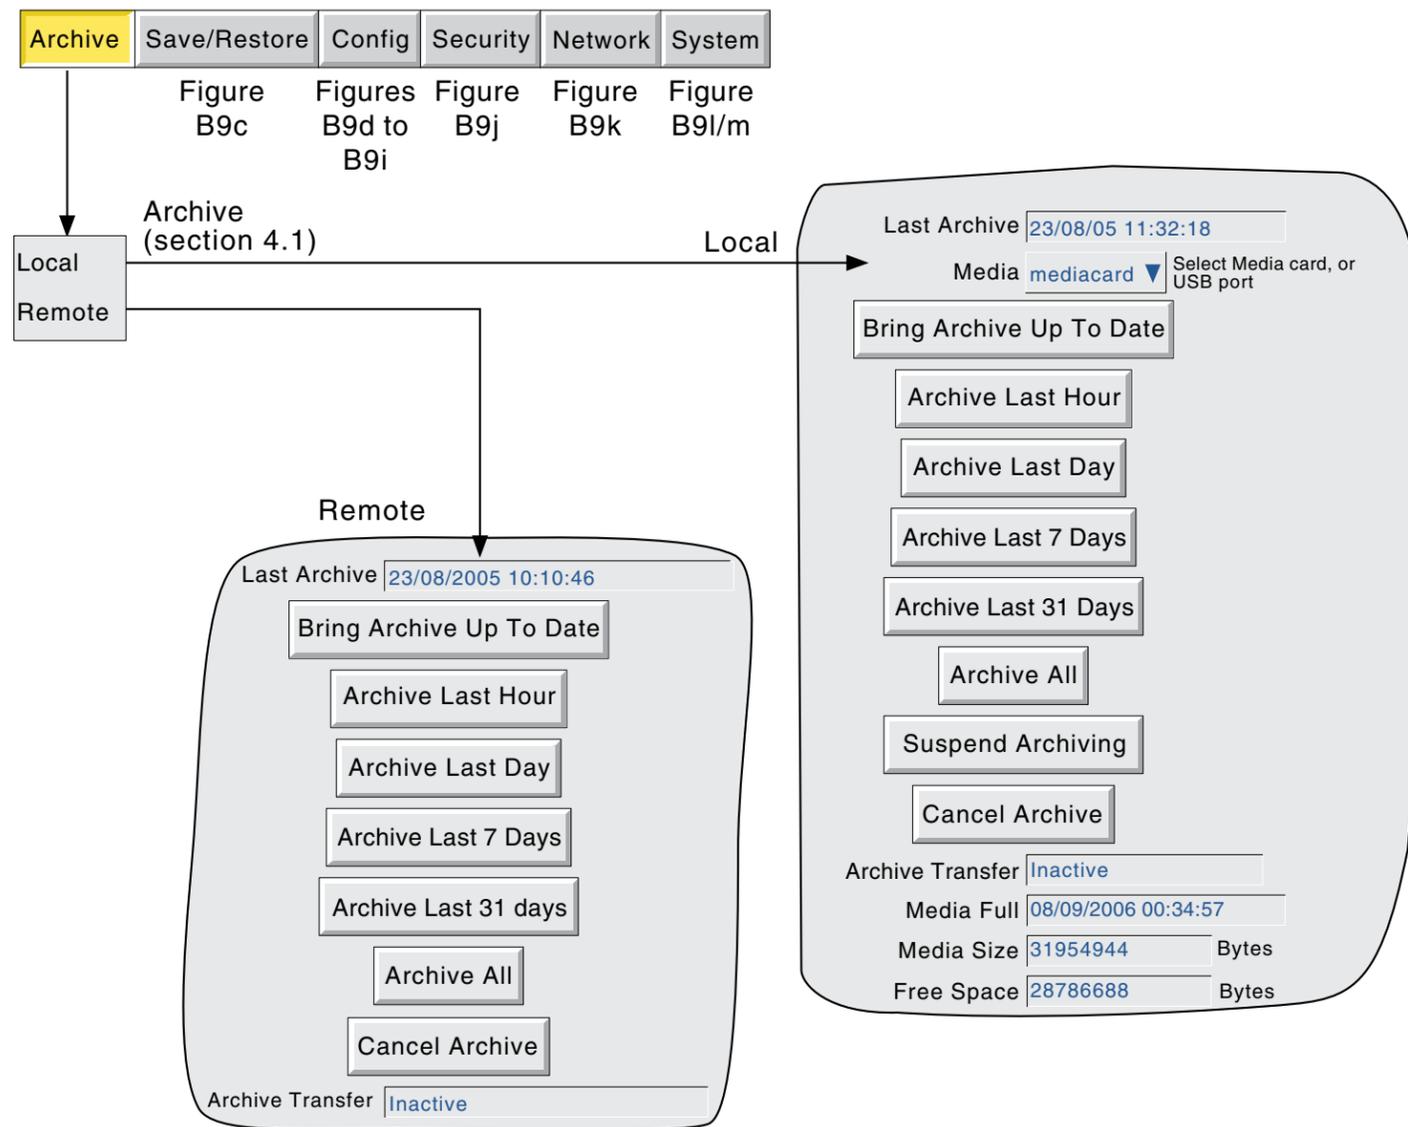


Figure B9b Archive key menu structure

B9 MENU STRUCTURE (Cont.)

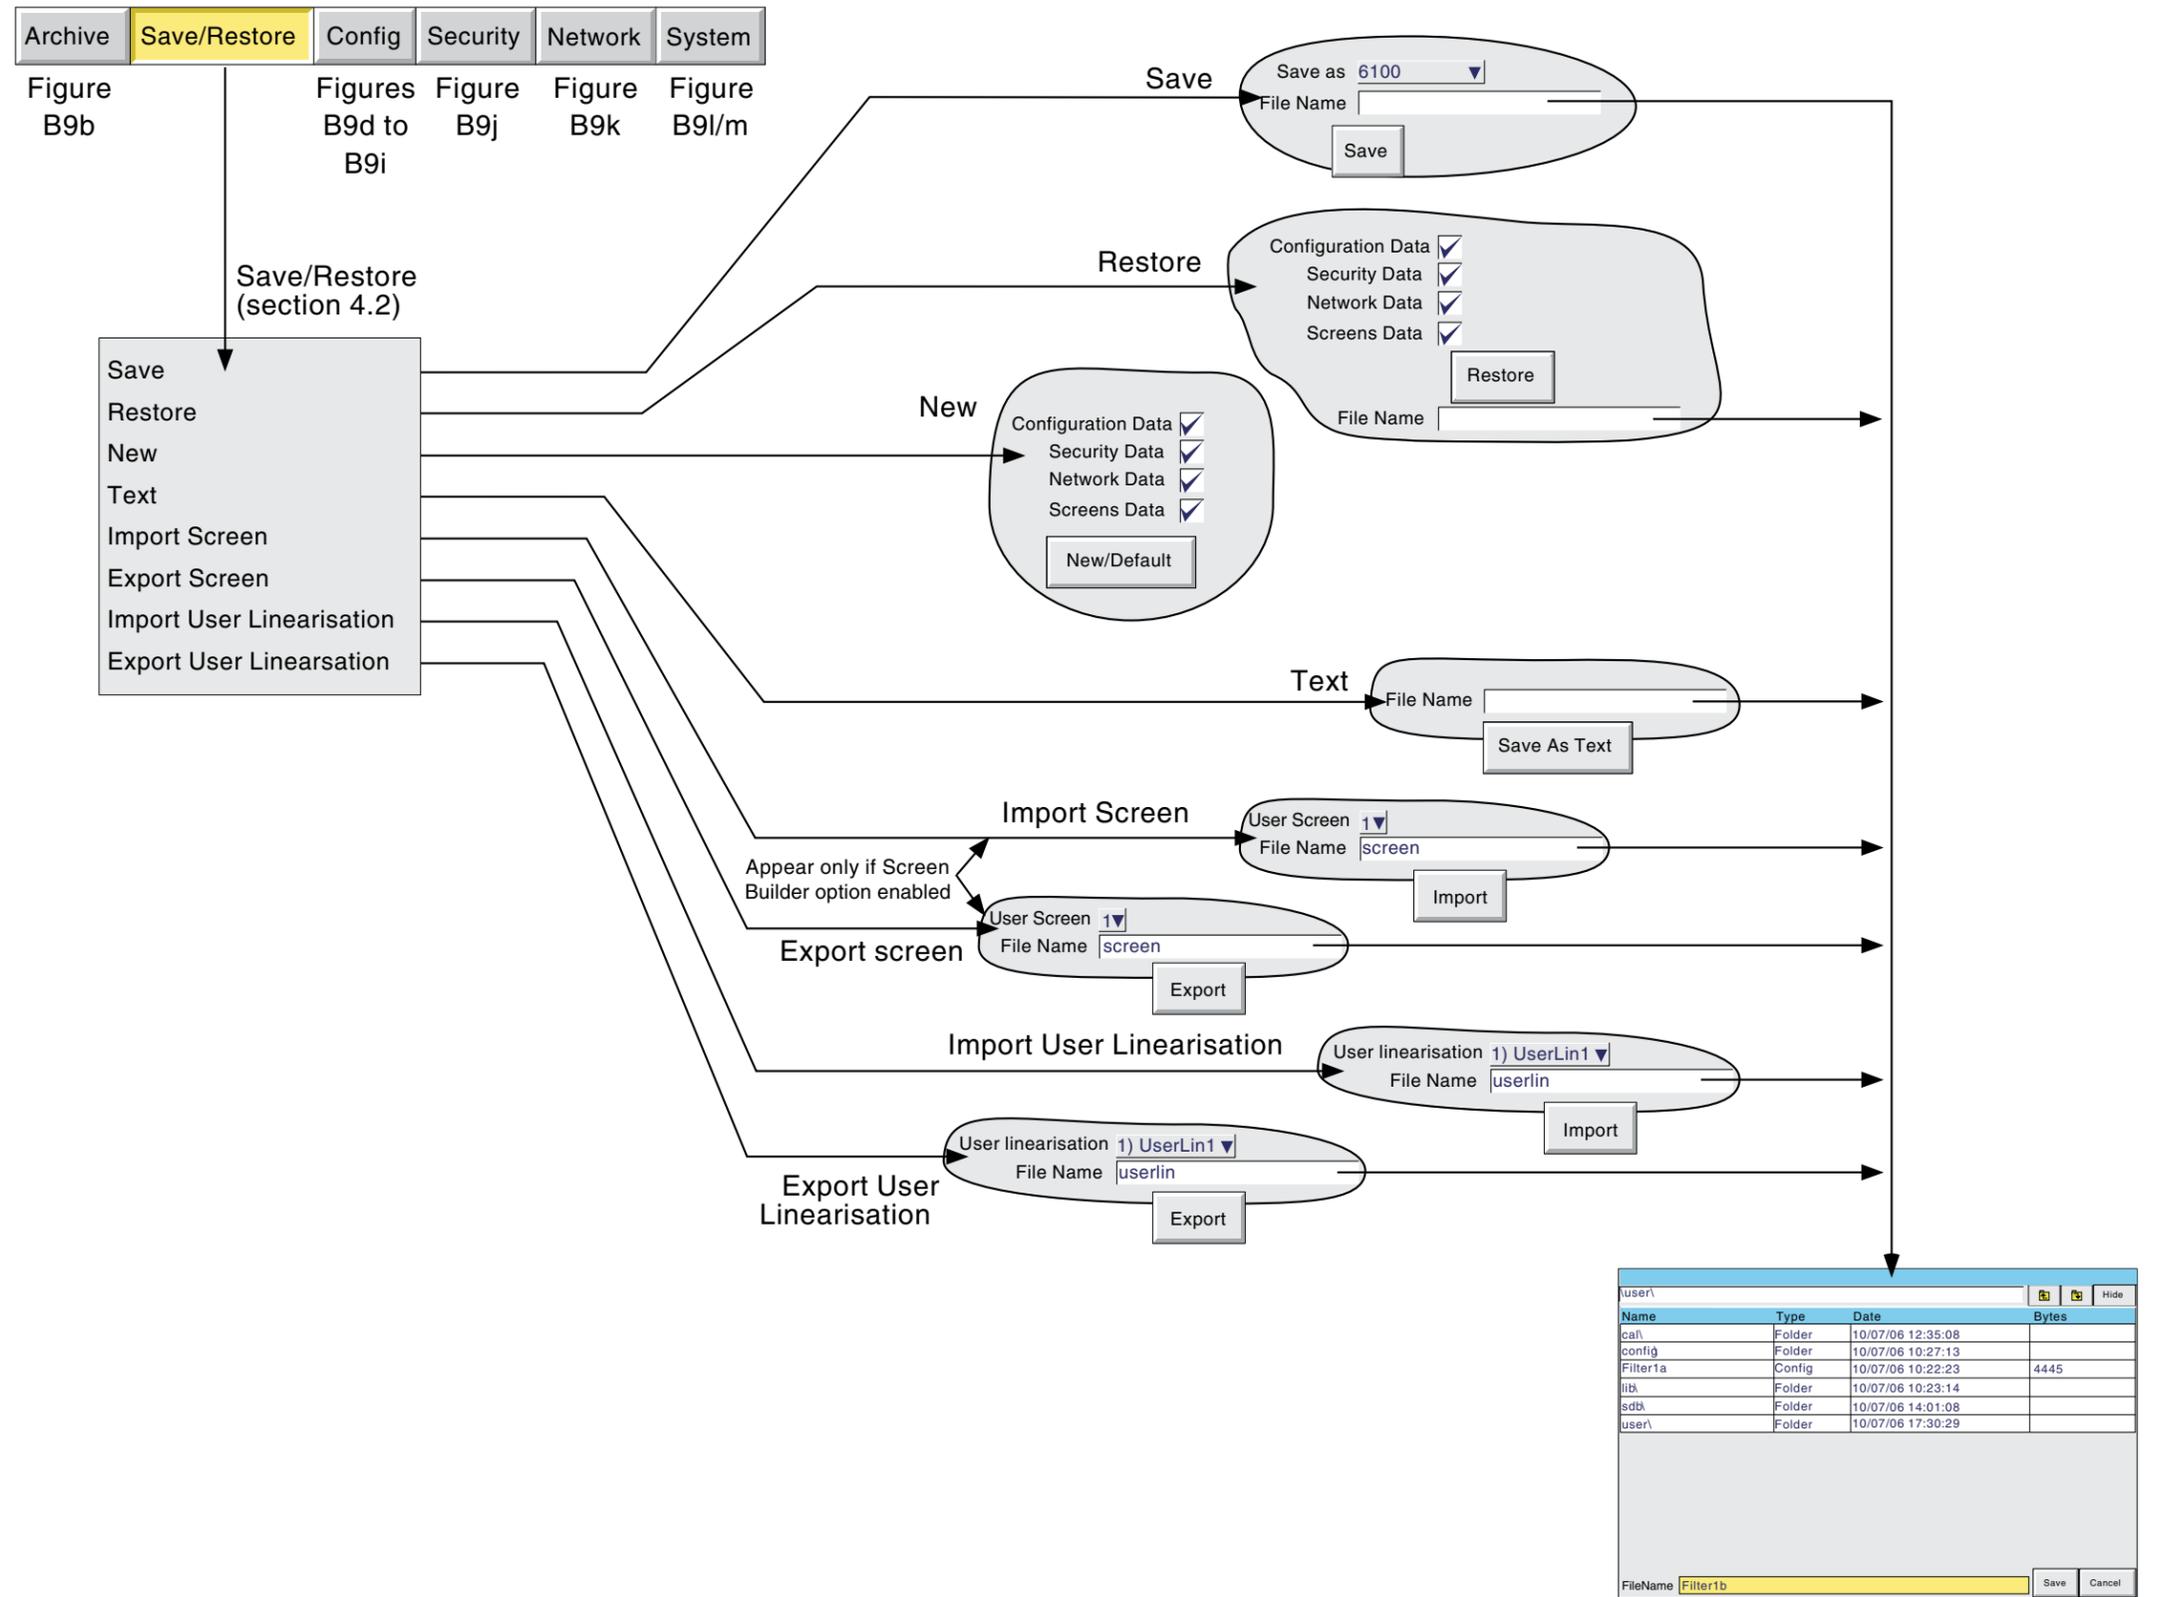

B9 MENU STRUCTURE (Cont.)

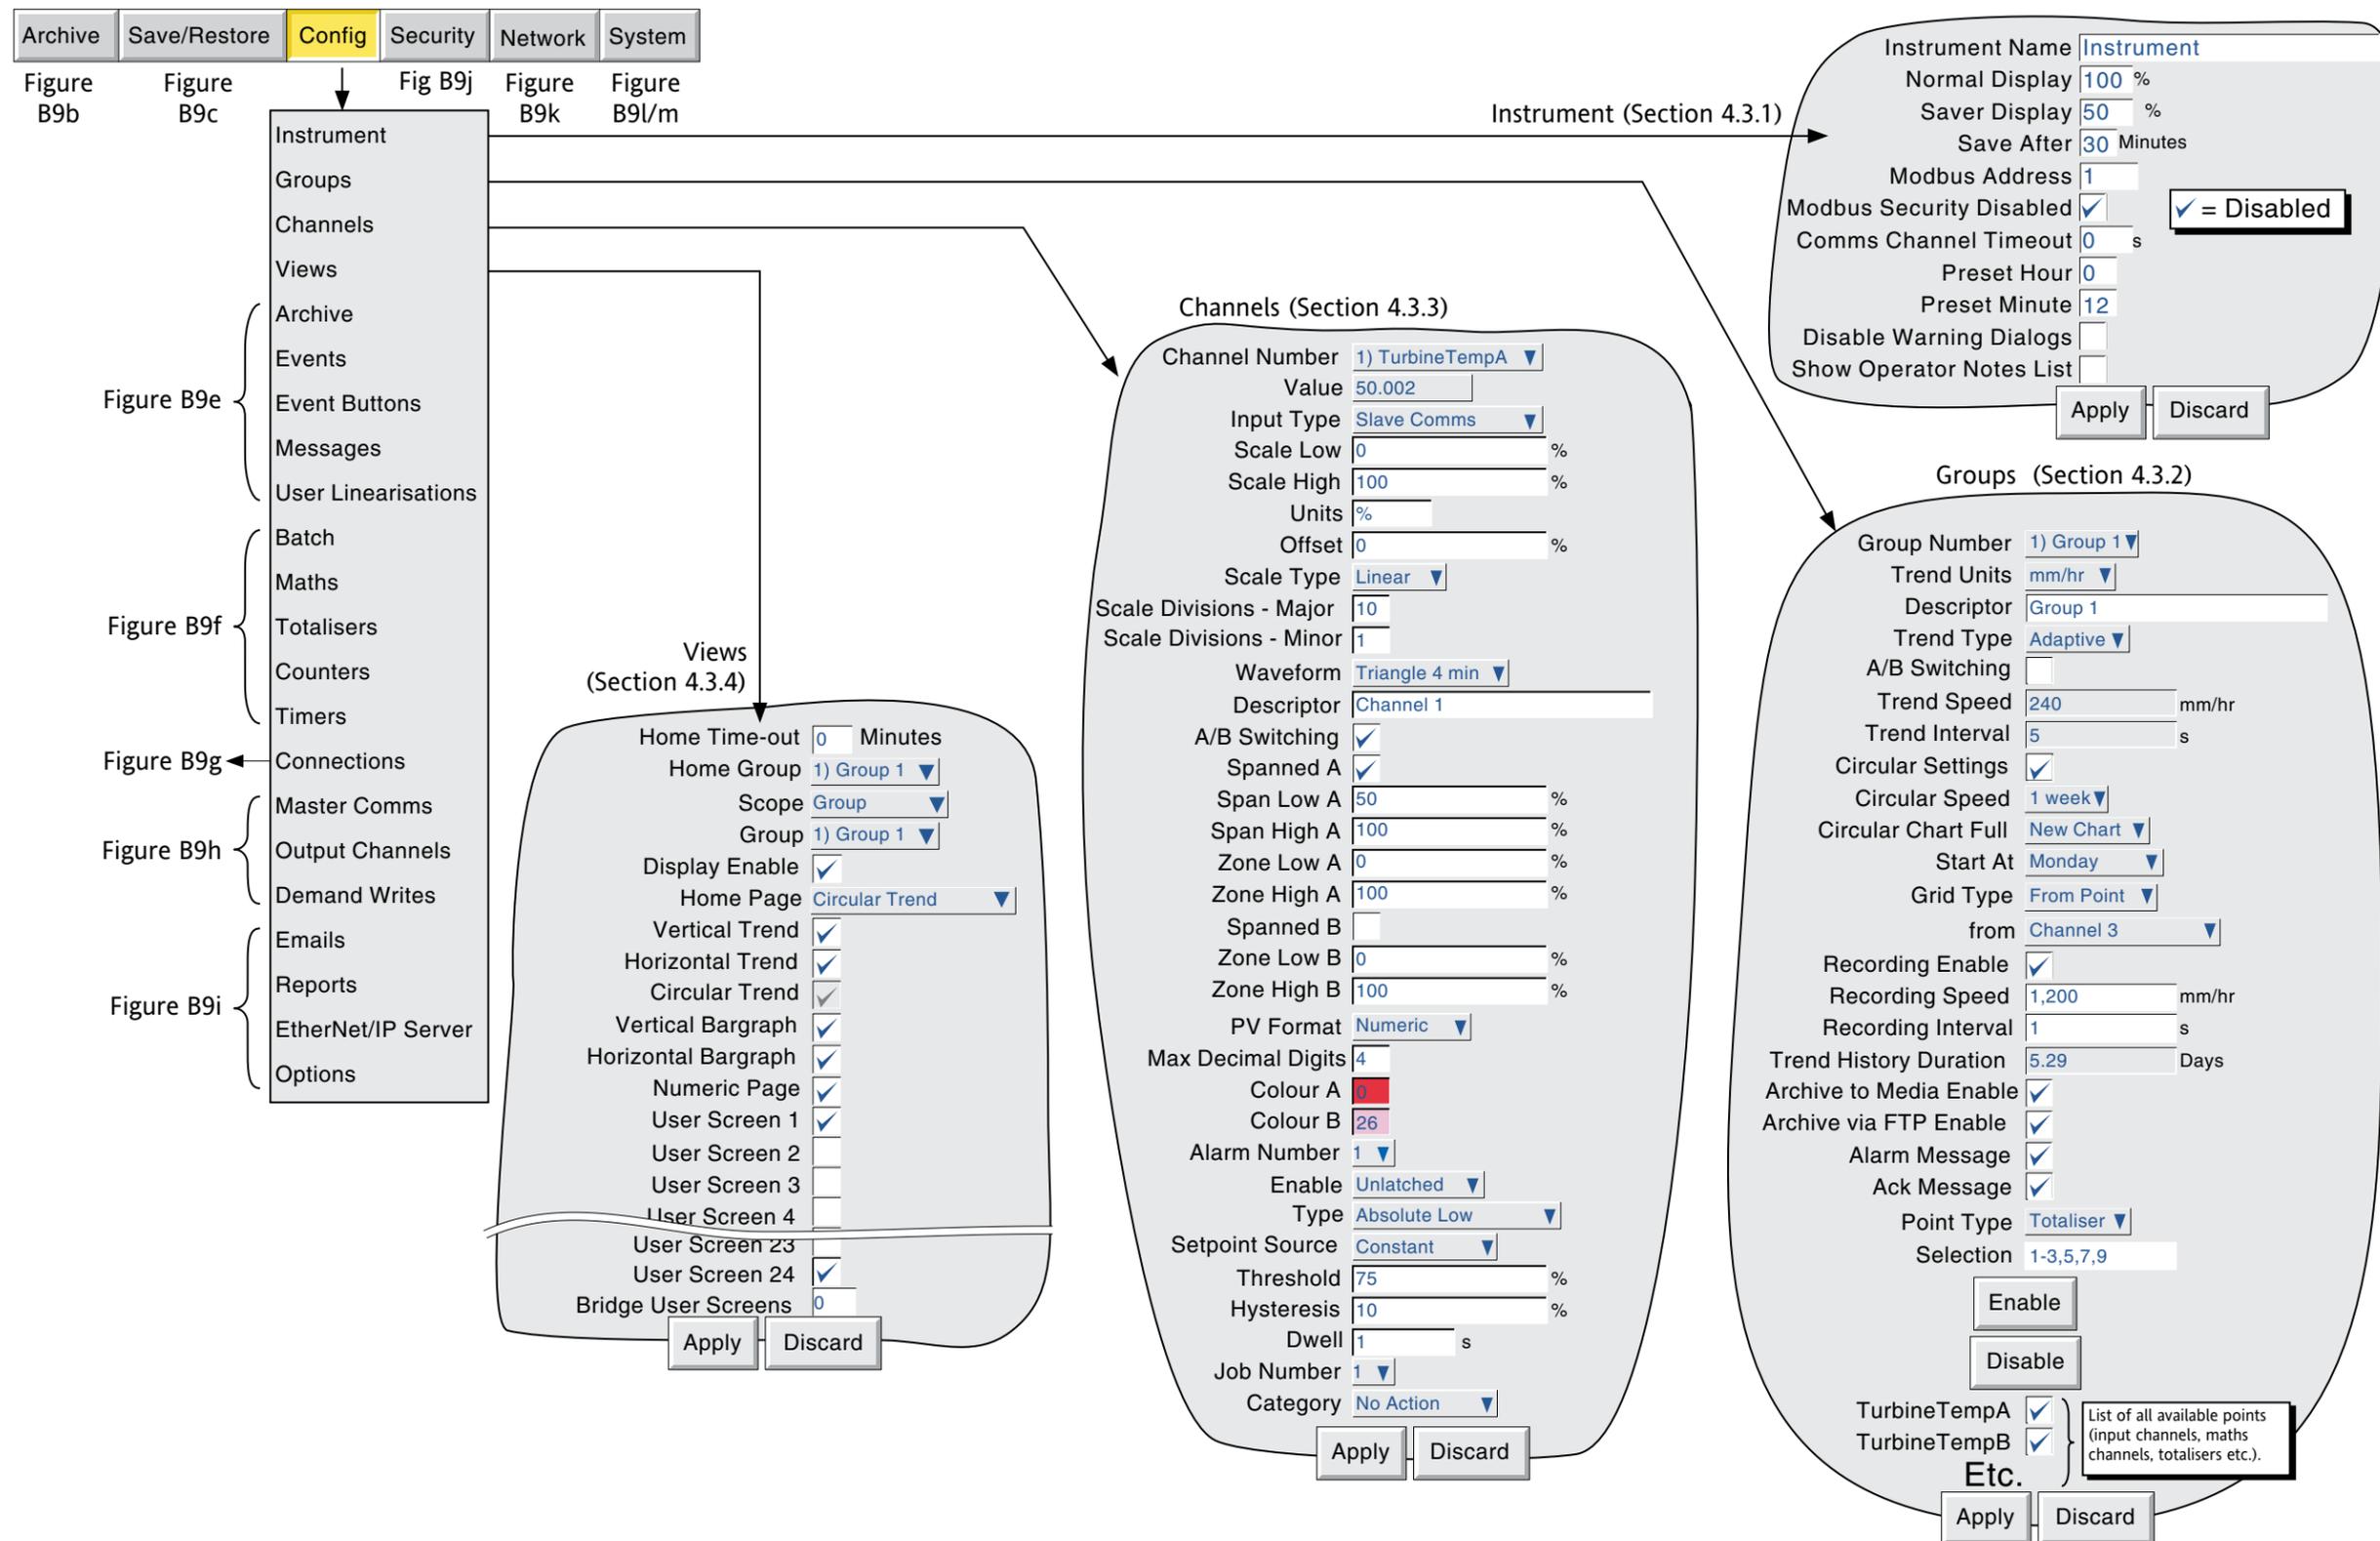


Figure B9d Config menu structure (sheet 1)

B9 MENU STRUCTURE (Cont.)

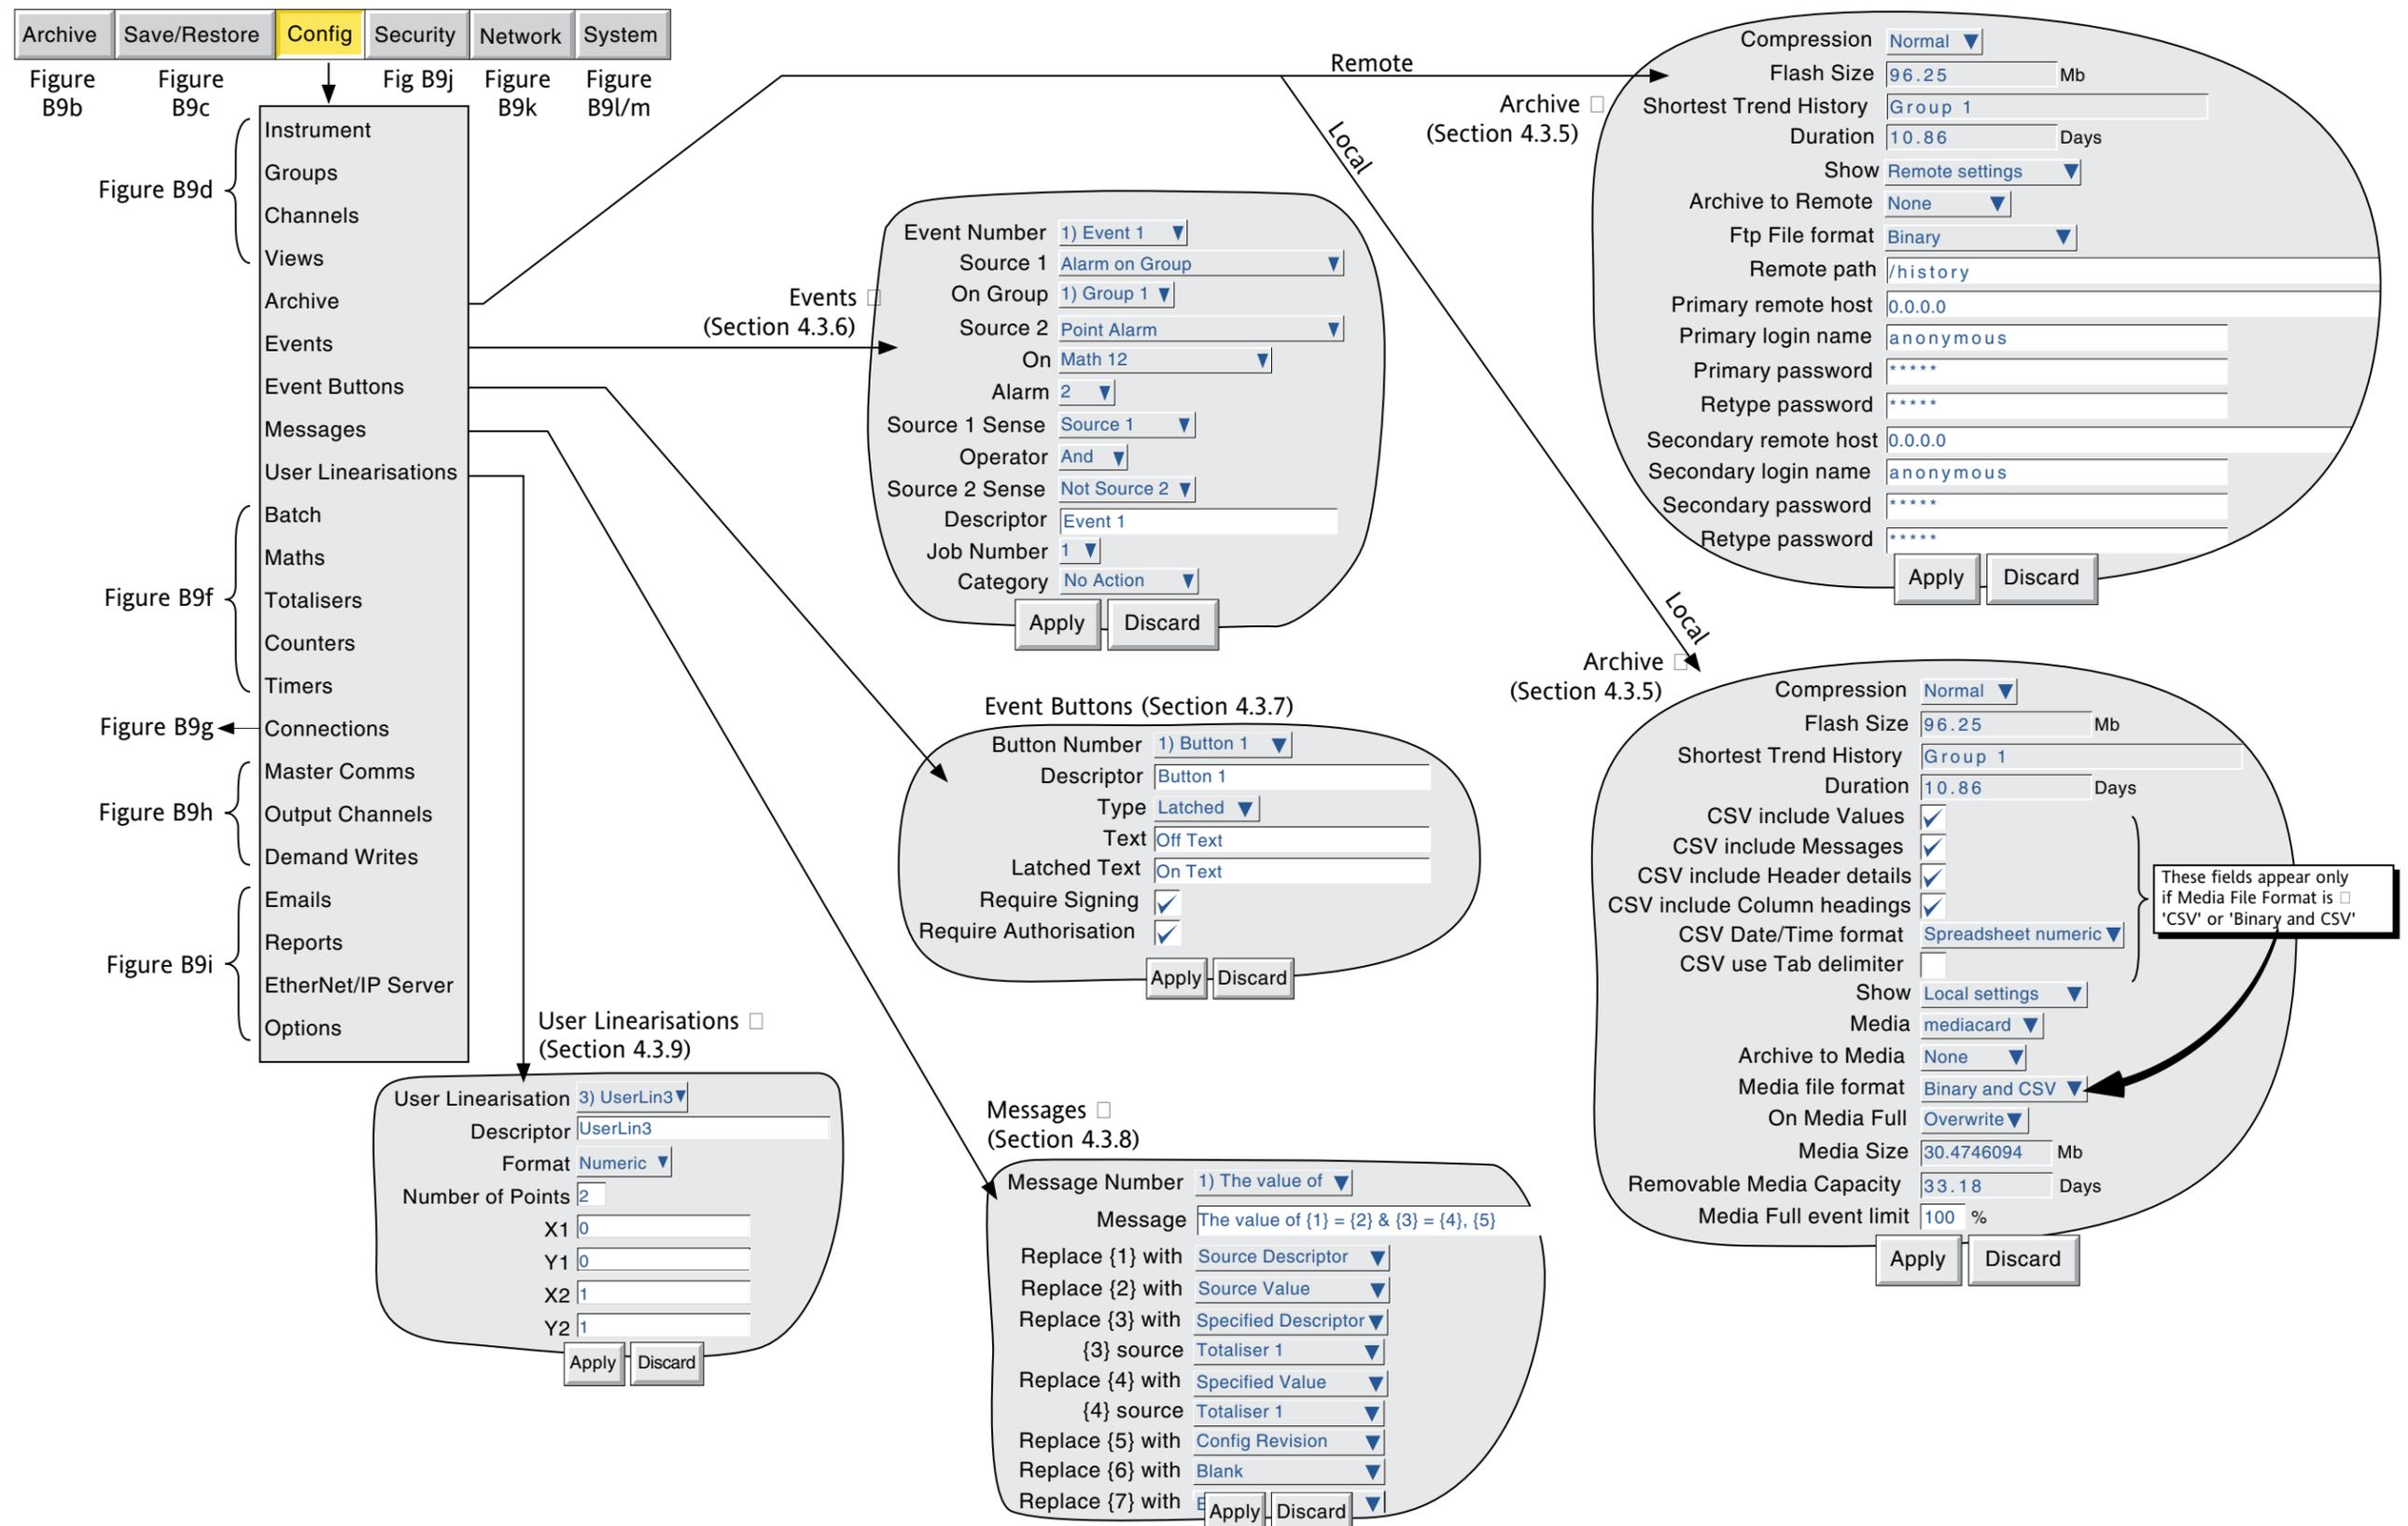


Figure B9e Config menu structure (sheet 2)

B9 MENU STRUCTURE (Cont.)

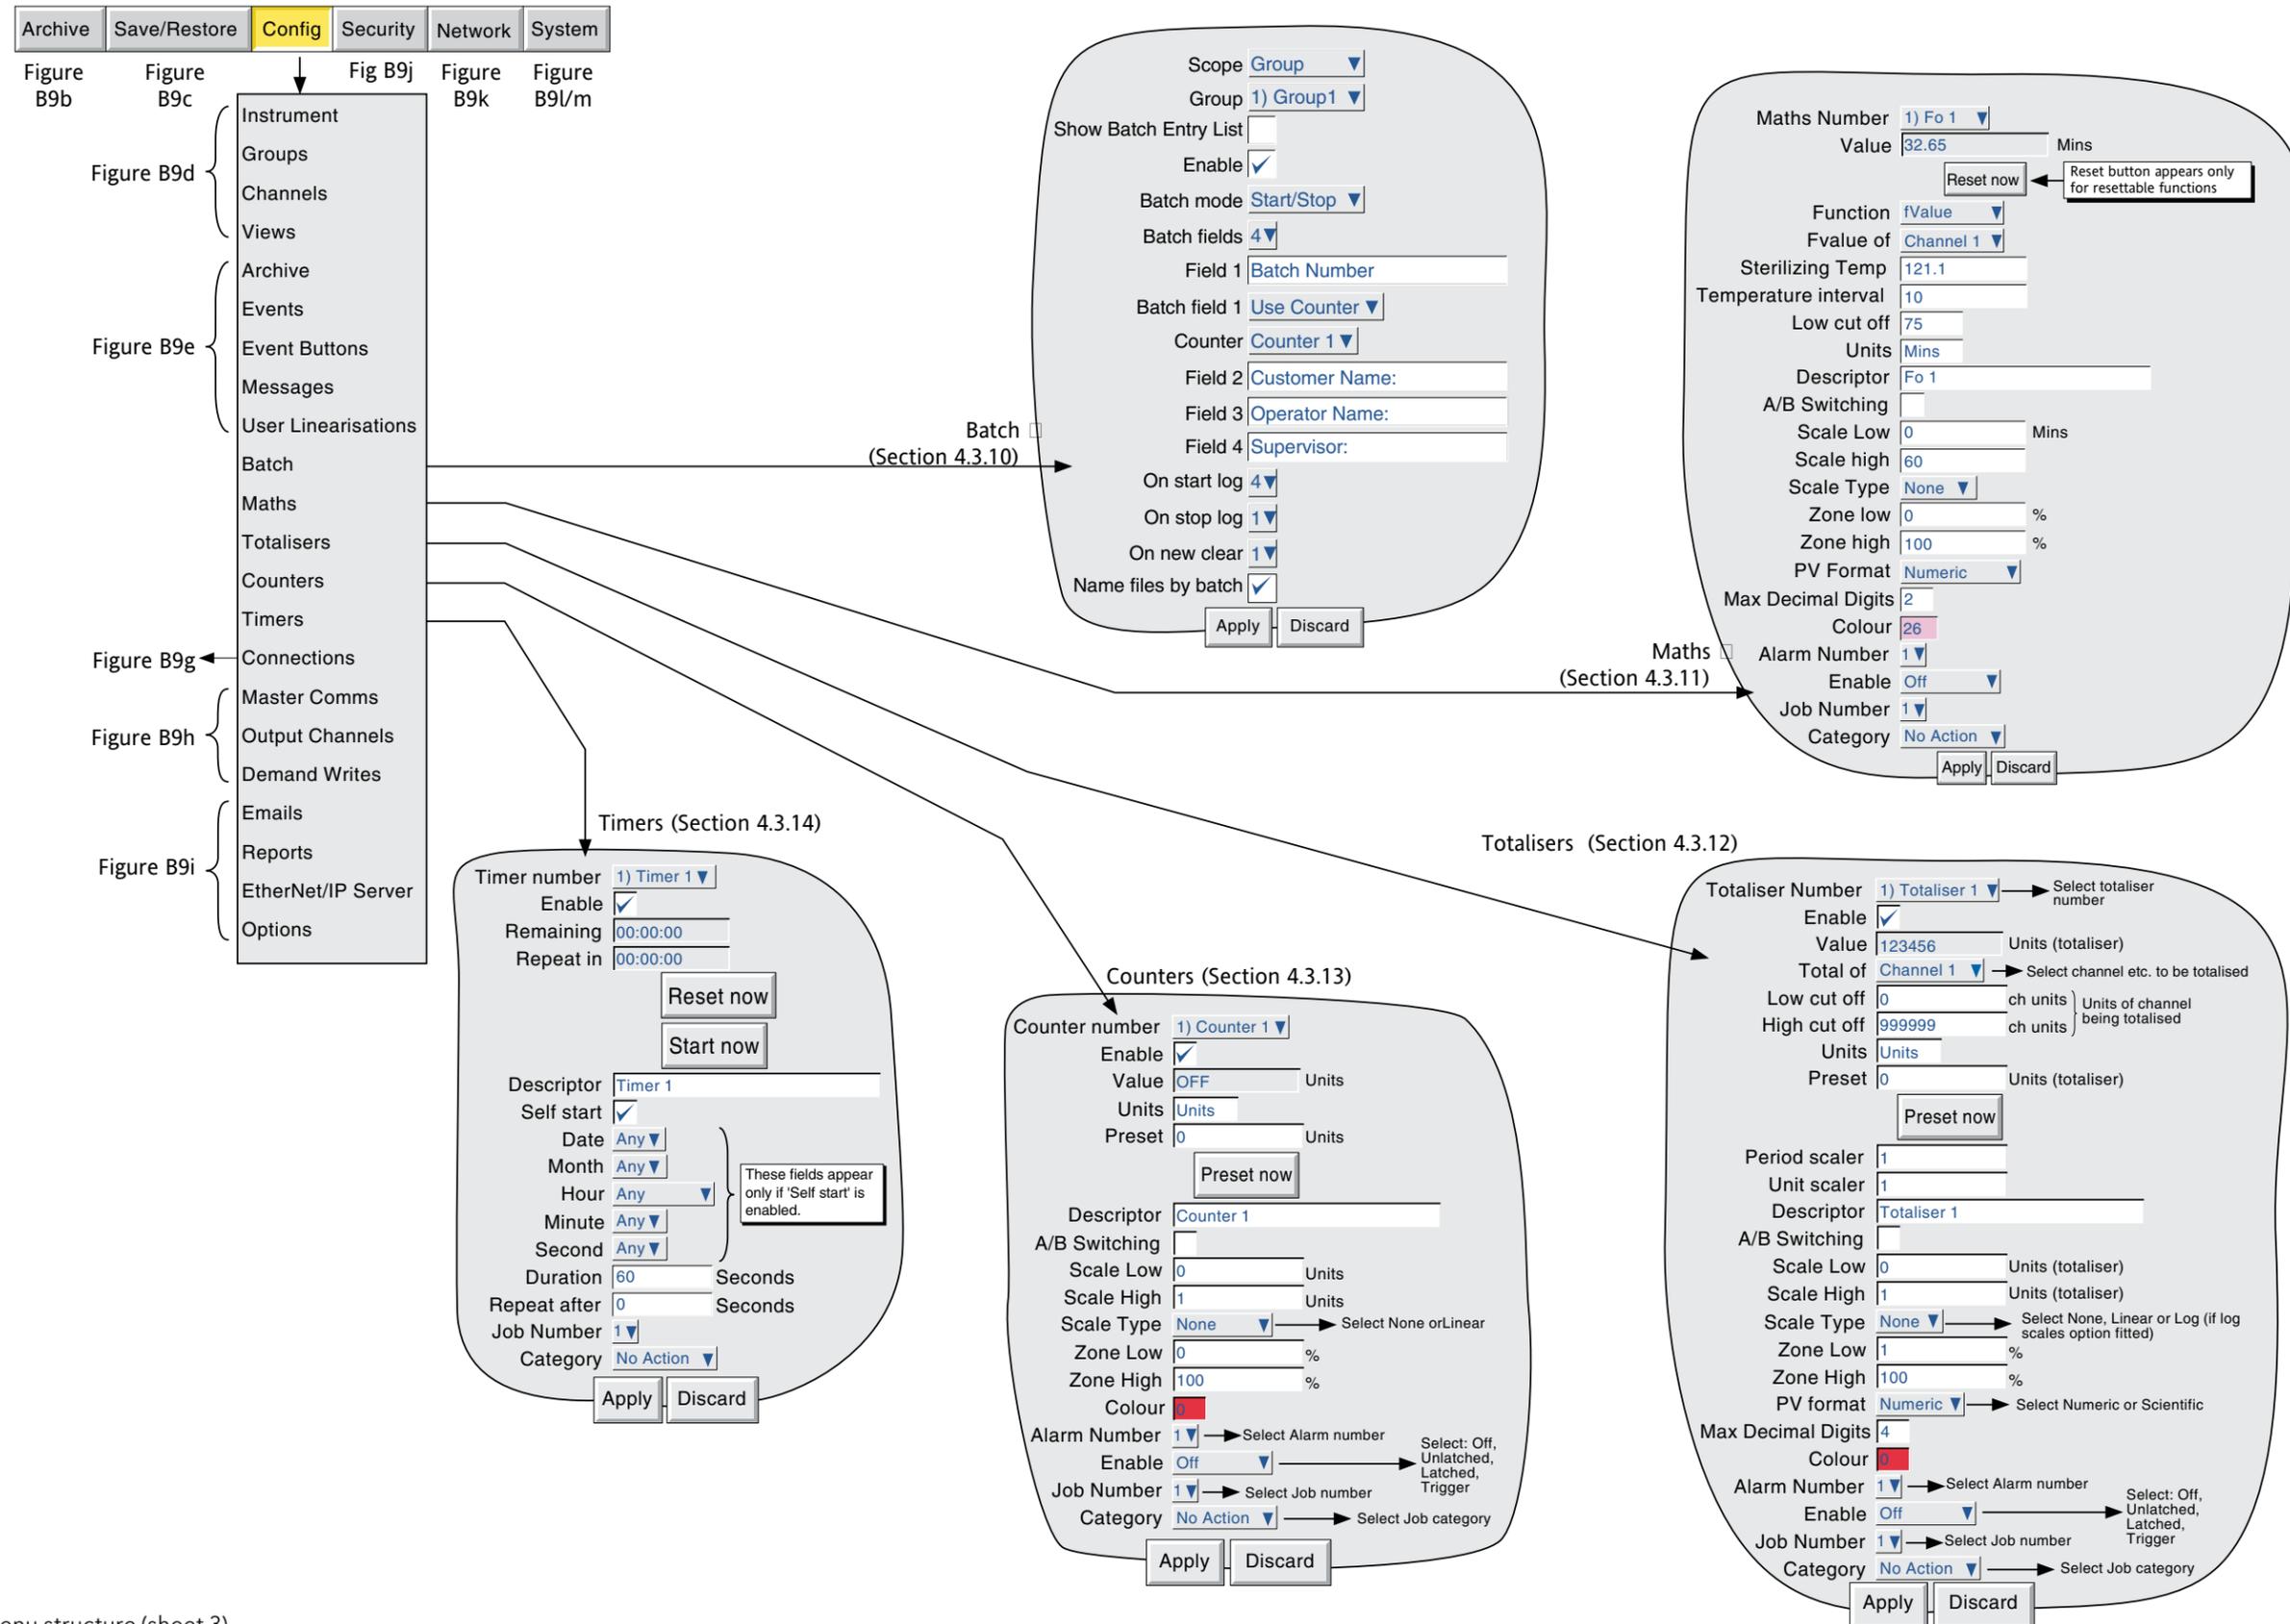


Figure B9f Config menu structure (sheet 3)

B9 MENU STRUCTURE (Cont.)

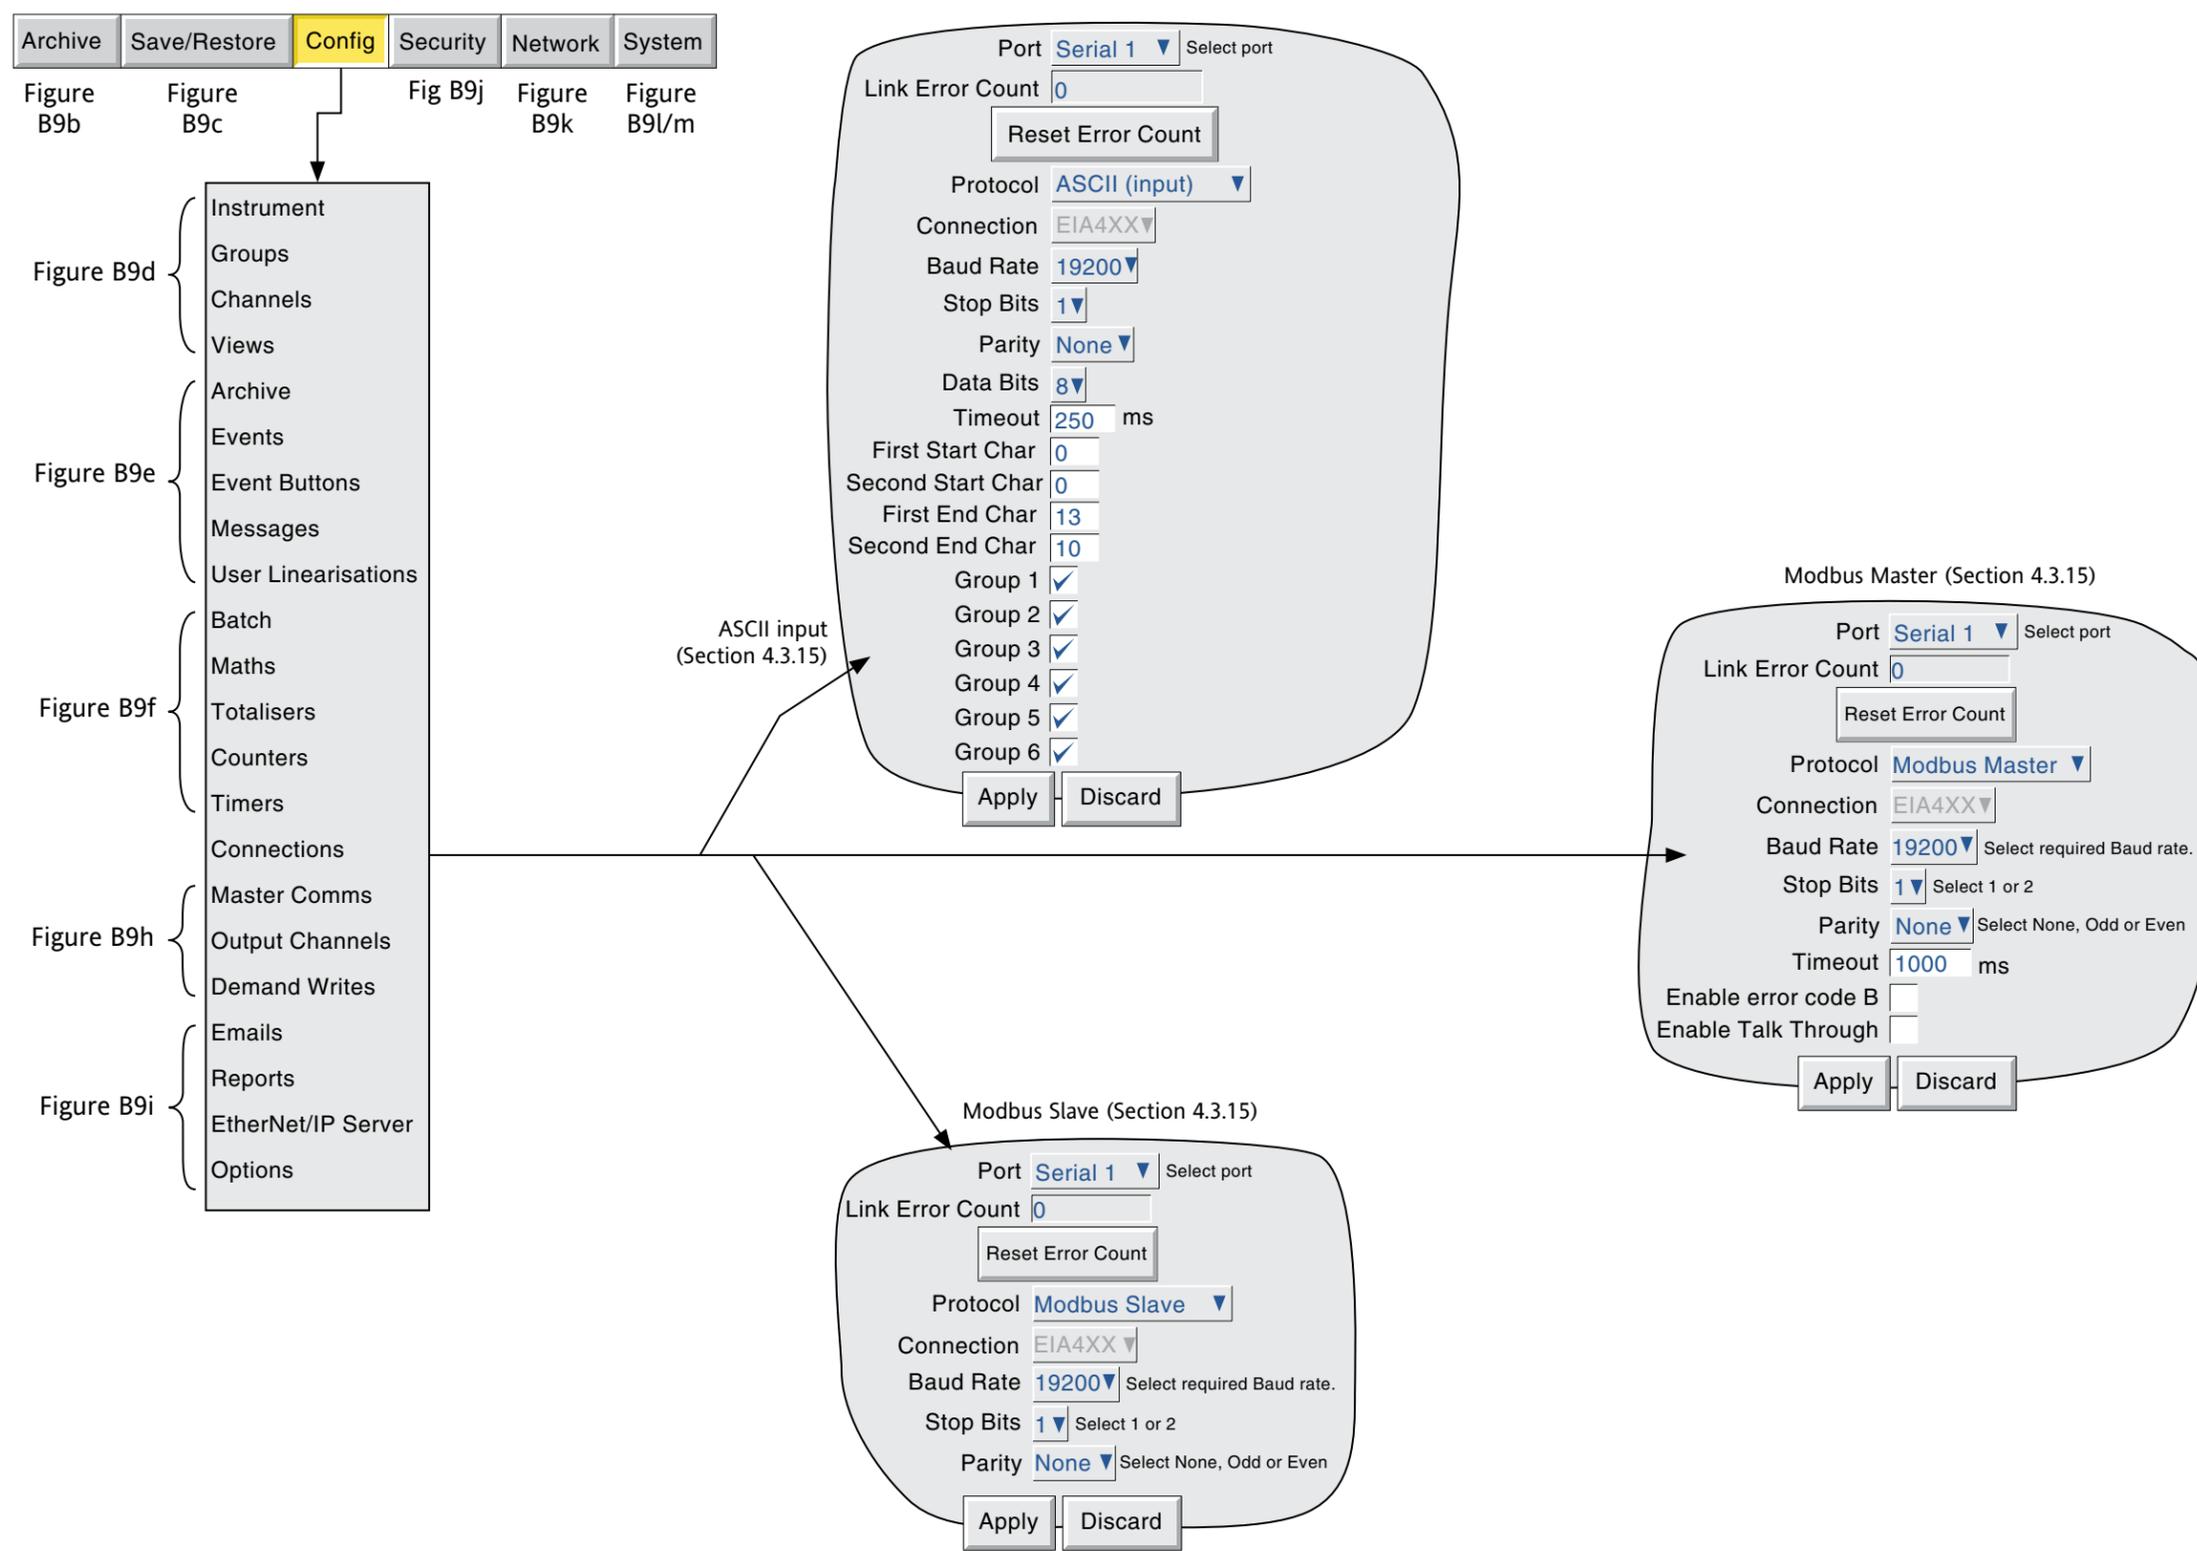


Figure B9g Config menu structure (sheet 4)

**B9 MENU STRUCTURE (Cont.)**

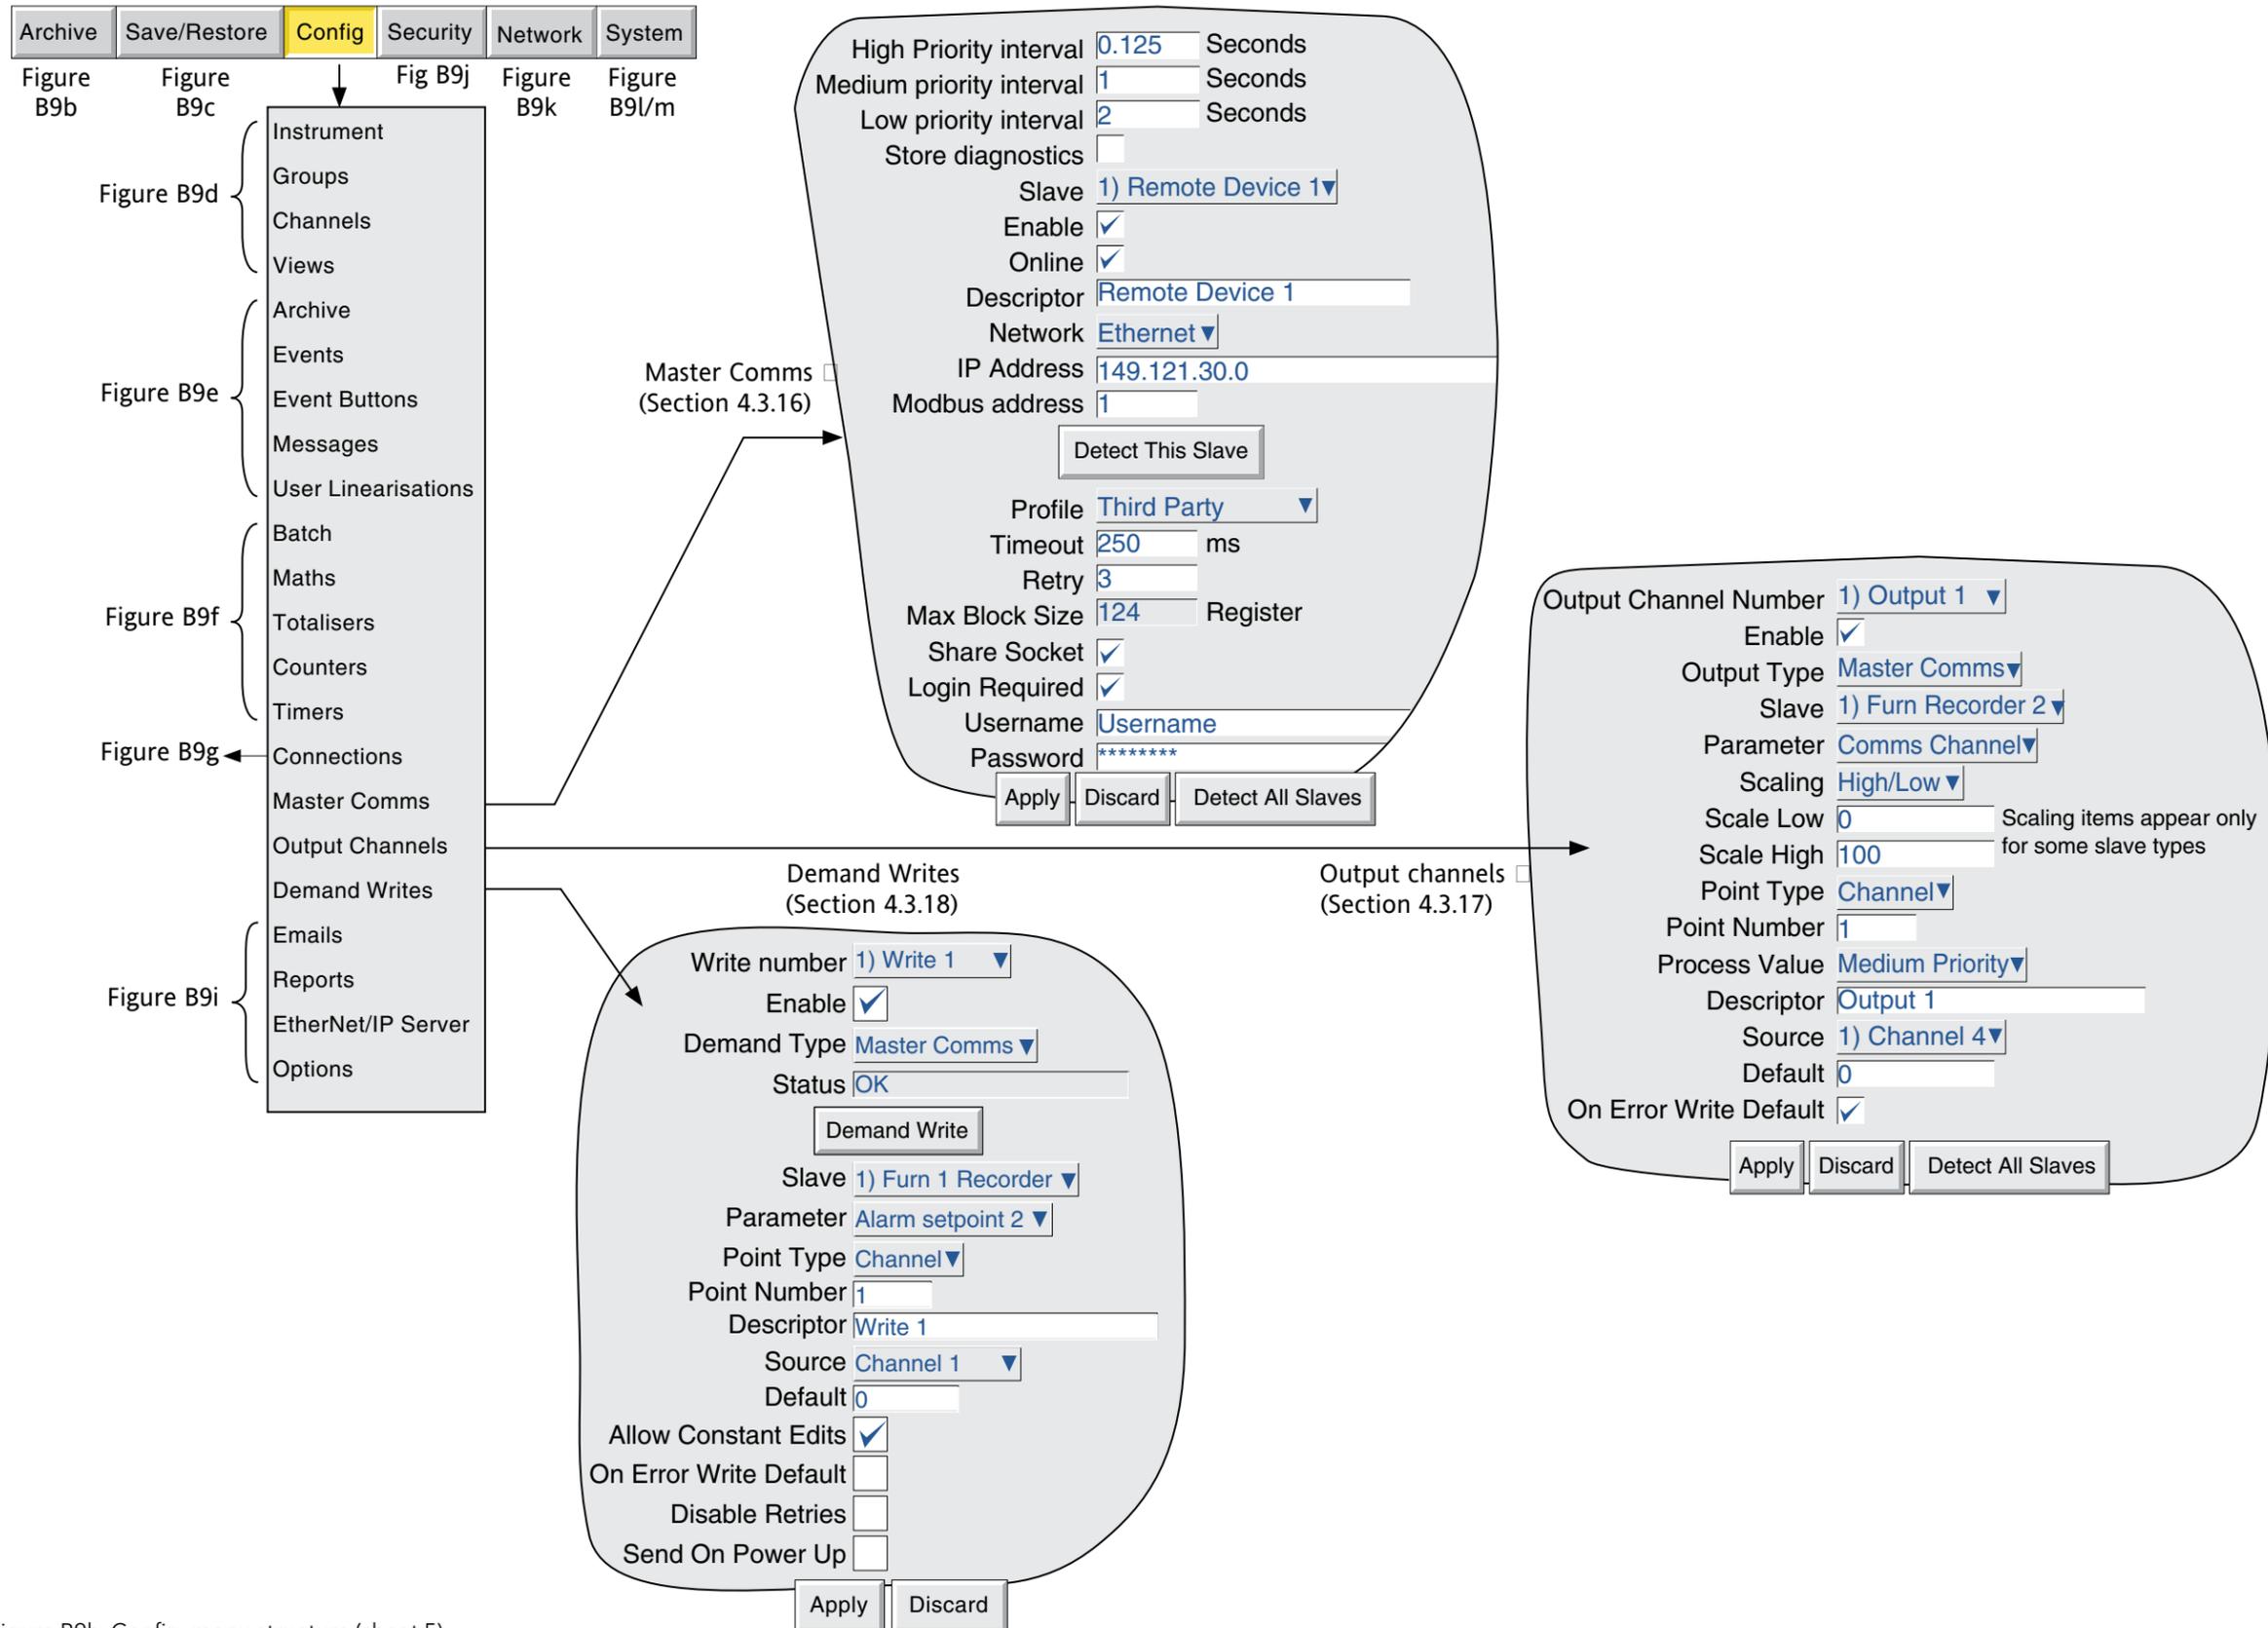


Figure B9h Config menu structure (sheet 5)

B9 MENU STRUCTURE (Cont.)

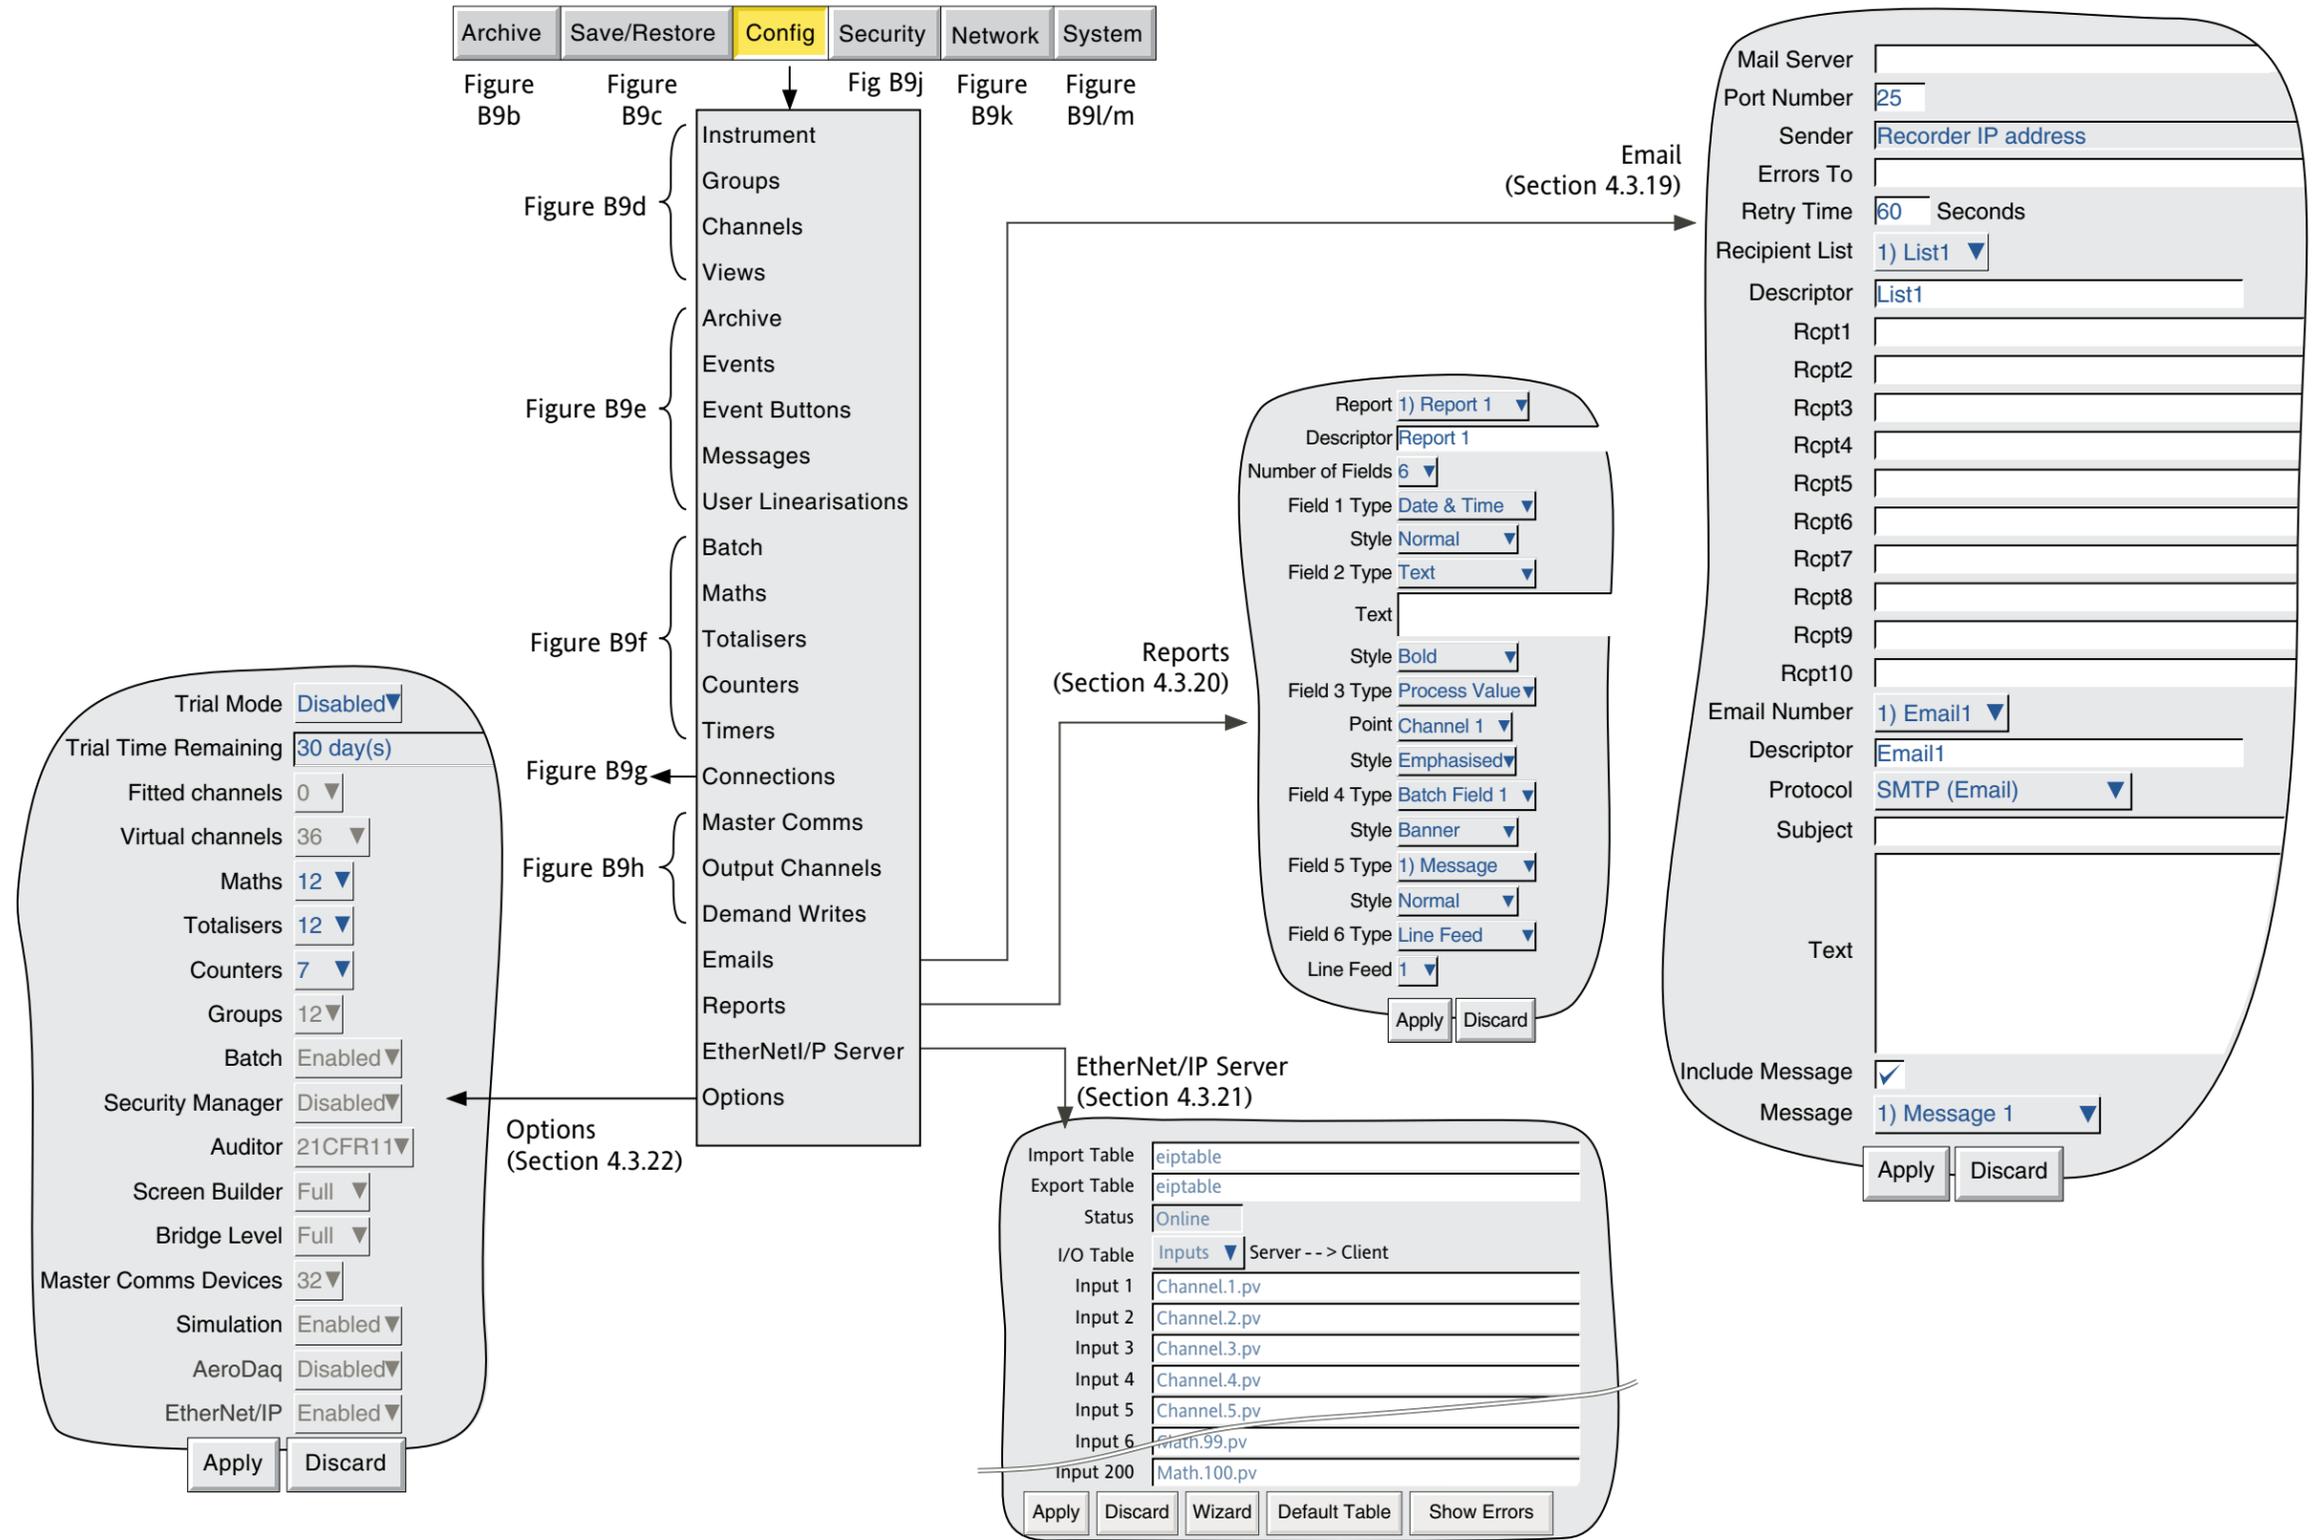


Figure B9i Config menu structure (sheet 6)

B9 MENU STRUCTURE (Cont.)

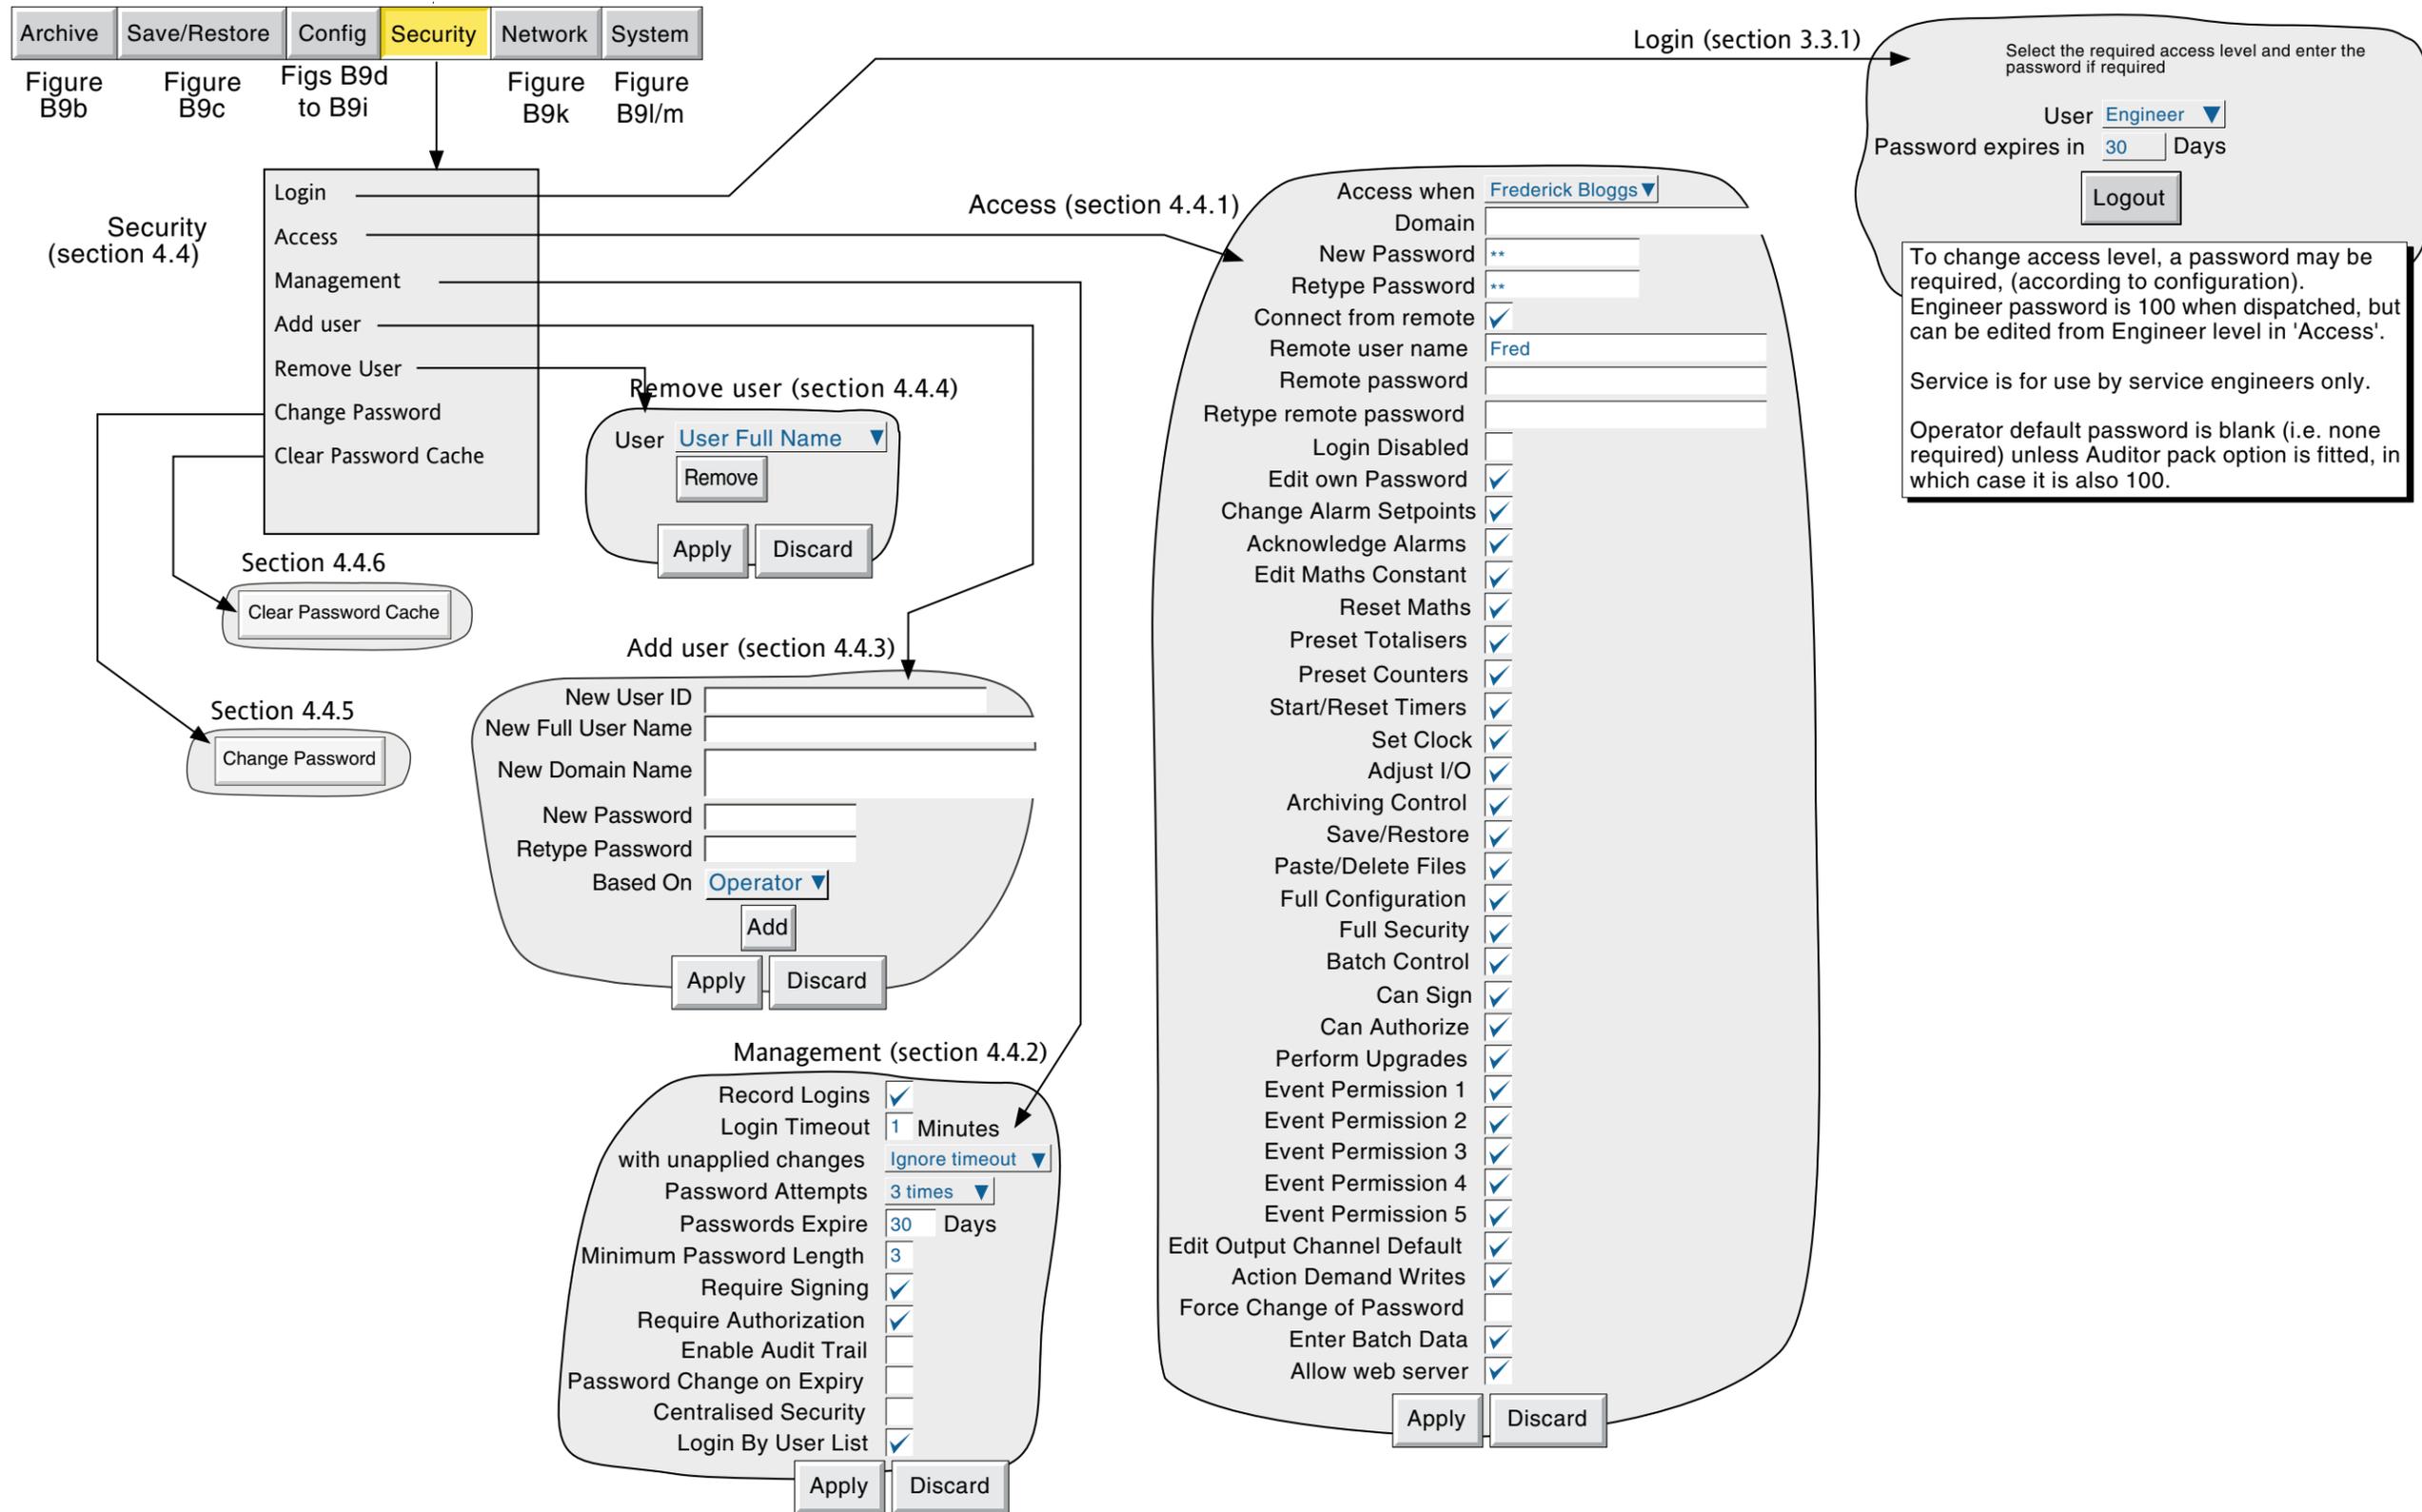


Figure B9j Security key menu structure

B9 MENU STRUCTURE (Cont.)

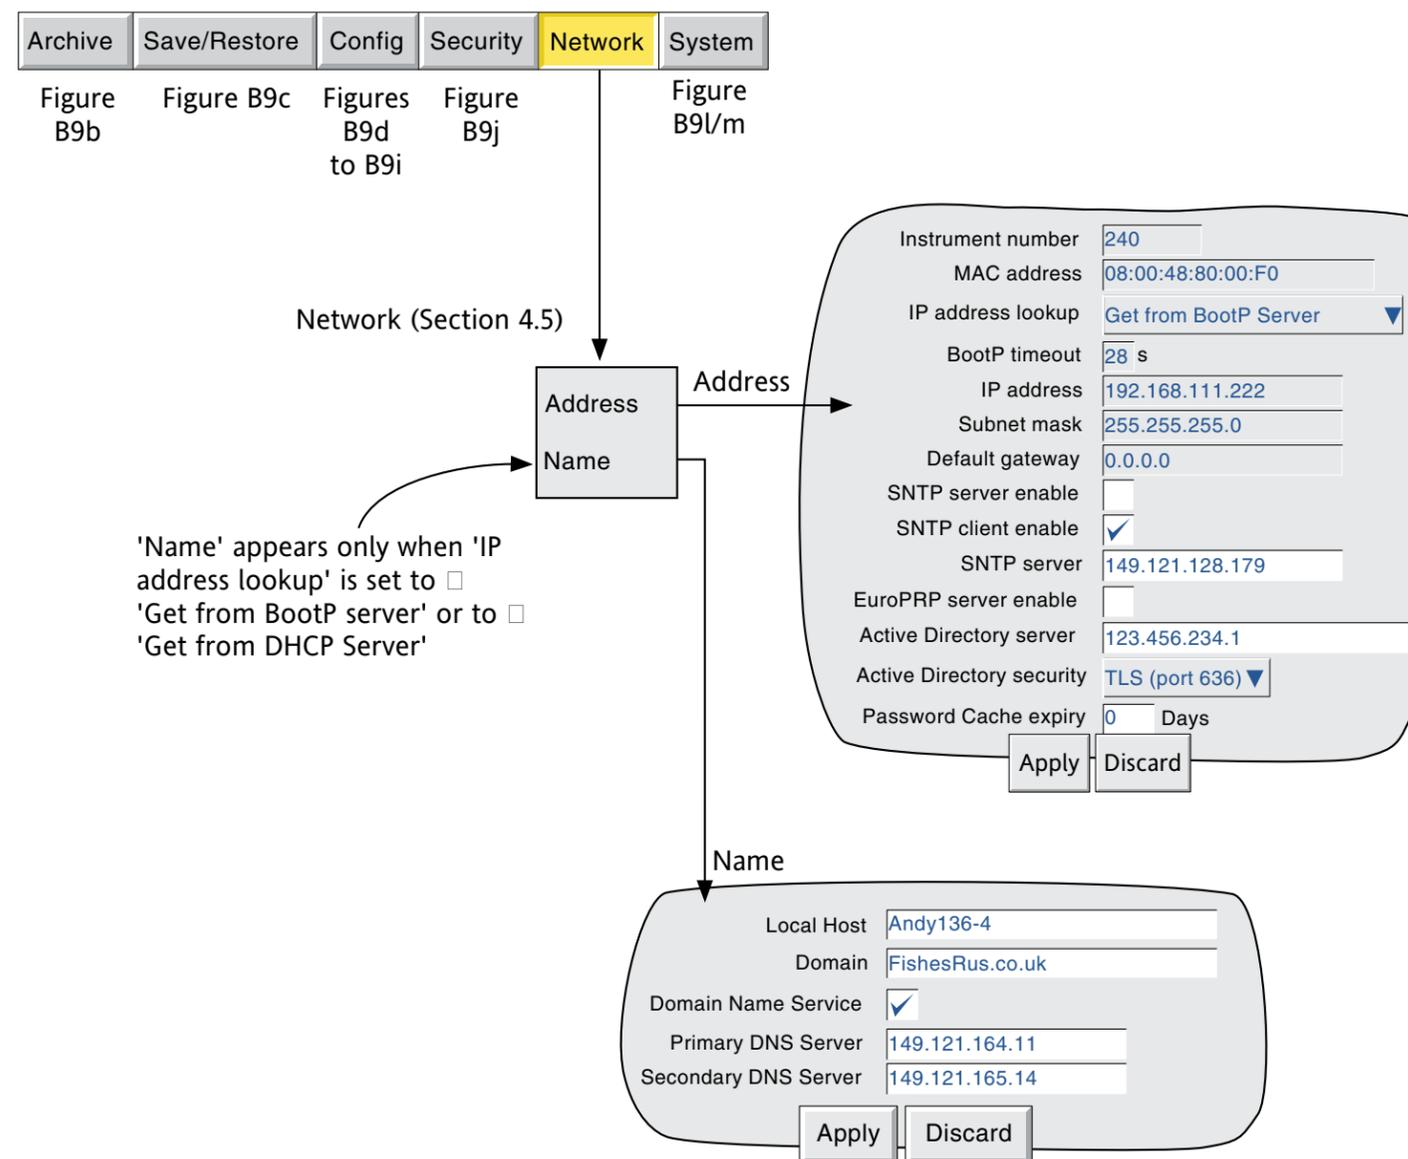


Figure B9k Network key menu structure

B9 MENU STRUCTURE (Cont.)

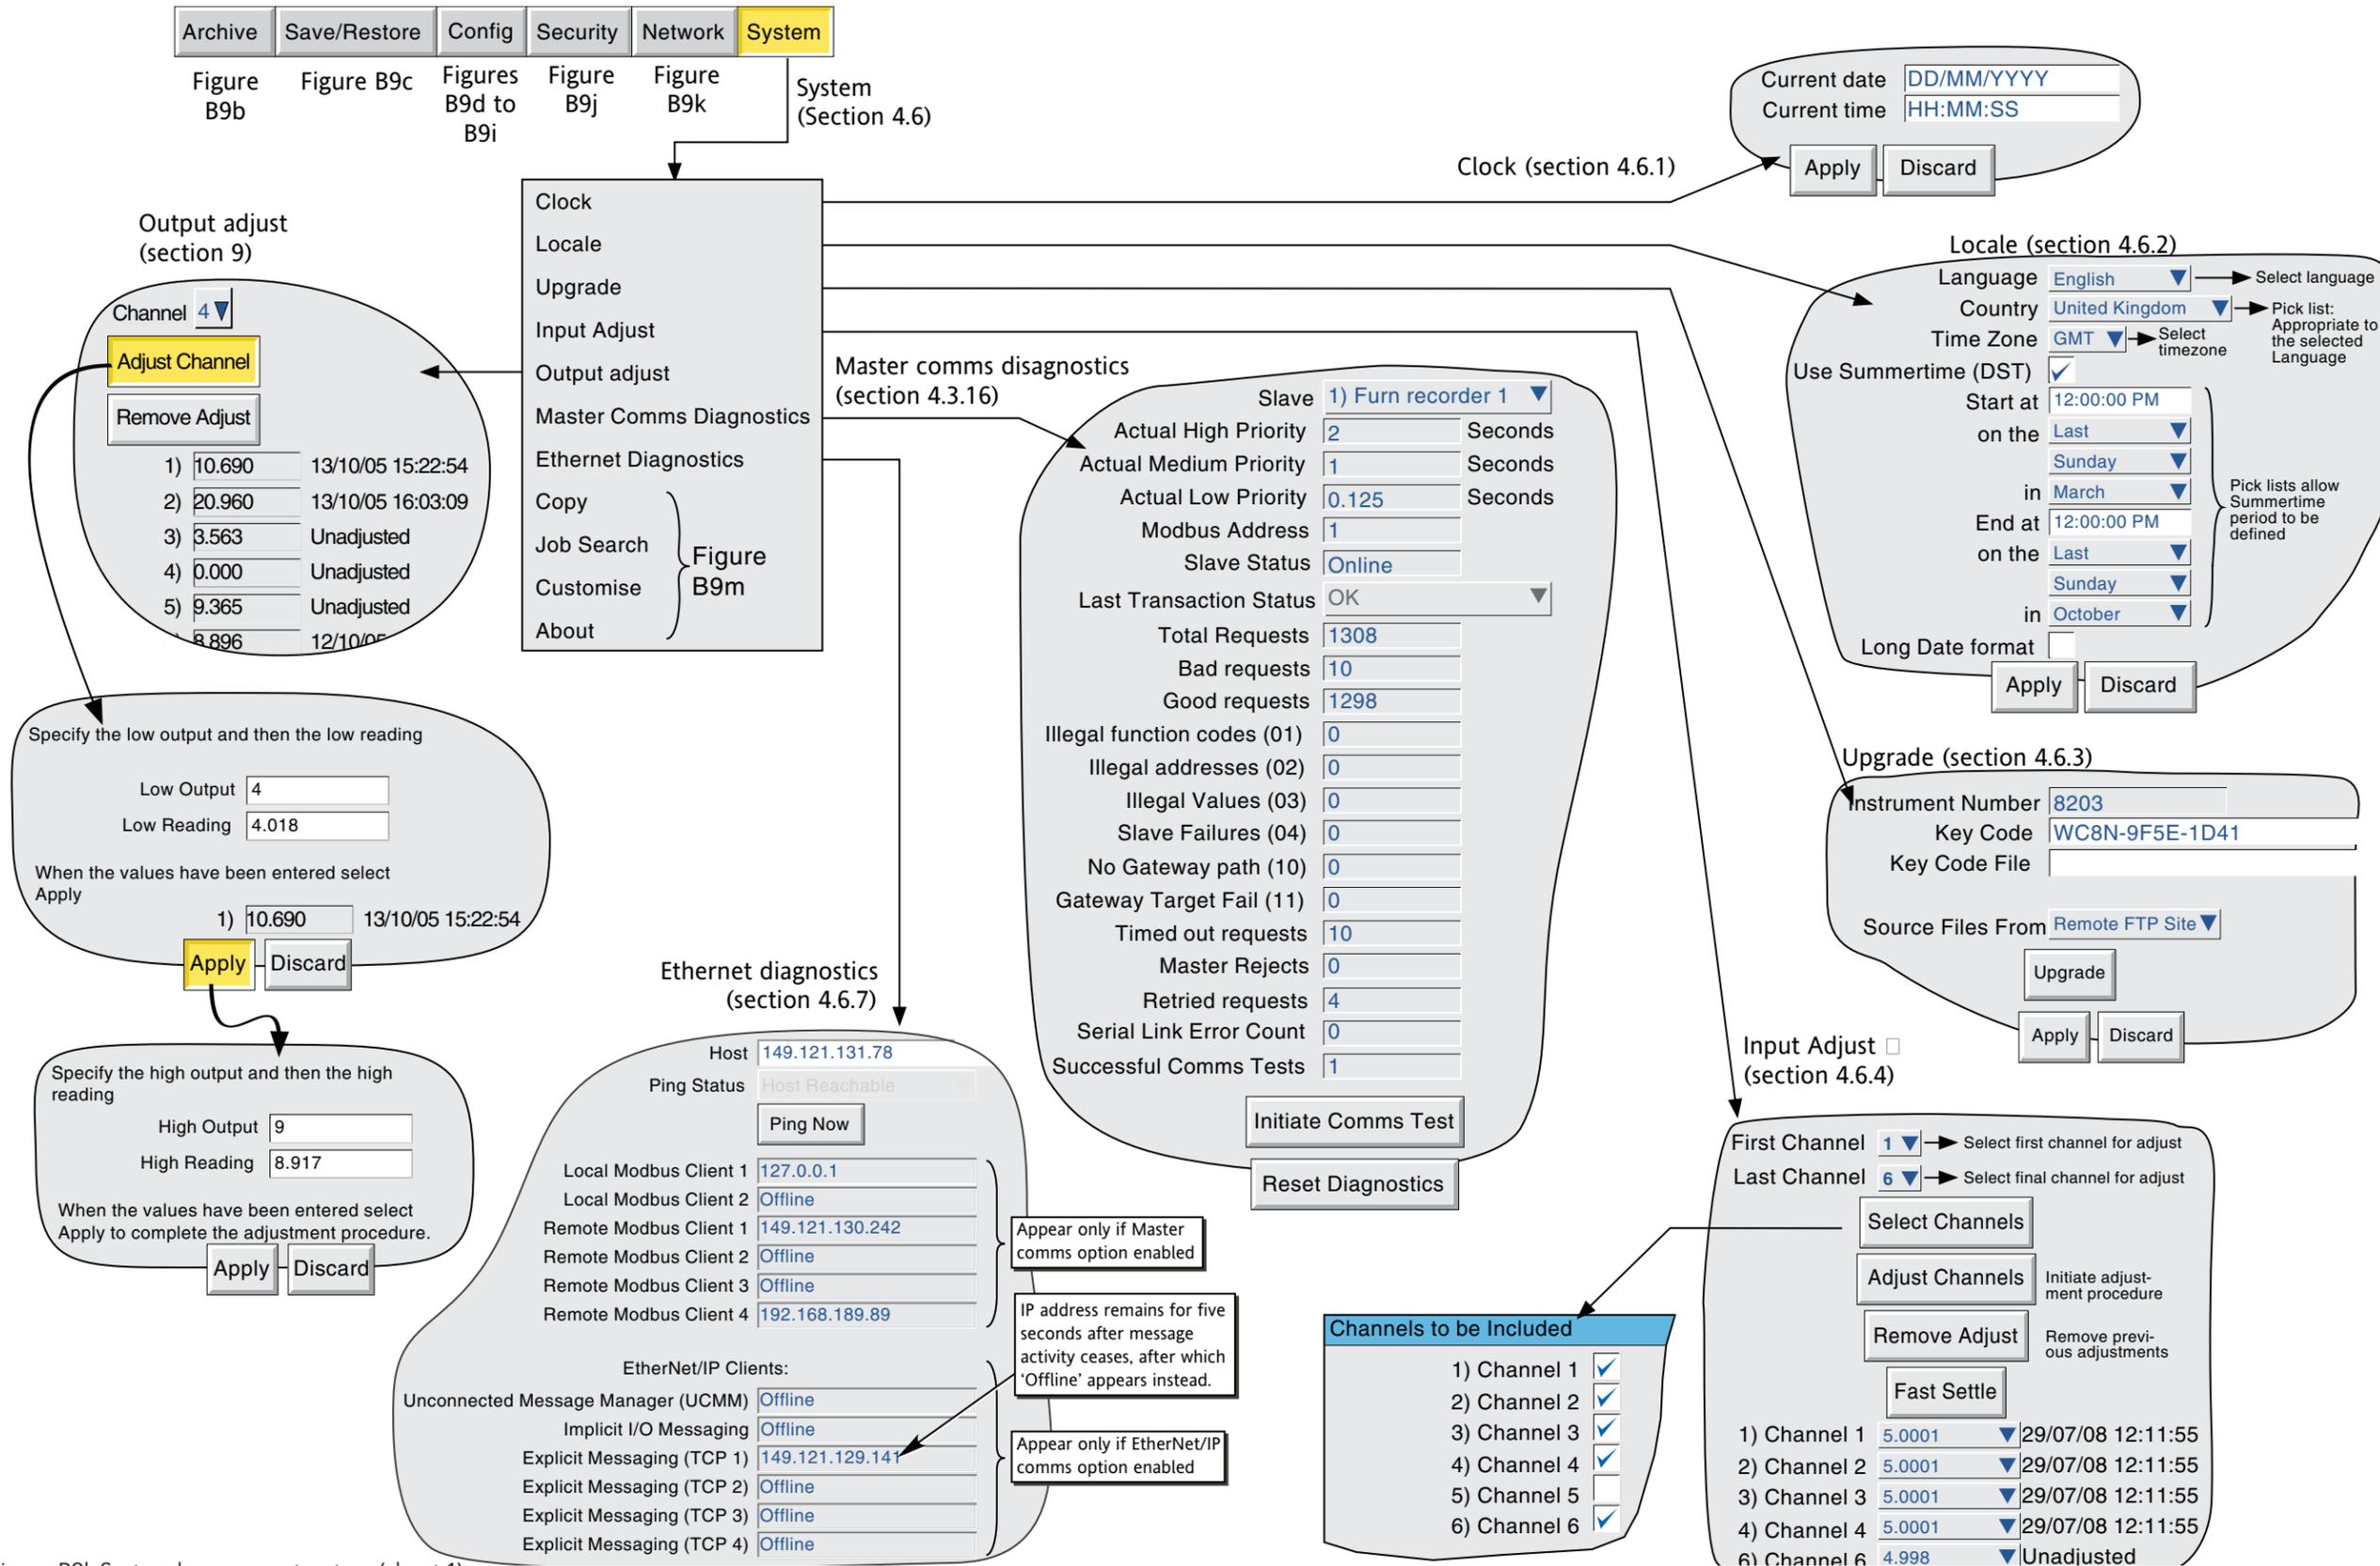


Figure B9I System key menu structure (sheet 1)

B9 MENU STRUCTURE (Cont.)

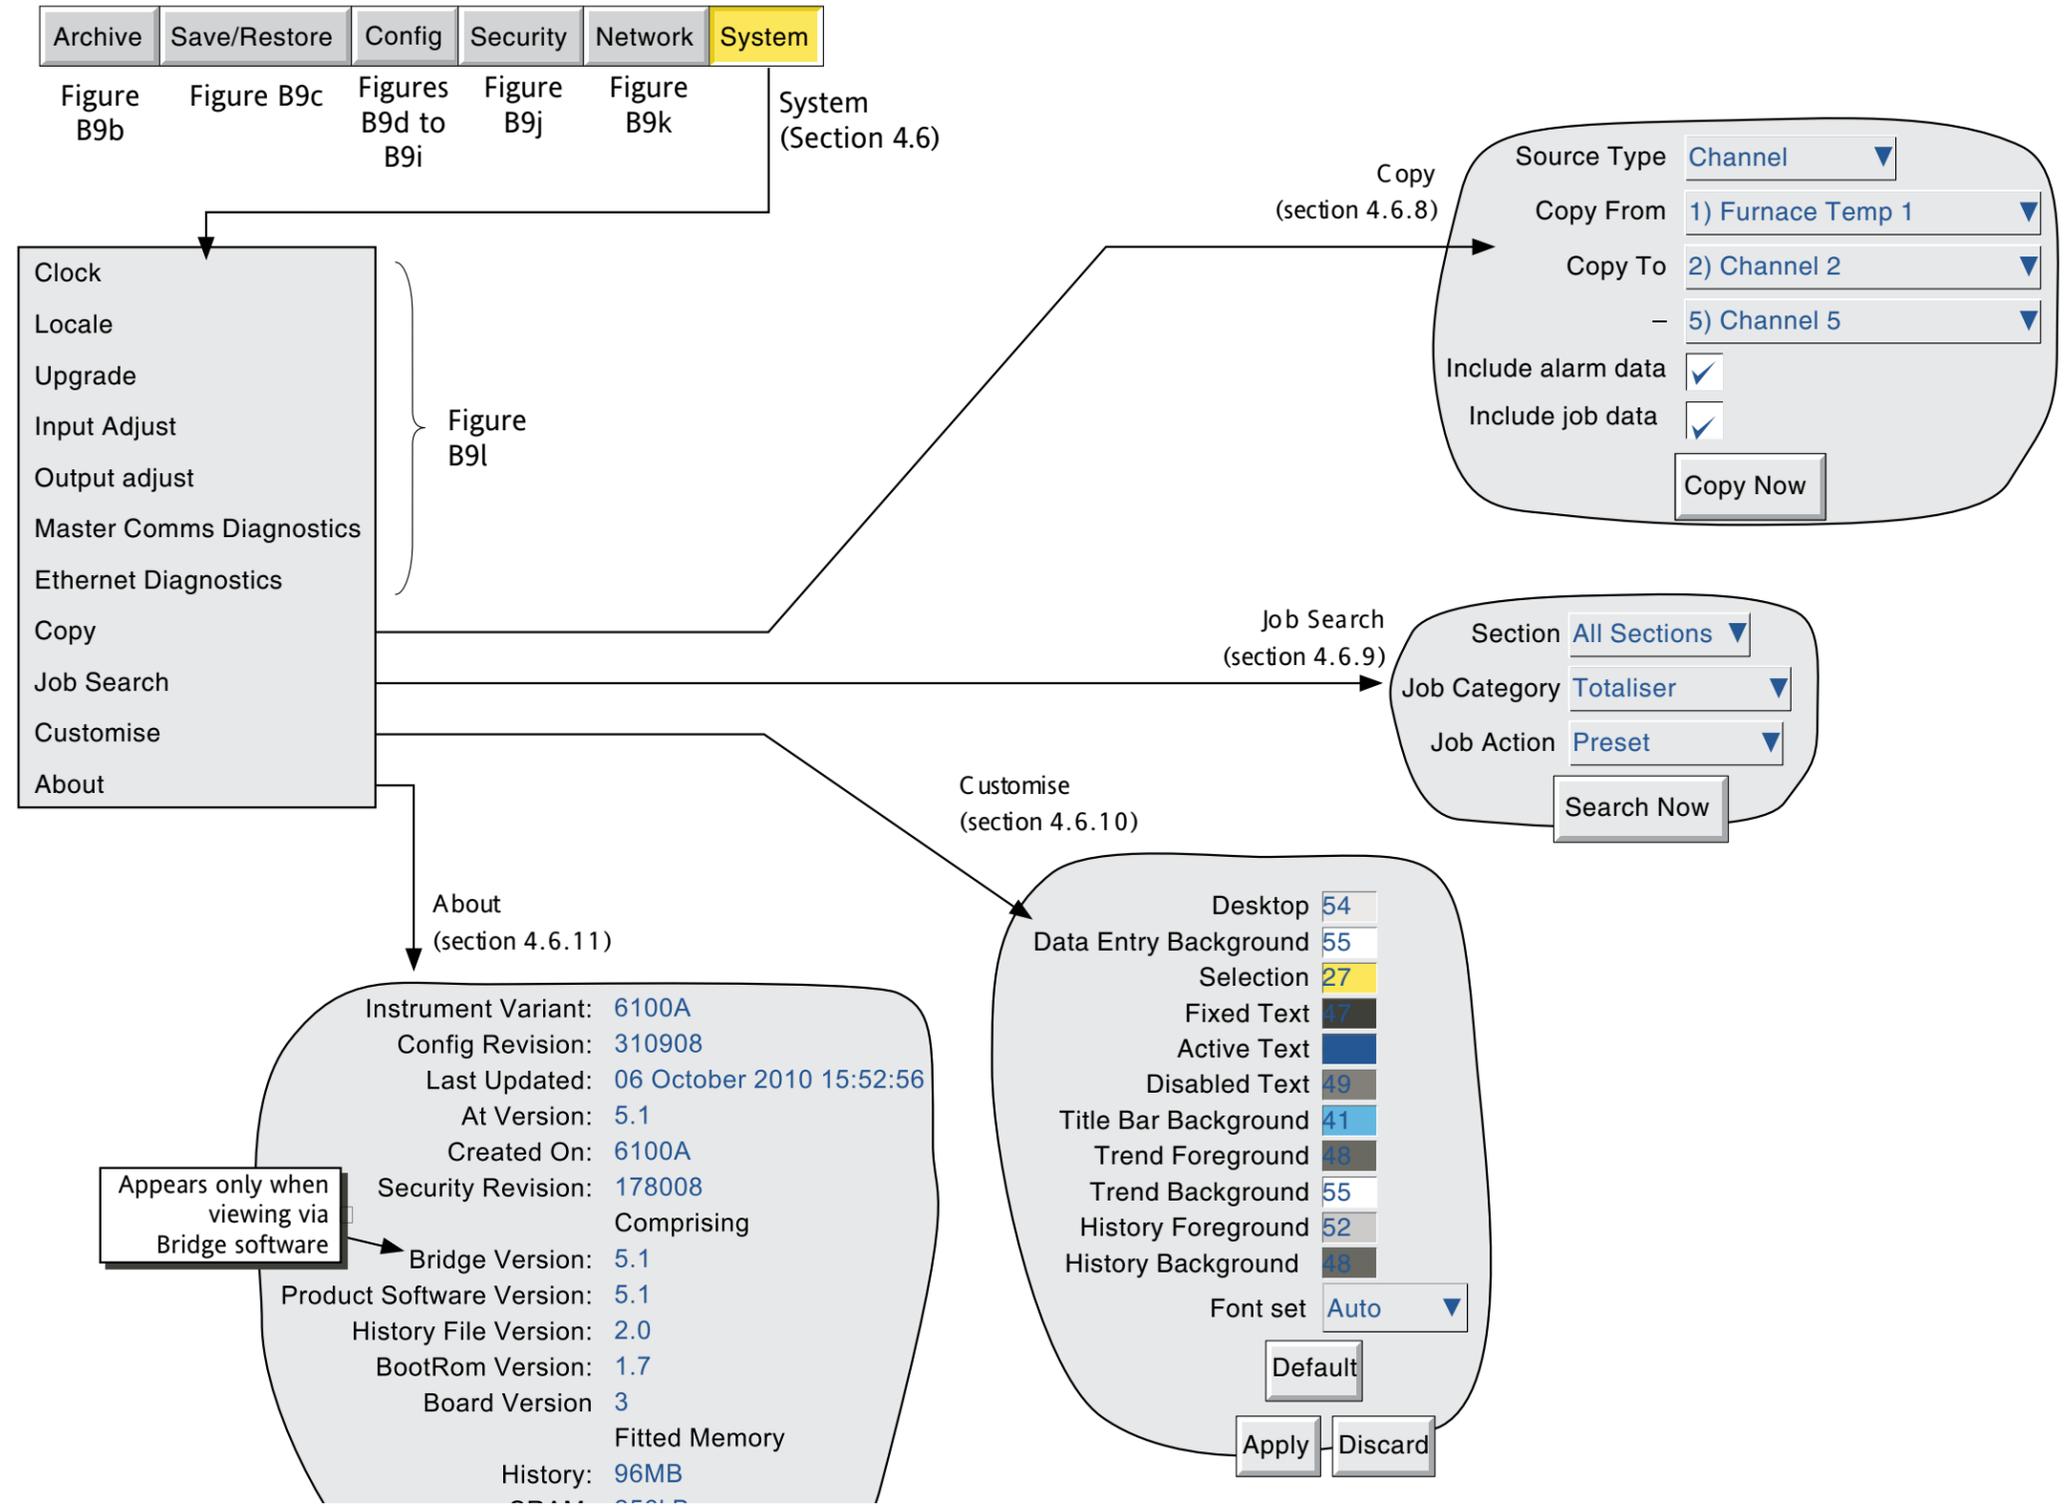


Figure B9m System key menu structure (sheet 2)

This page is deliberately left blank

## ANNEX C: WEB SERVER DETAILS

### C1 INTRODUCTION

This feature allows a user limited Read Only access to the recorder from a remote PC, by:

1. Opening a standard internet browser
2. Typing-in the IP address of the recorder in the form: `http://xxx.xxx.xxx.xxx`, or the 'Local host' name `http://Local host`. IP address and Local host are described in [section 4.5](#) of this manual.
3. Entering the correct Remote user name and Remote password (as set up in the Security/Access menu described in [section 4.4.1](#)).

If all the entries are correct, the Web Server home page appears, the top part of which is shown in figure C1, below.

**Note:** The 'Remote user' must have 'Allow web server' permission enabled ([section 4.4.1](#)) and must have sufficient network access to the product.

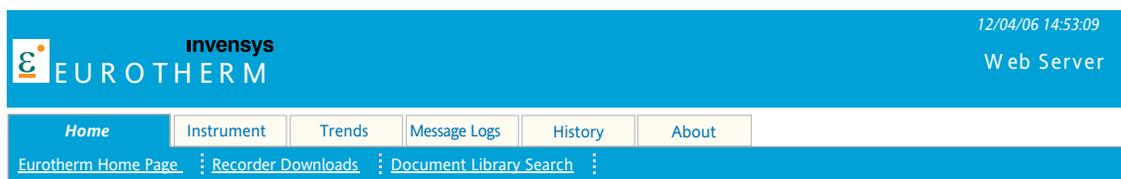


Figure C1 Home page

As can be seen there are two sets of 'controls' viz the internet links and the instrument access tabs.

### C2 INTERNET LINKS

These links (Eurotherm Home Page, Recorder Downloads, Document Library Search) take the user to various areas of the manufacturer's web site.

### C3 ACCESS TABS

Most of the information displayed in the pages described below is updated every 20 seconds. The exception is the Trend page refresh rate which can be edited (as shown in figure C3.2) by typing in the new value, and then either clicking on 'Set' or using the computer <Enter> key. Because of the processing time required, it is not recommended that a value of less than 5 seconds be entered.

#### C3.1 INSTRUMENT

This opens the instrument page, a typical example of which is shown in figure C3.1 below.



Figure C3.1 Instrument display

##### C3.1.1 Instrument alarms

Either 'Healthy' (green background) or a list of any active instrument alarm(s) (red background).

##### C3.1.2 Global channel alarm

Either 'Healthy' (green background) if there are no point alarms, or 'Active' (red background) if there is one or more active point alarm.

### C3.2 TRENDS

Clicking on the 'Trends' tab displays a screen allowing the user to select a refresh rate and one of Horizontal trend, Vertical Trend or Numeric as the display format. Both the horizontal and vertical trend modes include the numeric display table.

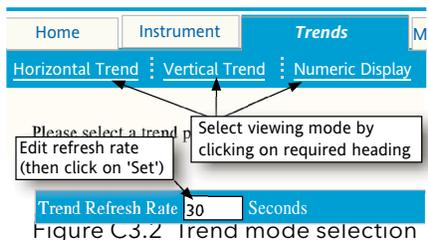


Figure C3.2 Trend mode selection

#### C3.2.1 Horizontal trend

Figure C3.2.1 shows a horizontal trend display for an imaginary group (Furnace Temps 1) with two channels (Stack 1 and Stack2North)

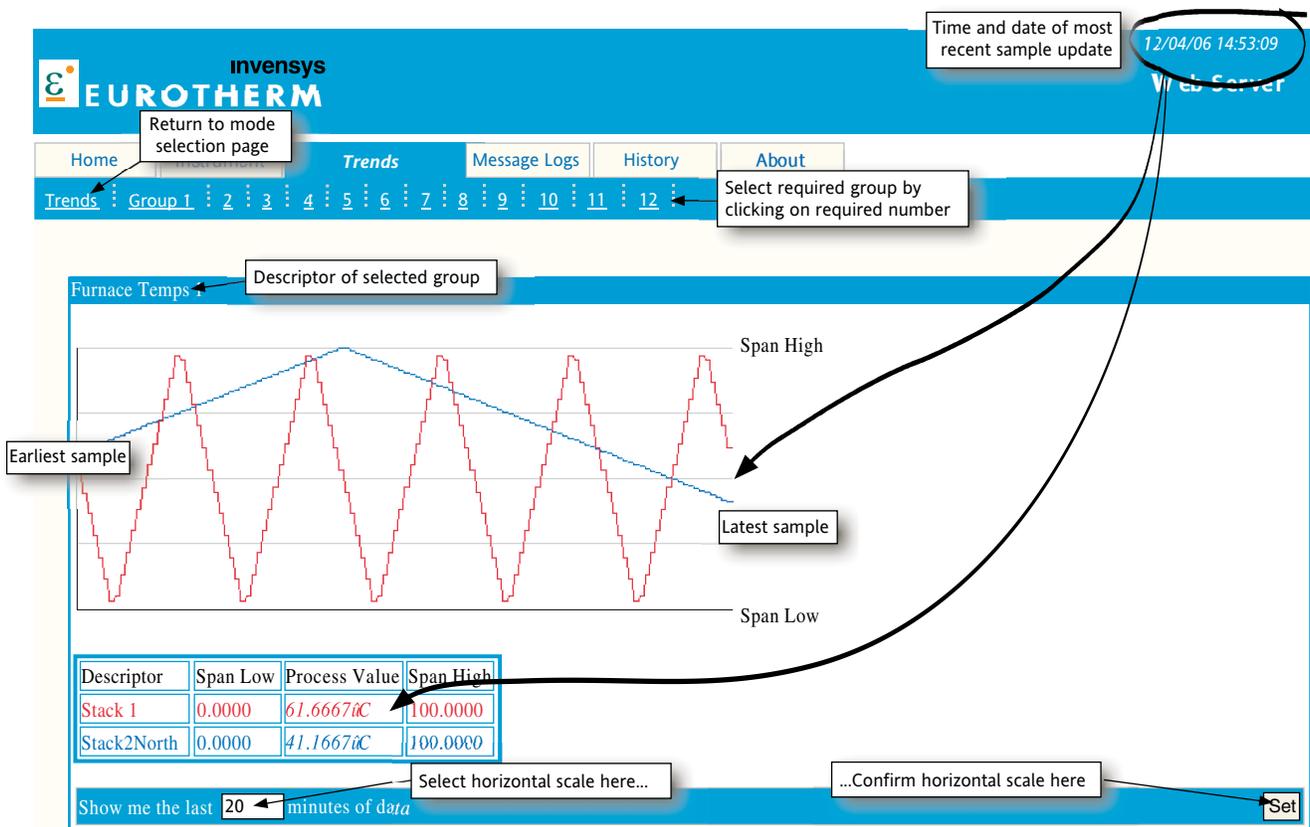


Figure C3.2.1 Horizontal trend example

As shown in the figure, the group process values appear as though being traced on a chart which is rolling from right to left (i.e the oldest sample is at the left edge of the chart, and the latest sample is at the right edge of the chart). The point Descriptors, Span high and Span low values and process values (at the time and date at the top left of the screen) appear in a table below the chart.

The amount of time across the width of the chart (the 'horizontal scale') can be edited from its default of 20 minutes by typing a new value in the box at bottom left of the page, and confirming either by clicking on the 'Set' button at bottom right or by using the pc's <Enter> key.

To return to the Trend Mode selection page, Click on the 'Trends' link at top left.

### C3.2.2 Vertical trends

This viewing mode is identical in operation to the Horizontal Trend mode described above, except that the 'chart' is vertical, with the most recent sample at the top, and the oldest at the bottom. The 'Vertical scale' (i.e the amount of trend history displayed within the height of the chart) is edited as described for 'Horizontal scale' in the Horizontal Trend description above.

To return to the Trend Mode selection page, Click on the 'Trends' link at top left.

### C3.2.3 Numeric display

This viewing mode contains only a table of point descriptors, spans high and low, and process values. The table is identical in layout to that shown below the 'chart' in figure C3.2.1, above.

To return to the Trend Mode selection page, Click on the 'Trends' link at top left.

## C3.3 MESSAGE LOGS

Figure C3.3 shows an imaginary message log with a number of alarm messages, for a group called Furnace Temps 1.


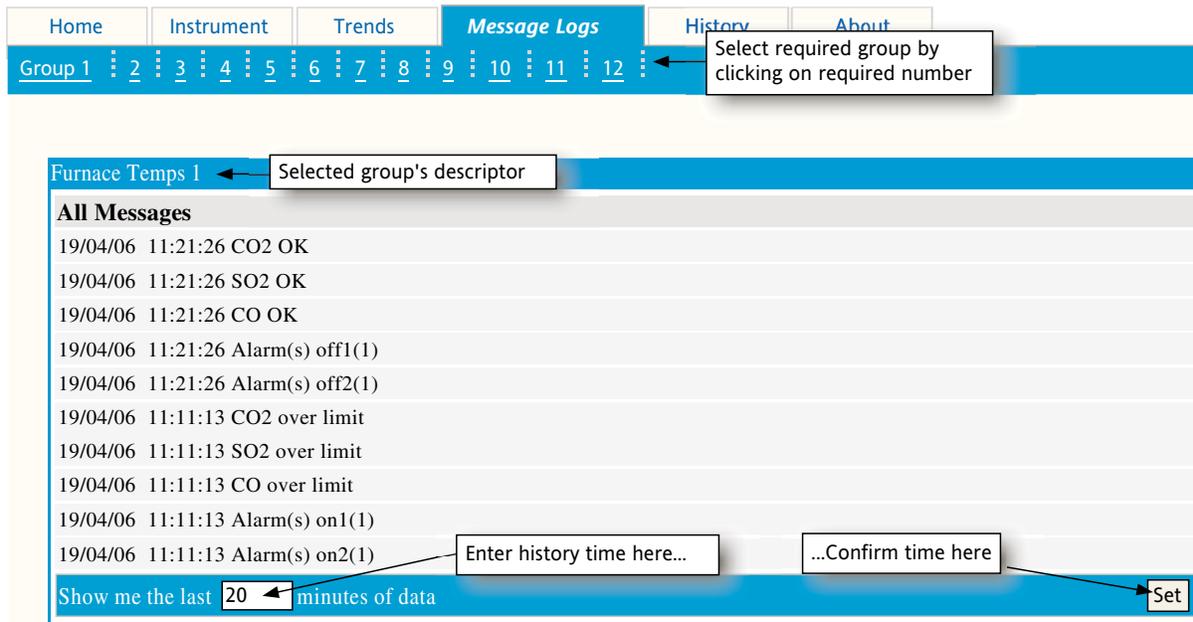


Figure C3.3 Message log

The required group is selected by clicking on the relevant number at the top of the page. The length of time that the list covers, can be edited from its default of 20 minutes by typing a new value in the box at bottom left of the page, and confirming by clicking on the 'Set' button at bottom right or using the <Enter> key on the pc. If there are more messages than can be accommodated in the window height, a scroll bar appear at the left edge of the window to allow hidden messages to be revealed.

### C3.4 HISTORY

This produces a list of all the .uhh files held in the instrument archive. The files can be saved to a user-specified location, for use in Review or Quickchart applications. Figure C3.4 shows part of a typical page.

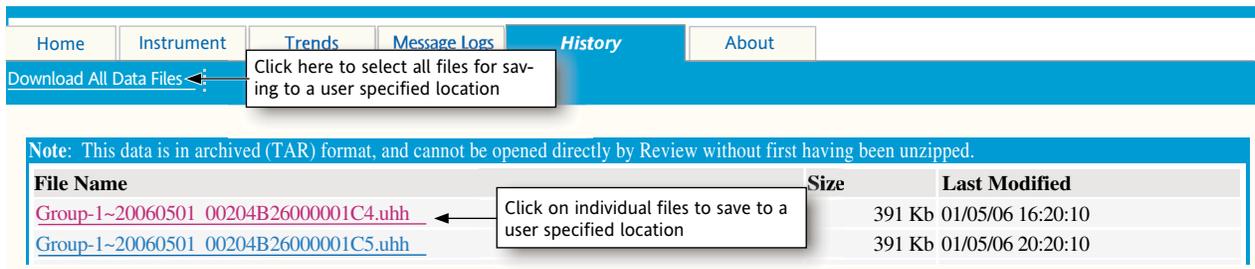

C3.4 History file display

### C3.5 ABOUT

Clicking on this tab displays a subset of the information which appears in the recorder's 'About' screen, described in [section 4.6.9](#). The items which appear are:

- Instrument variant
- Serial number
- Product software version
- Boot ROM version
- Board version
- SRAM and DRAM capacities.

This page is deliberately left blank.

## INDEX

## Symbols

3D effect.....	251
10 to the power maths function .....	100
???? in message.....	86, 87
{n} source .....	87
?Out of Range.....	176
?Syntax Error.....	176
.uhh files.....	365
.uhq file .....	217
.uht files.....	177

## A

About .....	216, 360
Absolute high/low.....	70
A/B Switching .....	61, 69
Access	
Configuration menu .....	357
Levels .....	187
To configuration .....	26
when.....	188
Ack all Alarms .....	13
ACK Message.....	64
Acknowledge	
Alarm job.....	225
Alarms.....	15
Group job.....	225
Permission.....	189
Point job .....	225
All Alarms job .....	225
Action Demand Writes permission .....	191
Active Directory	
Security.....	204
Server.....	188, 204
Setup.....	199
Active Directory Server error .....	10
Adaptive recording.....	60
Add	
Key.....	243
Maths function.....	99
Address	
Allocation (Modbus).....	276
IP.....	202
MAC .....	202, 337
Map (Modbus) .....	274
Add User.....	197
Configuration menu .....	357
Advanced	
Edit level.....	245
Parameters .....	251
Alarm	
Acknowledgement .....	15
Message enable/disable .....	64
Permission.....	189
Configuration .....	69
Indication .....	10
Jobs.....	225
Marks.....	9
Colour.....	251
Message enable/disable.....	63
Messages .....	73

## Alarm (Cont)

On Group (Event source) .....	82
Sounds .....	236
Summary page .....	14
Type.....	70
Illustrations .....	72
Allow	
Constant edits .....	165
Web server .....	191
Always .....	255
Amount (R of C alarms).....	71
AND.....	84
Apply	
Key (Ethernet IP config.).....	175
Arc	
Angle.....	249
Definition.....	264
Height .....	249
Width .....	249
Archive	
All.....	47
Archive failed instrument alarm .....	10
Archive media % full .....	83
Configuration .....	77
Menu.....	352
Control permission.....	189
File formats .....	80, 81
Jobs.....	225
Key.....	46
Menu.....	349
Manual initiation.....	46
To host.....	48
Period selection (local).....	78
Suspend.....	47
To media enable.....	63
To Remote .....	79
via FTP enable .....	63
ASCII.....	139
Codes.....	345
Printer .....	318
At Version .....	216
Audible warnings .....	236
Audit	
Pack option .....	192
Trail.....	167, 194
Autoconfigure.....	184
Auto-detect page.....	148
Average time.....	71
<b>B</b>	
Background colour .....	214, 249
Bargraph	
Channel .....	258
Displays	
Horizontal.....	40
Vertical.....	38
Group	
Horizontal.....	257
Vertical.....	257
Style.....	251

**B (Cont)**

Based on.....	197
Basic/Advanced selection .....	245
Basic edit level.....	245
Batch .....	91
As event source.....	97
Batch Running Event Source.....	82
Batch Start event source.....	82
Batch Stop event source .....	83
Configuration .....	92
Menu.....	353
Control access permission .....	190
Counter initiation.....	97
Enter batch data permission.....	191
Field 1 .....	172, 321
Field data (Embed in message).....	87
Job initiation.....	97
Jobs.....	221
Message display.....	96
Modbus initiation.....	97
Non-operator initiation.....	97
Operation.....	94
Operator initiation .....	94
Start.....	221
Status (Embed in message).....	87
Summary page .....	16
Battery	
Backed RAM cleared.....	10
Backed RAM data.....	332
Diagnostics .....	338
Icon.....	11
Low (Event source).....	83
Replacement.....	340
Type.....	332, 340
Baud rate	
Serial comms. ....	320
Serial printer .....	329
Baud Rate .....	141
Best Fit Font .....	251
Blue line across the chart.....	30
BootP timeout.....	202
Bridge	
Alarm acknowledgement .....	237
Configuration	
Access menu .....	234
Options menu .....	233
Connection details .....	232
Minimum PC requirements .....	231
Operation.....	237
Running the program .....	235
Software installation.....	233
Start as Lite.....	235
Brightness control.....	57
Bring archive up to date .....	47
BSpC .....	27
Button Text.....	249
<b>C</b>	
Calibration coefficients.....	333

**Change (Cont)**

Can Authorize.....	190
Can Sign .....	190
Caps .....	27
Centralised security.....	195
Change	
Alarm setpoint permission .....	189
Battery	
Indicator .....	11
Procedure .....	340
Constant value.....	189
Password .....	198
Time (R of C alarms).....	71
Change Password .....	186
Channel	
Alarm indicator.....	11
Alarm sound .....	236
Bargraph.....	258
Colour .....	69
Configuration .....	65, 351
Configuration data (Modbus).....	277
32-bit IEEE.....	304
Copy.....	212
Cycle time.....	251
Cycling on/off .....	30
Data.....	258
Descriptor .....	69
Max/Min/Average.....	101
Numeric.....	258
Run-time data (Modbus) .....	289
32-bit IEEE.....	308
User screen parameter.....	249
Virtual.....	185
Character set	
Keyboards .....	28
Serial comms .....	345
Chart grid type/divisions .....	62
Chart speed (Circular) .....	61
Circular Chart	
Chart Full operation .....	61
Extended Backfill .....	62
Settings.....	61
Speed.....	61
Start At.....	61
Trend .....	34
Cleaning .....	339
Clear .....	185, 223
Password Cache.....	186, 199
Clock	
Accuracy.....	332
Clock failure instrument alarm.....	10
Preset	
Hours and minutes selection .....	58
Job .....	220
Setting .....	208
Close .....	244
Colour	
Alarms.....	251
Background.....	214
Backgrounds.....	251

**C (Cont.)**

Channel .....	69, 251
Colour B select job .....	223
Foreground.....	213
Style.....	252
Thresholds .....	252
Colours and Fonts.....	213
Configuration menu .....	360
Communications	
Channel timeout.....	82
Diagnostics .....	209
Modbus master .....	144
Printer settings .....	329
Serial .....	139
Timeout .....	57
Compact flash location .....	7
Component	
Definitions .....	257
Info on screen .....	245
Compressibility factor.....	105, 106
Config. data update rate.....	151, 153
Config Revision.....	25, 91, 216
Embed in message .....	87
Configuration.....	52
A/B Switching .....	60, 69
Access.....	26
Alarm.....	69
Amount.....	71
Average time .....	71
Change time .....	71
Deviation value .....	71
Dwell period .....	71
Hysteresis.....	71
Reference value.....	71
Threshold.....	71
Type .....	70
Archive.....	77
ASCII printer .....	319
Audit pack.....	192
Batch .....	92
Channel .....	65
Counters.....	133
Country.....	208
Date format.....	208
Decimal point .....	69
Demand writes .....	164
Display brightness settings.....	57
E-mails .....	168
Event .....	82
Buttons .....	85
Group.....	59
Instrument.....	57
Language .....	208
Locked indicator .....	12
Management .....	192
Master comms.....	145
Maths channels.....	98
Menu .....	351 to 356
Messages .....	86
Network.....	202
Offset.....	66

**Configuration (Cont.)**

Options.....	184
Output channels.....	163
Printer comms parameters.....	328
Reports .....	172, 321
Scale.....	66
Security.....	186
Serial Communications .....	140
Span .....	69
Summertime .....	208
Time and date.....	208
Timers .....	137
Time zone.....	208
Totaliser .....	128
Trace Colour .....	69
User linearisation tables.....	89
Views.....	74
Zone	
Chart.....	69
Time .....	208
Connected messaging .....	174
Connect from Remote .....	188
Connections.....	139
Contents of group.....	64
Continuous batch selection.....	92
Controller parameters.....	153
Copy	
Configuration menu .....	360
Facility.....	211
Key.....	227, 243
Maths function.....	100
Screen.....	244
Counter.....	133
Configuration	
Menu.....	353
Modbus data .....	134
32-bit (IEEE) .....	135
Copy.....	212
Jobs.....	220
Modbus addressing.....	134
Run-time data (Modbus) .....	135
32-bit (IEEE) .....	136
Country, Selection of.....	208
Created On.....	216
Creating a user screen.....	241
CSV	
Date/Time format .....	81
Use Tab delimiter .....	81
Currently .....	184
Cursor keys.....	22
Customise.....	214
Configuration menu .....	360
Cut key .....	227
Cutoff (High/Low).....	128
Cycle channels on/off .....	30
<b>D</b>	
Data	
Bits	
Printer.....	329
Bits (serial comms) .....	141

**D (Cont.)**

Compression ratio .....	78
Encoding (Modbus) .....	267
Transmission (Modbus) .....	314
Type.....	155, 166, 267
Date	
Configuration menu .....	359
Format .....	208
Setting .....	208
Date and time .....	321
Date and time (report generation) .....	172
Daylight saving setup .....	208
DC supply	
Printer wiring .....	318
Decimal.....	177
Places.....	252
EtherNet/IP.....	177
Point position.....	69
Scale.....	255
Decrement counter job .....	220
Default	
Demand Write .....	165
Gateway.....	203
Default Table.....	175
Delete key.....	227, 243
Demand	
Type.....	165
Write.....	164
Button.....	165
Configuration menu .....	355
Copy .....	212
Jobs .....	224
Permission.....	191
With Audit Trail selected .....	167
Deploy.....	244
Descriptor	
Channel .....	69
E-mail .....	169
Event .....	84
Font .....	252
Group.....	9, 60
Group minimum .....	122
Instrument.....	57
Modbus slave.....	146
Recipient list.....	169
Report.....	172, 321
Detect this slave/all slaves .....	146
Deviation alarms.....	70
DHCP Server failure .....	10
Diagnostics	
Comms .....	210
Display.....	334
Ethernet.....	210
Diag Summary .....	337
Dialogue action .....	258
Digital.....	151, 153
Disable	
Alarm job.....	225
Alarms on Group job.....	225
Alarms on Point job .....	225
All Alarms job .....	225

**D (Cont.)**

Counter.....	220
Login .....	189
Maths channel .....	219
Retries.....	165
Timer .....	221
Totaliser .....	218
Warning Dialogs.....	58
Discard	
Ethernet IP Table.....	175
Discard key.....	244
Disk	
Icon.....	11
Size .....	79
Display	
Alarms.....	252
Bargraph.....	253
Batch Dialogue.....	97
Brightness .....	57
Calibration .....	335
Colour	
Configuration menu .....	360
Descriptor .....	253
Messages .....	253
Mode.....	27
Enable/disable .....	75
Home selection.....	74
Horizontal Bars.....	40
Horizontal Trend .....	32
Numeric.....	42
Select.....	22
Vertical bars.....	38
Vertical Trend .....	30
Pens.....	253
Test.....	335
Units .....	253
Update rate .....	332
Values (truncation of) .....	8
Dispose .....	244
Divide.....	99
DNS .....	205
Domain .....	205
Name Service .....	205
Domain name	
Access menu.....	188
Draw	
Edge.....	249
Order .....	249
Dwell .....	71
<b>E</b>	
Earlier messages.....	20
Edit	
Level.....	245
Parameter.....	249
EIA485 connection.....	6
Elapsed time format.....	102
Electrical installation.....	5
E-mail	
Access.....	171
Appearance .....	170

**Enable (Cont.)**

Configuration menu .....	356
Failure event source .....	83
Generation .....	171
Job .....	226
Message .....	171
Number .....	169
Enable	
Audit trail .....	194
Batch .....	92
Demand Write .....	165
Display modes .....	75
Error Count B .....	142
Modbus slave .....	146
Options .....	341
Talk-through .....	142
End of message characters .....	142
Engineer, Access level .....	25, 187
Enter Batch Data .....	191
Environmental Performance .....	331
Erase all history option .....	347
Erase History .....	185
Job .....	222
Error messages	
Bridge .....	238
User screens .....	265
Errors To (E-mail) .....	169
Ethernet	
Address .....	337
Diagnostics .....	210, 359
LED interpretation .....	332
Modbus slave .....	146
EtherNet/IP .....	174
Client .....	211
Comms Input .....	99
e to the power maths function .....	101
EuroPRP server enable .....	204
Event	
Buttons .....	85, 249
Configuration menu .....	352
Event source .....	83
Size, shape etc .....	259
Configuration .....	82, 352
Copy .....	212
Permission .....	190
Source .....	82
Batch .....	97
Source 1 sense .....	83
Source 2 sense .....	84
Exclamation mark symbol .....	10
Explicit messaging .....	174, 211
Export	
Ethernet table .....	175
Key .....	244
Screen .....	51
User linearisation .....	51
User screens .....	240

**F**

Faceplate	
Location .....	253
Style .....	253

**F (Cont.)**

Failed to authenticate user name .....	238
Feature .....	249
Changed .....	230
Identification table .....	301
Locked .....	230
Field 1 to 6 (Batch) .....	93
Field 1 Type .....	172
Fields 1 to 6	
Type	
Serial comms .....	321
File .....	227
Formats (archiving) .....	80, 81
Key .....	22
Name character limitation .....	50
Structure .....	229
Transfer (FTP) facility .....	48
Filer Option menu .....	227
Fill Area .....	249
First Start/End Char .....	142
First switch-on .....	25
Flash size .....	78
Folder keys .....	22
Font	
Size .....	215
Style .....	253
Force change of password .....	191
Foreground colour .....	214, 249
Freeze .....	185, 223
From point .....	177
FTP	
Archiving file lost .....	10
Archiving too slow .....	10
File format .....	81
Icon .....	12
Primary Server Failure .....	10
Secondary Server Failure .....	10
Full	
Configuration permission .....	190
Screen .....	36
Security permission .....	190
User name .....	197
Function	
Codes	
03 .....	315
04 .....	316
06 .....	316
08 .....	316
16 .....	317
Demand Writes .....	166
Master comms .....	155
Supported .....	266
Maths .....	99
Fvalue .....	100
Equation .....	103

**G**

Gas constant .....	104, 106
Global	
Alarm Event Source .....	82
Channel alarm .....	362
Unack'd Alarm Event Source .....	82

**Group (Cont.)**

Goto	
Canvas .....	244
Group key.....	23
View key.....	22
Green line across the chart.....	30
Grid	
Line colour	
Major.....	253
Minor.....	254
Type/Divisions.....	62
Group	
Average .....	99
Configuration .....	59
Configuration menu .....	351
Copy.....	212
Data (MODBUS).....	295
Display	
Enable.....	75
Modes.....	75
Enable/disable.....	63
Home .....	74
Horizontal Bargraph .....	257
Latched maximum .....	100
Latched minimum .....	100
Maximum.....	99
Minimum.....	99
Name.....	9, 60
Number .....	151, 250
Numeric display .....	258
Report destination.....	226
Select .....	23
Selection for comms messages .....	142
Trend.....	257
Vertical bargraph.....	257

**H**

Handshake.....	329
Hardware version .....	216
Height.....	250
High Priority interval.....	145
High Select.....	100
History.....	365
Amount of .....	29, 63
Maximum.....	29
Home	
Group.....	74
Key.....	22
Page (Display mode).....	75
Timeout .....	74
Horizontal	
Alignment.....	253
Bargraph.....	255
Enable.....	75
Faceplate.....	253, 255
Grid total .....	253
Minor Divisions.....	253
Trend mode .....	32
Enable.....	75
User screens .....	257
Web server.....	363
Hysteresis .....	71

**I (Cont.)**

<b>I</b>	
Identifier .....	250
Image .....	259
File.....	250
Implicit I/O messaging .....	174, 211
Import	
An image .....	259
Ethernet table.....	175
Key.....	244
Printer driver .....	325
Screen.....	50, 240
User linearisation .....	51
Include message .....	169
Increment counter job.....	220
Indirection tables (Modbus) .....	301
Input	
Configuration .....	66
Type selection .....	66
Input 1 to 200.....	175
Inrush current.....	5
Installation	
Category .....	330
Electrical.....	5
Mechanical.....	2
Inst cal corr n.....	124
Inst calibration points .....	124
Inst cal temp n.....	124
Instrument	
Alarm	
Definition .....	10
Event source .....	83
Indicator .....	10
Summary .....	13
Configuration .....	57
Configuration menu .....	351
Data (MODBUS).....	276
Name.....	57
Embed in message .....	87
Number .....	202
Embed in message .....	87
Variant.....	216
Insufficient non-volatile memory.....	10
Internal flash: \application\required repair.....	10
Internal flash:\screens.....	10
Internal flash: \user\ is full .....	10
Internal flash: \user\ required repair .....	10
Interval B.....	223
Interval (recording).....	63
Invalid item (EtherNet IP) .....	176
Invalid multiple register writes.....	267
Invalid Password Entry.....	83
Invalid Selection .....	64
I/O Table .....	175
IP Address .....	202
Look-up.....	202
Manual entry.....	203
Modbus slave.....	146
<b>J</b>	
Jobs.....	218

**Jobs (Cont.)**

Alarm.....	225
Archive.....	225
Batch .....	221
Clock .....	220
Counter.....	220
Demand writes.....	224
E-mail .....	226
Event .....	84
Input channel.....	73
Maths .....	219
Message .....	219
Output .....	224
Recording.....	222
Report.....	226
Search .....	213
Configuration menu .....	360
Totaliser .....	218
Trend.....	223

**K**

Keycode.....	209
--------------	-----

**L**

Labelling symbols .....	1
Language selection .....	208
Last	
Error .....	250
Updated .....	216
Latched .....	70
Later messages.....	20
LED indicators (RJ45).....	6
Left key.....	22
Line .....	263
Across the chart .....	30
Feed .....	172, 173, 321, 322
Thickness.....	253
Linear	
Chart grid.....	62
Scales.....	66
Linearisation Function (User).....	89
Link error count .....	141, 319
Locale configuration.....	208
Menu .....	359
Local Modbus client.....	210
Log	
Chart grid.....	62
Maths functions.....	101
Scale.....	67
Logged out.....	25
Login .....	26, 196, 357
Disable.....	189
Required (Modbus slave).....	146
Timeout .....	193
Log/Linear Scale.....	67
Logout key.....	186
Long Modbus messages.....	272
Loop number .....	153, 165
Low	
Priority interval .....	145
Select .....	100

**M (Cont.)****M**

MAC Address.....	202, 337
Mail Server.....	169
Maintenance .....	339
Schedule.....	339
Major circular chart divisions.....	61
Management.....	192
Configuration menu .....	357
Manual archive	
Local.....	46
To host computer .....	48
Mass flow	
Linear .....	100, 104
Saturated Steam.....	110
Square root .....	100, 106
Master Comms .....	144
Configuration menu .....	355
Diagnostics .....	161
Example configuration.....	158
Slave Failure Event source .....	83
Master/Slave	
Connection .....	6
Selection.....	6
Maths channel	
Configuration .....	98
Menu.....	353
Modbus data .....	125
32-bit (IEEE) .....	126
Copy.....	212
Failure .....	10
Function selection .....	99
Jobs.....	219
Partial Failure.....	83
Run-time data	
Modbus .....	126
32-bit (IEEE) .....	126
Maximum	
Block size.....	146
Number of Bridge .....	238
Mean kinetic temperature .....	108
Measuring units.....	265
Mechanical installation.....	2
Media .....	78
Archiving file lost .....	10
Archiving too slow .....	10
File format.....	81
Full.....	47
Event limit .....	79
Size .....	79
Medium priority interval .....	145
Memory device location .....	7
Memory size.....	78, 216
Menu structure	
Archive key.....	349
Config menu .....	351 to 356
Network key menu.....	358
Root menu.....	348
Save/Restore key.....	350
Security key menu.....	357
System key .....	359

**Messages (Cont.)**

Message .....	321
To print.....	320
Messages.....	86
Alarm.....	73
Auditor , Batch.....	91
Batch, Initiation.....	94
Colour.....	254
Configuration menu .....	352
Copying.....	212
Enable/disable.....	63
Entry.....	86
Example .....	88
Inclusion in reports.....	172
Jobs.....	219
Log .....	18, 24, 364
Operator entered.....	44
Power up.....	25
Serial Comms.....	139
Minimum	
Channel Descriptor .....	122
Height .....	254
Password length.....	193
PC requirements .....	231
Width .....	254
Min-Max recording .....	60
Missing pixels test.....	335
MKT maths function.....	100, 108
Group.....	100, 114
Modbus	
Address .....	146
Setting .....	57
Address 255.....	143
Comms Maths function.....	99
Connection .....	6
Function code 03 .....	315
Function code 04.....	316
Function code 06.....	316
Function code 08.....	316
Function code 16 .....	317
Function codes supported.....	266
Master/Slave	
Configuration menus .....	354
RTU.....	139
Security.....	267
Disable .....	57
Slave	
Enable.....	146
Online.....	146
Selection .....	145
Status .....	210
Wiring .....	266
Modulus maths function .....	101
Mouse lock-up .....	333
Move Screen .....	244
Multiply maths function.....	99

**N**

Name Files by Batch .....	94
NAND.....	84
Navigation action.....	258
Network	

**New (Cont.)**

Address .....	202
Configuration menu .....	358
Boot failure.....	10
Configuration .....	202
Connection has timed out.....	238
Ethernet/Serial selection.....	146
Key menu.....	358
Name.....	205
Scanning tool.....	204
Specification .....	332
New	
Chart .....	34, 61
Configuration .....	50
Domain name .....	197
Full User Name .....	197
Key.....	227
Password .....	188, 197
User ID .....	197
User Screen key.....	244
No action .....	218
No chart grid.....	62
Nominal height/width .....	254
NONE.....	84
NOR.....	84
Normal View.....	35
Notes.....	254
No Text.....	255
Number	
Of Batch Messages.....	93
Of columns.....	254
Of Fields .....	172, 321
Of rows .....	254
Numeric	
Display mode.....	42
Enable.....	75
Web server.....	364
PV format.....	69
Width .....	254
N Value.....	250
<b>O</b>	
O2 Correction.....	101, 116
Offset .....	66
Correction (touch screen).....	335
Ok .....	27
On	
Becoming active/inactive etc.....	218
Error Write Default.....	165
Media full.....	79
New clear.....	93
Start/Stop Log .....	93
Visibility change.....	254
Online (Modbus slave).....	146
Open/Closed strings.....	156
Operator	
Access level.....	25, 187
Button .....	259
Event logic.....	84
Key.....	22
Notes (Messages).....	44
Options	

**O (Cont.)**

Available.....	331
Display.....	184, 356
Key.....	22
OR.....	84
Out of Range.....	176
Output	
Channel	
Configuration menu.....	355
Default editing.....	190
Master Comms.....	163
Copy.....	212
Jobs.....	224
Output 1 to 200.....	175
Output channels.....	163
Oval.....	263
Ovr.....	27
Oxygen	
Concentration.....	118
Correction.....	101, 116
Potential.....	120

**P**

Page	
Title.....	250
Up/down keys.....	22
Paint	
All.....	254
Background.....	254
Panel mounting dimensions.....	331
Parameter	
Demand writes.....	165
Master comms	
Controller.....	153
Recorder.....	151
Parity.....	141
Serial comms.....	320
Serial printer.....	329
Password.....	187
Authentication.....	199
Cache.....	199
Expiry.....	204
Change.....	198
Change on expiry.....	195
Editing.....	189
Expiry.....	193
Force change of.....	191
Paste/delete file permission.....	190
Paste key.....	227, 243
Perform upgrade permission.....	190
Period scaler.....	129
Ping.....	210
Pixels (Absolute/relative).....	241
Point.....	173, 322
Alarm.....	82
Number.....	151
Status.....	177
Type.....	64, 151, 165, 177
Pollution degree.....	330
Polygon.....	262
Polyline.....	261

**Preset (Cont.)**

Polynomial.....	100, 102
Port	
Email.....	169
Numbers.....	344
Positioning	
Grid.....	245
Tip.....	245
Power requirements.....	5
Power Up	
Event source.....	83
Message.....	25
Preset	
Clock Job.....	220
Counter.....	133, 220
Group.....	220
Permission.....	189
Totaliser.....	128
Job.....	218
Permission.....	189
Pressure unit conversion.....	111
Preventive maintenance.....	339
Primary	
DNS Server.....	205
Login Name.....	80
Remote Host.....	80
Printed keys.....	22
Printer	
Driver, importing new.....	325
Name.....	320
Status.....	320
Supply Wiring.....	318
Switch settings.....	329
Test.....	320
Type.....	320
Print Messages From.....	320
Process value.....	172
Update rate.....	151, 153
Process Value.....	177, 321
Profile (Modbus slave).....	146
Properties page (User screens).....	243
Protocol.....	141, 169, 320
PV.....	321
Error Colour.....	254
Format.....	69, 102

**Q**

Question marks in message.....	86
Quick entry to user screen edit.....	245

**R**

Rate-of-change	
Alarms.....	70
Maths function.....	101, 115
Rcpt1 to Rcpt10.....	169
Reading	
Digital values.....	156
User defined registers.....	154
Recall.....	185
Recipient List.....	169
Recorder	

**Remote (Cont.)**

Configuration. See Section 4.3	
Dimensions .....	3
Panel installation .....	2, 3
Specification .....	331
Synchronisation (SNTP) .....	203
Unpacking .....	2
Recording	
Enable .....	29
Enable/disable .....	63, 222
Failed instrument alarm .....	10
Interval .....	63
Jobs .....	222
Speed .....	63
Speed B job .....	221
Recording failed - internal overflow .....	63, 195
Record logins .....	192
Rectangle .....	260
Red line across the chart .....	30
Reference value .....	71
Refresh key .....	227
Register .....	166
Relative Humidity .....	101, 117
Remote	
Modbus Client .....	210
Path .....	79
User name/password .....	188
Viewer network menu .....	202
Removable media	
Capacity .....	79
Full .....	10
Instrument alarms .....	10
Remove	
Media .....	21
User .....	198
Configuration menu .....	357
Replace {n} with .....	86
Report .....	172
Configuration .....	172
Menu .....	356
Jobs .....	226
Reports .....	321
Configuration .....	321
Example .....	326
Require Authorization/Signing .....	85, 193
Reset	
Maths channel .....	219
Permission .....	189
Timer	
Job .....	221
Permission .....	189
Restore .....	50
Retry (Modbus slave) .....	146
Retry Time .....	169
Retype password .....	197
Reversed colour .....	254
Revert .....	244
Revision Numbers .....	216
Right key .....	22
Rolling Average .....	100, 108
Root key menu .....	22, 348
Rotate .....	61
Chart .....	34

**S (Cont.)**

Round Rectangle .....	260
<b>S</b>	
Safety notes .....	1
Sales Demo Enable/Disable .....	335
Sample and hold .....	100
Sample rates .....	332
Saturated Steam	
Heat Consumed .....	113
Heat Flow .....	112
Mass flow .....	110
Save .....	50, 244
As .....	50
Saver Display .....	223
Save/Restore	
Configuration .....	49
Key menu .....	350
Permission .....	190
Scale	
Divisions (Major/Minor) .....	66, 254
Style .....	255
Type .....	66
Scaled tick box .....	66
Scaling .....	151, 155, 167
Scientific display .....	69
Scope .....	92
Display modes .....	74
Screen	
Builder option .....	239. See also User screens
Calibration .....	335
Importing/Exporting .....	51
Number .....	250
Saver .....	57, 185
Size .....	265
Secondary	
DNS Server .....	205
Login .....	80
Password .....	80
Remote Host .....	80
Second Start/End Char .....	142
Security	
Configuration .....	186
Key menu .....	357
Levels .....	187
Modbus .....	267
Revision .....	25, 91, 195, 217
Select	
Display mode .....	22
Group .....	23
Selection .....	64
Sender .....	169
Send on power up .....	165
Send Report to .....	226
Serial 1/Serial 2 .....	338
Serial communications .....	139
Configuration menus .....	354
Connection .....	6
Message information .....	142
Port selection	
ASCII printer .....	319
Specification .....	332

**S (Cont.)**

Serial (Modbus slave).....	146
Serial Port .....	141
Service level access .....	25
Set clock permission.....	189
Setting the time and date .....	208
Share socket.....	146, 149
Shift .....	27
Shortest trend history.....	78
Show	
Batch Entry list.....	92
Disk settings .....	78
Operator Notes list.....	58
Title Bar.....	250
Show Errors key .....	175
Simulation.....	185
Slave .....	151, 153, 165
Connection .....	6
Selection.....	145
Slowing recording interval.....	63, 195
SMS.....	171
(Body Only) .....	169
(Subject Only) .....	169
SMTP .....	171
SMTP (Email) .....	169
SNTP	
Client enable.....	203
Instrument alarm .....	11
Server enable .....	203
Socket, share.....	146, 149
Software version.....	216
Source	
Demand write .....	165
Descriptor/value .....	86
Types.....	82
Source 1 sense.....	83
Source 2 sense.....	84
Span.....	151, 153
B.....	222
Group .....	223
Select job .....	223
Configuration .....	69
Span High/Low	
EtherNet/IP .....	177
Special modes .....	335
Specification	
Battery .....	332
Recorder, general .....	331
RTC.....	332
Serial comms board.....	332
USB ports .....	333
Specific gas constant.....	104, 106
Specified descriptor/value .....	87
Speed	
of recording .....	63
Speed/interval B job .....	223
Square root (maths function).....	100
'S' symbol .....	335
Start	
Angle.....	250
as Lite .....	235
New Table.....	177
Start/End characters .....	142

**S (Cont.)**

Start/Stop batch selection.....	92
Timer	
Job .....	221
Permission.....	189
Status	
Bar .....	9
Comms .....	165
Ethernet IP.....	175
Stop	
Bits.....	320
Stop bits.....	141
Stopwatch.....	99
Store .....	97
Diagnostics .....	145
Style.....	173, 322
Subject.....	169
Subnet Mask.....	203
Subtract .....	99
Summary	
Menu .....	13
Page	
Alarm .....	14
Batch .....	16
Summertime setup .....	208
Supply voltage	
Requirements .....	5
Wiring .....	5
Support file.....	217
Suspend Archiving.....	47
Switch.....	100
Printer, settings .....	329
Symbols used on labels.....	1
Synchronisation by SNTP .....	203
Syntax Error.....	176
System	
Key.....	206
Menu.....	359
Summary .....	337

**T**

Tag, Channel .....	69
T/C cal corr n .....	124
T/C cal temp n.....	124
Termination and biasing.....	139
Text.....	169, 172, 250, 321
Messages (Modbus).....	272
Save and Restore.....	50
Size .....	215, 360
String entry .....	27
User screens.....	260
There appears to be no free disk space... ..	230, 238
Thermocouple .....	124
Cal correction.....	124
Threshold .....	71
Time	
and date configuration menu .....	359
Change annotation.....	30
Format .....	208
Marker	
Colour.....	255
Interval.....	255
Permission to set.....	189

**Totaliser (Cont.)**

Setting .....	208
Synch. instrument alarm .....	11
Synchronisation failure .....	11
Synchronisation (SNTP) .....	203
To fill storage device .....	79
Zone	
List .....	346
Selection .....	208
Timeout	
Comms .....	142
Channel .....	57
Home display .....	74
Modbus slave .....	146
Timer	
Configuration .....	137
Menu .....	353
Copy .....	212
Disable job .....	221
Jobs .....	221
Start/Reset	
Job .....	221
Permission .....	189
Timer Active Event Source .....	82
Timestamp	
Circular charts .....	37
Maths function .....	101
To point .....	177
Totaliser	
Configuration	
Menu .....	353
Modbus data .....	130
32 bit (IEEE) .....	131
Copy .....	212
Equation .....	128
Incorrect values .....	78, 129
Jobs .....	218
Option .....	128
Run-time data	
Modbus .....	130
32-bit (IEEE) .....	131
Touch screen	
Calibration .....	335
Cleaning .....	339
Precautions .....	339
Verify .....	336
Trend	
Circular .....	34
Colour .....	69
Freeze .....	185
History	
Display .....	29, 63
Maximum .....	63
Shortest .....	78
Horizontal .....	363
Interval/Speed/Units .....	60
Jobs .....	223
Padding .....	255
Speed/interval .....	61
Speed/interval B job .....	223
Thickness .....	255
Type .....	60
Vertical .....	364

**USB (Cont.)**

Trial Mode .....	184
Indicator .....	12
Trigger .....	70
Truncation of display values .....	8
'T' symbol .....	12
<b>U</b>	
UCMM .....	174, 211
Unable to connect to host .....	238
Unable to resolve hostname .....	238
Unack'd	
Alarm on group .....	83
Point alarm .....	82
Unconnected Message Manager .....	174, 211
Unconnected messaging .....	174
Units .....	241
Conversion (Pressure) .....	111
Font .....	255
Scaler .....	129
Unlatched .....	70
Update	
Rate .....	332
When .....	255
Upgrade .....	209
Configuration menu .....	359
Permission .....	190
USB	
Connector .....	7
Lock-up .....	333
Over current .....	11
Port specification .....	333
Unsupported .....	11
Use	
Counter batch number .....	93
Last properties .....	245
Text batch number .....	93
User	
Adding and removing .....	197
Defined .....	154
Defined descriptor .....	122
Linearisation table	
Configuration .....	89
Configuration menu .....	352
Importing/Exporting .....	51
Units selection .....	66, 89
Logged in Event Source .....	83
Login account disabled .....	83
Name	
Embed in message .....	87
Name (full) .....	197
Screens .....	239 to 329
Advanced parameters .....	251
Basic/Advanced selection .....	245
Basic parameters .....	249
Component info on screens .....	245
Component list .....	242
Creation .....	241
Image Error .....	259
Importing/Exporting .....	240
Key descriptions .....	243, 244
Number of .....	76

Properties page .....	243	<b>Z</b>	
Quick entry .....	245	Z Factor .....	105, 106
<b>V</b>		Zirconia probe .....	101, 118
Value		Zone	
Changes .....	255	B, select job .....	223
Entry .....	27	Chart area.....	69
Font .....	255	Time	
Version numbers .....	216	List of .....	346
Vertical		Selection .....	208
Alignment.....	255		
Bargraph display mode .....	38		
Enable.....	75		
User screens .....	255		
Grid total .....	255		
Minor Divisions.....	255		
Trend display mode.....	30		
Enable.....	75		
User screens .....	257		
Web Server .....	364		
Views			
Configuration .....	74		
Menu.....	351		
Virtual channels configuration .....	185, 356		
Virus susceptibility .....	333		
Visible			
Alarm.....	256		
Channel .....	256		
Operator.....	256		
Value .....	256		
Voltage range .....	5		
<b>W</b>			
Web server .....	362		
When visible.....	256		
Whilst active/inactive/unacknowledged.....	218		
Width.....	250		
Wiring			
ASCII printer .....	318		
Modbus .....	266		
Serial comms .....	6		
Supply voltage.....	5		
With unapplied changes.....	193		
Wizard (Ethernet IP)			
Ethernet IP.....	175		
Write			
Enable .....	165		
To register .....	166		
<b>X</b>			
Xon/Xoff .....	329		
XOR .....	84		
X points.....	250		
X position .....	250		
<b>Y</b>			
You are already running ... message .....	230, 238		
You are authenticating Full Bridge... message .....	238		
Y points .....	250		
Y position.....	250		

### Contact Information

Eurotherm Head Office  
Faraday Close  
Durrington  
Worthing, West Sussex  
BN13 3PL

Sales Enquiries  
T +44 (0)1903 695888  
F 0845 130 9936

General Enquiries  
T +44 (0)1903 268500  
F 0845 265982

Worldwide Offices  
[www.eurotherm.com/worldwide](http://www.eurotherm.com/worldwide)



Scan for local contacts

Represented by:

© Copyright Eurotherm Limited 2016

Eurotherm by Schneider Electric, the Eurotherm logo, Chessell, EurothermSuite, Mini8, Eycon, Eyris, EPower, EPack nanodac, piccolo, versadac, optivis, Foxboro, and Wonderware are trademarks of Schneider Electric, its subsidiaries and affiliates. All other brands may be trademarks of their respective owners.  
All rights are strictly reserved. No part of this document may be reproduced, modified or transmitted in any form by any means, neither may it be stored in a retrieval system other than for the purpose to act as an aid in operating the equipment to which the document relates, without the prior written permission of Eurotherm Limited.  
Eurotherm Limited pursues a policy of continuous development and product improvement. The specifications in this document may therefore be changed without notice. The information in this document is given in good faith, but is intended for guidance only. Eurotherm Limited will accept no responsibility for any losses arising from errors in this document.